

FUEL SYSTEM

CONTENTS

| | page | | page |
|-----------------------------|------|---------------------------|------|
| FUEL DELIVERY SYSTEM | 3 | GENERAL INFORMATION | 1 |
| FUEL INJECTION SYSTEM | 23 | | |

GENERAL INFORMATION

INDEX

| | page | | page |
|-----------------------------|------|-------------------------------------|------|
| GENERAL INFORMATION | | GASOLINE/OXYGENATE BLENDS | 1 |
| FUEL REQUIREMENTS | 1 | INTRODUCTION | 1 |

GENERAL INFORMATION

INTRODUCTION

Throughout this group, references may be made to a particular vehicle by letter or number designation. A chart showing the breakdown of these designations is included in the Introduction Section at the front of this service manual.

The Evaporation Control System, is also considered part of the fuel system. The system reduces the emission of fuel vapor into the atmosphere.

The description and function of the Evaporation Control System is found in Group 25 of this manual.

FUEL REQUIREMENTS

Your vehicle was designed to meet all emission regulations and provide excellent fuel economy when using high quality unleaded gasoline.

Use unleaded gasolines having a minimum posted octane of 87.

If your vehicle develops occasional light spark knock (ping) at low engine speeds this is not harmful. However; continued heavy knock at high speeds can cause damage and should be reported to your dealer immediately. Engine damage as a result of heavy knock operation may not be covered by the new vehicle warranty.

In addition to using unleaded gasoline with the proper octane rating, those that contain detergents, corrosion and stability additives are recommended. Using gasolines that have these additives will help improve fuel economy, reduce emissions, and maintain vehicle performance.

Poor quality gasoline can cause problems such as hard starting, stalling, and stumble. If you experience these problems, try another brand of gasoline before considering service for the vehicle.

GASOLINE/OXYGENATE BLENDS

Some fuel suppliers blend unleaded gasoline with materials that contain oxygen such as alcohol, MTBE (Methyl Tertiary Butyl Ether) and ETBE (Ethyl Tertiary Butyl Ether). Oxygenates are required in some areas of the country during winter months to reduce carbon monoxide emissions. The type and amount of oxygenate used in the blend is important.

The following are generally used in gasoline blends:

Ethanol - (Ethyl or Grain Alcohol) properly blended, is used as a mixture of 10 percent ethanol and 90 percent gasoline. Gasoline blended with ethanol may be used in your vehicle.

MTBE/ETBE - Gasoline and MTBE (Methyl Tertiary Butyl Ether) blends are a mixture of unleaded gasoline and up to 15 percent MTBE. Gasoline and ETBE (Ethyl Tertiary Butyl Ether) are blends of gasoline and up to 17 percent ETBE. Gasoline blended with MTBE or ETBE may be used in your vehicle.

Methanol - Methanol (Methyl or Wood Alcohol) is used in a variety of concentrations blended with unleaded gasoline. You may encounter fuels containing 3 percent or more methanol along with other alcohols called cosolvents.

DO NOT USE GASOLINES CONTAINING METHANOL.

GENERAL INFORMATION (Continued)

Use of methanol/gasoline blends may result in starting and driveability problems and damage critical fuel system components.

Problems that are the result of using methanol/gasoline blends are not the responsibility of Chrysler Corporation and may not be covered by the vehicle warranty.

Reformulated Gasoline

Many areas of the country are requiring the use of cleaner-burning fuel referred to as **Reformulated Gasoline**. Reformulated gasolines are specially blended to reduce vehicle emissions and improve air quality.

Chrysler Corporation strongly supports the use of reformulated gasolines whenever available. Although your vehicle was designed to provide optimum performance and lowest emissions operating on high quality unleaded gasoline, it will perform equally well and produce even lower emissions when operating on reformulated gasoline.

Materials Added to Fuel

Indiscriminate use of fuel system cleaning agents should be avoided. Many of these materials intended for gum and varnish removal may contain active solvents of similar ingredients that can be harmful to fuel system gasket and diaphragm materials.

FUEL DELIVERY SYSTEM

INDEX

| | page | | page |
|---|------|--|------|
| DESCRIPTION AND OPERATION | | SERVICE PROCEDURES | |
| FUEL DELIVERY SYSTEM | 3 | FUEL SYSTEM PRESSURE RELEASE | |
| FUEL FILTER/FUEL PRESSURE REGULATOR ... | 4 | PROCEDURE | 10 |
| FUEL GAUGE SENDING UNIT | 4 | FUEL TUBES/LINES/HOSES AND CLAMPS | 11 |
| FUEL INJECTORS | 5 | QUICK-CONNECT FITTINGS | 11 |
| FUEL PUMP | 4 | REMOVAL AND INSTALLATION | |
| FUEL PUMP MODULE | 3 | ACCELERATOR PEDAL | 21 |
| FUEL RAIL—3.9/5.2/5.9L ENGINES | 6 | FUEL FILTER/FUEL PRESSURE REGULATOR .. | 15 |
| FUEL TANK | 5 | FUEL GAUGE SENDING UNIT | 17 |
| FUEL TANK FILLER TUBE CAP | 6 | FUEL INJECTOR RAIL—3.9/5.2/5.9L ENGINES .. | 17 |
| QUICK-CONNECT FITTINGS | 6 | FUEL INJECTOR(S) | 19 |
| ROLLOVER VALVE(S) | 5 | FUEL PUMP INLET FILTER | 16 |
| DIAGNOSIS AND TESTING | | FUEL PUMP MODULE | 16 |
| FUEL GAUGE SENDING UNIT | 10 | FUEL TANK | 19 |
| FUEL INJECTOR TEST | 10 | FUEL TANK FILLER TUBE CAP | 21 |
| FUEL PRESSURE LEAK DOWN TEST | 7 | THROTTLE CABLE | 21 |
| FUEL PUMP AMPERAGE TEST | 8 | SPECIFICATIONS | |
| FUEL PUMP CAPACITY TEST | 7 | FUEL SYSTEM PRESSURE | 22 |
| FUEL PUMP PRESSURE TEST—ALL ENGINES | | FUEL TANK CAPACITY | 22 |
| WITH PRESSURE TEST PORT | 6 | TORQUE CHART | 22 |
| | | VECI LABEL | 22 |

DESCRIPTION AND OPERATION

FUEL DELIVERY SYSTEM

The fuel delivery system consists of:

- the fuel pump module containing the electric fuel pump, fuel filter/fuel pressure regulator, fuel gauge sending unit (fuel level sensor) and a separate fuel filter located at bottom of pump module
- fuel tubes/lines/hoses
- quick-connect fittings
- fuel injector rail
- fuel injectors
- fuel tank
- fuel tank filler/vent tube assembly
- fuel tank filler tube cap
- accelerator pedal
- throttle cable

Fuel is returned through the fuel pump module and back into the fuel tank through the fuel filter/fuel pressure regulator. A separate fuel return line from the engine to the tank is not used.

The fuel tank assembly consists of: the fuel tank, fuel pump module assembly, fuel pump module metal lockring and gasket, and rollover valve (refer to Group 25, Emission Control System for rollover valve information).

A fuel filler/vent tube assembly using a pressure/vacuum fuel filler cap is used. On vehicles equipped with the California emissions package, the fuel filler tube contains a spring-loaded flap (door) located below the fuel fill cap. The flap is used as a secondary way of sealing the fuel tank if the fuel fill cap has not been properly tightened. It is part of EVAP monitor system when vehicle is equipped with a Leak Detection Pump (LDP).

Also to be considered part of the fuel system is the evaporation control system. This is designed to reduce the emission of fuel vapors into the atmosphere. The description and function of the Evaporative Control System is found in Group 25, Emission Control Systems.

Both fuel filters (at bottom of fuel pump module and within fuel pressure regulator) are designed for extended service. They do not require normal scheduled maintenance. Filters should only be replaced if a diagnostic procedure indicates to do so.

FUEL PUMP MODULE

The fuel pump module on all models/all engines is installed in the top of the fuel tank (Fig. 1). The fuel pump module contains the following components (Fig. 2):

DESCRIPTION AND OPERATION (Continued)

- A combination fuel filter/fuel pressure regulator
- Electric fuel pump
- Fuel pump reservoir
- A separate in-tank fuel filter (at bottom of module)
- Fuel gauge sending unit (fuel level sensor)
- Fuel supply line connection at filter/regulator
- A metal lockring to retain pump module to fuel tank
- A gasket between tank flange and module

The fuel gauge sending unit (fuel level sensor), and pick-up filter (at bottom of module) may be serviced separately. If the electrical fuel pump requires service, the entire fuel pump module must be replaced. The fuel filter/fuel pressure regulator may be serviced separately. Refer to Fuel Filter/Fuel Pressure Regulator Removal/Installation for additional information.

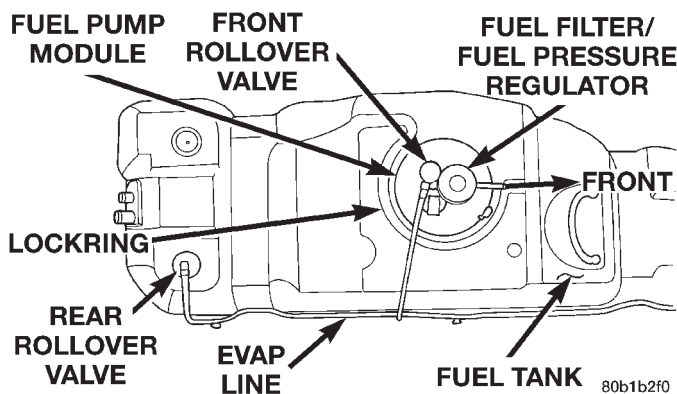


Fig. 1 Fuel Pump Module/Fuel Tank (Top View)

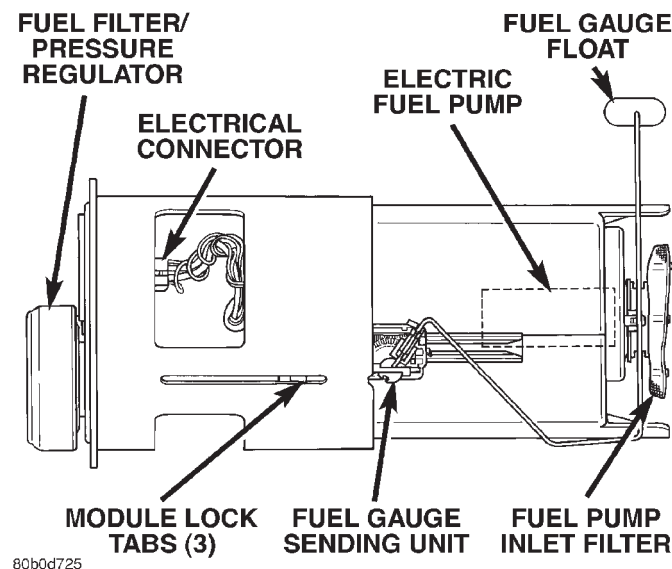


Fig. 2 Fuel Pump Module Components (Typical Pump Module Shown)

FUEL PUMP

The fuel pump used in this system has a permanent magnet electric motor. The pump is part of the fuel pump module. Fuel is drawn in through a filter at the bottom of the module and pushed through the electric motor gearset to the pump outlet.

Check Valve Operation: The pump outlet contains a one-way check valve to prevent fuel flow back into the tank and to maintain fuel supply line pressure (engine warm) when pump is not operational. It is also used to keep the fuel supply line full of gasoline when pump is not operational. After the vehicle has cooled down, fuel pressure may drop to 0 psi (cold fluid contracts), but liquid gasoline will remain in fuel supply line between the check valve and fuel injectors. **Fuel pressure that has dropped to 0 psi on a cooled down vehicle (engine off) is a normal condition.** Refer to the Fuel Pressure Leak Down Test in this group for more information.

Voltage to operate the electric pump is supplied through the fuel pump relay.

FUEL GAUGE SENDING UNIT

The fuel gauge sending unit (fuel level sensor) is attached to the side of the fuel pump module. The sending unit consists of a float, an arm, and a variable resistor (track). The resistor track is used to send electrical signals to the Powertrain Control Module (PCM) for fuel gauge operation and for OBD II emission requirements.

For fuel gauge operation: As fuel level increases, the float and arm move up. This decreases the sending unit resistance, causing the fuel gauge to read full. As fuel level decreases, the float and arm move down. This increases the sending unit resistance causing the fuel gauge to read empty.

After this fuel level signal is sent to the PCM, the PCM will transmit the data across the CCD bus circuits to the instrument panel. Here it is translated into the appropriate fuel gauge level reading.

For OBD II emission monitor requirements: A voltage signal is sent from the resistor track on the sending unit to the PCM to indicate fuel level. The purpose of this feature is to prevent the OBD II system from recording/setting false misfire and fuel system monitor trouble codes. The feature is activated if the fuel level in the tank is less than approximately 15 percent of its rated capacity. If equipped with a Leak Detection Pump (EVAP system monitor), this feature will also be activated if the fuel level in the tank is more than approximately 85 percent of its rated capacity.

FUEL FILTER/FUEL PRESSURE REGULATOR

A combination fuel filter and fuel pressure regulator (Fig. 3) is used on all engines. It is located on the


DESCRIPTION AND OPERATION (Continued)

top of the fuel pump module. A separate frame mounted fuel filter is not used with any engine.

Both fuel filters (at bottom of fuel pump module and within fuel pressure regulator) are designed for extended service. They do not require normal scheduled maintenance. Filters should only be replaced if a diagnostic procedure indicates to do so.

Fuel Pressure Regulator Operation: The pressure regulator is a mechanical device that is not controlled by engine vacuum or the powertrain control module (PCM).

The regulator is calibrated to maintain fuel system operating pressure of approximately $339 \text{ kPa} \pm 34 \text{ kPa}$ ($49.2 \text{ psi} \pm 5 \text{ psi}$) at the fuel injectors. It contains a diaphragm, calibrated springs and a fuel return valve. The internal fuel filter (Fig. 3) is also part of the assembly.

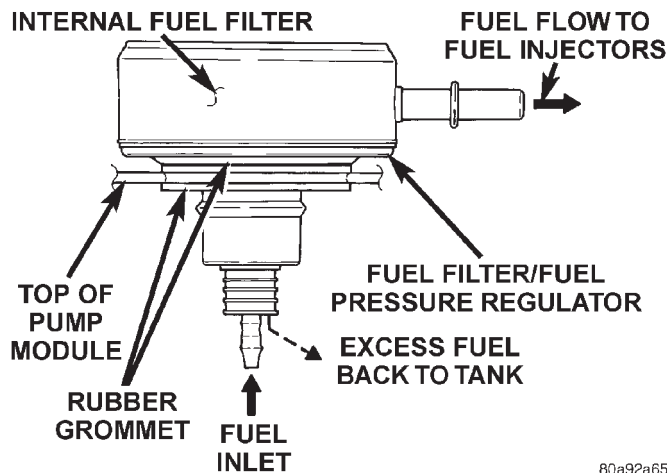

80a92a65

Fig. 3 Side View—Filter/Regulator

Fuel is supplied to the filter/regulator by the electric fuel pump through an opening tube at the bottom of filter/regulator (Fig. 3).

The regulator acts as a check valve to maintain some fuel pressure when the engine is not operating. This will help to start the engine. A second check valve is located at the outlet end of the electric fuel pump. **Refer to Fuel Pump—Description and Operation for more information. Also refer to the Fuel Pressure Leak Down Test and the Fuel Pump Pressure Tests.**

If fuel pressure at the pressure regulator exceeds approximately 49.2 psi, an internal diaphragm opens and excess fuel pressure is routed back into the tank through the bottom of pressure regulator.

FUEL TANK

All models pass a full 360 degree rollover test without fuel leakage. To accomplish this, fuel and vapor flow controls are required for all fuel tank connections.

All models are equipped with either one or two rollover valves mounted into the top of the fuel tank (or pump module). Refer to Group 25, Emission Control System for rollover valve information.


An evaporation control system is connected to the rollover valve(s) to reduce emissions of fuel vapors into the atmosphere. When fuel evaporates from the fuel tank, vapors pass through vent hoses or tubes to a charcoal canister where they are temporarily held. When the engine is running, the vapors are drawn into the intake manifold. Certain models are also equipped with a self-diagnosing system using a Leak Detection Pump (LDP). Refer to Group 25, Emission Control System for additional information.

ROLLOVER VALVE(S)

Refer to Group 25, Emission Control System for information.

FUEL INJECTORS

The fuel injectors (Fig. 4) are electrical solenoids. The injector contains a pintle that closes off an orifice at the nozzle end. When electric current is supplied to the injector, the armature and needle move a short distance against a spring, allowing fuel to flow out the orifice. Because the fuel is under high pressure, a fine spray is developed in the shape of a pencil stream. The spraying action atomizes the fuel, adding it to the air entering the combustion chamber.

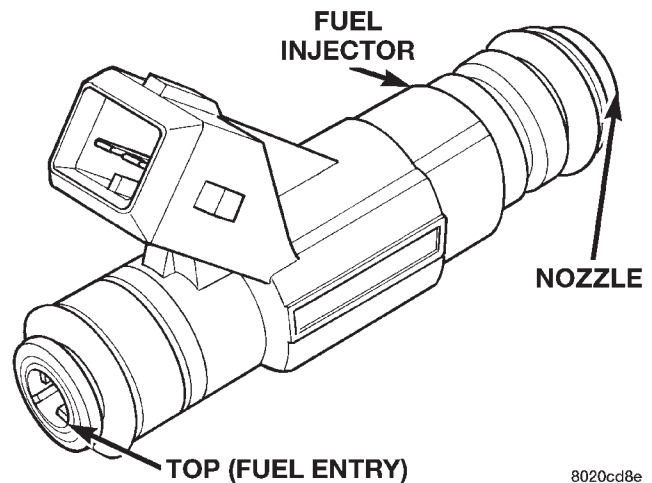

8020cd8e

Fig. 4 Fuel Injector—Typical

An individual fuel injector is used for each individual cylinder. The top (fuel entry) end of the injector is attached into an opening on the fuel rail.

The nozzle (outlet) ends of the injectors are positioned into openings in the intake manifold just above the intake valve ports of the cylinder head. The engine wiring harness connector for each fuel injector is equipped with an attached numerical tag (INJ 1, INJ 2 etc.). This is used to identify each fuel injector.

DESCRIPTION AND OPERATION (Continued)

The injectors are energized individually in a sequential order by the powertrain control module (PCM). The PCM will adjust injector pulse width by switching the ground path to each individual injector on and off. Injector pulse width is the period of time that the injector is energized. The PCM will adjust injector pulse width based on various inputs it receives.

During start up, battery voltage is supplied to the injectors through the ASD relay. When the engine is operating, voltage is supplied by the charging system. The PCM determines injector pulse width based on various inputs.

FUEL RAIL—3.9/5.2/5.9L ENGINES

The fuel rail supplies the necessary fuel to each individual fuel injector and is mounted to the intake manifold (Fig. 5). The fuel pressure regulator is not mounted to the fuel rail on any engine. It is located on the fuel tank mounted fuel pump module. Refer to Fuel Filter/Fuel Pressure Regulator in this section of group for information.

The fuel rail is not repairable.

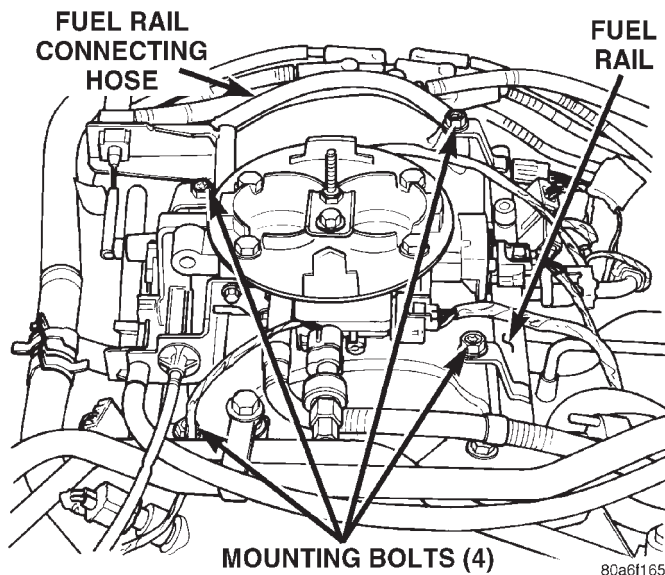


Fig. 5 Fuel Rail—3.9/5.2/5.9L Engine—Typical

CAUTION: The left and right sections of the fuel rail are connected with a flexible connecting hose. Do not attempt to separate the rail halves at this connecting hose. Due to the design of this connecting hose, it does not use any clamps. Never attempt to install a clamping device of any kind to the hose. When removing the fuel rail assembly for any reason, be careful not to bend or kink the connecting hose.

FUEL TANK FILLER TUBE CAP

The loss of any fuel or vapor out of filler neck is prevented by the use of a pressure-vacuum fuel tank filler tube cap. Relief valves inside the cap will release fuel tank pressure at predetermined pressures. Fuel tank vacuum will also be released at predetermined values. This cap must be replaced by a similar unit if replacement is necessary. This is in order for the system to remain effective.

CAUTION: Remove fuel tank filler tube cap before servicing any fuel system component. This is done to help relieve tank pressure. If equipped with a California emissions package and a Leak Detection Pump (LDP), the secondary seal below the fill cap must be pressed (opened) to relieve fuel tank pressure.

QUICK-CONNECT FITTINGS

Different types of quick-connect fittings are used to attach various fuel system components. These are: a single-tab type, a two-tab type or a plastic retainer ring type. Some are equipped with safety latch clips. Refer to the Removal/Installation section for more information.

CAUTION: The interior components (o-rings, spacers) of quick-connect fitting are not serviced separately, but new pull tabs are available for some types. Do not attempt to repair damaged fittings or fuel lines/tubes. If repair is necessary, replace the complete fuel tube assembly.

DIAGNOSIS AND TESTING**FUEL PUMP PRESSURE TEST—ALL ENGINES WITH PRESSURE TEST PORT**

Use this test in conjunction with the Fuel Pump Capacity Test, Fuel Pressure Leak Down Test and Fuel Pump Amperage Test found elsewhere in this group.

Check Valve Operation: The electric fuel pump outlet contains a one-way check valve to prevent fuel flow back into the tank and to maintain fuel supply line pressure (engine warm) when pump is not operational. It is also used to keep the fuel supply line full of gasoline when pump is not operational. After the vehicle has cooled down, fuel pressure may drop to 0 psi (cold fluid contracts), but liquid gasoline will remain in fuel supply line between the check valve and fuel injectors. **Fuel pressure that has dropped to 0 psi on a cooled down vehicle (engine off) is a normal condition.** When the elec-

DIAGNOSIS AND TESTING (Continued)

tric fuel pump is activated, fuel pressure should **immediately** (1–2 seconds) rise to specification.

All fuel systems are equipped with a fuel tank module mounted, combination fuel filter/fuel pressure regulator. The fuel pressure regulator is not controlled by engine vacuum.

WARNING: THE FUEL SYSTEM IS UNDER CONSTANT FUEL PRESSURE EVEN WITH THE ENGINE OFF. BEFORE DISCONNECTING FUEL LINE AT FUEL RAIL, THIS PRESSURE MUST BE RELEASED. REFER TO THE FUEL SYSTEM PRESSURE RELEASE PROCEDURE.

(1) Remove protective cap at fuel rail test port. Connect the 0–414 kPa (0–60 psi) fuel pressure gauge (from gauge set 5069) to test port pressure fitting on fuel rail (Fig. 6).

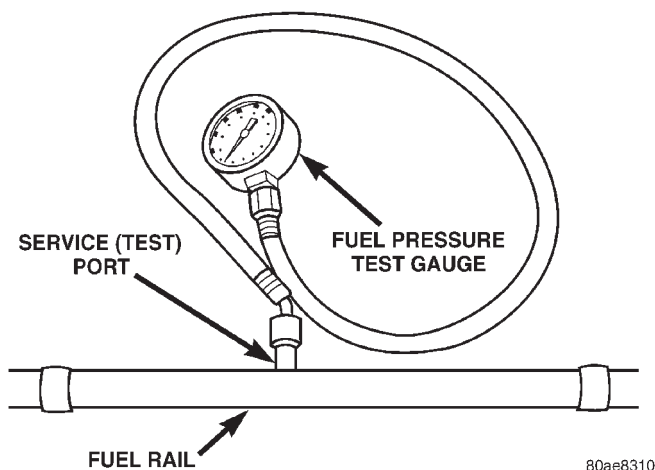


Fig. 6 Fuel Pressure Test Gauge (Typical Gauge Installation at Test Port)

(2) Start and warm engine and note pressure gauge reading. Fuel pressure should be 339 kPa \pm 34 kPa (49.2 psi \pm 5 psi) at idle.

(3) If engine runs, but pressure is below 44.2 psi, check for a kinked fuel supply line somewhere between fuel rail and fuel pump module. If line is not kinked, but specifications for either the Fuel Pump Capacity, Fuel Pump Amperage or Fuel Pressure Leak Down Tests were not met, replace fuel pump module assembly. Refer to Fuel Pump Module Removal/Installation.

(4) If operating pressure is above 54.2 psi, electric fuel pump is OK, but fuel pressure regulator is defective. Replace fuel filter/fuel pressure regulator. Refer to Fuel Filter/Fuel Pressure Regulator Removal/Installation for more information.

(5) Install protective cap to fuel rail test port.

FUEL PUMP CAPACITY TEST

Before performing this test, verify fuel pump pressure by performing the Fuel Pump Pressure Test. Use this test in conjunction with the Fuel Pressure Leak Down Test found elsewhere in this group.

(1) Release fuel system pressure. Refer to the Fuel Pressure Release Procedure in this group.

(2) Disconnect fuel supply line at fuel rail. Refer to Quick-Connect Fittings in the Service Procedures section of this group for procedures. Some engines may require air cleaner housing removal before line disconnection.

(3) Connect appropriate Fuel Line Pressure Test Adapter Tool Hose (number 6631, 6923, 6541 or 6539) into disconnected fuel supply line. Insert other end of Adaptor Tool hose into a graduated container.

(4) Remove fuel fill cap.

(5) To activate fuel pump and pressurize system, obtain DRB scan tool and actuate ASD Fuel System Test.

(6) A good fuel pump will deliver at least 1/4 liter of fuel in 7 seconds. Do not operate fuel pump for longer than 7 seconds with fuel line disconnected as fuel pump module reservoir may run empty.

(a) If capacity is lower than specification, but fuel pump can be heard operating through fuel fill cap opening, check for a kinked/damaged fuel supply line somewhere between fuel rail and fuel pump module.

(b) If line is not kinked/damaged, and fuel pressure is OK, but capacity is low, replace fuel filter/fuel pressure regulator. The filter/regulator may be serviced separately on certain applications. Refer to Fuel Filter/Fuel Pressure Regulator Removal/Installation for additional information.

(c) If both fuel pressure and capacity are low, replace fuel pump module assembly. Refer to Fuel Pump Module Removal/Installation.

FUEL PRESSURE LEAK DOWN TEST

Use this test in conjunction with the Fuel Pump Pressure Test and Fuel Pump Capacity Test.

Check Valve Operation: The electric fuel pump outlet contains a one-way check valve to prevent fuel flow back into the tank and to maintain fuel supply line pressure (engine warm) when pump is not operational. It is also used to keep the fuel supply line full of gasoline when pump is not operational. After the vehicle has cooled down, fuel pressure may drop to 0 psi (cold fluid contracts), but liquid gasoline will remain in fuel supply line between the check valve and fuel injectors. **Fuel pressure that has dropped to 0 psi on a cooled down vehicle (engine off) is a normal condition.** When the elec-

DIAGNOSIS AND TESTING (Continued)

tric fuel pump is activated, fuel pressure should **immediately** (1–2 seconds) rise to specification.

Abnormally long periods of cranking to restart a **hot** engine that has been shut down for a short period of time may be caused by:

- Fuel pressure bleeding past a fuel injector(s).
- Fuel pressure bleeding past the check valve in the fuel pump module.

(1) Disconnect the fuel inlet line at fuel rail. Refer to Fuel Tubes/Lines/Hoses and Clamps in this section of the group for procedures. On some engines, air cleaner housing removal may be necessary before fuel line disconnection.

(2) Connect the appropriate Fuel Line Pressure Test Adapter Tool (number 6539, 6631, 6541 or 6923) between the disconnected fuel line and fuel rail (Fig. 7) or (Fig. 8).

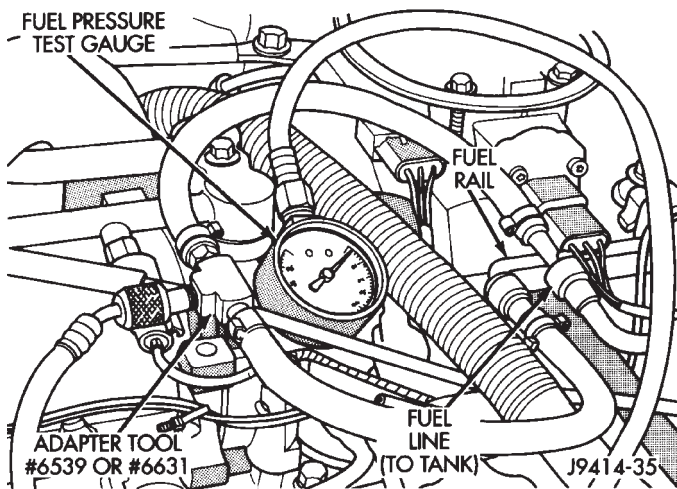


Fig. 7 Connecting Adapter Tool—Typical

(3) Connect the 0-414 kPa (0-60 psi) fuel pressure test gauge (from Gauge Set 5069) to the test port on the appropriate Adaptor Tool. **The fittings on both tools must be in good condition and free from any small leaks before performing the proceeding test.**

(4) Start engine and bring to normal operating temperature.

(5) Observe test gauge. Normal operating pressure should be 339 kPa \pm 34 kPa (49.2 psi \pm 5 psi).

(6) Shut engine off.


(7) Pressure should not fall below **30 psi for five minutes.**

(8) If pressure falls below 30 psi, it must be determined if a fuel injector, the check valve within the fuel pump module, or a fuel tube/line is leaking.

(9) Again, start engine and bring to normal operating temperature.

(10) Shut engine off.

(11) **Testing for fuel injector or fuel rail leakage:** Clamp off the rubber hose portion of Adaptor

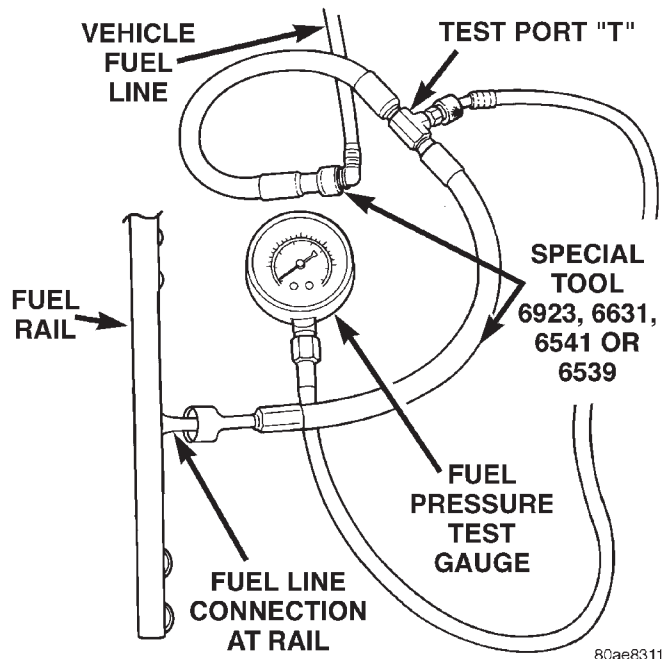

8Cae8311

Fig. 8 Connecting Adapter Tool—Typical

Tool between the fuel rail and the test port "T" on Adapter Tool. If pressure now holds at or above 30 psi, a fuel injector or the fuel rail is leaking.

(12) **Testing for fuel pump check valve, filter/regulator check valve or fuel tube/line leakage:** Clamp off the rubber hose portion of Adaptor Tool between the vehicle fuel line and test port "T" on Adapter Tool. If pressure now holds at or above 30 psi, a leak may be found at a fuel tube/line. If no leaks are found at fuel tubes or lines, one of the check valves in either the electric fuel pump or filter/regulator may be leaking.

Note: A quick loss of pressure usually indicates a defective check valve in the filter/regulator. A slow loss of pressure usually indicates a defective check valve in the electric fuel pump.


The electric fuel pump is not serviced separately. Replace the fuel pump module assembly. The filter/regulator may be replaced separately on certain applications. Refer to Fuel Filter/Fuel Pressure Regulator Removal/Installation for additional information.

FUEL PUMP AMPERAGE TEST

This amperage (current draw) test is to be done in conjunction with the Fuel Pump Pressure Test, Fuel Pump Capacity Test and Fuel Pressure Leak Down Test. Before performing the amperage test, be sure the temperature of the fuel tank is above 50° F (10° C).

The DRB Scan Tool along with the DRB Low Current Shunt (LCS) adapter (Fig. 9) and its test leads will be used to check fuel pump amperage specifications.

DIAGNOSIS AND TESTING (Continued)

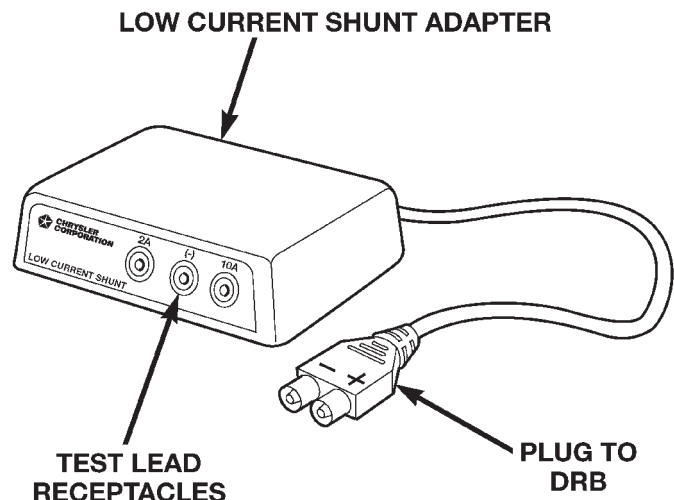

80add391

Fig. 9 Low Current Shunt Adapter

- (1) Obtain LCS adapter.
- (2) Plug cable from LCS adapter into DRB scan tool at SET 1 receptacle.
- (3) Plug DRB into vehicle 16-way connector (data link connector).
- (4) Connect (-) and (+) test cable leads into LCS adapter receptacles. Use **10 amp (10A +)** receptacle and common (-) receptacles.
- (5) Gain access to MAIN MENU on DRB screen.
- (6) Press DVOM button on DRB.
- (7) Using left/right arrow keys, highlight CHANNEL 1 function on DRB screen.
- (8) Press ENTER three times.
- (9) Using up/down arrow keys, highlight RANGE on DRB screen (screen will default to 2 amp scale).
- (10) Press ENTER to change 2 amp scale to 10 amp scale. **This step must be done to prevent damage to DRB scan tool or LCS adapter (blown fuse).**
- (11) Remove cover from Power Distribution Center (PDC).
- (12) Remove fuel pump relay from PDC. Refer to label on PDC cover for relay location.

WARNING: BEFORE PROCEEDING TO NEXT STEP, NOTE THE FUEL PUMP WILL BE ACTIVATED AND SYSTEM PRESSURE WILL BE PRESENT. THIS WILL OCCUR AFTER CONNECTING TEST LEADS FROM LCS ADAPTER INTO FUEL PUMP RELAY CAVITIES. THE FUEL PUMP WILL OPERATE EVEN WITH IGNITION KEY IN OFF POSITION. BEFORE ATTACHING TEST LEADS, BE SURE ALL FUEL LINES AND FUEL SYSTEM COMPONENTS ARE CONNECTED.

CAUTION: TO PREVENT POSSIBLE DAMAGE TO THE VEHICLE ELECTRICAL SYSTEM AND LCS ADAPTER, THE TEST LEADS MUST BE CONNECTED INTO RELAY CAVITIES EXACTLY AS SHOWN IN FOLLOWING STEPS.

Depending upon vehicle model, year or engine configuration, three different types of relays may be used: Type-1, type-2 and type-3.

(13) If equipped with **type-1 relay** (Fig. 10), attach test leads from LCS adapter into PDC relay cavities number 30 and 87. For location of these cavities, refer to numbers stamped to bottom of relay (Fig. 10).

(14) If equipped with **type-2 relay** (Fig. 11), attach test leads from LCS adapter into PDC relay cavities number 30 and 87. For location of these cavities, refer to numbers stamped to bottom of relay (Fig. 11).

(15) If equipped with **type-3 relay** (Fig. 12), attach test leads from LCS adapter into PDC relay cavities number 3 and 5. For location of these cavities, refer to numbers stamped to bottom of relay (Fig. 12).

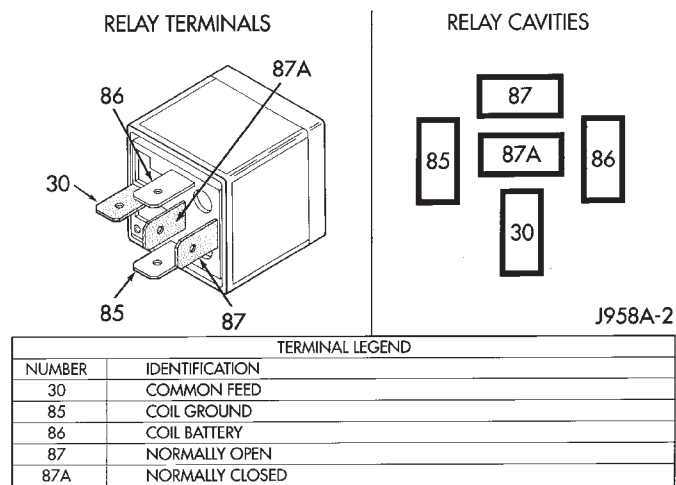


Fig. 10 Type-1 Relay

(16) When LCS adapter test leads are attached into relay cavities, fuel pump **will be activated**. Determine fuel pump amperage on DRB screen. Amperage should be below 10.0 amps. If amperage is below 10.0 amps, and specifications for the Fuel Pump Pressure, Fuel Pump Capacity and Fuel Pressure Leak Down tests were met, the fuel pump module is OK.

(17) If amperage is more than 10.0 amps, replace fuel pump module assembly. The electric fuel pump is not serviced separately.

(18) Disconnect test leads from relay cavities immediately after testing.

DIAGNOSIS AND TESTING (Continued)

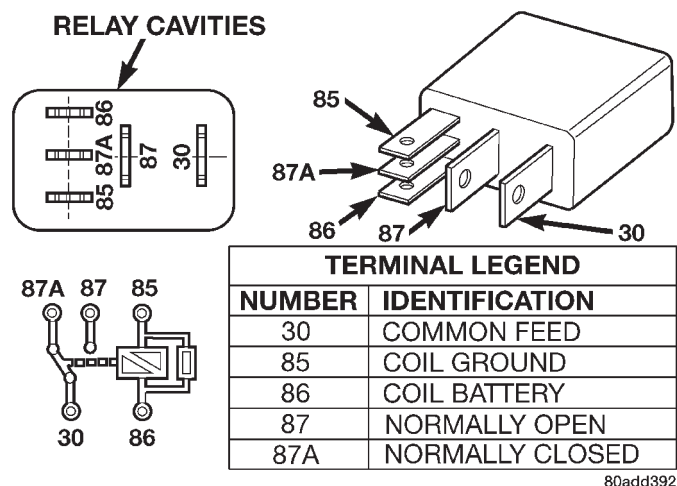


Fig. 11 Type-2 Relay

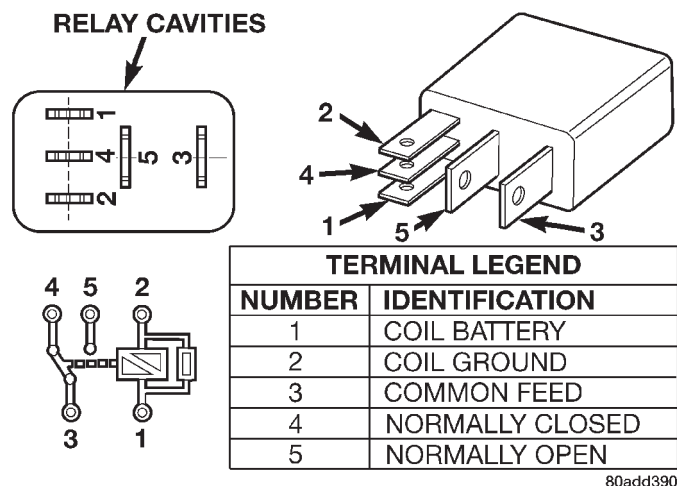


Fig. 12 Type-3 Relay

FUEL GAUGE SENDING UNIT

The fuel gauge sending unit contains a variable resistor (track). As the float moves up or down, electrical resistance will change. Refer to Group 8E, Instrument Panel and Gauges for Fuel Gauge testing. To test the gauge sending unit only, it must be removed from vehicle. The unit is part of the fuel pump module. Refer to Fuel Pump Module Removal/Installation for procedures. Measure the resistance across the sending unit terminals. With float in up position, resistance should be 20 ohms \pm 6 ohms. With float in down position, resistance should be 220 ohms \pm 6 ohms.

FUEL INJECTOR TEST

To perform a complete test of the fuel injectors and their circuitry, refer to DRB scan tool and appropriate Powertrain Diagnostics Procedures manual. To test the injector only, refer to the following:

Disconnect the fuel injector wire harness connector from the injector. Place an ohmmeter across the

injector electrical terminals. Resistance reading should be approximately 12 ohms \pm 1.2 ohms at 20°C (68°F).

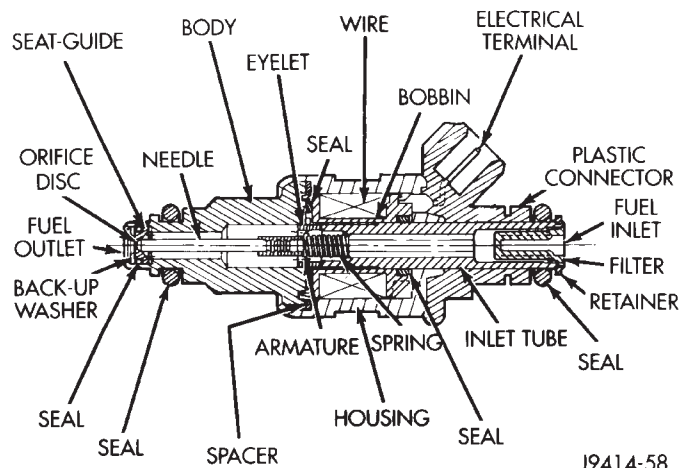


Fig. 13 Fuel Injector Internal Components—Typical SERVICE PROCEDURES

FUEL SYSTEM PRESSURE RELEASE PROCEDURE

Use following procedure if fuel rail is or is not equipped with fuel pressure test port.

- (1) Remove fuel fill cap.
- (2) The fuel filler tube contains a spring-loaded flap (door) located below fuel fill cap. The flap is used as a secondary way of sealing fuel tank if fuel fill cap has not been properly tightened. It is part of EVAP monitor system when vehicle is equipped with a Leak Detection Pump (LDP). **The vehicle may be equipped with flap installed into fuel filler tube even though vehicle is not equipped with LDP and EVAP monitor system.** Place a nonmetallic object into fuel fill tube and press on flap to relieve any tank pressure.
- (3) Remove Fuel Pump relay from Power Distribution Center (PDC). For location of relay, refer to label on underside of PDC cover.
- (4) Start and run engine until it stalls.
- (5) Attempt restarting engine until it will no longer run.
- (6) Turn ignition key to OFF position.

CAUTION: Steps 1, 2, 3 and 4 must be performed to relieve high pressure fuel from within fuel rail. Do not attempt to use following steps to relieve this pressure as excessive fuel will be forced into a cylinder chamber.

- (7) Unplug connector from any injector.
- (8) Attach one end of a jumper wire with alligator clips (18 gauge or smaller) to either injector terminal.
- (9) Connect other end of jumper wire to positive side of battery.

SERVICE PROCEDURES (Continued)

(10) Connect one end of a second jumper wire to remaining injector terminal.

CAUTION: Powering an injector for more than a few seconds will permanently damage the injector.

(11) Momentarily touch other end of jumper wire to negative terminal of battery for no more than a few seconds.

(12) Place a rag or towel below fuel line quick-connect fitting at fuel rail.

(13) Disconnect quick-connect fitting at fuel rail. Refer to Quick-Connect Fittings in this section.

(14) Return fuel pump relay to PDC.

(15) One or more Diagnostic Trouble Codes (DTC's) may have been stored in PCM memory due to fuel pump relay removal. The DRB scan tool must be used to erase a DTC. Refer to Group 25, Emission Control System. See On-Board Diagnostics.

FUEL TUBES/LINES/HOSES AND CLAMPS

Also refer to the section on Quick-Connect Fittings.

WARNING: THE FUEL SYSTEM IS UNDER A CONSTANT PRESSURE (EVEN WITH THE ENGINE OFF). BEFORE SERVICING ANY FUEL SYSTEM HOSES, FITTINGS OR LINES, THE FUEL SYSTEM PRESSURE MUST BE RELEASED. REFER TO THE FUEL SYSTEM PRESSURE RELEASE PROCEDURE IN THIS GROUP.

Inspect all hose connections such as clamps, couplings and fittings to make sure they are secure and leaks are not present. The component should be replaced immediately if there is any evidence of degradation that could result in failure.

Never attempt to repair a plastic fuel line/tube. Replace as necessary.

Avoid contact of any fuel tubes/hoses with other vehicle components that could cause abrasions or scuffing. Be sure that the plastic fuel lines/tubes are properly routed to prevent pinching and to avoid heat sources.

The lines/tubes/hoses used on fuel injected vehicles are of a special construction. This is due to the higher fuel pressures and the possibility of contaminated fuel in this system. If it is necessary to replace these lines/tubes/hoses, only those marked EFM/EFI may be used.

If equipped: The hose clamps used to secure rubber hoses on fuel injected vehicles are of a special rolled edge construction. This construction is used to prevent the edge of the clamp from cutting into the hose. Only these rolled edge type clamps may be used in this system. All other types of clamps may cut into the hoses and cause high-pressure fuel leaks.

Use new original equipment type hose clamps. Tighten hose clamps to 3 N·m (25 in. lbs.) torque.

QUICK-CONNECT FITTINGS

Also refer to the Fuel Tubes/Lines/Hoses and Clamps section.

Different types of quick-connect fittings are used to attach various fuel system components. These are: a single-tab type, a two-tab type, a plastic retainer ring type or a latch clip type. Certain fittings may require the use of a special tool for disconnection.

SINGLE-TAB TYPE

This type of fitting is equipped with a single pull tab (Fig. 14). The tab is removable. After the tab is removed, the quick-connect fitting can be separated from the fuel system component.

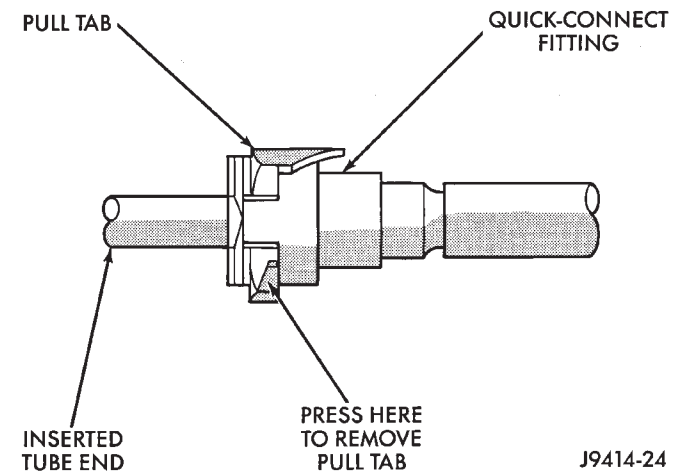


Fig. 14 Single-Tab Type Fitting

CAUTION: The interior components (o-rings, spacers) of this type of quick-connect fitting are not serviced separately, but new pull tabs are available. Do not attempt to repair damaged fittings or fuel lines/tubes. If repair is necessary, replace the complete fuel tube assembly.

WARNING: THE FUEL SYSTEM IS UNDER A CONSTANT PRESSURE (EVEN WITH THE ENGINE OFF). BEFORE SERVICING ANY FUEL SYSTEM HOSES, FITTINGS OR LINES, THE FUEL SYSTEM PRESSURE MUST BE RELEASED. REFER TO THE FUEL SYSTEM PRESSURE RELEASE PROCEDURE IN THIS GROUP.

DISCONNECTION/CONNECTION

(1) Perform fuel pressure release procedure. Refer to Fuel Pressure Release Procedure in this group.

(2) Disconnect negative battery cable from battery.

SERVICE PROCEDURES (Continued)

(3) Clean fitting of any foreign material before disassembly.

(4) Press release tab on side of fitting to release pull tab (Fig. 15).

CAUTION: If this release tab is not pressed prior to releasing the pull tab, the pull tab will be damaged.

(5) While pressing release tab on side of fitting, use a screwdriver to pry up pull tab (Fig. 15).

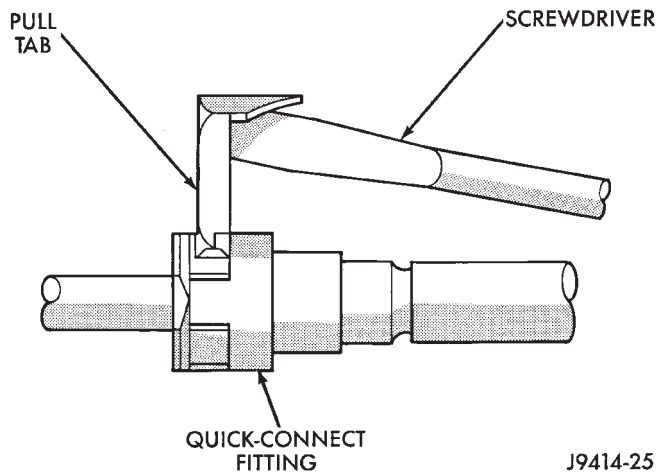


Fig. 15 Disconnecting Single-Tab Type Fitting

(6) Raise pull tab until it separates from quick-connect fitting (Fig. 16). Discard old pull tab.

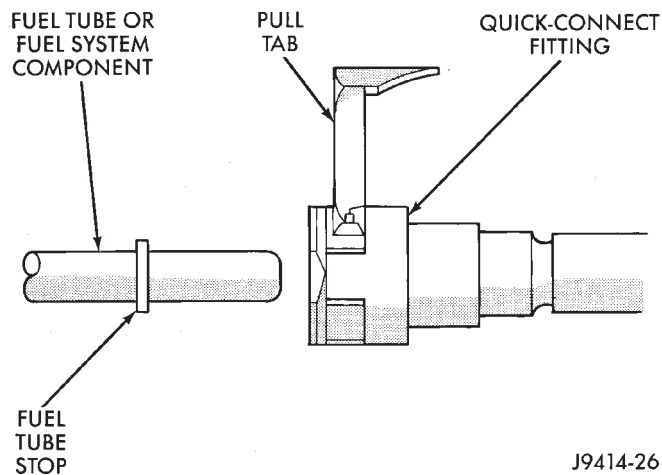


Fig. 16 Removing Pull Tab

(7) Disconnect quick-connect fitting from fuel system component being serviced.

(8) Inspect quick-connect fitting body and fuel system component for damage. Replace as necessary.

(9) Prior to connecting quick-connect fitting to component being serviced, check condition of fitting and component. Clean parts with a lint-free cloth. Lubricate with clean engine oil.

(10) Insert quick-connect fitting into fuel tube or fuel system component until built-on stop on fuel tube or component rests against back of fitting.

(11) Obtain a new pull tab. Push new tab down until it locks into place in quick-connect fitting.

(12) Verify a locked condition by firmly pulling on fuel tube and fitting (15-30 lbs.).

(13) Connect negative cable to battery.

(14) Start engine and check for leaks.

TWO-TAB TYPE FITTING

This type of fitting is equipped with tabs located on both sides of the fitting (Fig. 17). These tabs are supplied for disconnecting the quick-connect fitting from component being serviced.

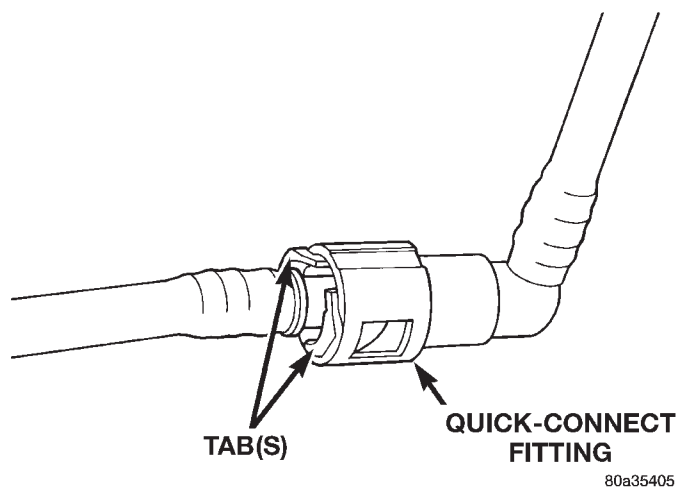


Fig. 17 Typical Two-Tab Type Quick-Connect Fitting

CAUTION: The interior components (o-rings, spacers) of this type of quick-connect fitting are not serviced separately, but new plastic retainers are available. Do not attempt to repair damaged fittings or fuel lines/tubes. If repair is necessary, replace the complete fuel tube assembly.

WARNING: THE FUEL SYSTEM IS UNDER A CONSTANT PRESSURE (EVEN WITH THE ENGINE OFF). BEFORE SERVICING ANY FUEL SYSTEM HOSES, FITTINGS OR LINES, THE FUEL SYSTEM PRESSURE MUST BE RELEASED. REFER TO THE FUEL PRESSURE RELEASE PROCEDURE IN THIS GROUP.

DISCONNECTION/CONNECTION

(1) Perform fuel pressure release procedure. Refer to Fuel Pressure Release Procedure in this group.

(2) Disconnect negative battery cable from battery.

(3) Clean fitting of any foreign material before disassembly.

SERVICE PROCEDURES (Continued)

(4) To disconnect quick-connect fitting, squeeze plastic retainer tabs (Fig. 17) against sides of quick-connect fitting with your fingers. Tool use is not required for removal and may damage plastic retainer. Pull fitting from fuel system component being serviced. The plastic retainer will remain on component being serviced after fitting is disconnected. The o-rings and spacer will remain in quick-connect fitting connector body.

(5) Inspect quick-connect fitting body and component for damage. Replace as necessary.

CAUTION: When the quick-connect fitting was disconnected, the plastic retainer will remain on the component being serviced. If this retainer must be removed, very carefully release the retainer from the component with two small screwdrivers. After removal, inspect the retainer for cracks or any damage.

(6) Prior to connecting quick-connect fitting to component being serviced, check condition of fitting and component. Clean parts with a lint-free cloth. Lubricate with clean engine oil.

(7) Insert quick-connect fitting to component being serviced and into plastic retainer. When a connection is made, a click will be heard.

(8) Verify a locked condition by firmly pulling on fuel tube and fitting (15-30 lbs.).

(9) Connect negative cable to battery.

(10) Start engine and check for leaks.

PLASTIC RETAINER RING TYPE FITTING

This type of fitting can be identified by the use of a full-round plastic retainer ring (Fig. 18) usually black in color.


CAUTION: The interior components (o-rings, spacers, retainers) of this type of quick-connect fitting are not serviced separately. Do not attempt to repair damaged fittings or fuel lines/tubes. If repair is necessary, replace the complete fuel tube assembly.

WARNING: THE FUEL SYSTEM IS UNDER A CONSTANT PRESSURE (EVEN WITH THE ENGINE OFF). BEFORE SERVICING ANY FUEL SYSTEM HOSES, FITTINGS OR LINES, THE FUEL SYSTEM PRESSURE MUST BE RELEASED. REFER TO THE FUEL SYSTEM PRESSURE RELEASE PROCEDURE IN THIS GROUP.

DISCONNECTION/CONNECTION

(1) Perform fuel pressure release procedure. Refer to Fuel Pressure Release Procedure in this section.

(2) Disconnect negative battery cable from battery.

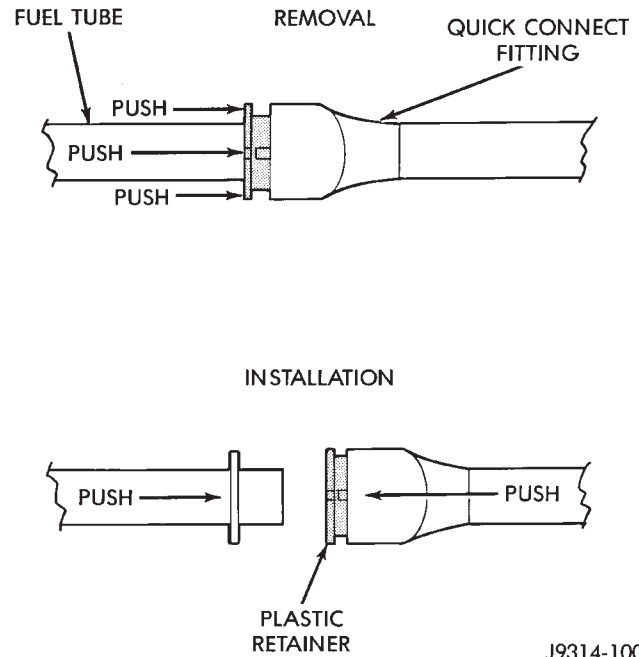

J9314-100

Fig. 18 Plastic Retainer Ring Type Fitting

(3) Clean fitting of any foreign material before disassembly.

(4) To release fuel system component from quick-connect fitting, firmly push fitting towards component being serviced while firmly pushing plastic retainer ring into fitting (Fig. 18). With plastic ring depressed, pull fitting from component. **The plastic retainer ring must be pressed squarely into fitting body. If this retainer is cocked during removal, it may be difficult to disconnect fitting. Use an open-end wrench on shoulder of plastic retainer ring to aid in disconnection.**

(5) After disconnection, plastic retainer ring will remain with quick-connect fitting connector body.

(6) Inspect fitting connector body, plastic retainer ring and fuel system component for damage. Replace as necessary.

(7) Prior to connecting quick-connect fitting to component being serviced, check condition of fitting and component. Clean parts with a lint-free cloth. Lubricate with clean engine oil.

(8) Insert quick-connect fitting into component being serviced until a click is felt.

(9) Verify a locked condition by firmly pulling on fuel tube and fitting (15-30 lbs.).

(10) Connect negative battery cable to battery.


(11) Start engine and check for leaks.

LATCH CLIP FITTING (FUEL LINE-TO-FUEL RAIL)

A tethered latch clip (Fig. 19) is used to secure the fuel line to the fuel rail. A special tool will be necessary to separate fuel line from fuel rail after latch

SERVICE PROCEDURES (Continued)

clip is removed. This same latch clip may also be used to secure other different fuel system components.

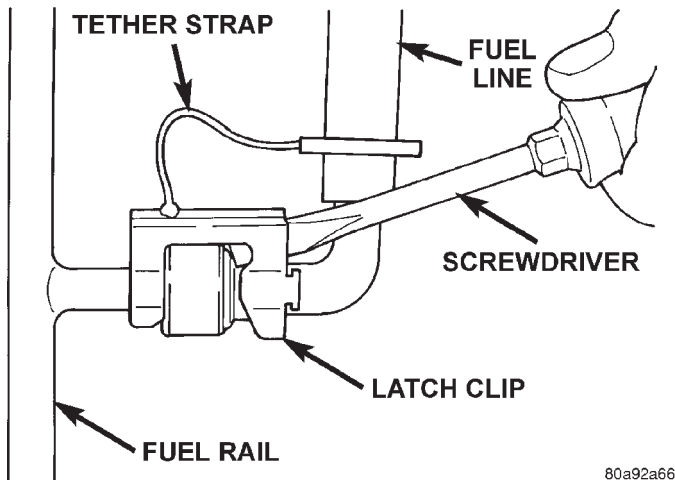

80a92a66

Fig. 19 Latch Clip Removal

CAUTION: The interior components (o-rings, spacers, retainers) of this type of quick-connect fitting are not serviced separately. Do not attempt to repair damaged fittings or fuel lines/tubes. If repair is necessary, replace the complete fuel tube assembly.

WARNING: THE FUEL SYSTEM IS UNDER A CONSTANT PRESSURE (EVEN WITH THE ENGINE OFF). BEFORE SERVICING ANY FUEL SYSTEM HOSES, FITTINGS OR LINES, THE FUEL SYSTEM PRESSURE MUST BE RELEASED. REFER TO THE FUEL SYSTEM PRESSURE RELEASE PROCEDURE IN THIS GROUP.


DISCONNECTION/CONNECTION

- (1) Perform fuel pressure release procedure. Refer to Fuel Pressure Release Procedure in this group.
- (2) Disconnect negative battery cable from battery.
- (3) Clean fitting of any foreign material before disassembly.

(4) Pry up on latch clip with a screwdriver (Fig. 19).

(5) Slide latch clip toward fuel rail while lifting with screwdriver.

(6) Insert special fuel line removal tool (Snap-On number FIH 9055-1 or equivalent) into fuel line (Fig. 20). Use this tool to release locking fingers in end of line.

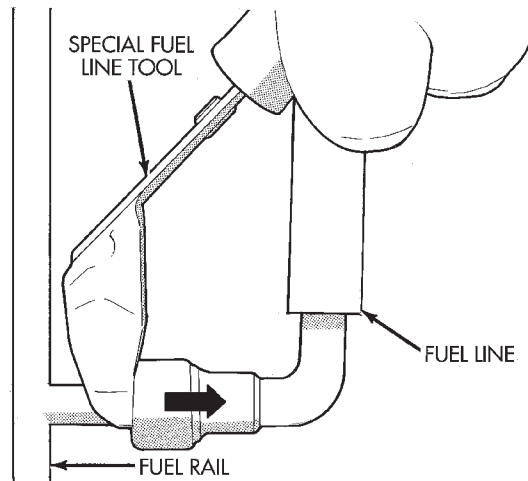

J9514-6

Fig. 20 Fuel Line Disconnection

(7) With special tool still inserted, pull fuel line from fuel rail.

(8) After disconnection, locking fingers will remain within quick-connect fitting at end of fuel line.

(9) Prior to connecting fuel line to fuel rail, check condition of both fittings. Clean parts with a lint-free cloth. Lubricate with clean engine oil.

(10) Insert fuel line onto fuel rail until a click is felt.

(11) Install latch clip (snaps into position). **If latch clip will not fit, this indicates fuel line is not properly installed to fuel rail. Recheck fuel line connection.**

(12) Verify a locked condition by firmly pulling on fuel line and fitting (15-30 lbs.).

(13) Connect negative battery cable to battery.

(14) Start engine and check for leaks.

REMOVAL AND INSTALLATION


FUEL FILTER/FUEL PRESSURE REGULATOR

REMOVAL

WARNING: THE FUEL SYSTEM IS UNDER A CONSTANT PRESSURE, EVEN WITH ENGINE OFF. BEFORE SERVICING THE FUEL FILTER/FUEL PRESSURE REGULATOR, THE FUEL SYSTEM PRESSURE MUST BE RELEASED.

Refer to Fuel System Pressure Release in the Fuel Delivery System section of this group.


The fuel filter/fuel pressure regulator is located at top of fuel pump module on top of fuel tank (Fig. 22).

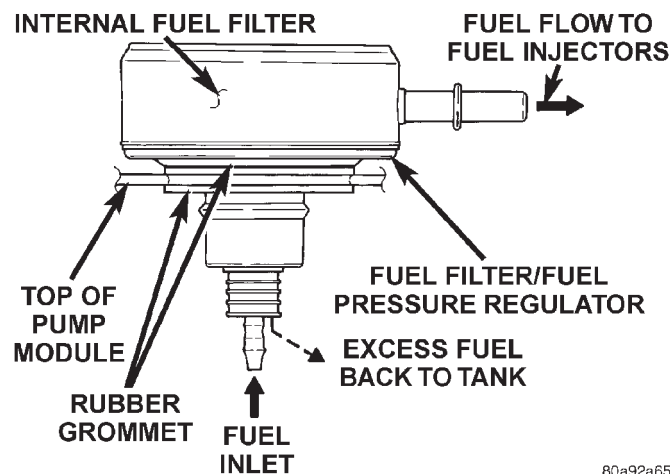

80a92a65

Fig. 21 Fuel Filter/Fuel Pressure Regulator

Fuel pump module removal is not necessary for fil-

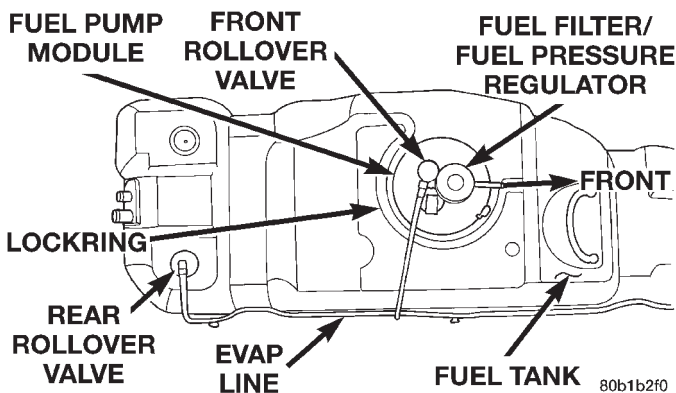

80b1b2f0

Fig. 22 Filter/Regulator Location

ter/regulator removal.


(1) Drain fuel tank and remove tank. Refer to Fuel Tank Removal/Installation.

(2) Clean area around filter/regulator to prevent contaminants from entering pump module.

(3) The fuel filter/regulator is pressed into a rubber grommet. Remove by twisting and pulling straight up.

CAUTION: Do not pull filter/regulator more than three inches from fuel pump module. Damage to coiled fuel tube (line) may result.

(4) Gently cut old fuel tube (line) clamp (Fig. 23) taking care not to damage plastic fuel tube. Remove and discard old fuel tube clamp.

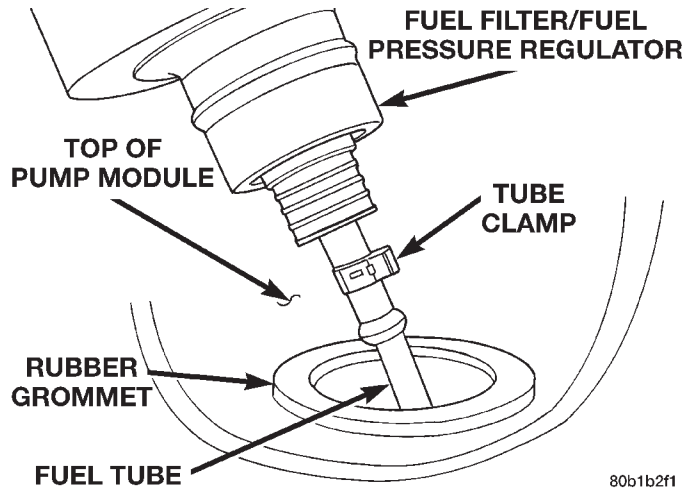

80b1b2f1

Fig. 23 Fuel Tube and Clamp—TYPICAL

(5) Remove plastic fuel tube from filter/regulator by gently pulling downward. Remove filter/regulator from fuel pump module.

INSTALLATION

(1) Install a new clamp over plastic fuel tube.

(2) Install filter/regulator to fuel tube. Rotate filter/regulator in fuel tube (line) (Fig. 24) until it is pointed towards front of tank (or front of vehicle).

(3) Tighten line clamp to fuel line using special Hose Clamp Pliers number C-4124 or equivalent (Fig. 24). **Do not use conventional side cutters to tighten this type of clamp.**

(4) Press filter/regulator (by hand) into rubber grommet.

(5) Rotate filter/regulator until pointed towards front of vehicle (Fig. 22).

(6) Install fuel tank. Refer to Fuel Tank Removal/Installation.

(7) Check for fuel leaks.

REMOVAL AND INSTALLATION (Continued)

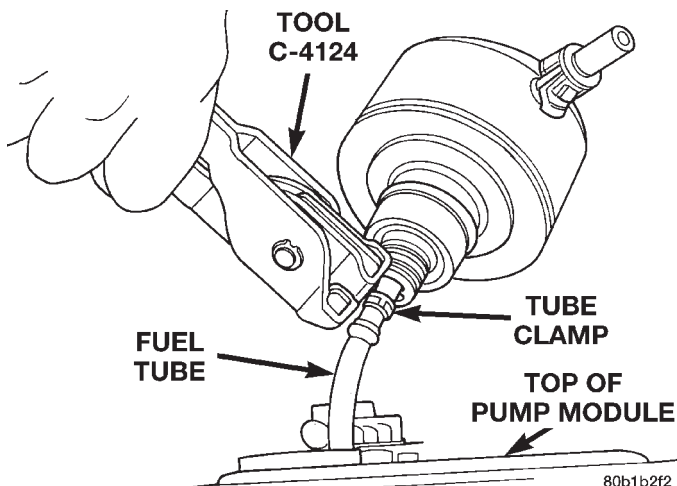


Fig. 24 Tightening Fuel Filter Tube Clamp—TYPICAL FUEL PUMP MODULE

REMOVAL

WARNING: THE FUEL SYSTEM IS UNDER A CONSTANT PRESSURE (EVEN WITH ENGINE OFF). BEFORE SERVICING FUEL PUMP MODULE, FUEL SYSTEM PRESSURE MUST BE RELEASED.

The fuel pump module is located in top of fuel tank.

(1) Drain fuel tank and remove tank. Refer to Fuel Tank Removal/Installation in this group.

(2) Thoroughly wash and clean area around pump module to prevent contaminants from entering tank.

(3) Part of Fuel Tank Removal Procedure: Disconnect EVAP line at pump module (Fig. 25); disconnect wiring harness connector at pump module; disconnect fuel line from fuel filter fitting.

(4) Rotate fuel filter until its fitting is pointed towards center of pump module.

(5) A metal lockring is used to secure fuel pump module to fuel tank (Fig. 25). Six metal fingers (Fig. 25) are molded into the plastic fuel tank. The fingers are used to retain lockring to fuel tank. A rubber gasket is used as a seal between module and fuel tank.

(6) Before removing lockring, apply a small amount of engine oil to 6 fingers where fingers meet lockring (to act as a lubricant).

(7) Remove (rotate) lockring counterclockwise using a brass or bronze drift punch and a hammer. This must be done while slightly prying back on lock tab (Fig. 25).

(8) Remove lockring and pump module from fuel tank.

INSTALLATION

CAUTION: Whenever fuel pump module is serviced, the module gasket must be replaced.

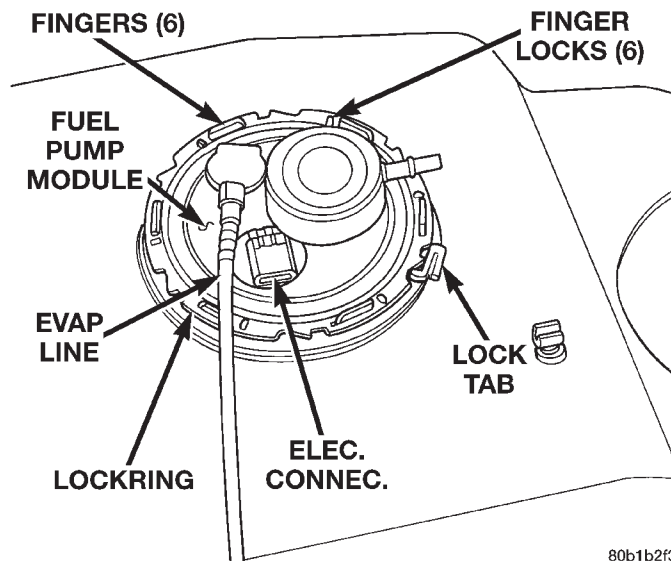


Fig. 25 Fuel Pump Module and Lockring

(1) Using a new gasket, position fuel pump module into opening in fuel tank. Be sure rubber gasket remains in place. Rotate pump module assembly until module is positioned as shown in (Fig. 25). This step must be followed to prevent float/float rod from contacting sides of fuel tank.

(2) Before installing lockring, apply a small amount of engine oil to 6 fingers where fingers meet lockring (to act as a lubricant).

(3) Position lockring over top of fuel pump module. Tighten finger tight.

(4) Install (rotate) lockring clockwise using a brass or bronze drift punch and a hammer. Continue rotating lockring until 6 fingers (Fig. 25) drop into 6 finger locks and lock tab (Fig. 25) falls into lockring notch.

(5) Install fuel tank. Refer to Fuel Tank Installation in this section.

FUEL PUMP INLET FILTER

The fuel pump inlet filter (strainer) is located on the bottom of the fuel pump module (Fig. 26). The fuel pump module is located inside of fuel tank.

REMOVAL


(1) Remove fuel tank. Refer to Fuel Tank Removal/Installation.

(2) Remove fuel pump module. Refer to Fuel Pump Module Removal/Installation.

(3) Remove filter by carefully prying 2 lock tabs at bottom of module with 2 screwdrivers. Filter is snapped to module.

(4) Clean bottom of pump module.

REMOVAL AND INSTALLATION (Continued)

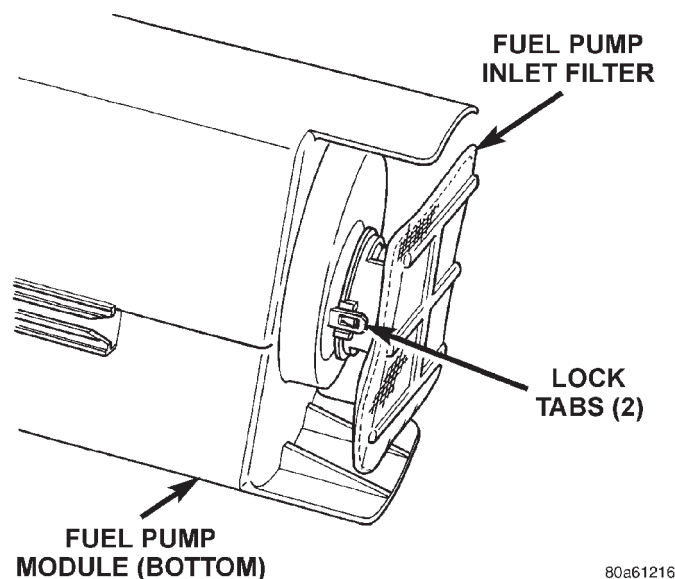


80a61216

Fig. 26 Fuel Pump Inlet Filter**INSTALLATION**


- (1) Snap new filter to bottom of module. Be sure o-ring is in correct position.
- (2) Install fuel pump module. Refer to Fuel Pump Module Removal/Installation.
- (3) Install fuel tank. Refer to Fuel Tank Removal/Installation.

FUEL GAUGE SENDING UNIT

The fuel gauge sending unit (fuel level sensor) and float assembly is located on the side of fuel pump module (Fig. 27). The fuel pump module is located inside of fuel tank.

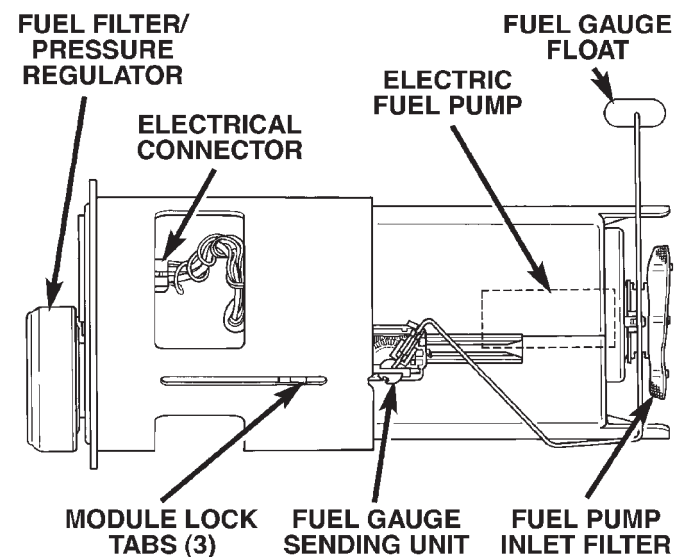

80b0d725

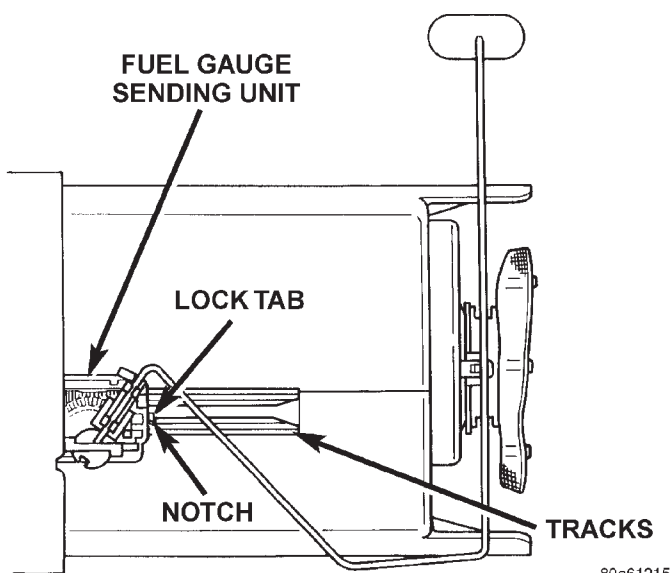Fig. 27 Fuel Gauge Sending Unit Location—TYPICAL Module

80a61215

Fig. 28 Fuel Gauge Sending Unit Lock Tab/Tracks**REMOVAL**

- (1) Remove fuel tank. Refer to Fuel Tank Removal/Installation.
- (2) Remove fuel pump module. Refer to Fuel Pump Module Removal/Installation.
- (3) Unplug 4-way electrical connector (Fig. 27).
- (4) Disconnect 2 sending unit wires at 4-way connector. The locking collar of connector must be removed before wires can be released from connector. Note location of wires within 4-way connector.
- (5) The sending unit is retained to pump module with a small lock tab and notch (Fig. 28). Carefully push lock tab to the side and away from notch while sliding sending unit downward on tracks for removal. Note wire routing while removing unit from module.

INSTALLATION

- (1) Position sending unit into tracks. Note wire routing.
- (2) Push unit on tracks until lock tab snaps into notch.
- (3) Connect 2 sending unit wires into 4-way connector and install locking collar.
- (4) Connect 4-way electrical connector to module.
- (5) Install fuel pump module. Refer to Fuel Pump Module Removal/Installation.
- (6) Install fuel tank. Refer to Fuel Tank Removal/Installation.

FUEL INJECTOR RAIL—3.9/5.2/5.9L ENGINES

WARNING: THE FUEL SYSTEM IS UNDER A CONSTANT PRESSURE (EVEN WITH ENGINE TURNED OFF). BEFORE SERVICING FUEL RAIL ASSEMBLY, FUEL SYSTEM PRESSURE MUST BE RELEASED.

REMOVAL AND INSTALLATION (Continued)

To release fuel pressure, refer to Fuel System Pressure Release Procedure in this group.

CAUTION: The left and right fuel rails are replaced as an assembly. Do not attempt to separate rail halves at connecting hose (Fig. 29). Due to the design of this connecting hose, it does not use any clamps. Never attempt to install a clamping device of any kind to hose. When removing fuel rail assembly for any reason, be careful not to bend or kink connecting hose.

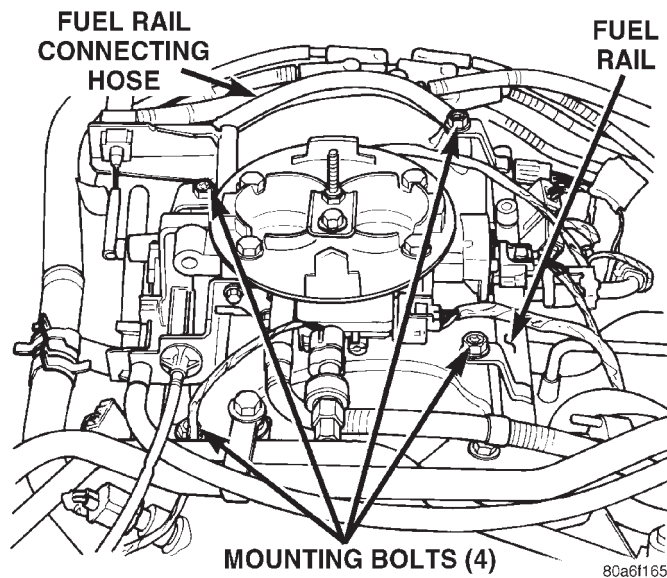


Fig. 29 Fuel Rail Assembly—3.9/5.2/5.9L Engine—Typical

REMOVAL

- (1) Remove negative battery cable at battery.
- (2) Remove air cleaner.
- (3) Perform fuel pressure release procedure.
- (4) Remove throttle body from intake manifold. Refer to Throttle Body removal in this group.
- (5) If equipped with air conditioning, remove A-shaped A/C compressor-to-intake manifold support bracket (three bolts) (Fig. 30).
- (6) Disconnect electrical connectors at all fuel injectors (Fig. 31). The factory fuel injection wiring harness is numerically tagged (INJ 1, INJ 2, etc.) for injector position identification.
- (7) 3.9L (V-6) engine only: Disconnect electrical connector at intake manifold air temperature sensor. Do not remove sensor.
- (8) Disconnect fuel tube (line) at side of fuel rail. Refer to Quick-Connect Fittings for procedures.
- (9) Remove remaining fuel rail mounting bolts.
- (10) Clean dirt/debris from each fuel injector at intake manifold.
- (11) Gently rock and pull **left** fuel rail until fuel injectors just start to clear intake manifold. Gently rock and pull **right** fuel rail until fuel injectors just

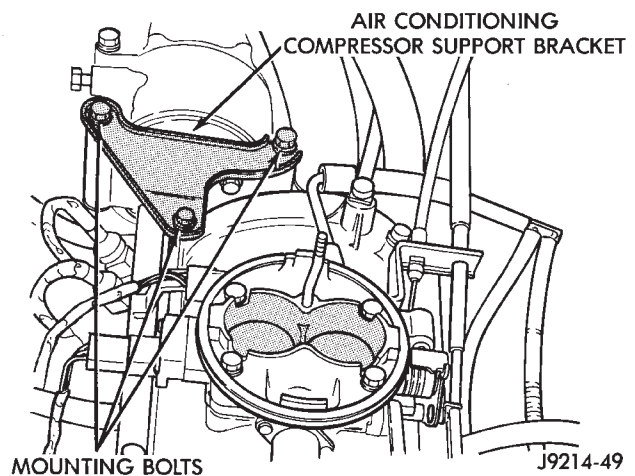


Fig. 30 A/C Compressor Support Bracket—Typical

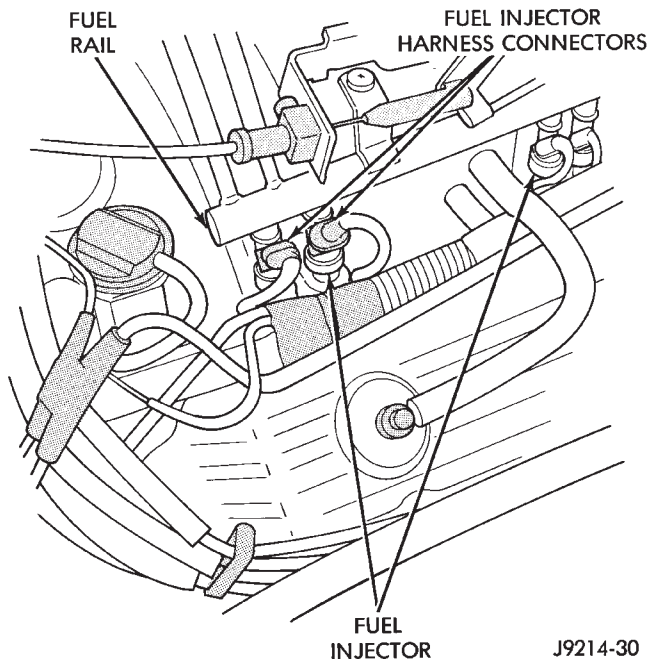


Fig. 31 Fuel Injector Connectors—Typical

start to clear intake manifold. Repeat this procedure (left/right) until all fuel injectors have cleared intake manifold.

(12) Remove fuel rail (with injectors attached) from engine.

(13) Remove clip(s) retaining injector(s) to fuel rail (Fig. 32) or (Fig. 33).



INSTALLATION

(1) Apply a small amount of clean engine oil to each fuel injector o-ring. This will help in fuel rail installation.

(2) Install injector(s) and injector clip(s) to fuel rail.

(3) Position fuel rail/fuel injector assembly to injector openings on intake manifold.

REMOVAL AND INSTALLATION (Continued)

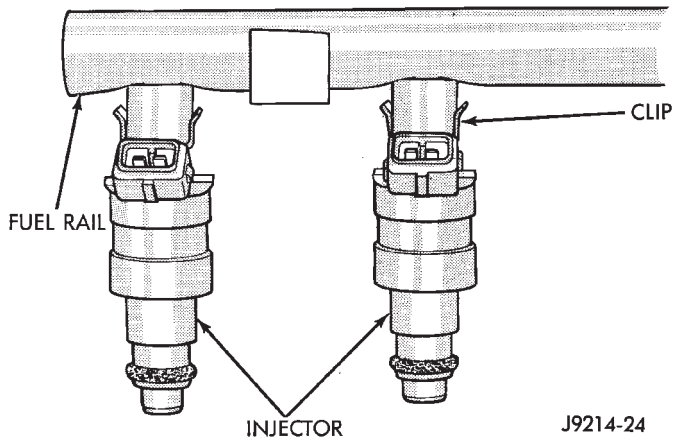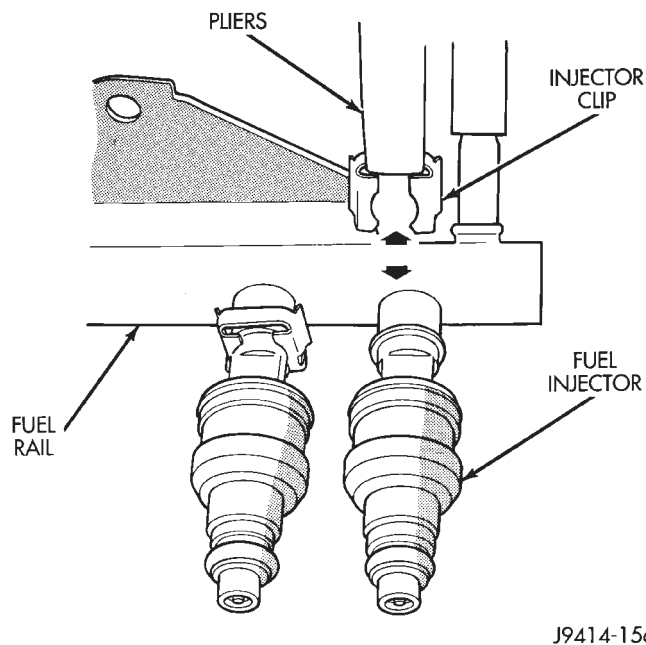**Fig. 32 Fuel Injector Mounting—Typical****Fig. 33 Injector Retaining Clips—Typical Injector**

- (4) Guide each injector into intake manifold. Be careful not to tear injector o-ring.
- (5) Push **right** fuel rail down until fuel injectors have bottomed on injector shoulder. Push **left** fuel rail down until fuel injectors have bottomed on injector shoulder.
- (6) Install fuel rail mounting bolts.
- (7) Connect electrical connector to intake manifold air temperature sensor.
- (8) Connect wiring to all fuel injectors. The injector wiring harness is numerically tagged.
- (9) Install A/C support bracket (if equipped).
- (10) Install throttle body to intake manifold. Refer to Throttle Body installation in this group.
- (11) Install fuel tube (line) at side of fuel rail. Refer to Quick-Connect Fittings for procedures.
- (12) Install air cleaner.

- (13) Connect battery cable to battery.
- (14) Start engine and check for leaks.

FUEL INJECTOR(S)

WARNING: THE FUEL SYSTEM IS UNDER A CONSTANT PRESSURE EVEN WITH ENGINE TURNED OFF. BEFORE SERVICING FUEL INJECTOR(S), FUEL SYSTEM PRESSURE MUST BE RELEASED.

To release fuel pressure, refer to Fuel System Pressure Release Procedure.

To remove one or more fuel injectors, fuel rail assembly must be removed from engine.

REMOVAL

- (1) Remove air cleaner assembly.
- (2) Remove fuel injector rail assembly. Refer to Fuel Injector Rail Removal/Installation in this group.
- (3) Remove clip(s) retaining the injector(s) to fuel rail (Fig. 32) or (Fig. 33).
- (4) Remove injector(s) from fuel rail.

INSTALLATION

- (1) Apply a small amount of clean engine oil to each fuel injector o-ring. This will help in fuel rail installation.
- (2) Install injector(s) and injector clip(s) to fuel rail.
- (3) Install fuel rail assembly. Refer to Fuel Injector Rail Removal/Installation.
- (4) Install air cleaner.
- (5) Start engine and check for leaks.

FUEL TANK

WARNING: THE FUEL SYSTEM IS UNDER A CONSTANT PRESSURE (EVEN WITH ENGINE OFF). BEFORE DRAINING FUEL TANK, FUEL SYSTEM PRESSURE MUST BE RELEASED.

Two different procedures may be used to drain fuel tank (removing fuel vent hose at fuel tank or using DRB scan tool).

The quickest draining procedure involves removing fuel vent hose at fuel tank.

As an alternative procedure, the electric fuel pump may be activated allowing tank to be drained at fuel rail connection. Refer to DRB scan tool for fuel pump activation procedures. Before disconnecting fuel line at fuel rail, release fuel pressure. Refer to the Fuel System Pressure Release Procedure in this group for procedures. Attach end of special test hose tool number 6541, 6539, 6631 or 6923 at fuel rail disconnection (tool number will depend on model and/or engine application). Position opposite end of this hose tool to

REMOVAL AND INSTALLATION (Continued)

an approved gasoline draining station. Activate fuel pump and drain tank until empty.

If electric fuel pump is not operating, tank **must** be drained by removing fuel vent hose. Refer to following procedures.

REMOVAL

(1) Perform Fuel System Pressure Release procedure as described in this group.

(2) Disconnect negative battery cable at battery.

(3) Remove fuel tank filler tube cap.

(4) Raise vehicle on hoist.

(5) If equipped, remove fuel tank skid plate. Refer to Fuel Tank Skid Plate in Group 23, Body.

(6) Two rubber hoses (fuel filler and fuel vent hoses) connect the fuel tank fittings (at rear of tank) to the metal fuel fill tube assembly at body (Fig. 34). Disconnect hose clamps (Fig. 34) at fuel fill tube assembly end of hoses and disconnect rubber hoses.

(7) Position a drain hose into the fuel vent hose (Fig. 34) and into tank.

(8) Drain fuel into an approved portable holding tank or a properly labeled gasoline safety container.

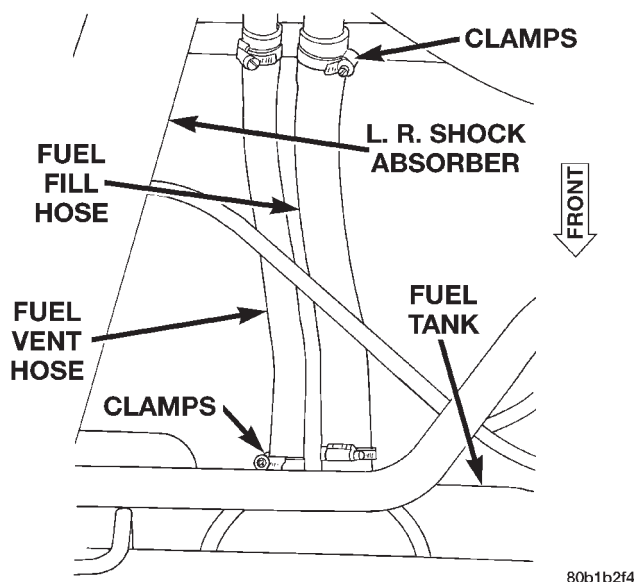


Fig. 34 Fuel Hoses at Rear of Fuel Tank

(9) Place and secure a transmission jack under center of fuel tank and apply slight pressure.

(10) Remove two tank mounting nuts from mounting straps (Fig. 35). Position tank mounting straps to side of vehicle and lower tank just enough to allow access to connections at top of tank. **To prevent fuel loss, be sure rear of tank is higher than front of tank when lowering.**

(11) Clean quick-connect fittings (at top of fuel tank) of any dirt/contaminants before removal.

(12) Disconnect fuel supply line from fuel filter/fuel pressure regulator fitting at top of tank. Refer to Quick-Connect Fittings for procedures.

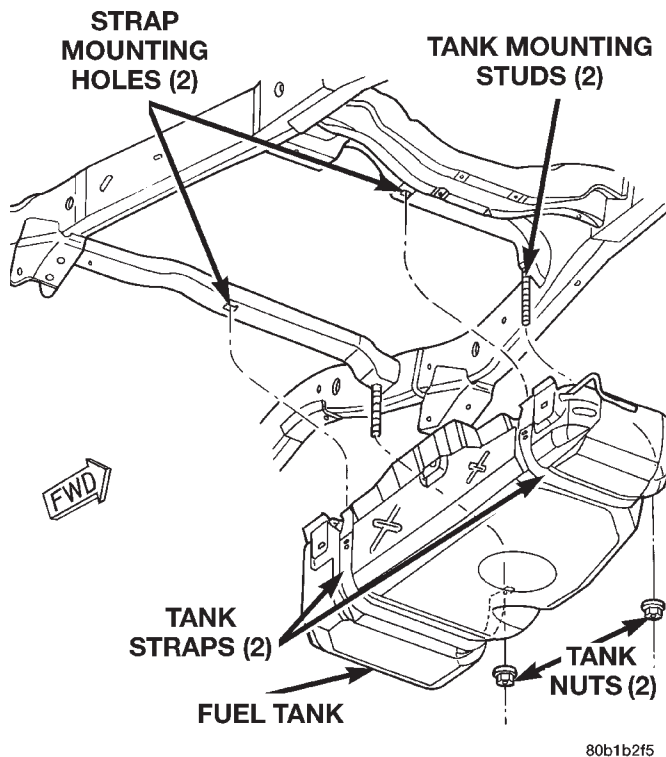


Fig. 35 Fuel Tank Mounting

(13) Disconnect rear fuel vapor line (EVAP line) from rollover valve at top/rear of tank.

(14) Disconnect front fuel vapor line (EVAP line) from rollover valve at fuel pump module.

(15) Disconnect electrical connector from pump module at top of tank.

(16) Lower tank from vehicle.

(17) Remove tank from hydraulic jack.

(18) If fuel pump module requires service, refer to Fuel Pump Module Removal/Installation.

INSTALLATION

(1) If fuel pump module is being installed, refer to Fuel Pump Module Removal/Installation. Be sure fuel filter/fuel pressure regulator inlet fitting is pointed towards front of vehicle.

(2) Place and secure fuel tank on top of transmission jack.

(3) Raise tank up enough to connect fuel line, electrical connector and both EVAP lines to top of fuel tank. Refer to Quick-Connect Fittings for fuel line procedures.

(4) Continue raising tank into position and install mounting straps and nuts. Tighten nuts to 27–54 N·m (20–40 ft. lbs.) torque. **Do not over tighten mounting strap nuts.**

(5) Remove transmission jack.

(6) Connect fill/vent hoses to fill/vent tube assembly.

(7) Tighten hose clamps at fill/vent hoses.

REMOVAL AND INSTALLATION (Continued)

- (8) If equipped, install fuel tank skid plate. Refer to Fuel Tank Skid Plate in Group 23, Body.
- (9) Connect negative cable to battery.
- (10) Refill fuel tank and install fill cap.
- (11) Inspect all hoses and lines for leaks.

FUEL TANK FILLER TUBE CAP

If replacement of the fuel tank filler tube cap is necessary, it must be replaced with an identical cap to be sure of correct system operation.

CAUTION: Remove the fuel tank filler tube cap to relieve fuel tank pressure. The cap must be removed prior to disconnecting any fuel system component or before draining the fuel tank.

ACCELERATOR PEDAL

All engines are equipped with torsion return springs located on the throttle body shaft. 3.9L V-6 and 5.2/5.9L V-8 engines equipped with a manual transmission have an additional pedal return spring on the throttle body linkage.

REMOVAL

CAUTION: Be careful not to damage or kink the cable core wire (within the cable sheathing) while servicing accelerator pedal or cables.

- (1) From inside the vehicle, hold up accelerator pedal. Remove plastic cable retainer and throttle cable core wire from upper end of pedal arm (Fig. 36). Plastic cable retainer snaps into pedal arm.
- (2) Remove two accelerator pedal/bracket nuts (Fig. 36) and remove pedal/bracket assembly from vehicle.

INSTALLATION

- (1) Position pedal/bracket assembly over the two dash panel mounting studs and install retaining nuts.
- (2) Tighten nuts to 7 N·m (65 in. lbs.) torque.
- (3) From inside the vehicle, hold up the accelerator pedal. Install the throttle cable core wire and plastic cable retainer into the upper end of the pedal arm. The plastic retainer is snapped into the pedal arm. When installing the plastic retainer to the accelerator pedal arm, note the index tab on the pedal arm (Fig. 37). Align the index slot (Fig. 37) on the plastic cable retainer to this index tab.

THROTTLE CABLE

CAUTION: Be careful not to damage or kink cable core wire (within cable sheathing) while servicing accelerator pedal or cables.

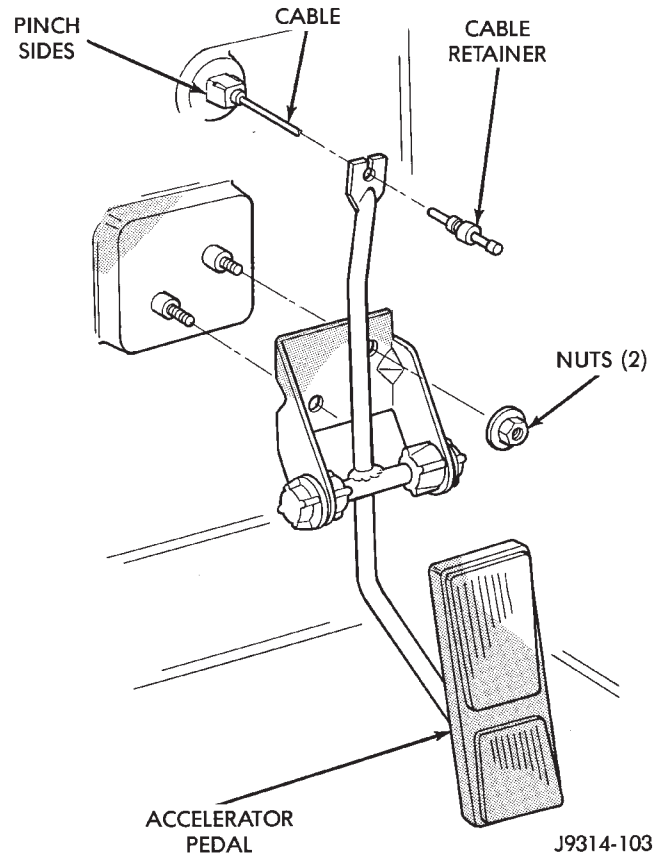


Fig. 36 Accelerator Pedal—Removal or Installation

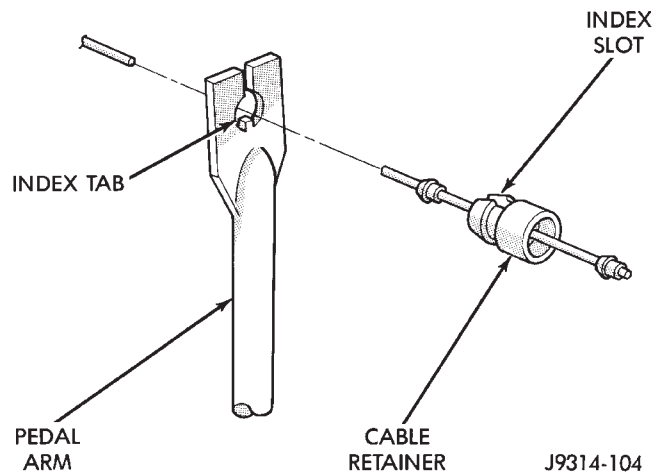


Fig. 37 Index Tab and Slot

REMOVAL

- (1) From inside vehicle, hold up accelerator pedal. Remove plastic cable retainer and throttle cable core wire from upper end of pedal arm (Fig. 36). Plastic cable retainer snaps into pedal arm.
- (2) Remove cable core wire at pedal arm.
- (3) From inside vehicle, pinch both sides of cable housing retainer at dash panel (Fig. 36). Remove

REMOVAL AND INSTALLATION (Continued)

cable housing from dash panel and pull into engine compartment.

(4) Remove air tube at top of throttle body.

(5) Operate throttle body lever (by hand) to full open throttle position. Slip cable end rearward from pin on throttle lever (Fig. 38).

(6) Remove cable housing at throttle body mounting bracket by pressing forward on release tab with a small screwdriver (Fig. 39). **To prevent cable housing breakage, press on tab only enough to release cable from bracket.** Lift cable housing straight up from bracket while pressing on release tab. Remove cable housing.

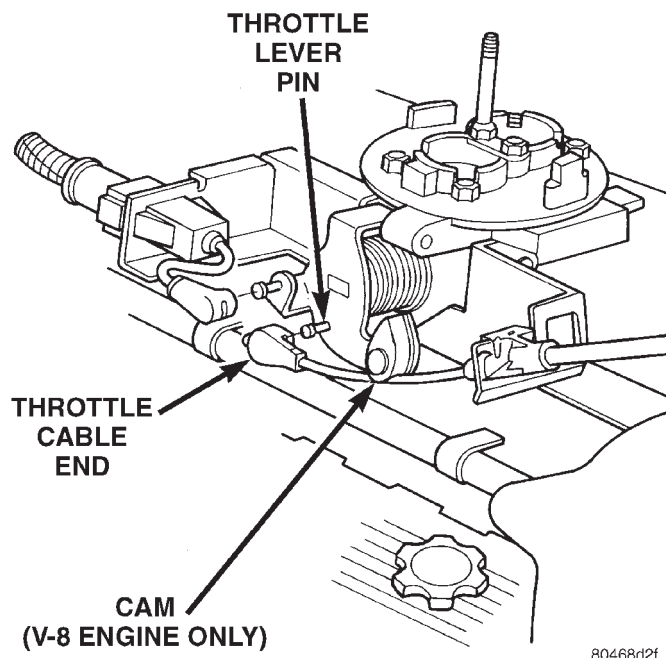


Fig. 38 Throttle Cable at Throttle Body—Typical (V-8 Shown)

INSTALLATION

(1) Snap cable end onto lever pin (Fig. 38). On models with V-8 engines, be sure cable is routed **under** plastic cam (Fig. 38).

(2) Connect cable to throttle body mounting bracket (push down and lock).

(3) Install remaining cable housing end into dash panel opening (snaps into position).

(4) Install ball end of cable wire through hole in pedal arm. Install plastic cable retainer. The plastic retainer is snapped into pedal arm. When installing retainer to accelerator pedal arm, note index tab on pedal arm (Fig. 37). Align index slot (Fig. 37) on plastic retainer to this index tab.

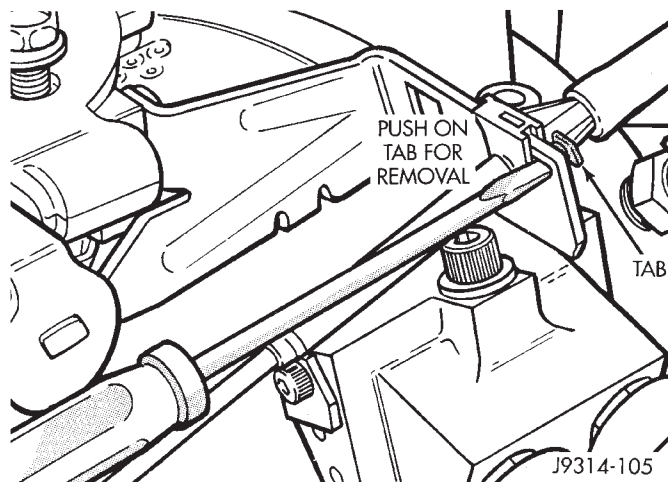


Fig. 39 Cable Release Tab—Typical V-6/V8 Engine

(5) Operate and test throttle before starting engine.

(6) Install air tube to throttle body.

SPECIFICATIONS

VECI LABEL

If anything differs between the specifications found on the Vehicle Emission Control Information (VECI) label and the following specifications, use specifications on VECI label. The VECI label is located in the engine compartment.

FUEL TANK CAPACITY

| Models | Liters | U.S. Gallons |
|---|--------|--------------|
| Standard | 95 | 25 |
| Nominal refill capacities are shown. A variation may be observed from vehicle to vehicle due to manufacturing tolerance and refill procedure. | | |

FUEL SYSTEM PRESSURE

All Engines: 339 kPa \pm 34 kPa (49.2 psi \pm 5 psi)

TORQUE CHART

| DESCRIPTION | TORQUE |
|------------------------------------|----------------------------|
| Accelerator Pedal Bracket | |
| Mounting Nuts | 7 N·m (65 in. lbs.) |
| Fuel Rail Mounting Bolts— | |
| 3.9/5.2/5.9L Engines | 23 N·m (200 in. lbs.) |
| Fuel Tank Mounting Nuts | 27–54 N·m (20–40 ft. lbs.) |
| Fuel Hose Clamps (if equipped) . . | 3 N·m (25 in. lbs.) |

FUEL INJECTION SYSTEM

INDEX

| | page | | page |
|--|------|--|------|
| GENERAL INFORMATION | | PCM OUTPUT | 34 |
| INTRODUCTION | 24 | MANIFOLD ABSOLUTE PRESSURE (MAP) | |
| MODES OF OPERATION | 24 | SENSOR—3.9/5.2/5.9L ENGINES— | |
| DESCRIPTION AND OPERATION | | PCM INPUT | 29 |
| AIR CONDITIONING (A/C) CLUTCH RELAY— | | OIL PRESSURE SENSOR—PCM INPUT | 30 |
| PCM OUTPUT | 32 | OUTPUT SHAFT SPEED SENSOR— | |
| AIR CONDITIONING (A/C) CONTROLS— | | PCM INPUT | 30 |
| PCM INPUT | 27 | OVERDRIVE LAMP—PCM OUTPUT | 34 |
| AUTO SHUTDOWN (ASD) RELAY— | | OVERDRIVE/OVERRIDE SWITCH— | |
| PCM OUTPUT | 32 | PCM INPUT | 30 |
| AUTOMATIC SHUTDOWN (ASD) | | OXYGEN SENSOR—PCM INPUT | 30 |
| RELAY SENSE—PCM INPUT | 28 | POWER GROUND | 31 |
| BATTERY TEMPERATURE SENSOR— | | POWERTRAIN CONTROL MODULE (PCM) | 26 |
| PCM INPUT | 28 | SENSOR RETURN—PCM INPUT | 31 |
| BATTERY VOLTAGE—PCM INPUT | 28 | SIGNAL GROUND—PCM INPUT | 31 |
| BRAKE SWITCH—PCM INPUT | 28 | SPEED CONTROL SOLENOIDS— | |
| CAMSHAFT POSITION SENSOR— | | PCM OUTPUT | 34 |
| PCM INPUT | 28 | SPEED CONTROL SWITCHES— | |
| CCD BUS (+/-) CIRCUITS-PCM OUTPUTS | 32 | PCM INPUT | 31 |
| CRANKSHAFT POSITION SENSOR—3.9/5.2/ | | TACHOMETER—PCM OUTPUT | 34 |
| 5.9L ENGINES—PCM INPUT | 28 | THREE-FOUR SHIFT SOLENOID— | |
| DATA LINK CONNECTOR—PCM INPUT AND | | PCM OUTPUT | 34 |
| OUTPUT | 32 | THROTTLE BODY—3.9/5.2/5.9L ENGINES | 35 |
| DUTY CYCLE EVAP PURGE | | THROTTLE POSITION SENSOR (TPS)— | |
| SOLENOID VALVE-PCM OUTPUT | 33 | 3.9/5.2/5.9L ENGINE—PCM INPUT | 31 |
| ENGINE COOLANT TEMPERATURE SENSOR— | | TORQUE CONVERTOR CLUTCH (TCC) | |
| 3.9/5.2/5.9L ENGINES—PCM INPUT | 29 | SOLENOID—PCM OUTPUT | 34 |
| FIVE VOLT SENSOR SUPPLY—PRIMARY | 29 | TRANSMISSION GOVERNOR PRESSURE | |
| FIVE VOLT SENSOR SUPPLY—SECONDARY | 29 | SENSOR—PCM INPUT | 31 |
| FUEL INJECTORS—3.9/5.2/5.9L ENGINES— | | TRANSMISSION PARK/NEUTRAL SWITCH— | |
| PCM OUTPUT | 33 | PCM INPUT | 31 |
| FUEL LEVEL SENSOR—PCM INPUT | 29 | TRANSMISSION RELAY—PCM OUTPUT | 35 |
| FUEL PUMP RELAY-PCM OUTPUT | 33 | TRANSMISSION TEMPERATURE SENSOR— | |
| GENERATOR FIELD DRIVER (-)— | | PCM INPUT | 31 |
| PCM OUTPUT | 33 | VEHICLE SPEED AND DISTANCE— | |
| GENERATOR FIELD SOURCE (+)— | | PCM INPUT | 32 |
| PCM OUTPUT | 33 | DIAGNOSIS AND TESTING | |
| GENERATOR LAMP—PCM OUTPUT | 33 | ASD AND FUEL PUMP RELAYS | 38 |
| GOVERNOR PRESSURE SOLENOID— | | CAMSHAFT AND CRANKSHAFT | |
| PCM OUTPUT | 35 | POSITION SENSORS | 40 |
| IDLE AIR CONTROL (IAC) MOTOR— | | ENGINE COOLANT TEMPERATURE SENSOR— | |
| 3.9/5.2/5.9L ENGINES—PCM OUTPUT | 33 | 3.9/5.2/5.9L ENGINE | 40 |
| IGNITION CIRCUIT SENSE—PCM INPUT | 29 | IDLE AIR CONTROL (IAC) MOTOR— | |
| IGNITION COIL—3.9/5.2/5.9L ENGINES— | | 3.9/5.2/5.9L ENGINES | 41 |
| PCM OUTPUT | 34 | INTAKE MANIFOLD AIR TEMPERATURE | |
| INTAKE MANIFOLD AIR TEMPERATURE | | SENSOR—3.9/5.2/5.9L ENGINE | 41 |
| SENSOR—3.9/5.2/5.9L ENGINES— | | MANIFOLD ABSOLUTE PRESSURE (MAP) | |
| PCM INPUT | 29 | SENSOR TEST—3.9/5.2/5.9L ENGINES | 39 |
| MALFUNCTION INDICATOR LAMP— | | OXYGEN SENSORS | 40 |

| | |
|--|----|
| THROTTLE BODY MINIMUM AIR FLOW CHECK PROCEDURE | 42 |
| THROTTLE POSITION SENSOR (TPS)— 3.9/5.2/5.9L ENGINE | 41 |
| VISUAL INSPECTION— 3.9/5.2/5.9L ENGINES | 35 |
| REMOVAL AND INSTALLATION | |
| AIR CLEANER ELEMENT (FILTER) | 47 |
| AUTOMATIC SHUTDOWN (ASD) RELAY | 43 |
| CAMSHAFT POSITION SENSOR | 46 |
| CRANKSHAFT POSITION SENSOR | 46 |
| DUTY CYCLE EVAP CANISTER PURGE SOLENOID | 46 |
| ENGINE COOLANT TEMPERATURE SENSOR— 3.9/5.2/5.9L ENGINES | 47 |
| FUEL PUMP RELAY | 43 |

| | |
|---|----|
| IDLE AIR CONTROL (IAC) MOTOR— 3.9/5.2/5.9L ENGINES | 44 |
| INTAKE MANIFOLD AIR TEMPERATURE SENSOR—3.9/5.2/5.9L ENGINES | 47 |
| MANIFOLD ABSOLUTE PRESSURE (MAP) SENSOR—3.9/5.2/5.9L ENGINES | 45 |
| OXYGEN SENSOR | 46 |
| POWERTRAIN CONTROL MODULE (PCM) | 46 |
| THROTTLE BODY—3.9/5.2/5.9L ENGINES | 43 |
| THROTTLE POSITION SENSOR (TPS)— 3.9/5.2/5.9L ENGINES | 44 |

SPECIFICATIONS

| | |
|--------------------|----|
| TORQUE CHART | 48 |
| VECI LABEL | 48 |

SPECIAL TOOLS

| | |
|-------------------|----|
| FUEL SYSTEM | 49 |
|-------------------|----|

GENERAL INFORMATION**INTRODUCTION**

All engines are equipped with sequential Multi-Port Fuel Injection (MFI). The MFI system provides precise air/fuel ratios for all driving conditions.

The powertrain control module (PCM) (Fig. 1) operates the fuel system.

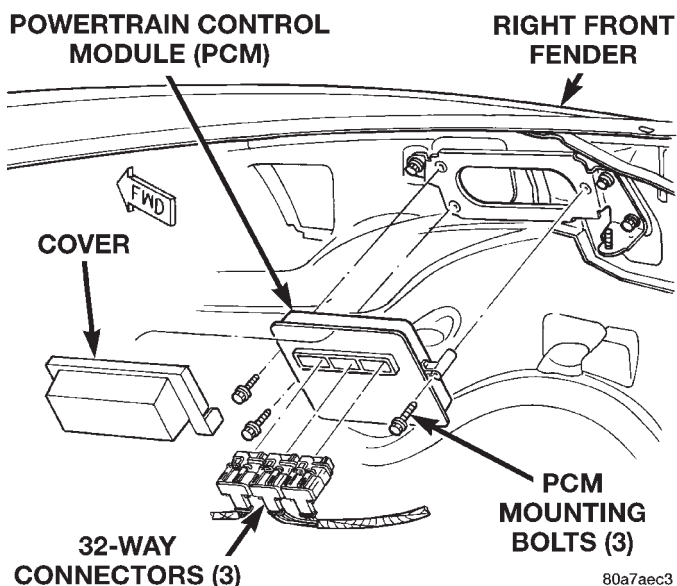


Fig. 1 Powertrain Control Module (PCM)

MODES OF OPERATION

As input signals to the powertrain control module (PCM) change, the PCM adjusts its response to the output devices. For example, the PCM must calculate different injector pulse width and ignition timing for idle than it does for wide open throttle (WOT).

The PCM will operate in two different modes: **Open Loop and Closed Loop.**

During Open Loop modes, the powertrain control module (PCM) receives input signals and responds

only according to preset PCM programming. Input from the oxygen (O₂S) sensors is not monitored during Open Loop modes.

During Closed Loop modes, the PCM will monitor the oxygen (O₂S) sensors input. This input indicates to the PCM whether or not the calculated injector pulse width results in the ideal air-fuel ratio. This ratio is 14.7 parts air-to-1 part fuel. By monitoring the exhaust oxygen content through the O₂S sensor, the PCM can fine tune the injector pulse width. This is done to achieve optimum fuel economy combined with low emission engine performance.

The fuel injection system has the following modes of operation:

- Ignition switch ON
- Engine start-up (crank)
- Engine warm-up
- Idle
- Cruise
- Acceleration
- Deceleration
- Wide open throttle (WOT)
- Ignition switch OFF

The ignition switch On, engine start-up (crank), engine warm-up, acceleration, deceleration and wide open throttle modes are Open Loop modes. The idle and cruise modes, (with the engine at operating temperature) are Closed Loop modes.

IGNITION SWITCH (KEY-ON) MODE

This is an Open Loop mode. When the fuel system is activated by the ignition switch, the following actions occur:

- The powertrain control module (PCM) pre-positions the idle air control (IAC) motor.
- The PCM determines atmospheric air pressure from the MAP sensor input to determine basic fuel strategy.
- The PCM monitors the engine coolant temperature sensor input. The PCM modifies fuel strategy based on this input.

GENERAL INFORMATION (Continued)

- Intake manifold air temperature sensor input is monitored.
- Throttle position sensor (TPS) is monitored.
- The auto shutdown (ASD) relay is energized by the PCM for approximately three seconds.
- The fuel pump is energized through the fuel pump relay by the PCM. The fuel pump will operate for approximately three seconds unless the engine is operating or the starter motor is engaged.
- The O₂S sensor heater element is energized via the ASD relay. The O₂S sensor input is not used by the PCM to calibrate air-fuel ratio during this mode of operation.

ENGINE START-UP MODE

This is an Open Loop mode. The following actions occur when the starter motor is engaged.

The powertrain control module (PCM) receives inputs from:

- Battery voltage
- Engine coolant temperature sensor
- Crankshaft position sensor
- Intake manifold air temperature sensor
- Manifold absolute pressure (MAP) sensor
- Throttle position sensor (TPS)
- Starter motor relay
- Camshaft position sensor signal

The PCM monitors the crankshaft position sensor. If the PCM does not receive a crankshaft position sensor signal within 3 seconds of cranking the engine, it will shut down the fuel injection system.

The fuel pump is activated by the PCM through the fuel pump relay.

Voltage is applied to the fuel injectors with the ASD relay via the PCM. The PCM will then control the injection sequence and injector pulse width by turning the ground circuit to each individual injector on and off.

The PCM determines the proper ignition timing according to input received from the crankshaft position sensor.

ENGINE WARM-UP MODE

This is an Open Loop mode. During engine warm-up, the powertrain control module (PCM) receives inputs from:

- Battery voltage
- Crankshaft position sensor
- Engine coolant temperature sensor
- Intake manifold air temperature sensor
- Manifold absolute pressure (MAP) sensor
- Throttle position sensor (TPS)
- Camshaft position sensor signal (in the distributor)
- Park/neutral switch (gear indicator signal—auto. trans. only)
- Air conditioning select signal (if equipped)

- Air conditioning request signal (if equipped)

Based on these inputs the following occurs:

- Voltage is applied to the fuel injectors with the ASD relay via the PCM. The PCM will then control the injection sequence and injector pulse width by turning the ground circuit to each individual injector on and off.
- The PCM adjusts engine idle speed through the idle air control (IAC) motor and adjusts ignition timing.
- The PCM operates the A/C compressor clutch through the clutch relay. This is done if A/C has been selected by the vehicle operator and requested by the A/C thermostat.
- When engine has reached operating temperature, the PCM will begin monitoring O₂S sensor input. The system will then leave the warm-up mode and go into closed loop operation.

IDLE MODE

When the engine is at operating temperature, this is a Closed Loop mode. At idle speed, the powertrain control module (PCM) receives inputs from:

- Air conditioning select signal (if equipped)
- Air conditioning request signal (if equipped)
- Battery voltage
- Crankshaft position sensor
- Engine coolant temperature sensor
- Intake manifold air temperature sensor
- Manifold absolute pressure (MAP) sensor
- Throttle position sensor (TPS)
- Camshaft position sensor signal (in the distributor)
- Battery voltage
- Park/neutral switch (gear indicator signal—auto. trans. only)

- Oxygen sensors

Based on these inputs, the following occurs:

- Voltage is applied to the fuel injectors with the ASD relay via the PCM. The PCM will then control injection sequence and injector pulse width by turning the ground circuit to each individual injector on and off.
- The PCM monitors the O₂S sensor input and adjusts air-fuel ratio by varying injector pulse width. It also adjusts engine idle speed through the idle air control (IAC) motor.
- The PCM adjusts ignition timing by increasing and decreasing spark advance.
- The PCM operates the A/C compressor clutch through the clutch relay. This happens if A/C has been selected by the vehicle operator and requested by the A/C thermostat.

GENERAL INFORMATION (Continued)

CRUISE MODE

When the engine is at operating temperature, this is a Closed Loop mode. At cruising speed, the powertrain control module (PCM) receives inputs from:

- Air conditioning select signal (if equipped)
- Air conditioning request signal (if equipped)
- Battery voltage
- Engine coolant temperature sensor
- Crankshaft position sensor
- Intake manifold air temperature sensor
- Manifold absolute pressure (MAP) sensor
- Throttle position sensor (TPS)
- Camshaft position sensor signal (in the distributor)
- Park/neutral switch (gear indicator signal—auto. trans. only)

Based on these inputs, the following occurs:

- Voltage is applied to the fuel injectors with the ASD relay via the PCM. The PCM will then adjust the injector pulse width by turning the ground circuit to each individual injector on and off.
- The PCM monitors the O₂S sensor input and adjusts air-fuel ratio. It also adjusts engine idle speed through the idle air control (IAC) motor.
- The PCM adjusts ignition timing by turning the ground path to the coil on and off.
- The PCM operates the A/C compressor clutch through the clutch relay. This happens if A/C has been selected by the vehicle operator and requested by the A/C thermostat.

ACCELERATION MODE

This is an Open Loop mode. The powertrain control module (PCM) recognizes an abrupt increase in throttle position or MAP pressure as a demand for increased engine output and vehicle acceleration. The PCM increases injector pulse width in response to increased throttle opening.

DECELERATION MODE

When the engine is at operating temperature, this is an Open Loop mode. During hard deceleration, the powertrain control module (PCM) receives the following inputs.

- Air conditioning select signal (if equipped)
- Air conditioning request signal (if equipped)
- Battery voltage
- Engine coolant temperature sensor
- Crankshaft position sensor
- Intake manifold air temperature sensor
- Manifold absolute pressure (MAP) sensor
- Throttle position sensor (TPS)
- Camshaft position sensor signal (in the distributor)
- Park/neutral switch (gear indicator signal—auto. trans. only)

- Vehicle speed sensor

If the vehicle is under hard deceleration with the proper rpm and closed throttle conditions, the PCM will ignore the oxygen sensor input signal. The PCM will enter a fuel cut-off strategy in which it will not supply a ground to the injectors. If a hard deceleration does not exist, the PCM will determine the proper injector pulse width and continue injection.

Based on the above inputs, the PCM will adjust engine idle speed through the idle air control (IAC) motor.

The PCM adjusts ignition timing by turning the ground path to the coil on and off.

WIDE OPEN THROTTLE MODE

This is an Open Loop mode. During wide open throttle operation, the powertrain control module (PCM) receives the following inputs.

- Battery voltage
- Crankshaft position sensor
- Engine coolant temperature sensor
- Intake manifold air temperature sensor
- Manifold absolute pressure (MAP) sensor
- Throttle position sensor (TPS)
- Camshaft position sensor signal (in the distributor)

During wide open throttle conditions, the following occurs:

- Voltage is applied to the fuel injectors with the ASD relay via the PCM. The PCM will then control the injection sequence and injector pulse width by turning the ground circuit to each individual injector on and off. The PCM ignores the oxygen sensor input signal and provides a predetermined amount of additional fuel. This is done by adjusting injector pulse width.

- The PCM adjusts ignition timing by turning the ground path to the coil on and off.

IGNITION SWITCH OFF MODE

When ignition switch is turned to OFF position, the PCM stops operating the injectors, ignition coil, ASD relay and fuel pump relay.

DESCRIPTION AND OPERATION

POWERTRAIN CONTROL MODULE (PCM)

The powertrain control module (PCM) (Fig. 1) operates the fuel system. The PCM was formerly referred to as the SBEC or engine controller. The PCM is a pre-programmed, triple microprocessor digital computer. It regulates ignition timing, air-fuel ratio, emission control devices, charging system, certain transmission features, speed control, air conditioning compressor clutch engagement and idle speed. The

DESCRIPTION AND OPERATION (Continued)

PCM can adapt its programming to meet changing operating conditions.

The PCM receives input signals from various switches and sensors. Based on these inputs, the PCM regulates various engine and vehicle operations through different system components. These components are referred to as Powertrain Control Module (PCM) Outputs. The sensors and switches that provide inputs to the PCM are considered Powertrain Control Module (PCM) Inputs.

The PCM adjusts ignition timing based upon inputs it receives from sensors that react to: engine rpm, manifold absolute pressure, engine coolant temperature, throttle position, transmission gear selection (automatic transmission), vehicle speed and the brake switch.

The PCM adjusts idle speed based on inputs it receives from sensors that react to: throttle position, vehicle speed, transmission gear selection, engine coolant temperature and from inputs it receives from the air conditioning clutch switch and brake switch.

Based on inputs that it receives, the PCM adjusts ignition coil dwell. The PCM also adjusts the generator charge rate through control of the generator field and provides speed control operation.

NOTE: PCM Inputs:

- A/C request (if equipped with factory A/C)
- A/C select (if equipped with factory A/C)
- Auto shutdown (ASD) sense
- Battery temperature
- Battery voltage
- Brake switch
- CCD bus (+) circuits
- CCD bus (-) circuits
- Camshaft position sensor signal
- Crankshaft position sensor
- Data link connection for DRB scan tool
- Engine coolant temperature sensor
- Fuel level
- Generator (battery voltage) output
- Ignition circuit sense (ignition switch in on/off/crank/run position)
 - Intake manifold air temperature sensor
 - Leak detection pump (switch) sense (if equipped)
 - Manifold absolute pressure (MAP) sensor
 - Oil pressure
 - Output shaft speed sensor
 - Overdrive/override switch
 - Oxygen sensors
 - Park/neutral switch (auto. trans. only)
 - Power ground
 - Sensor return
 - Signal ground
 - Speed control multiplexed single wire input
 - Throttle position sensor

- Transmission governor pressure sensor
- Transmission temperature sensor
- Vehicle speed inputs from ABS or RWAL system

NOTE: PCM Outputs:

- A/C clutch relay
- Auto shutdown (ASD) relay
- CCD bus (+) circuits
- CCD bus (-) circuits
- Data link connection for DRB scan tool
- EGR valve control solenoid (if equipped)
- EVAP canister purge solenoid
- Five volt sensor supply (primary)
- Five volt sensor supply (secondary)
- Fuel injectors
- Fuel pump relay
- Generator field driver (-)
- Generator field driver (+)
- Generator lamp (if equipped)
- Idle air control (IAC) motor
- Ignition coil
- Leak detection pump (if equipped)
- Malfunction indicator lamp (Check engine lamp).

Driven through CCD circuits.

- Overdrive indicator lamp (if equipped)
- Speed control vacuum solenoid
- Speed control vent solenoid
- Tachometer (if equipped). Driven through CCD

circuits.

- Transmission convertor clutch circuit
- Transmission 3-4 shift solenoid
- Transmission relay
- Transmission temperature lamp (if equipped)
- Transmission variable force solenoid

AIR CONDITIONING (A/C) CONTROLS—PCM INPUT

The A/C control system information applies to factory installed air conditioning units.

A/C SELECT SIGNAL: When the A/C switch is in the ON position, an input signal is sent to the powertrain control module (PCM). The signal informs the PCM that the A/C has been selected. The PCM adjusts idle speed to a pre-programmed rpm through the idle air control (IAC) motor to compensate for increased engine load.

A/C REQUEST SIGNAL: Once A/C has been selected, the powertrain control module (PCM) receives the A/C request signal from the clutch cycling pressure switch. The input indicates that the evaporator pressure is in the proper range for A/C application. The PCM uses this input to cycle the A/C compressor clutch (through the A/C relay). It will also determine the correct engine idle speed through the idle air control (IAC) motor position.

If the A/C low-pressure switch or high-pressure switch opens (indicating a low or high refrigerant

DESCRIPTION AND OPERATION (Continued)


pressure), the PCM will not receive an A/C request signal. The PCM will then remove the ground from the A/C relay. This will deactivate the A/C compressor clutch.

If the switch opens, (indicating that evaporator is not in proper pressure range), the PCM will not receive the A/C request signal. The PCM will then remove the ground from the A/C relay, deactivating the A/C compressor clutch.

AUTOMATIC SHUTDOWN (ASD) RELAY SENSE—PCM INPUT

A 12 volt signal at this input indicates to the Powertrain Control Module (PCM) that the ASD has been activated. The ASD relay is located in the Power Distribution Center (PDC). The PDC is located in the engine compartment (Fig. 2). Refer to label on PDC cover for relay location. The relay is used to connect the oxygen sensor heater element, ignition coil and fuel injectors to 12 volt + power supply.

POWER DISTRIBUTION CENTER (PDC)

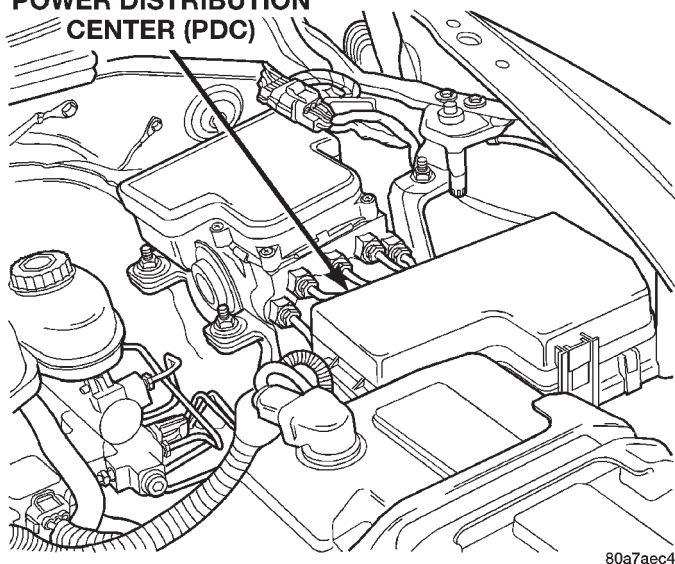

80a7aec4

Fig. 2 Power Distribution Center (PDC)

This input is used only to sense that the ASD relay is energized. If the PCM does not see 12 volts at this input when the ASD should be activated, it will set a Diagnostic Trouble Code (DTC).

BATTERY TEMPERATURE SENSOR—PCM INPUT

Provides a signal to the PCM corresponding to the battery temperature. Refer to Group 8C, Charging System for additional information.

BATTERY VOLTAGE—PCM INPUT

The battery voltage input provides power to the Powertrain Control Module (PCM). It also informs the PCM what voltage level is supplied to the ignition coil and fuel injectors.

If battery voltage is low, the PCM will increase injector pulse width (period of time that the injector is energized). This is done to compensate for the reduced flow through injector caused by the lowered voltage.


BRAKE SWITCH—PCM INPUT

When the brake light switch is activated, the Powertrain Control Module (PCM) receives an input indicating that the brakes are being applied. After receiving this input, the PCM maintains idle speed to a scheduled rpm through control of the Idle Air Control (IAC) motor. The brake switch input is also used to supply/deny power to the speed control servo solenoids.

CAMSHAFT POSITION SENSOR—PCM INPUT

A sync signal is provide by the camshaft position sensor. The sensor located in the distributor on all 3.9/5.2/5.9L engines (Fig. 3). The sync signal from this sensor works in conjunction with the crankshaft position sensor to provide the powertrain control module (PCM) with inputs. This is done to establish and maintain correct injector firing order.

Refer to Camshaft Position Sensor in Group 8D, Ignition System for more information.

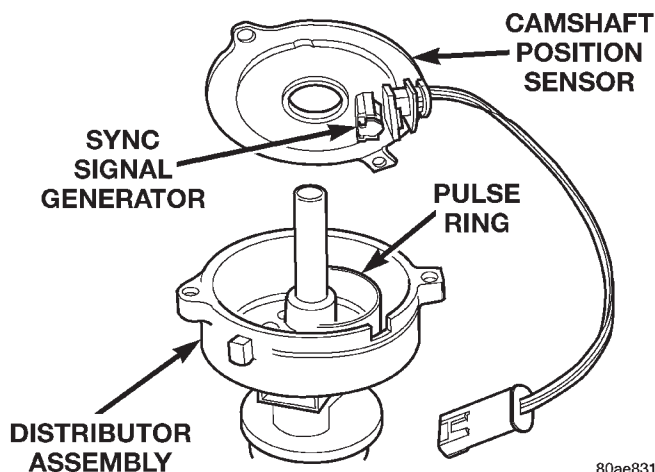

80ae8314

Fig. 3 Camshaft Position Sensor


CRANKSHAFT POSITION SENSOR—3.9/5.2/5.9L ENGINES—PCM INPUT

This sensor is a hall effect device that detects notches in the flywheel (manual transmission) or flexplate (automatic transmission).

This sensor is used to indicate to the powertrain control module (PCM) that a spark and or fuel injection event is to be required. The output from this sensor, in conjunction with the camshaft position sensor signal, is used to differentiate between fuel injection and spark events. It is also used to synchronize the fuel injectors with their respective cylinders.

DESCRIPTION AND OPERATION (Continued)

The sensor is bolted to the cylinder block near the rear of the right cylinder head (Fig. 4).

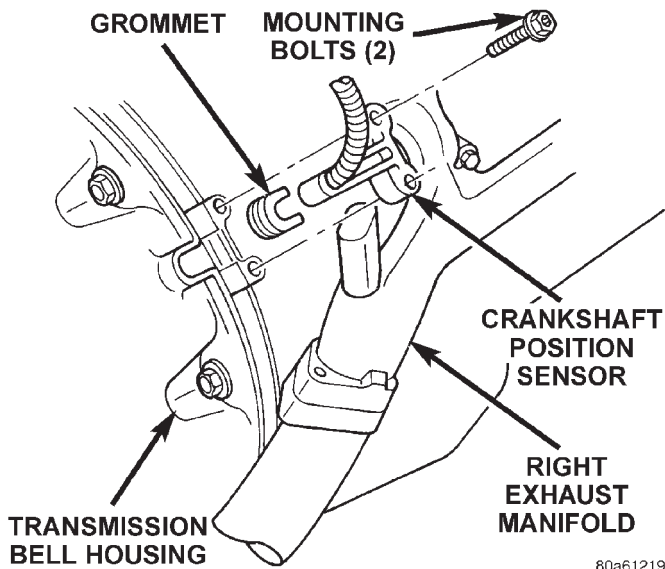

80a61219

Fig. 4 Crankshaft Position Sensor—3.9/5.2/5.9L Engine

Refer to Group 8D, Ignition System for more crankshaft position sensor information.

The engine will not operate if the PCM does not receive a crankshaft position sensor input.

ENGINE COOLANT TEMPERATURE SENSOR—3.9/5.2/5.9L ENGINES—PCM INPUT

The engine coolant temperature sensor is installed into a water jacket at the front of the intake manifold located near the rear of the generator (Fig. 5). The sensor provides an input voltage to the powertrain control module (PCM) relating coolant temperature. The PCM uses this input along with inputs from other sensors to determine injector pulse width and ignition timing. As coolant temperature varies, the coolant temperature sensor resistance will change. This change in resistance results in a different input voltage to the PCM.


When the engine is cold, the PCM will operate in Open Loop cycle. It will demand slightly richer air-fuel mixtures and higher idle speeds. This is done until normal operating temperatures are reached.

FIVE VOLT SENSOR SUPPLY—PRIMARY

Supplies the required 5 volt power source to the crankshaft position sensor, camshaft position sensor, MAP sensor and throttle position sensor.

FIVE VOLT SENSOR SUPPLY—SECONDARY

Supplies the required 5 volt power source to the transmission pressure sensor (if equipped).

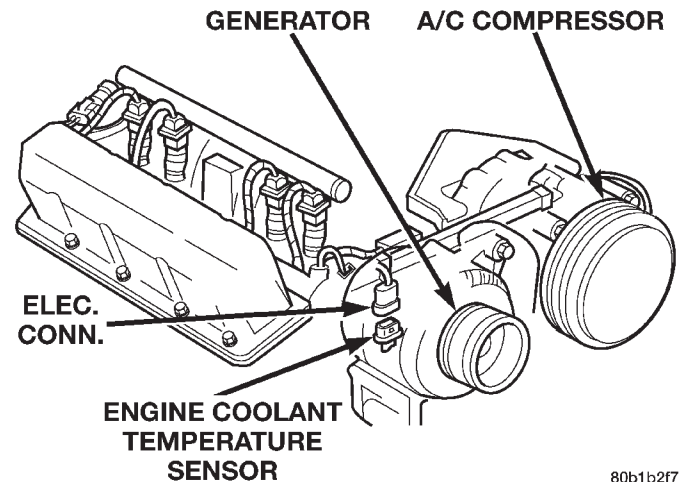

80b1b2f7

Fig. 5 Engine Coolant Temperature Sensor—3.9/5.2/5.9L Engines

FUEL LEVEL SENSOR—PCM INPUT

The Powertrain Control Module (PCM) sends a 5 volt signal to the fuel level sensor (fuel gauge sending unit). The fuel level sensor will then return a signal to the PCM to indicate fuel level. The purpose of this feature is to prevent a false setting of misfire and fuel system monitor trouble codes. This is if the fuel level is less than approximately 15 percent, or, if equipped with a Leak Detection Pump (LDP), more than approximately 85 percent of its rated capacity. This input is also used to send a signal to the PCM for fuel gauge operation via the CCD bus circuits.

IGNITION CIRCUIT SENSE—PCM INPUT

The ignition circuit sense input tells the Powertrain Control Module (PCM) the ignition switch has energized the ignition circuit. Refer to the wiring diagrams for circuit information.

INTAKE MANIFOLD AIR TEMPERATURE SENSOR—3.9/5.2/5.9L ENGINES—PCM INPUT

The intake manifold air temperature sensor is installed in the intake manifold with the sensor element extending into the air stream (Fig. 6). The sensor provides an input voltage to the powertrain control module (PCM) indicating intake manifold air temperature. The input is used along with inputs from other sensors to determine injector pulse width. As the temperature of the air-fuel stream in the manifold varies, the sensor resistance changes. This results in a different input voltage to the PCM.

MANIFOLD ABSOLUTE PRESSURE (MAP) SENSOR—3.9/5.2/5.9L ENGINES—PCM INPUT

The MAP sensor reacts to absolute pressure in the intake manifold. It provides an input voltage to the powertrain control module (PCM). As engine load

DESCRIPTION AND OPERATION (Continued)

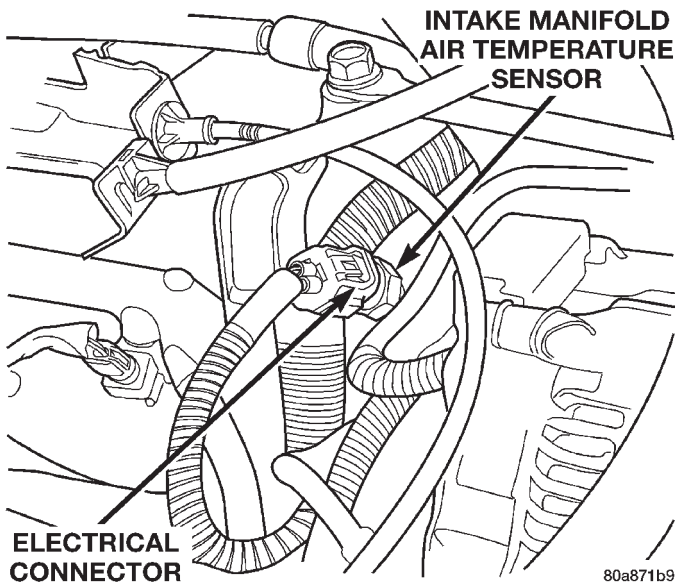


Fig. 6 Intake Manifold Air Temperature Sensor—3.9/5.2/5.9L Engines—Typical

changes, manifold pressure varies. The change in manifold pressure causes MAP sensor voltage to change. The change in MAP sensor voltage results in a different input voltage to the PCM. The input voltage level supplies the PCM with information about ambient barometric pressure during engine start-up (cranking) and engine load while the engine is running. The PCM uses this input along with inputs from other sensors to adjust air-fuel mixture.

The MAP sensor is mounted on the side of the engine throttle body (Fig. 7). The sensor is connected to the throttle body with a rubber L-shaped fitting.

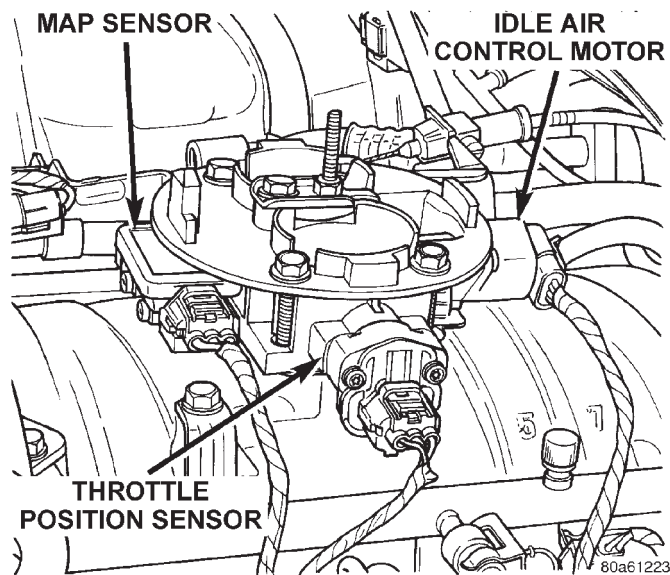


Fig. 7 MAP and Throttle Position Sensor Location—3.9/5.2/5.9L Engine—Typical

OIL PRESSURE SENSOR—PCM INPUT

Sends a signal from the oil pressure sending unit to the Powertrain Control Module (PCM) relating to engine oil pressure.

OUTPUT SHAFT SPEED SENSOR—PCM INPUT

This sensor generates a signal to the PCM relating to the speed of the transmission main drive shaft. This input is used with 4-speed electronic transmissions only.

OVERDRIVE/OVERRIDE SWITCH—PCM INPUT

On vehicles equipped with an automatic transmission and overdrive, the powertrain control module (PCM) regulates the 3-4 overdrive up-shift and down-shift through the overdrive solenoid. This solenoid is located in the transmission. An overdrive/override push-button switch is located at the end of transmission shift lever.

The overdrive/override push-button switch is normally open (overdrive allowed) when the lamp is not illuminated. It momentarily closes (overdrive not allowed) when the operator presses the switch and the lamp is illuminated. Overdrive will revert to ON (lamp off) each time the ignition switch is turned on. The transmission downshifts if the operator presses the override switch while in overdrive.

Refer to Group 21 for more transmission information.

OXYGEN SENSOR—PCM INPUT

Two heated O₂S sensors are used. The sensors produce voltages from 0 to 1 volt, depending upon the oxygen content of the exhaust gas in the exhaust manifold. When a large amount of oxygen is present (caused by a lean air/fuel mixture), the sensors produce a low voltage. When there is a lesser amount present (rich air/fuel mixture) it produces a higher voltage. By monitoring the oxygen content and converting it to electrical voltage, the sensors act as a rich-lean switch.

In Closed Loop operation, the PCM monitors the O₂S sensor input (along with other inputs) and adjusts the injector pulse width accordingly. During Open Loop operation, the PCM ignores the O₂ sensor input. The PCM adjusts injector pulse width based on preprogrammed (fixed) values and inputs from other sensors.

The oxygen sensors are equipped with a heating element that keeps the sensors at proper operating temperature during all operating modes. Maintaining correct sensor temperature at all times allows the system to enter into closed loop operation sooner. Also, it allows the system to remain in closed loop operation during periods of extended idle.

DESCRIPTION AND OPERATION (Continued)

The Automatic Shutdown (ASD) relay supplies battery voltage to both the upstream and downstream heated oxygen sensors. The oxygen sensors are equipped with a heating element. The heating elements reduce the time required for the sensors to reach operating temperature.

UPSTREAM HEATED OXYGEN SENSOR

The upstream O₂S sensor is located near the inlet end of the catalytic converter. It provides an input voltage to the PCM. The input tells the PCM the oxygen content of the exhaust gas. The PCM uses this information to fine tune the air/fuel ratio by adjusting injector pulse width.

DOWNSTREAM HEATED OXYGEN SENSOR

The downstream heated oxygen sensor is located near the outlet end of the catalytic converter. The downstream heated oxygen sensor input is used to detect catalytic converter deterioration. As the converter deteriorates, the input from the downstream sensor begins to match the upstream sensor input except for a slight time delay. By comparing the downstream heated oxygen sensor input to the input from the upstream sensor, the PCM calculates catalytic converter efficiency.

When the catalytic converter efficiency drops below emission standards, the PCM stores a diagnostic trouble code and illuminates the Malfunction Indicator Lamp (MIL). For more information, refer to Group 25, Emission Control Systems.

POWER GROUND

The power ground is used to control ground circuits for the following powertrain control module (PCM) loads:

- Generator field winding
- Fuel injectors
- Ignition coil
- Certain relays/solenoids

SENSOR RETURN—PCM INPUT

Sensor Return provides a low noise ground reference for all engine control system sensors.

SIGNAL GROUND—PCM INPUT

Signal ground provides a low noise ground to the data link connector.

SPEED CONTROL SWITCHES—PCM INPUT

Six different speed control functions, using three momentary contact switches, are monitored through this **multiplexed** input. The resistance monitored at this input, in combination with the length of time the PCM measures the resistance, determines which switch feature has been selected. The three switches

are: On/Off, Set/Coast, Cancel and Resume/Accelerate.

Refer to Group 8H, Vehicle Speed Control System for further speed control information.

TRANSMISSION PARK/NEUTRAL SWITCH—PCM INPUT

The park/neutral switch is located on the transmission housing and provides an input to the powertrain control module (PCM). This will indicate that the automatic transmission is in Park, Neutral or a drive gear selection. This input is used to determine idle speed (varying with gear selection), fuel injector pulse width, ignition timing advance and vehicle speed control operation. Refer to Group 21, Transmissions, for testing, replacement and adjustment information.

TRANSMISSION GOVERNOR PRESSURE SENSOR—PCM INPUT

Provides a signal proportional to the transmission governor pressure. It provides feedback for control of the governor pressure solenoid, which regulates transmission governor pressure. This input is used with 4-speed electronic transmissions only.

TRANSMISSION TEMPERATURE SENSOR—PCM INPUT

This input is used in the shift operation for 4-speed electronic transmissions only. The temperature data is used for: torque converter clutch operation, overdrive shift, low temperature shift compensation, wide open throttle shift strategy and governor pressure transducer calibration.

THROTTLE POSITION SENSOR (TPS)—3.9/5.2/5.9L ENGINE—PCM INPUT

The throttle position sensor (TPS) is mounted on the throttle body (Fig. 7). The TPS is a variable resistor that provides the powertrain control module (PCM) with an input signal (voltage) that represents throttle blade position. The sensor is connected to the throttle blade shaft. As the position of the throttle blade changes, the resistance of the TPS changes.

The PCM supplies approximately 5 volts to the TPS. The TPS output voltage (input signal to the PCM) represents the throttle blade position. The PCM receives an input signal voltage from the TPS. This will vary in an approximate range of from .25 volts at minimum throttle opening (idle), to 4.8 volts at wide open throttle. Along with inputs from other sensors, the PCM uses the TPS input to determine current engine operating conditions. In response to engine operating conditions, the PCM will adjust fuel injector pulse width and ignition timing.

DESCRIPTION AND OPERATION (Continued)

VEHICLE SPEED AND DISTANCE—PCM INPUT

The Vehicle Speed Sensor (VSS) is no longer used for any Dodge truck in the 1998 model year.

Vehicle speed and distance covered are measured by the Rear Wheel Speed Sensor. The sensor is mounted to the rear axle. A signal is sent from this sensor to the Controller Antilock Brake (CAB) computer. A signal is then sent from the CAB to the Powertrain Control Module (PCM) to determine vehicle speed and distance covered. The PCM will then determine strategies for fuel system and speed control system operation.

Refer to Odometer and Trip Odometer in Group 8E, Instrument Panel for additional information.

AIR CONDITIONING (A/C) CLUTCH RELAY—PCM OUTPUT

The A/C relay is located in the Power Distribution Center (PDC). The PDC is located in the engine compartment (Fig. 8). Refer to label on PDC cover for relay location.

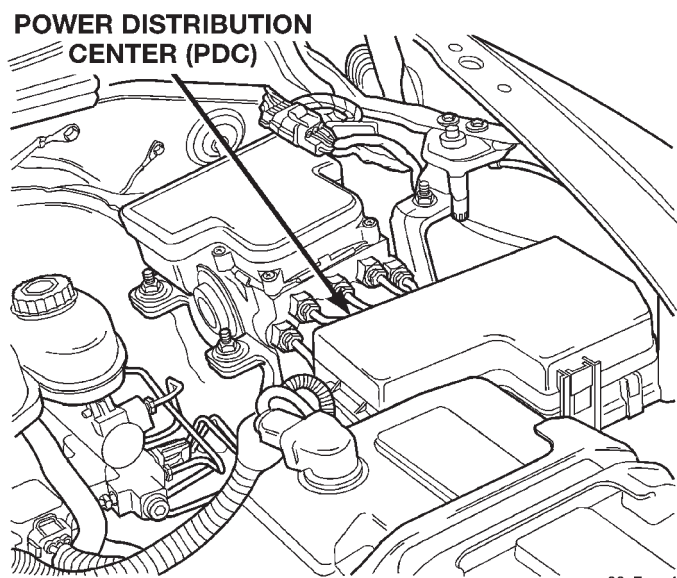


Fig. 8 Power Distribution Center (PDC)

The powertrain control module (PCM) activates the A/C compressor through the A/C clutch relay. The PCM regulates A/C compressor operation by switching the ground circuit for the A/C clutch relay on and off.

When the PCM receives a request for A/C from A/C evaporator switch, it will adjust idle air control (IAC) motor position. This is done to increase idle speed. The PCM will then activate the A/C clutch through the A/C clutch relay. The PCM adjusts idle air control (IAC) stepper motor position to compensate for increased engine load from the A/C compressor.

By switching the ground path for the relay on and off, the PCM is able to cycle the A/C compressor clutch. This is based on changes in engine operating

conditions. If, during A/C operation, the PCM senses low idle speeds or a wide open throttle condition, it will de-energize the relay. This prevents A/C clutch engagement. The relay will remain de-energized until the idle speed increases or the wide open throttle condition exceeds 15 seconds or no longer exists. The PCM will also de-energize the relay if coolant temperature exceeds 125°C (257°F).

AUTO SHUTDOWN (ASD) RELAY—PCM OUTPUT

The ASD relay is located in the Power Distribution Center (PDC).

The ASD supplies battery voltage to the fuel injectors, ignition coil and oxygen (O2S) sensor heating elements. The ground circuit for the coil in the ASD relay is controlled by the powertrain control module (PCM). The PCM operates the relay by switching the ground circuit on and off.

CCD BUS (+/-) CIRCUITS-PCM OUTPUTS

The Powertrain Control Module (PCM) sends certain output signals through the CCD bus circuits. These signals are used to control certain instrument panel located items and to determine certain identification numbers.

Refer to Group 8E, Instrument Panel and Gauges for additional information.

DATA LINK CONNECTOR—PCM INPUT AND OUTPUT

The 16-way data link connector (diagnostic scan tool connector) links the Diagnostic Readout Box (DRB) scan tool or the Mopar Diagnostic System (MDS) with the powertrain control module (PCM). The data link connector is located under the instrument panel to the left of the steering column (Fig. 9). For operation of the DRB scan tool, refer to the appropriate Powertrain Diagnostic Procedures service manual.

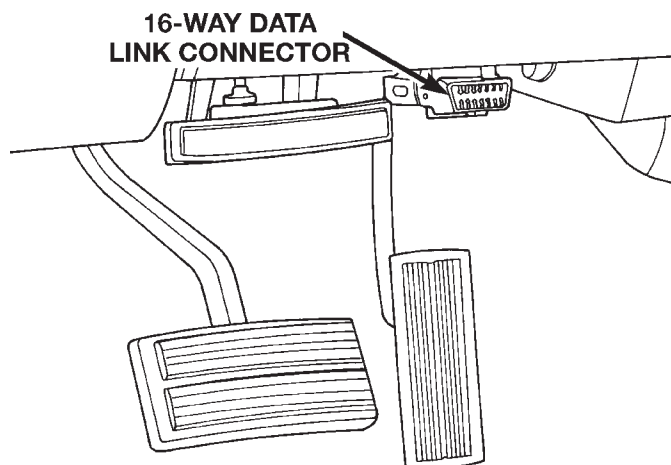


Fig. 9 Data Link Connector Location

DESCRIPTION AND OPERATION (Continued)

DUTY CYCLE EVAP PURGE SOLENOID VALVE-PCM OUTPUT

Refer to Group 25, Emission Control System for information.

FUEL INJECTORS—3.9/5.2/5.9L ENGINES—PCM OUTPUT

The fuel injectors are attached to the fuel rail (Fig. 10). 3.9L V-6 engines use six injectors. 5.2/5.9L V-8 engines use eight injectors.

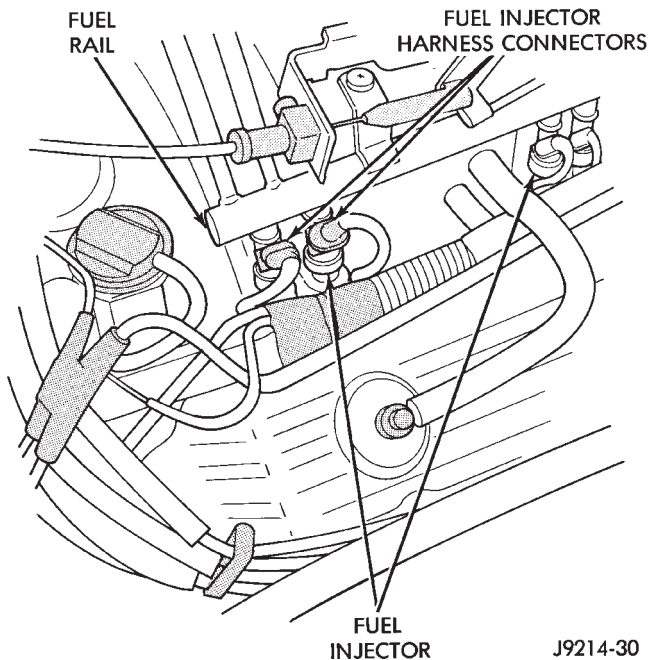


Fig. 10 Fuel Injectors—3.9/5.2/5.9L Engines—Typical

The nozzle ends of the injectors are positioned into openings in the intake manifold just above the intake valve ports of the cylinder head. The engine wiring harness connector for each fuel injector is equipped with an attached numerical tag (INJ 1, INJ 2 etc.). This is used to identify each fuel injector with its respective cylinder number.

The injectors are energized individually in a sequential order by the powertrain control module (PCM). The PCM will adjust injector pulse width by switching the ground path to each individual injector on and off. Injector pulse width is the period of time that the injector is energized. The PCM will adjust injector pulse width based on various inputs it receives.

During start up, battery voltage is supplied to the injectors through the ASD relay. When the engine is operating, voltage is supplied by the charging system. The PCM determines injector pulse width based on various inputs.

FUEL PUMP RELAY-PCM OUTPUT

The PCM energizes the electric fuel pump through the fuel pump relay. Battery voltage is applied to the fuel pump relay when the ignition key is ON. The relay is energized when a ground signal is provided by the PCM.

The fuel pump will operate for approximately one second unless the engine is operating or the starter motor is engaged.

The fuel pump relay is located in the Power Distribution Center (PDC) (Fig. 8).

GENERATOR FIELD SOURCE (+)—PCM OUTPUT

This output from the Powertrain Control Module (PCM) regulates charging system voltage to the generator field source (+) circuit. The voltage range is 12.9 to 15.0 volts. Models of previous years had used the ASD relay (directly) to apply the 12 volt + power supply to the generator field source (+) circuit. Refer to Groups 8A and 8C for charging system information.

GENERATOR FIELD DRIVER (-)—PCM OUTPUT

This output from the Powertrain Control Module (PCM) regulates charging system ground control to the generator field driver (-) circuit. Refer to Groups 8A and 8C for charging system information.

GENERATOR LAMP—PCM OUTPUT

If the powertrain control module (PCM) senses a low charging condition in the charging system, it will illuminate the generator lamp (if equipped) on the instrument panel. This is done through the CCD Bus circuits. For example, during low idle with all accessories turned on, the lamp may momentarily go on. Once the PCM corrects idle speed to a higher rpm, the lamp will go out. Refer to Groups 8A and 8C for charging system information.

IDLE AIR CONTROL (IAC) MOTOR—3.9/5.2/5.9L ENGINES—PCM OUTPUT

The IAC motor is mounted to the back of the throttle body (Fig. 7) and is controlled by the powertrain control module (PCM).

The throttle body has an air control passage that provides air for the engine at idle (the throttle plate is closed). The IAC motor pintle protrudes into the air control passage (Fig. 11) and regulates air flow through it. Based on various sensor inputs, the powertrain control module (PCM) adjusts engine idle speed by moving the IAC motor pintle in and out of the air control passage. The IAC motor is positioned when the ignition key is turned to the On position.

A (factory adjusted) set screw is used to mechanically limit the position of the throttle body throttle plate. **Never attempt to adjust the engine idle**

DESCRIPTION AND OPERATION (Continued)

speed using this screw. All idle speed functions are controlled by the PCM.

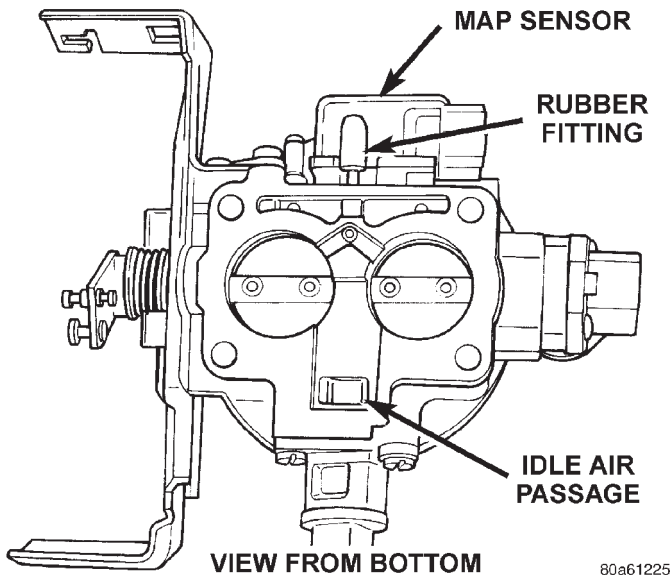


Fig. 11 Throttle Body Air Control Passage—3.9/5.2/5.9L Engines

IGNITION COIL—3.9/5.2/5.9L ENGINES—PCM OUTPUT

System voltage is supplied to the ignition coil positive terminal. The powertrain control module (PCM) operates the ignition coil. **Base (initial) ignition timing is not adjustable.** The PCM adjusts ignition timing to meet changing engine operating conditions.

The ignition coil is located near the front of the right cylinder head (Fig. 12).

Refer to Group 8D, Ignition System for additional information.

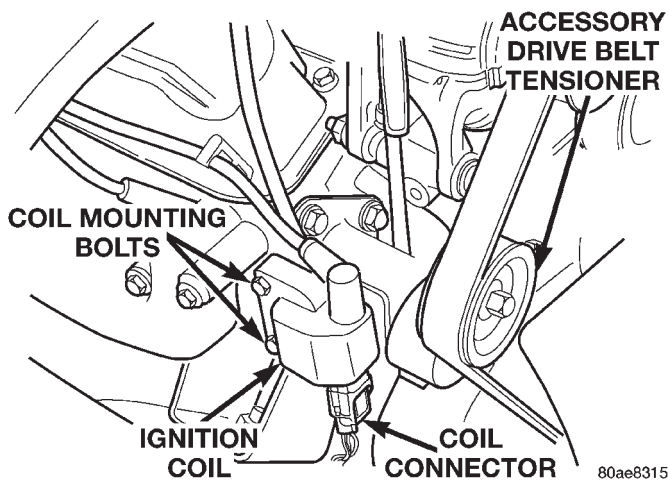


Fig. 12 Ignition Coil—3.9/5.2/5.9L Engines

MALFUNCTION INDICATOR LAMP—PCM OUTPUT

Refer to Group 25, Emission Control System for information.

OVERDRIVE LAMP—PCM OUTPUT

This circuit controls a signal for the operation of the push-button overdrive lamp switch. When the lamp is illuminated, the overdrive is disengaged.

SPEED CONTROL SOLENOIDS—PCM OUTPUT

Speed control operation is regulated by the powertrain control module (PCM). The PCM controls the vacuum to the throttle actuator through the speed control vacuum and vent solenoids. Refer to Group 8H for Speed Control Information.

TACHOMETER—PCM OUTPUT

The powertrain control module (PCM) supplies engine rpm values to the instrument cluster tachometer. Refer to Group 8E for tachometer information.

THREE-FOUR SHIFT SOLENOID—PCM OUTPUT

This output is used to control the transmission three-four shift solenoid. It is used on 4-speed electronically controlled automatic transmissions only.

TORQUE CONVERTOR CLUTCH (TCC) SOLENOID—PCM OUTPUT

This circuit controls operation of the transmission mounted torque converter clutch (TCC) solenoid used for torque converter engagement.

The powertrain control module (PCM) will determine when to engage and disengage the solenoid by monitoring vehicle miles per hour (mph) versus the output voltage of the throttle position sensor. Also needed are various inputs from:

- Transmission temperature sensor
- Output shaft speed sensor
- Module timer
- Engine rpm
- MAP sensor
- Brake switch

MANUAL TRANSMISSION

If equipped with a manual transmission, this PCM output will control operation of the shift indicator lamp (if equipped with lamp). The lamp is controlled by the powertrain control module (PCM). The lamp illuminates on the instrument panel to indicate when the driver should shift to the next highest gear for best fuel economy. The PCM will turn the lamp OFF after 3 to 5 seconds if the shift of gears is not performed. The lamp will remain off until vehicle stops accelerating and is brought back to range of up-shift lamp operation. This will also happen if vehicle is shifted into fifth gear.

The indicator lamp is normally illuminated when the ignition switch is turned on and it is turned off when the engine is started up. With the engine run-

DESCRIPTION AND OPERATION (Continued)

ning, the lamp is turned ON/OFF depending upon engine speed and load.

TRANSMISSION RELAY—PCM OUTPUT

The output to this relay provides battery voltage to the overdrive (OD), torque converter clutch (TCC) and governor pressure solenoids. Once battery voltage is applied to the solenoids, they are individually activated by the PCM through OD, TCC and governor pressure outputs. The relay is located in the Power Distribution Center (PDC). Refer to label on PDC cover for relay location.

GOVERNOR PRESSURE SOLENOID—PCM OUTPUT

This solenoid regulates the transmission fluid line pressure to produce the governor pressure necessary for transmission shift control. It is used on 4-speed electronic transmissions only.

THROTTLE BODY—3.9/5.2/5.9L ENGINES

Filtered air from the air cleaner enters the intake manifold through the throttle body (Fig. 13). Fuel does not enter the intake manifold through the throttle body. Fuel is sprayed into the manifold by the fuel injectors. The throttle body is mounted on the intake manifold. It contains an air control passage (Fig. 14) controlled by an idle air control (IAC) motor. The air control passage is used to supply air for idle conditions. A throttle valve (plate) is used to supply air for above idle conditions.

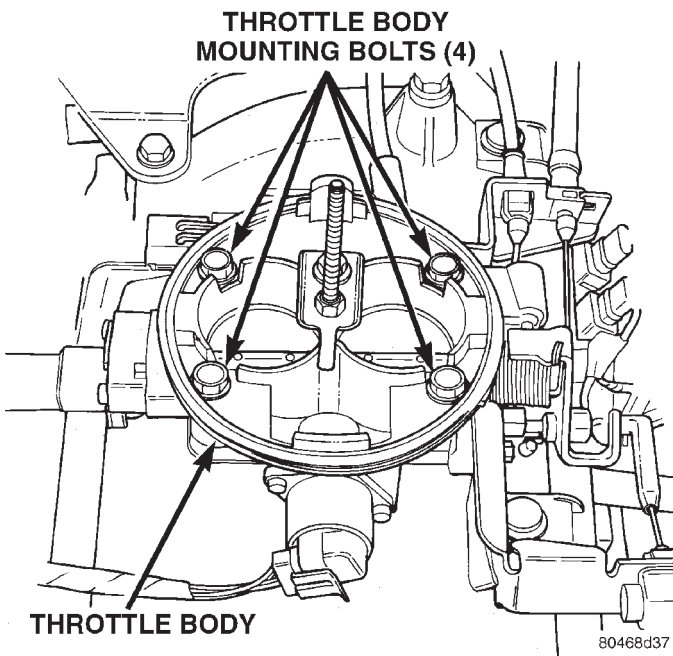


Fig. 13 Throttle Body—3.9/5.2/5.9L Engines—Typical

The throttle position sensor (TPS), idle air control (IAC) motor and manifold absolute pressure sensor (MAP) are attached to the throttle body. The acceler-

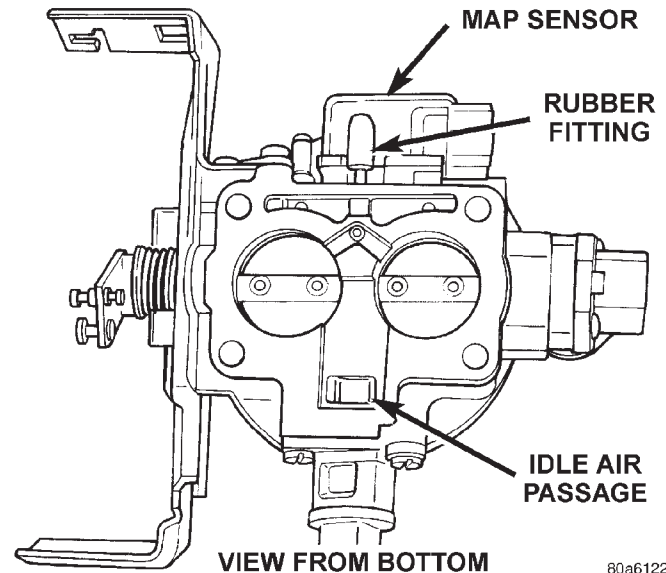


Fig. 14 Air Control Passage—3.9/5.2/5.9L Engines

ator pedal cable, speed control cable and transmission control cable (when equipped) are connected to the throttle arm.



A (factory adjusted) set screw is used to mechanically limit the position of the throttle body throttle plate. **Never attempt to adjust the engine idle speed using this screw.** All idle speed functions are controlled by the PCM.

DIAGNOSIS AND TESTING**VISUAL INSPECTION—3.9/5.2/5.9L ENGINES**

A visual inspection for loose, disconnected or incorrectly routed wires and hoses should be made. This should be done before attempting to diagnose or service the fuel injection system. A visual check will help spot these faults and save unnecessary test and diagnostic time. A thorough visual inspection will include the following checks:

- (1) Verify three 32-way electrical connectors are fully inserted into connector of powertrain control module (PCM) (Fig. 15).
- (2) Inspect battery cable connections. Be sure they are clean and tight.
- (3) Inspect fuel pump relay and air conditioning compressor clutch relay (if equipped). Inspect ASD relay connections. Inspect starter motor relay connections. Inspect relays for signs of physical damage and corrosion. The relays are located in Power Distribution Center (PDC) (Fig. 16). Refer to label on PDC cover for relay location.
- (4) Inspect ignition coil connections. Verify coil secondary cable is firmly connected to coil (Fig. 17).
- (5) Verify distributor cap is correctly attached to distributor. Be sure spark plug cables are firmly con-


DIAGNOSIS AND TESTING (Continued)

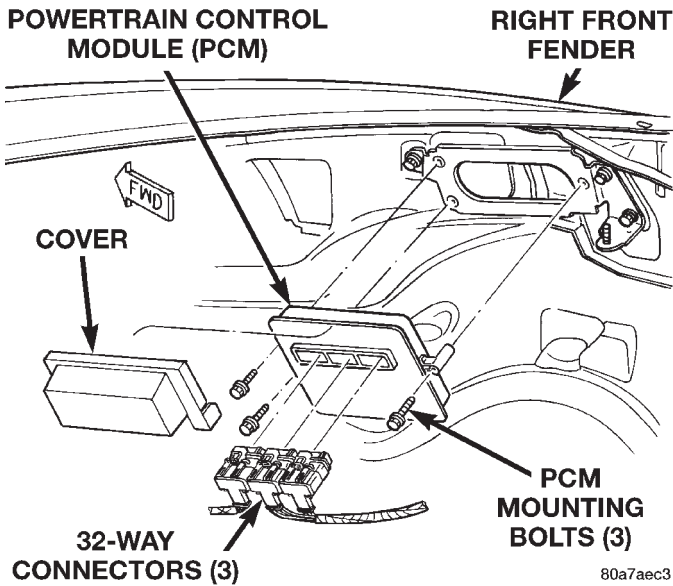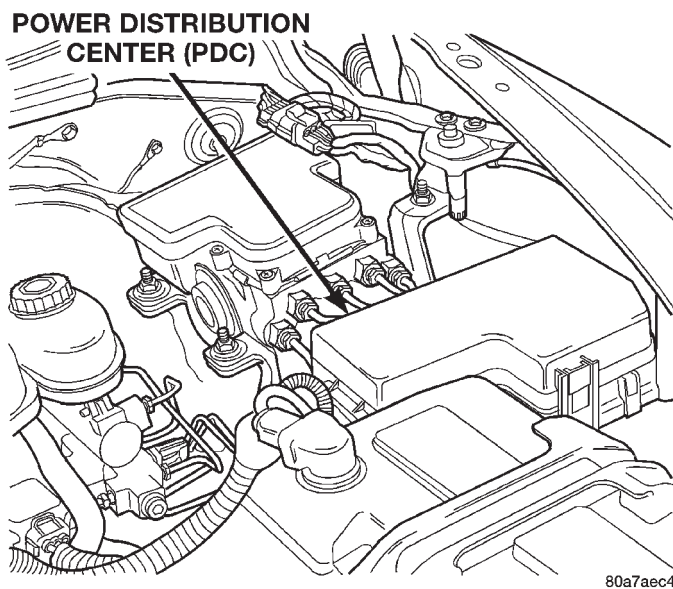**Fig. 15 Powertrain Control Module (PCM)****Fig. 16 Power Distribution Center (PDC)**


connected to the distributor cap and the spark plugs are in their correct firing order. Be sure coil cable is firmly connected to distributor cap and coil. Be sure camshaft position sensor wire connector (at the distributor) is firmly connected to harness connector. Inspect spark plug condition. Refer to Group 8D, Ignition. Connect vehicle to an oscilloscope and inspect spark events for fouled or damaged spark plugs or cables.

(6) Verify generator output wire, generator connector and ground wire are firmly connected to generator.

(7) Inspect system body grounds for loose or dirty connections. Refer to Group 8, Wiring for ground locations.

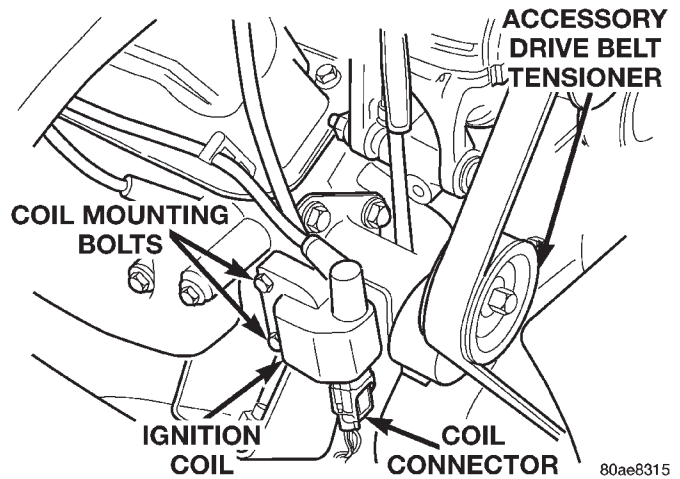**Fig. 17 Ignition Coil**

(8) Verify positive crankcase ventilation (PCV) valve operation. Refer to Group 25, Emission Control System for additional information. Verify PCV valve hose is firmly connected to PCV valve and manifold (Fig. 18).

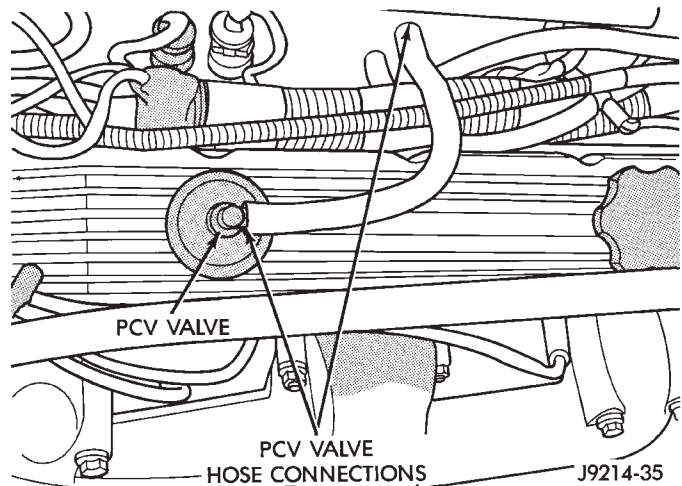**Fig. 18 PCV Valve Hose Connections**

(9) Inspect fuel tube quick-connect fitting-to-fuel rail connections.

(10) Verify hose connections to all ports of vacuum fittings on intake manifold are tight and not leaking.

(11) Inspect accelerator cable, transmission throttle cable (if equipped) and cruise control cable connections (if equipped). Check their connections to throttle arm of throttle body for any binding or restrictions.

(12) If equipped with vacuum brake booster, verify vacuum booster hose is firmly connected to fitting on intake manifold. Also check connection to brake vacuum booster.

(13) Inspect air cleaner inlet and air cleaner element for dirt or restrictions.

DIAGNOSIS AND TESTING (Continued)

(14) Inspect radiator grille area, radiator fins and air conditioning condenser for restrictions.

(15) Verify intake manifold air temperature sensor wire connector is firmly connected to harness connector (Fig. 19).

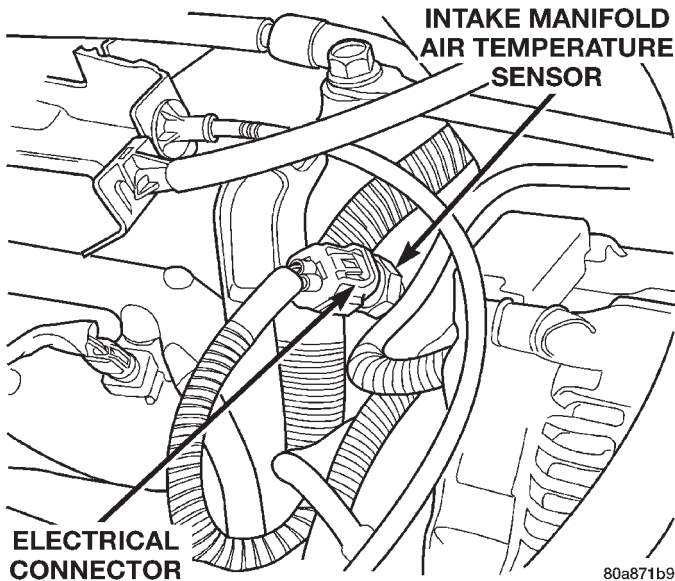


Fig. 19 Intake Manifold Air Temperature Sensor—Typical

(16) Verify MAP sensor electrical connector is firmly connected to MAP sensor (Fig. 20). Also verify rubber L-shaped fitting from MAP sensor to throttle body is firmly connected (Fig. 21).

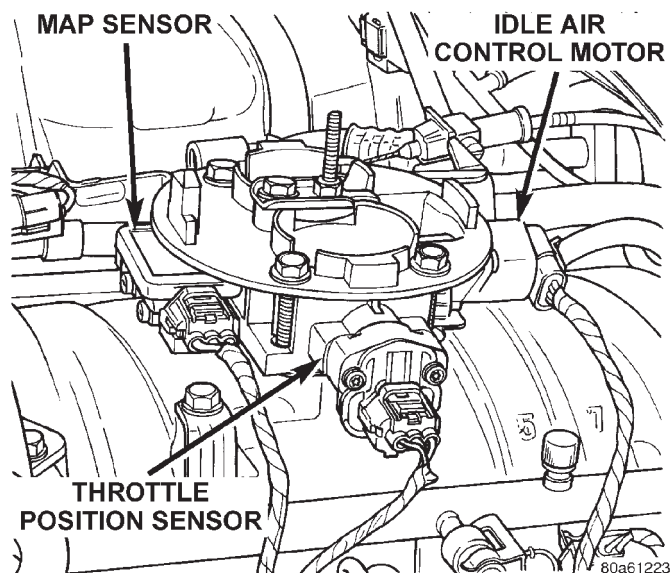


Fig. 20 Sensor and IAC Motor Location—Typical (V-8 Shown)

(17) Verify fuel injector wire harness connectors are firmly connected to injectors in correct order. Each harness connector is numerically tagged with

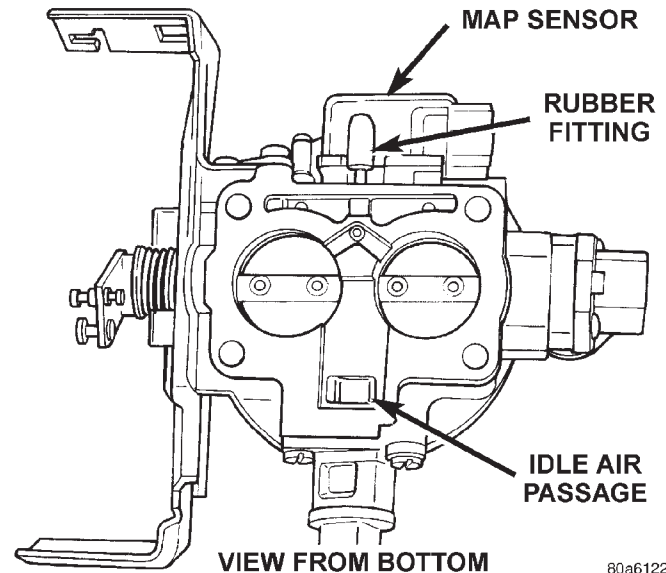


Fig. 21 Rubber L-Shaped Fitting—MAP Sensor-to-Throttle Body

injector number (INJ 1, INJ 2 etc.) of its corresponding fuel injector and cylinder number.

(18) Verify harness connectors are firmly connected to idle air control (IAC) motor, throttle position sensor (TPS) and manifold absolute pressure (MAP) sensor (Fig. 20).

(19) Verify wire harness connector is firmly connected to engine coolant temperature sensor (Fig. 22).

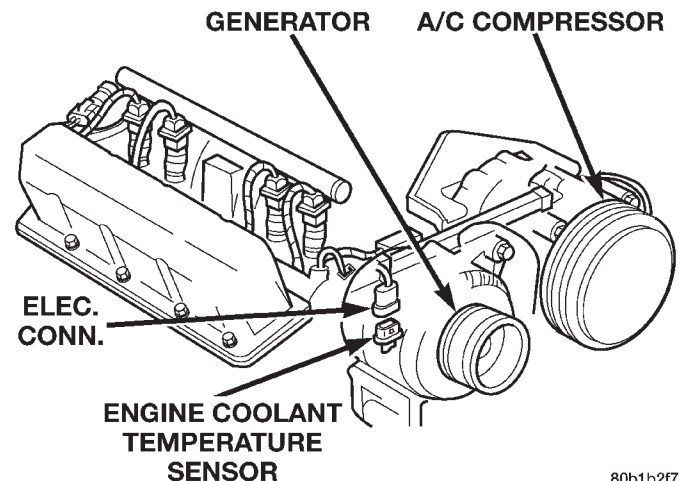


Fig. 22 Engine Coolant Temperature Sensor

(20) Raise and support vehicle.

(21) Verify both upstream and downstream oxygen sensor wire connectors are firmly connected to sensors. Inspect sensors and connectors for damage (Fig. 23) or (Fig. 24).

(22) Inspect for pinched or leaking fuel tubes. Inspect for pinched, cracked or leaking fuel hoses.

DIAGNOSIS AND TESTING (Continued)

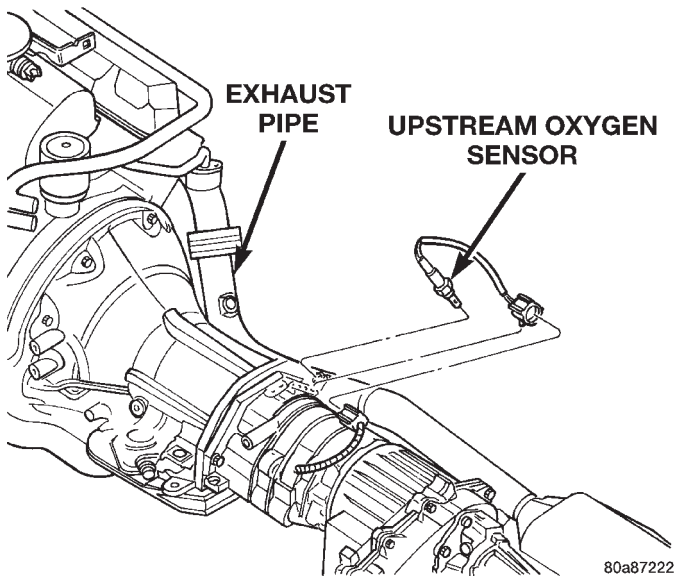


Fig. 23 Upstream Oxygen Sensor

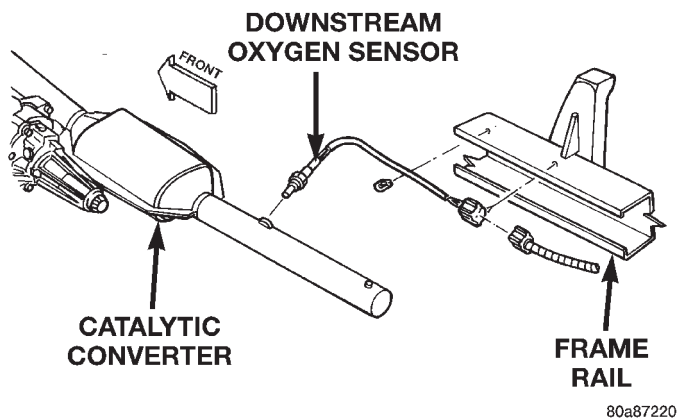


Fig. 24 Downstream Oxygen Sensor

(23) Inspect for exhaust system restrictions such as pinched exhaust pipes, collapsed muffler or plugged catalytic converter.

(24) If equipped with automatic transmission, verify electrical harness is firmly connected to park/neutral switch. Refer to Automatic Transmission section of Group 21.

(25) Verify electrical harness is firmly connected to rear wheel speed sensor. Verify rear wheel speed sensor is firmly attached to rear axle with proper air gap. Refer to Group 5, Brakes for information.

(26) If equipped with 4-wheel antilock brake system, verify electrical harness is firmly connected to each front wheel speed sensor. Verify both front wheel speed sensors are firmly attached. Refer to Group 5, Brakes for information.

(27) Verify fuel pump/gauge sender unit wire connector is firmly connected to harness connector.


(28) Inspect fuel hoses at fuel pump/gauge sender unit for cracks or leaks.

(29) Inspect transmission torque converter housing (automatic transmission) or clutch housing (manual transmission) for damage to timing ring on drive plate/flywheel.

(30) Verify battery cable and solenoid feed wire connections to starter solenoid are tight and clean. Inspect for chaffed wires or wires rubbing against other components.

ASD AND FUEL PUMP RELAYS

The following description of operation and tests apply only to the Automatic Shutdown (ASD) and fuel pump relays. The terminals on the bottom of each relay are numbered (Fig. 25).

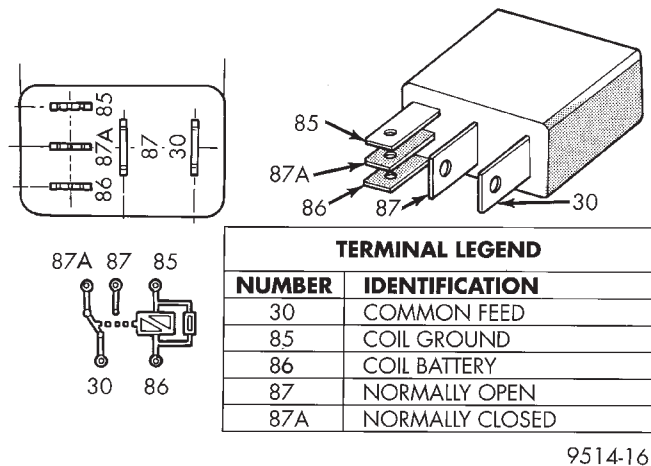

9514-16

Fig. 25 ASD and Fuel Pump Relay Terminals

OPERATION

- Terminal number 30 is connected to battery voltage. For both the ASD and fuel pump relays, terminal 30 is connected to battery voltage at all times.

- The PCM grounds the coil side of the relay through terminal number 85.

- Terminal number 86 supplies voltage to the coil side of the relay.

- When the PCM de-energizes the ASD and fuel pump relays, terminal number 87A connects to terminal 30. This is the Off position. In the off position, voltage is not supplied to the rest of the circuit. Terminal 87A is the center terminal on the relay.

- When the PCM energizes the ASD and fuel pump relays, terminal 87 connects to terminal 30. This is the On position. Terminal 87 supplies voltage to the rest of the circuit.

TESTING

The following procedure applies to the ASD and fuel pump relays.

DIAGNOSIS AND TESTING (Continued)

- (1) Remove relay from connector before testing.
- (2) With the relay removed from the vehicle, use an ohmmeter to check the resistance between terminals 85 and 86. The resistance should be 75 ± 5 ohms.
- (3) Connect the ohmmeter between terminals 30 and 87A. The ohmmeter should show continuity between terminals 30 and 87A.
- (4) Connect the ohmmeter between terminals 87 and 30. The ohmmeter should not show continuity at this time.
- (5) Connect one end of a jumper wire (16 gauge or smaller) to relay terminal 85. Connect the other end of the jumper wire to the ground side of a 12 volt power source.
- (6) Connect one end of another jumper wire (16 gauge or smaller) to the power side of the 12 volt power source. **Do not attach the other end of the jumper wire to the relay at this time.**

WARNING: DO NOT ALLOW OHMMETER TO CONTACT TERMINALS 85 OR 86 DURING THIS TEST.

- (7) Attach the other end of the jumper wire to relay terminal 86. This activates the relay. The ohmmeter should now show continuity between relay terminals 87 and 30. The ohmmeter should not show continuity between relay terminals 87A and 30.
- (8) Disconnect jumper wires.
- (9) Replace the relay if it did not pass the continuity and resistance tests. If the relay passed the tests, it operates properly. Check the remainder of the ASD and fuel pump relay circuits. Refer to group 8W, Wiring Diagrams.

MANIFOLD ABSOLUTE PRESSURE (MAP) SENSOR TEST—3.9/5.2/5.9L ENGINES

To perform a complete test of MAP sensor (Fig. 26) and its circuitry, refer to DRB scan tool and appropriate Powertrain Diagnostics Procedures manual. To test the MAP sensor only, refer to the following:

- (1) Inspect the rubber L-shaped fitting from the MAP sensor to the throttle body (Fig. 27). Repair as necessary.

CAUTION: When testing the MAP sensor, be sure that the harness wires are not damaged by the test meter probes.

- (2) Test the MAP sensor output voltage at the MAP sensor connector between terminals A and B (Fig. 28). With the ignition switch ON and the engine OFF, output voltage should be 4-to-5 volts. The voltage should drop to 1.5-to-2.1 volts with a hot, neutral idle speed condition.

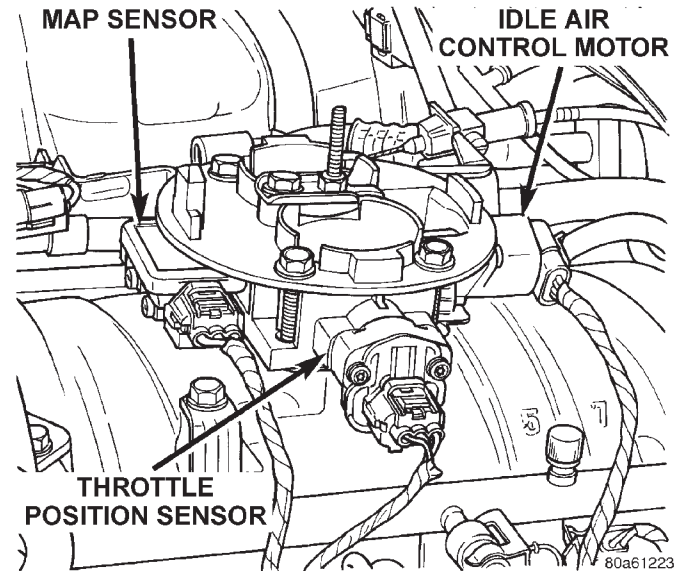


Fig. 26 MAP Sensor—Typical (V-8 Shown)

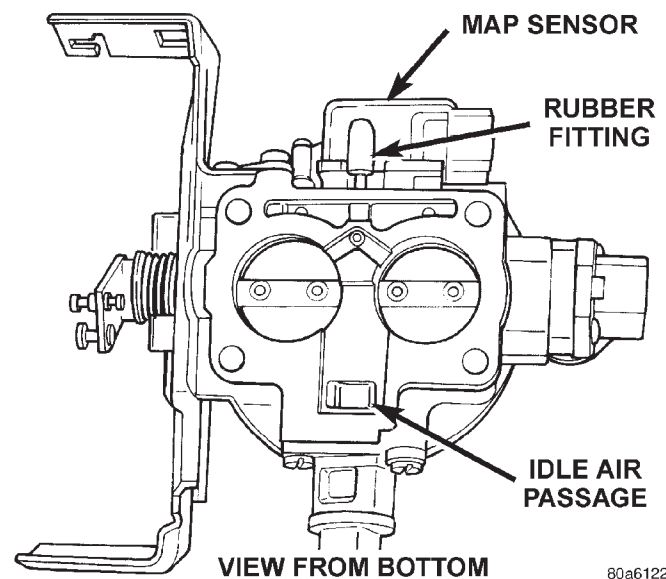


Fig. 27 Rubber L-Shaped Fitting—MAP Sensor-to-Throttle Body

- (3) Test powertrain control module (PCM) cavity A-27 for the same voltage described above to verify the wire harness condition. Repair as necessary.


- (4) Test MAP sensor supply voltage at sensor connector between terminals A and C (Fig. 28) with the ignition ON. The voltage should be approximately 5 volts ($\pm 0.5V$). Five volts ($\pm 0.5V$) should also be at cavity A-17 of the PCM wire harness connector. Repair or replace the wire harness as necessary.

- (5) Test the MAP sensor ground circuit at sensor connector terminal—A (Fig. 28) and PCM connector A-4. Repair the wire harness if necessary.

Refer to Group 8W, Wiring Diagrams for cavity locations.

DIAGNOSIS AND TESTING (Continued)

A = GROUND
B = OUTPUT VOLTAGE SIGNAL
C = 5-VOLT SUPPLY

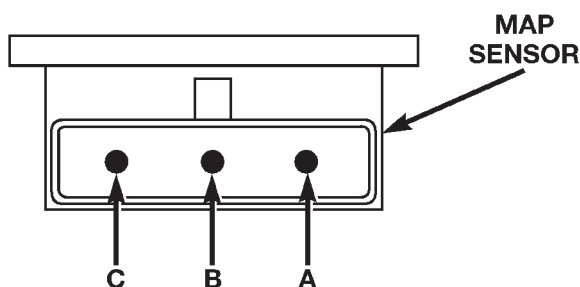


8056d9f7

Fig. 28 MAP Sensor Connector Terminals—Typical OXYGEN SENSORS

To perform a complete test of the O₂S sensors and their circuitry, refer to the DRB scan tool and appropriate Powertrain Diagnostics Procedures manual. To test the O₂S sensors only, refer to the following:

The upstream O₂S sensor is located on the exhaust pipe (Fig. 29).

The downstream O₂S sensor is located on the outlet end of the catalytic converter (Fig. 30).

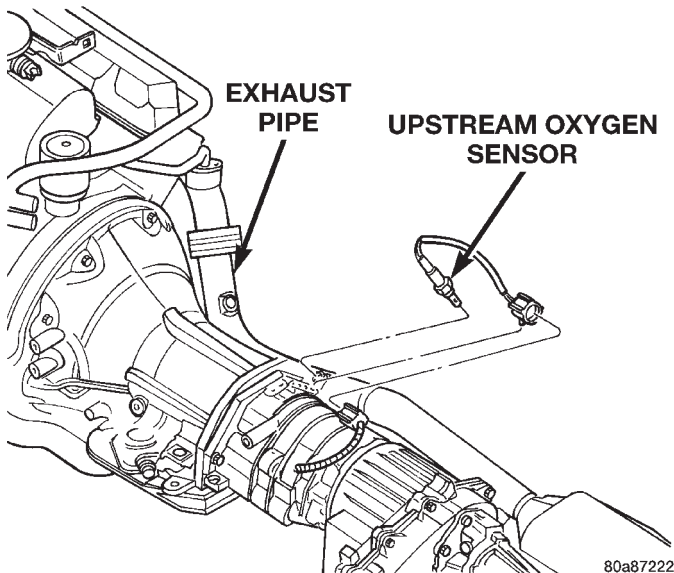


80a87222

Fig. 29 Upstream Oxygen Sensor Location

Each O₂S heating element can be tested with an ohmmeter as follows:

Disconnect the O₂S sensor connector. Connect the ohmmeter test leads across the white wire terminals of the sensor connector. Resistance should be between $4.5 \pm .5$ ohms and 7 ohms. Replace the sensor if the ohmmeter displays an infinity (open) reading.

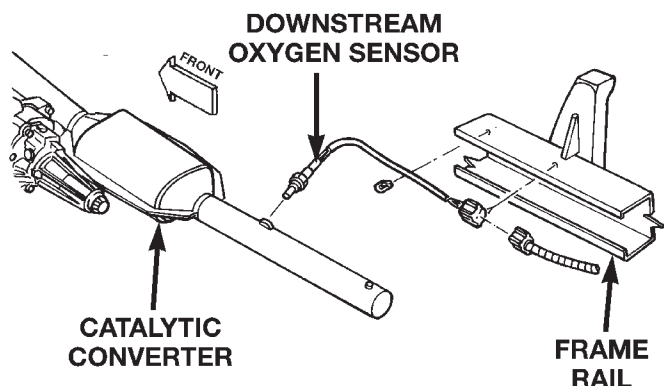

80a87220

Fig. 30 Downstream Oxygen Sensor Location

CAMSHAFT AND CRANKSHAFT POSITION SENSORS

Refer to Group 8D, Ignition System for information.

ENGINE COOLANT TEMPERATURE SENSOR—3.9/5.2/5.9L ENGINE

To perform a complete test of the engine coolant temperature sensor and its circuitry, refer to DRB scan tool and appropriate Powertrain Diagnostics Procedures manual. To test the sensor only, refer to the following:


(1) Disconnect wire harness connector from coolant temperature sensor (Fig. 31).

(2) **Engines with air conditioning:** When removing the connector from sensor, do not pull directly on wiring harness. Fabricate an L-shaped hook tool from a coat hanger (approximately eight inches long). Place the hook part of tool under the connector for removal. The connector is snapped onto the sensor. It is not equipped with a lock type tab.

(3) Test the resistance of the sensor with a high input impedance (digital) volt-ohmmeter. The resistance (as measured across the sensor terminals) should be as shown in the SENSOR RESISTANCE (OHMS)—COOLANT TEMPERATURE SENSOR/INTAKE AIR TEMPERATURE SENSOR resistance chart. Replace the sensor if it is not within the range of resistance specified in the chart.

(4) Test continuity of the wire harness between the PCM wire harness connector and the coolant sensor connector terminals. Refer to Group 8, Wiring for terminal/cavity locations. Repair the wire harness if an open circuit is indicated.

DIAGNOSIS AND TESTING (Continued)

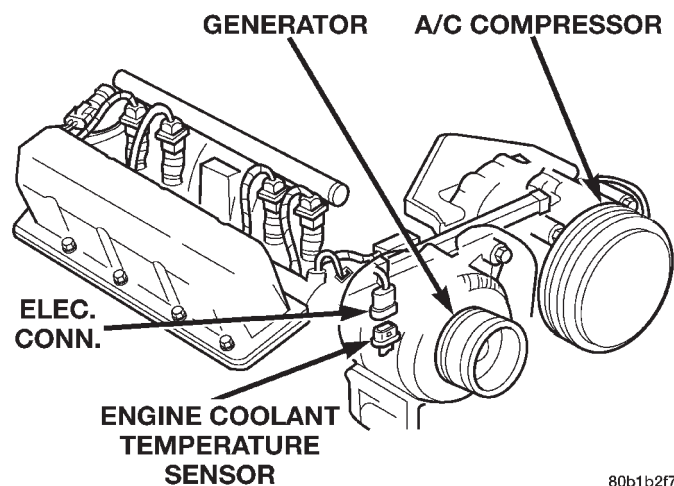

80b1b2f7

Fig. 31 Engine Coolant Temperature Sensor—3.9/5.2/5.9L Engines—Typical

SENSOR RESISTANCE (OHMS)—COOLANT TEMPERATURE SENSOR/INTAKE AIR TEMPERATURE SENSOR

| TEMPERATURE | | RESISTANCE (OHMS) | |
|-------------|--------|-------------------|---------|
| °CEL. | °FAHR. | MIN. | MAX. |
| -40 | -40 | 291,490 | 381,710 |
| -20 | -4 | 85,850 | 108,390 |
| -10 | 14 | 49,250 | 61,430 |
| 0 | 32 | 29,330 | 35,990 |
| 10 | 50 | 17,990 | 21,810 |
| 20 | 68 | 11,370 | 13,610 |
| 25 | 77 | 9,120 | 10,880 |
| 30 | 86 | 7,370 | 8,750 |
| 40 | 104 | 4,900 | 5,750 |
| 50 | 122 | 3,330 | 3,880 |
| 60 | 140 | 2,310 | 2,670 |
| 70 | 158 | 1,630 | 1,870 |
| 80 | 176 | 1,170 | 1,340 |
| 90 | 194 | 860 | 970 |
| 100 | 212 | 640 | 720 |
| 110 | 230 | 480 | 540 |
| 120 | 248 | 370 | 410 |

(5) After tests are completed, connect electrical connector to sensor. The sensor connector is symmetrical (not indexed). It can be installed to the sensor in either direction.


IDLE AIR CONTROL (IAC) MOTOR—3.9/5.2/5.9L ENGINES

To perform a complete test of the IAC motor and its circuitry, refer to DRB scan tool and appropriate Powertrain Diagnostics Procedures manual.

INTAKE MANIFOLD AIR TEMPERATURE SENSOR—3.9/5.2/5.9L ENGINE

To perform a complete test of the intake manifold air temperature sensor and its circuitry, refer to DRB tester and appropriate Powertrain Diagnostics Procedures manual. To test the sensor only, refer to the following:

(1) Disconnect the wire harness connector from the intake manifold air temperature sensor (Fig. 32).

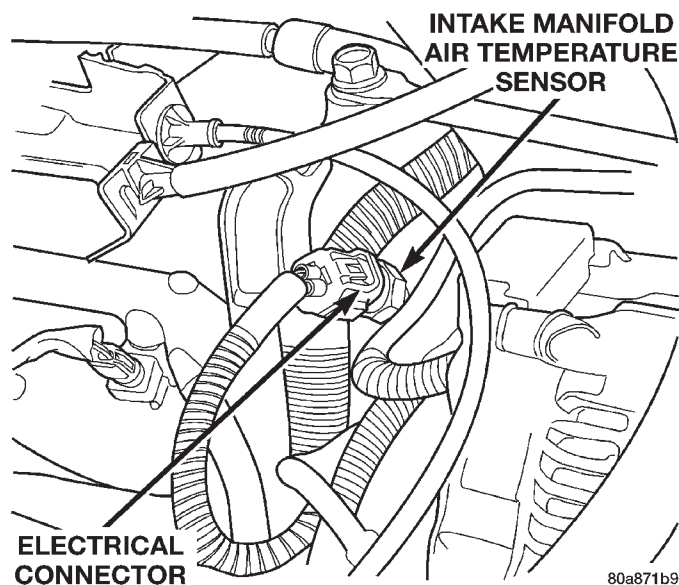

80a871b9

Fig. 32 Intake Manifold Air Temperature Sensor—3.9/5.2/5.9L Engines—Typical

(2) Test the resistance of the sensor with an input impedance (digital) volt-ohmmeter. The resistance (as measured across the sensor terminals) should be as shown in the previous SENSOR RESISTANCE (OHMS)—COOLANT TEMPERATURE SENSOR/INTAKE AIR TEMPERATURE SENSOR chart. Replace the sensor if it is not within the range of resistance specified in the chart.

(3) Test the resistance of the wire harness. Do this between the PCM wire harness connector A-15 and the sensor connector terminal. Also check between PCM connector A-4 to the sensor connector terminal. Repair the wire harness as necessary if the resistance is greater than 1 ohm.

THROTTLE POSITION SENSOR (TPS)—3.9/5.2/5.9L ENGINE

To perform a complete test of the TPS and its circuitry, refer to the DRB scan tool and appropriate

DIAGNOSIS AND TESTING (Continued)

Powertrain Diagnostics Procedures manual. To test the TPS only, refer to the following:

The TPS (Fig. 33) can be tested with a digital voltmeter. The center electrical terminal of the TPS is the output terminal.

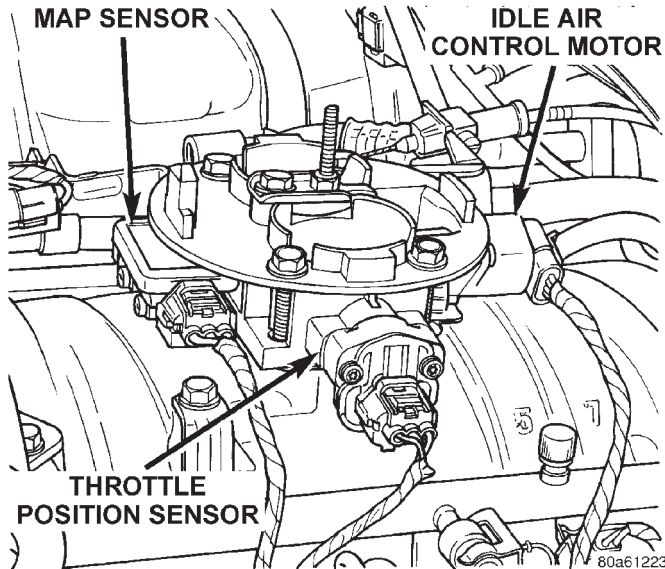


Fig. 33 TPS—3.9/5.2/5.9L Engines

With the ignition key in the ON position, check the TPS output voltage at the center terminal wire of the connector. Check this at idle (throttle plate closed) and at wide open throttle (WOT). At idle, TPS output voltage should be greater than .350 millivolts but less than 900 millivolts. At wide open throttle, TPS output voltage must be less than 4.5 volts. The output voltage should increase gradually as the throttle plate is slowly opened from idle to WOT.

THROTTLE BODY MINIMUM AIR FLOW CHECK PROCEDURE

3.9/5.2/5.9L ENGINES


The following test procedure has been developed to check throttle body calibrations for correct idle conditions. The procedure should be used to diagnose the throttle body for conditions that may cause idle problems. **This procedure should be used only after normal diagnostic procedures have failed to produce results that indicate a throttle body related problem. Be sure to check for proper operation of the idle air control motor before performing this test.**

A special fixed orifice tool (number 6714) (Fig. 34) must be used for the following test.

(1) Start the engine and bring to operating temperature. Be sure all accessories are off before performing this test.

(2) Shut off the engine and remove the air duct at throttle body.

SPECIAL TOOL 6714

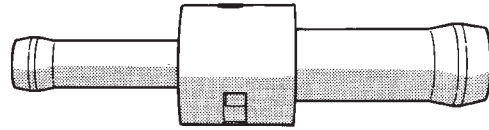

J9414-7

Fig. 34 Fixed Orifice Tool

(3) Disconnect the vacuum line at the PCV valve (Fig. 35).

(4) Install the 0.185 inch orifice tool (number 6714) into the disconnected vacuum line in place of the PCV valve (Fig. 35).

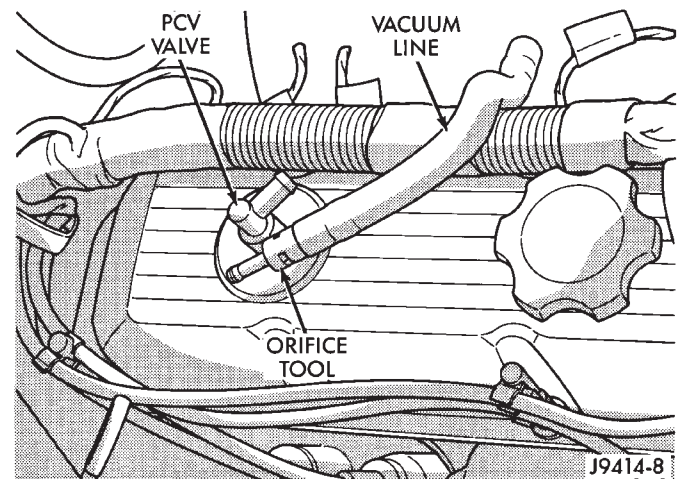


Fig. 35 Install Orifice Tool

(5) Disconnect the idle purge vacuum line from fitting at throttle body. This vacuum line is located on the front of throttle body next to the MAP sensor (Fig. 36). Cap the fitting at throttle body after vacuum line has been removed.


(6) Connect the DRB scan tool to the 16-way data link connector. This connector is located under the instrument panel to the left of the steering column. Refer to the appropriate Powertrain Diagnostic Procedures service manual for DRB operation.

(7) Start the engine and allow to warm up.

(8) Using the DRB scan tool, scroll through the menus as follows: select—Stand Alone DRB III, select 1998 Diagnostics, select—Engine, select—System Test, select—Minimum Air Flow.

(9) The DRB scan tool will count down to stabilize the idle rpm and display the minimum air flow idle rpm. The idle rpm should be between **500 and 900 rpm**. If the idle speed is outside of these specifications, replace the throttle body. Refer to Throttle

DIAGNOSIS AND TESTING (Continued)

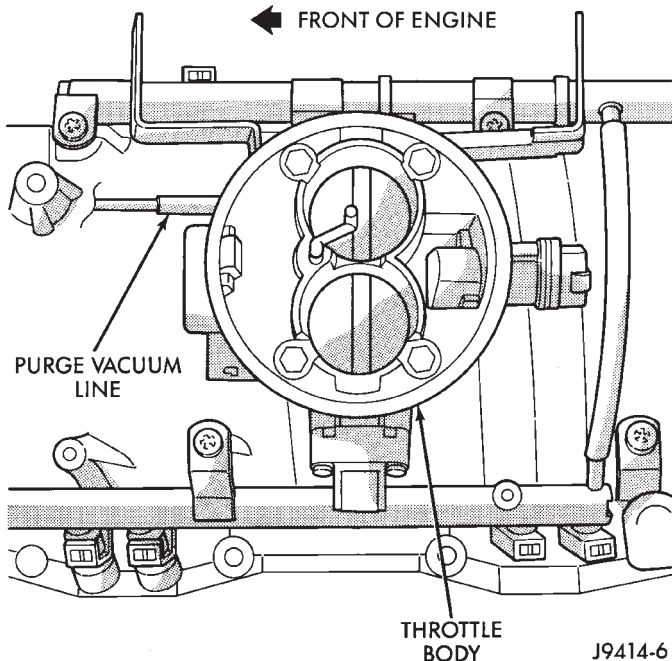**Fig. 36 Idle Purge Line**

Body in the Component Removal/Installation section of this group.

- (10) Disconnect the DRB scan tool from the vehicle.
- (11) Remove cap from idle purge fitting at throttle body and install vacuum line.
- (12) Remove orifice tool and connect vacuum line to PCV valve.
- (13) Install air duct to throttle body.

REMOVAL AND INSTALLATION

AUTOMATIC SHUTDOWN (ASD) RELAY


The ASD relay is located in the Power Distribution Center (PDC) (Fig. 37). Refer to label on PDC cover for relay location.

REMOVAL

- (1) Remove PDC cover.
- (2) Remove relay from PDC.
- (3) Check condition of relay terminals and PDC connector terminals for damage or corrosion. Repair if necessary before installing relay.
- (4) Check for pin height (pin height should be the same for all terminals within the PDC connector). Repair if necessary before installing relay.

INSTALLATION

- (1) Install relay to PDC.
- (2) Install cover to PDC.

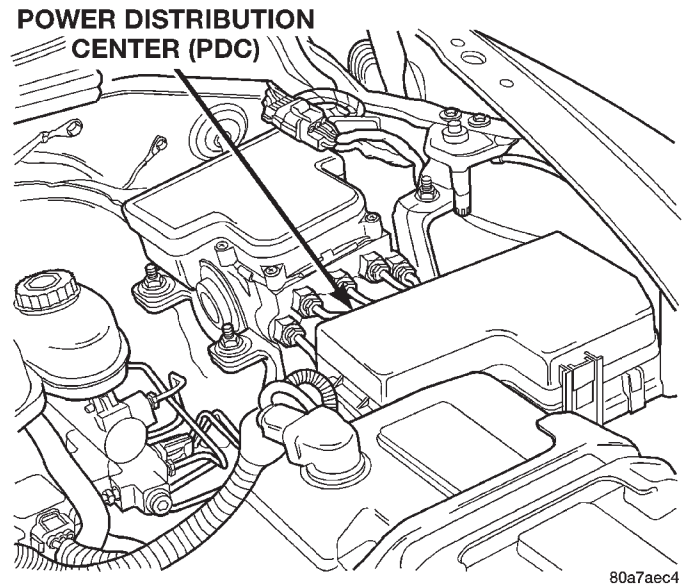**Fig. 37 Power Distribution Center (PDC) Location****FUEL PUMP RELAY**

The fuel pump relay is located in the Power Distribution Center (PDC) (Fig. 37). Refer to label on PDC cover for relay location.

REMOVAL

- (1) Remove PDC cover.
- (2) Remove relay from PDC.
- (3) Check condition of relay terminals and PDC connector terminals for damage or corrosion. Repair if necessary before installing relay.
- (4) Check for pin height (pin height should be the same for all terminals within the PDC connector). Repair if necessary before installing relay.

INSTALLATION

- (1) Install relay to PDC.
- (2) Install cover to PDC.

THROTTLE BODY—3.9/5.2/5.9L ENGINES

A (factory adjusted) set screw is used to mechanically limit the position of the throttle body throttle plate. **Never attempt to adjust the engine idle speed using this screw.** All idle speed functions are controlled by the powertrain control module (PCM).

REMOVAL

- (1) Remove the air duct at throttle body.
- (2) Disconnect throttle body electrical connectors at MAP sensor, IAC motor and TPS (Fig. 38).
- (3) Remove vacuum line at throttle body.
- (4) Remove all control cables from throttle body (lever) arm. Refer to the Accelerator Pedal and Throttle Cable section of this group for additional information.

REMOVAL AND INSTALLATION (Continued)

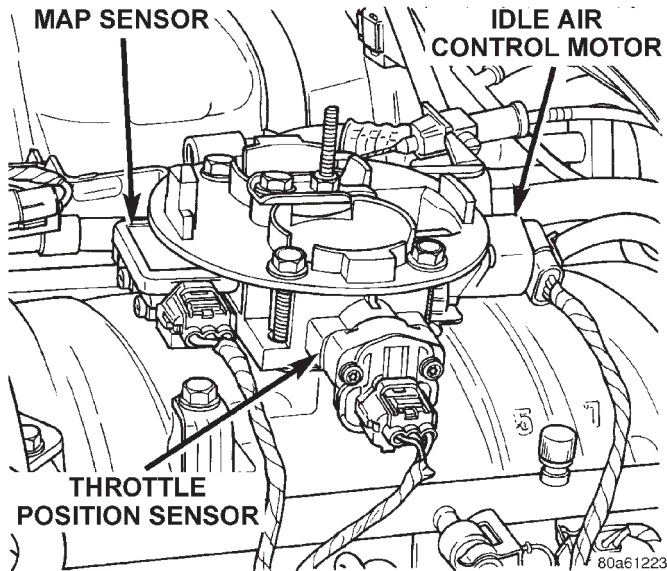


Fig. 38 Sensor Electrical Connectors—3.9/5.2/5.9L Engines—Typical

- (5) Remove four throttle body mounting bolts (Fig. 39).
- (6) Remove throttle body from intake manifold.
- (7) Discard old throttle body-to-intake manifold gasket.

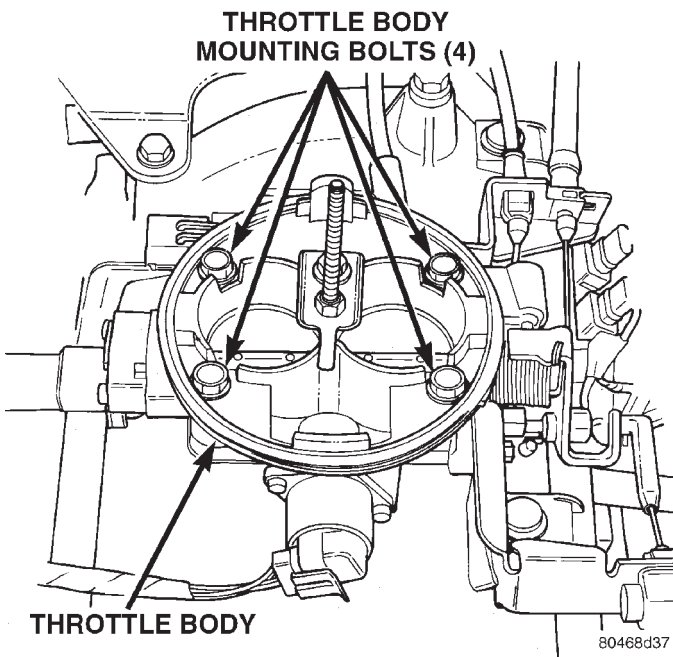


Fig. 39 Throttle Body Mounting Bolts—3.9/5.2/5.9L Engines—Typical

INSTALLATION

- (1) Clean the mating surfaces of the throttle body and the intake manifold.
- (2) Install new throttle body-to-intake manifold gasket.

- (3) Install throttle body to intake manifold.
- (4) Install four mounting bolts. Tighten bolts to 23 N·m (200 in. lbs.) torque.
- (5) Install control cables.
- (6) Install vacuum line to throttle body.
- (7) Install electrical connectors.
- (8) Install air duct at throttle body.

THROTTLE POSITION SENSOR (TPS)—3.9/5.2/5.9L ENGINES

REMOVAL

The TPS is located on side of throttle body.

- (1) Remove air duct at throttle body.
- (2) Disconnect TPS electrical connector.
- (3) Remove two TPS mounting bolts (Fig. 40).

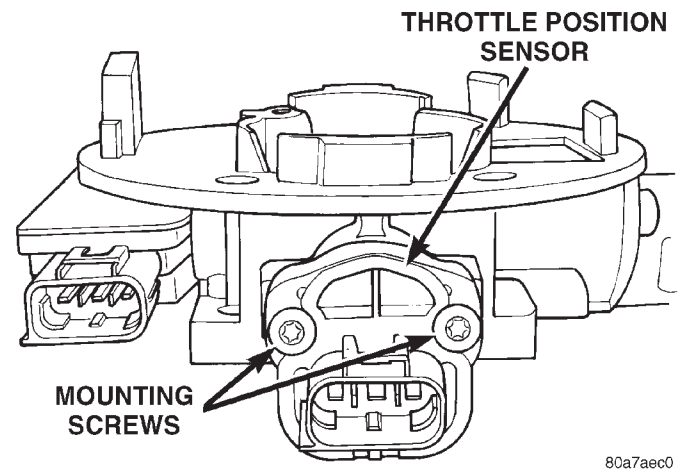


Fig. 40 TPS Mounting Bolts—3.9/5.2/5.9L Engines

- (4) Remove TPS from throttle body.

INSTALLATION

The throttle shaft end of the throttle body slides into a socket in the TPS (Fig. 41). The TPS must be installed so that it can be rotated a few degrees. If the sensor will not rotate, install the sensor with the throttle shaft on the other side of the socket tangs. The TPS will be under slight tension when rotated.

- (1) Install the TPS and two retaining bolts.
- (2) Tighten bolts to 7 N·m (60 in. lbs.) torque.
- (3) Manually operate the throttle control lever by hand to check for any binding of the TPS.
- (4) Connect TPS electrical connector to TPS.
- (5) Install air duct at throttle body.

IDLE AIR CONTROL (IAC) MOTOR—3.9/5.2/5.9L ENGINES

The IAC motor is located on the back of the throttle body (Fig. 42).

REMOVAL AND INSTALLATION (Continued)

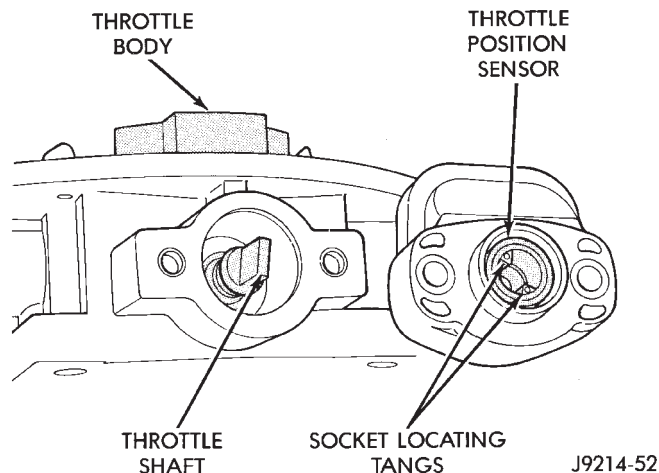


Fig. 41 Installation—3.9/5.2/5.9L Engines—Typical

REMOVAL

- (1) Remove air duct at throttle body.
- (2) Disconnect electrical connector from IAC motor.
- (3) Remove two mounting bolts (screws) (Fig. 42).

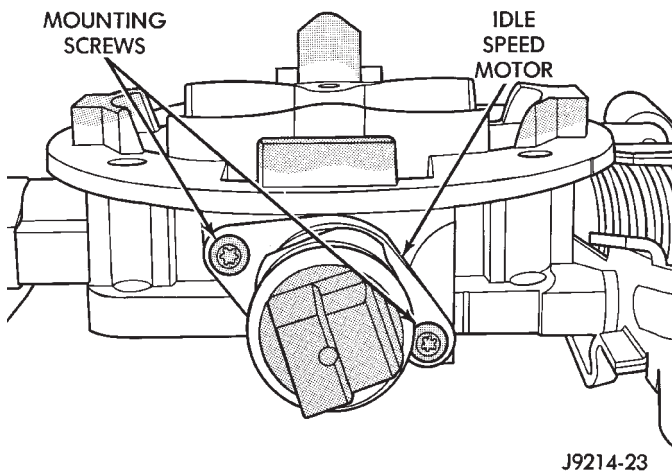


Fig. 42 Mounting Bolts (Screws)—IAC Motor—3.9/5.2/5.9L Engines

- (4) Remove IAC motor from throttle body.

INSTALLATION

- (1) Install IAC motor to throttle body.
- (2) Install and tighten two mounting bolts (screws) to 7 N·m (60 in. lbs.) torque.
- (3) Install electrical connector.
- (4) Install air duct at throttle body.

MANIFOLD ABSOLUTE PRESSURE (MAP) SENSOR—3.9/5.2/5.9L ENGINES

The MAP sensor is located on the front of the throttle body (Fig. 43). An L-shaped rubber fitting is used to connect the MAP sensor to throttle body (Fig. 44).

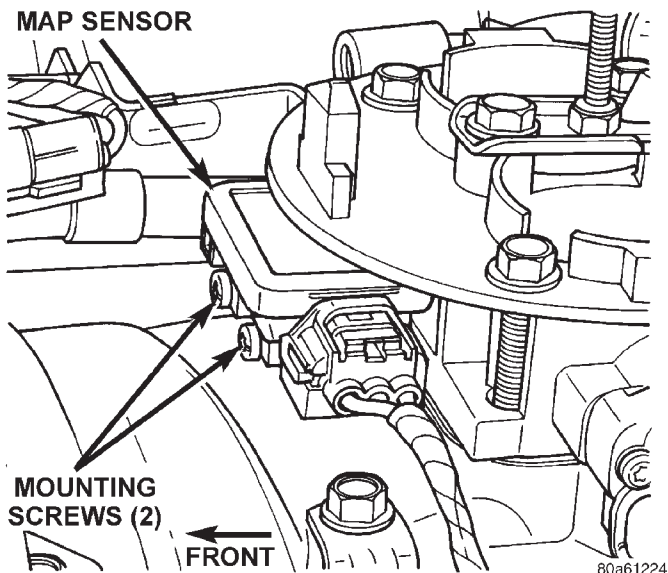


Fig. 43 MAP Sensor Location—3.9/5.2/5.9L Engines

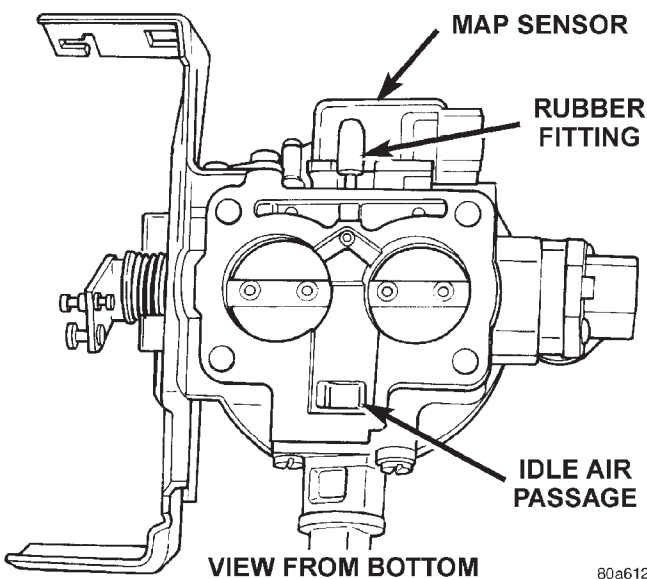


Fig. 44 MAP Sensor L-Shaped Rubber Fitting—3.9/5.2/5.9L Engines

REMOVAL

- (1) Remove air duct at throttle body.
- (2) Remove two MAP sensor mounting bolts (screws) (Fig. 43).
- (3) While removing MAP sensor, slide the vacuum rubber L-shaped fitting (Fig. 44) from the throttle body.
- (4) Remove rubber L-shaped fitting from MAP sensor.

INSTALLATION

- (1) Install rubber L-shaped fitting to MAP sensor.
- (2) Position sensor to throttle body while guiding rubber fitting over throttle body vacuum nipple.

REMOVAL AND INSTALLATION (Continued)

(3) Install MAP sensor mounting bolts (screws). Tighten screws to 3 N·m (25 in. lbs.) torque.

(4) Install air duct at throttle body.

DUTY CYCLE EVAP CANISTER PURGE SOLENOID

Refer to Group 25, Emission Control System for removal/installation procedures.

POWERTRAIN CONTROL MODULE (PCM)

The PCM is located in the engine compartment (Fig. 45).

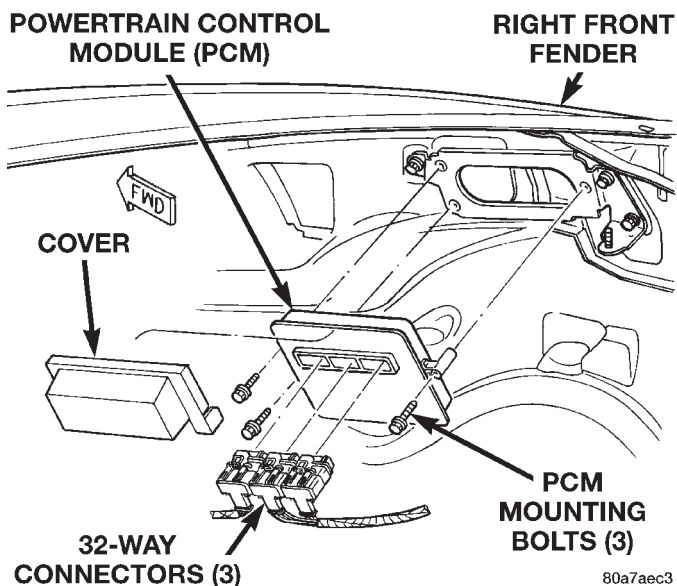


Fig. 45 PCM Location and Mounting

REMOVAL

To avoid possible voltage spike damage to the PCM, ignition key must be off, and negative battery cable must be disconnected before unplugging PCM connectors.

- (1) Disconnect negative battery cable at battery.
- (2) Remove cover over electrical connectors. Cover snaps onto PCM.
- (3) Carefully unplug the three 32-way connectors from PCM.
- (4) Remove three PCM mounting bolts and remove PCM from vehicle.

INSTALLATION

- (1) Install PCM and mounting bolts to vehicle.
- (2) Tighten bolts to 3–5 N·m (30–40 in. lbs.).
- (3) Check pin connectors in the PCM and the three 32-way connectors for corrosion or damage. Repair as necessary.
- (4) Install three 32-way connectors.
- (5) Install cover over electrical connectors. Cover snaps onto PCM.
- (6) Install battery cable.
- (7) Use the DRB scan tool to reprogram new PCM with vehicle's original Identification Number (VIN)

and original vehicle mileage. If this step is not done, a Diagnostic Trouble Code (DTC) may be set.

CRANKSHAFT POSITION SENSOR

Refer to Group 8D, Ignition System for removal/installation procedures.

CAMSHAFT POSITION SENSOR

For removal/installation procedures, refer to Group 8D, Ignition System. See Camshaft Position Sensor.

OXYGEN SENSOR

The upstream O₂S sensor is located on exhaust downpipe (Fig. 46). The downstream sensor is located near outlet end of catalytic converter (Fig. 47).

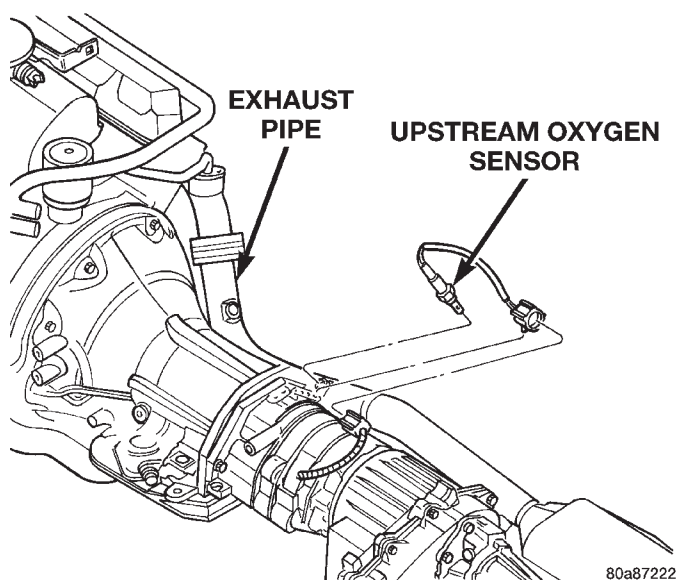


Fig. 46 Upstream Oxygen Sensor Locations

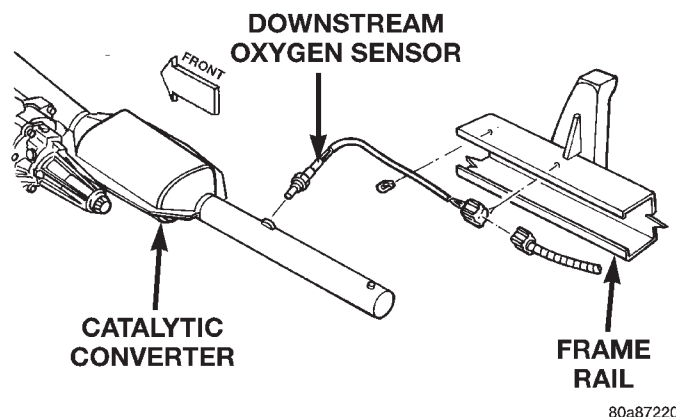


Fig. 47 Downstream Oxygen Sensor Location

REMOVAL AND INSTALLATION (Continued)

REMOVAL

WARNING: THE EXHAUST MANIFOLD, EXHAUST PIPES AND CATALYTIC CONVERTER BECOME VERY HOT DURING ENGINE OPERATION. ALLOW ENGINE TO COOL BEFORE REMOVING OXYGEN SENSOR.

- (1) Raise and support the vehicle.
- (2) Disconnect the wire connector from the O2S sensor.

CAUTION: When disconnecting the sensor electrical connector, do not pull directly on wire going into sensor.

- (3) Remove the O2S sensor. Snap-On oxygen sensor wrench (number YA 8875) may be used for removal and installation.

INSTALLATION

Threads of new oxygen sensors are factory coated with anti-seize compound to aid in removal. **DO NOT add any additional anti-seize compound to the threads of a new oxygen sensor.**

- (1) Install the O2S sensor. Tighten to 30 N·m (22 ft. lbs.) torque.
- (2) Connect the O2S sensor wire connector.
- (3) Lower the vehicle.

AIR CLEANER ELEMENT (FILTER)

REMOVAL

Housing removal is not necessary for element (filter) replacement.


- (1) Pry up spring clips from housing cover (spring clips retain cover to housing).
- (2) Release housing cover from locating tabs on housing and remove cover.
- (3) Remove air cleaner element (filter) from housing.
- (4) Clean inside of housing before replacing element.

INSTALLATION

- (1) Install element into housing.
- (2) Position housing cover into housing locating tabs.
- (3) Pry up spring clips and lock cover to housing.

ENGINE COOLANT TEMPERATURE SENSOR—3.9/5.2/5.9L ENGINES

The engine coolant temperature sensor is installed into a water jacket at front of intake manifold near rear of generator (Fig. 49).

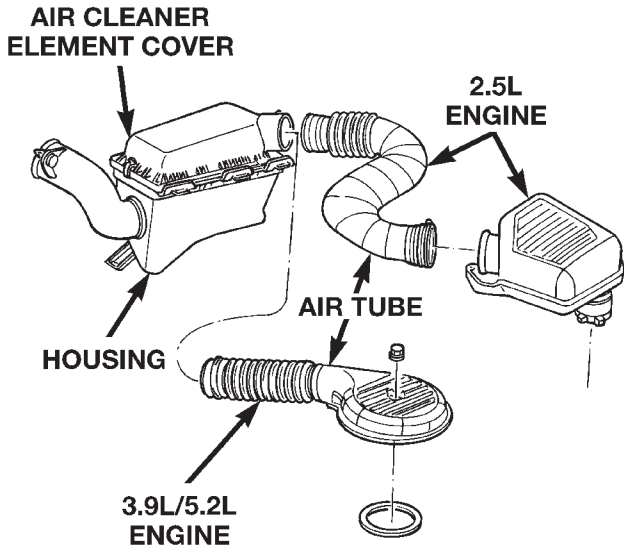

80a87224

Fig. 48 Air Cleaner Housing Assembly

REMOVAL

WARNING: HOT, PRESSURIZED COOLANT CAN CAUSE INJURY BY SCALDING. COOLING SYSTEM MUST BE PARTIALLY DRAINED BEFORE REMOVING THE COOLANT TEMPERATURE SENSOR. REFER TO GROUP 7, COOLING.

- (1) Partially drain cooling system. Refer to Group 7, Cooling.
- (2) Disconnect electrical connector from sensor (Fig. 49).
- (3) **Engines with air conditioning:** When removing the connector from sensor, do not pull directly on wiring harness. Fabricate an L-shaped hook tool from a coat hanger (approximately eight inches long). Place the hook part of tool under the connector for removal. The connector is snapped onto the sensor. It is not equipped with a lock type tab.
- (4) Remove sensor from intake manifold.


INSTALLATION

- (1) Install sensor.
- (2) Tighten to 11 N·m (8 ft. lbs.) torque.
- (3) Use long needlenose pliers to connect electrical connector to sensor. The sensor connector is symmetrical (not indexed). It can be installed to the sensor in either direction.
- (4) Replace any lost engine coolant. Refer to Group 7, Cooling System.

INTAKE MANIFOLD AIR TEMPERATURE SENSOR—3.9/5.2/5.9L ENGINES

The intake manifold air temperature sensor is located in the front/side of the intake manifold (Fig. 50).

REMOVAL AND INSTALLATION (Continued)

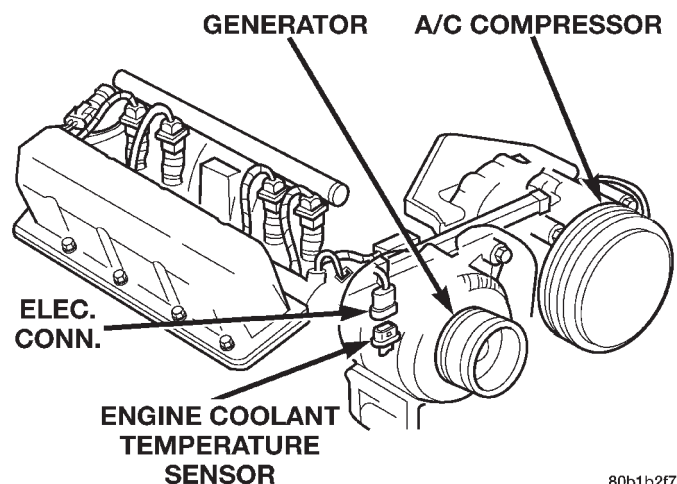


80b1b2f7

Fig. 49 Engine Coolant Temperature Sensor—3.9/5.2/5.9L Engines—Typical

REMOVAL

- (1) Remove air duct at throttle body.
- (2) Disconnect electrical connector at sensor (Fig. 50).
- (3) Remove sensor from intake manifold.

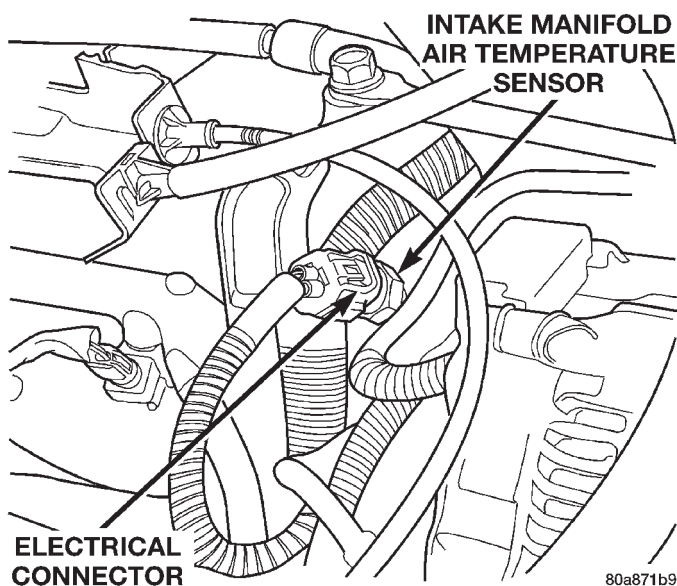

80a871b9

Fig. 50 Intake Manifold Air Temperature Sensor—3.9/5.2/5.9L Engines—Typical

INSTALLATION

- (1) Install sensor to intake manifold. Tighten to 28 N·m (20 ft. lbs.) torque.
- (2) Install electrical connector.
- (3) Install air duct at throttle body.

SPECIFICATIONS

VECI LABEL


If anything differs between the specifications found on the Vehicle Emission Control Information (VECI) label and the following specifications, use specifications on VECI label. The VECI label is located in the engine compartment.

TORQUE CHART


| DESCRIPTION | TORQUE |
|---|--------------------------|
| Engine Coolant Temperature Sensor— | |
| All Engines | 11 N·m (96 in. lbs.) |
| IAC Motor-To-Throttle | |
| Body Bolts | 7 N·m (60 in. lbs.) |
| Intake Manifold Air Temp. Sensor— | |
| All Engines | 28 N·m (20 ft. lbs.) |
| MAP Sensor Mounting Screws— | |
| All Engines | 3 N·m (25 in. lbs.) |
| Oxygen Sensor—All Engines . . . | 30 N·m (22 ft. lbs.) |
| Powertrain Control Module | |
| Mounting Screws | 3–5 N·m (30–40 in. lbs.) |
| Throttle Body Mounting Bolts | 23 N·m (200 in. lbs.) |
| Throttle Position Sensor Mounting Screws— | |
| All Engines | 7 N·m (60 in. lbs.) |

SPECIAL TOOLS


FUEL SYSTEM

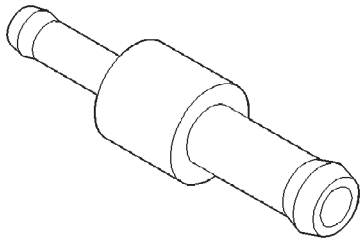


Fitting, Air Metering—6714

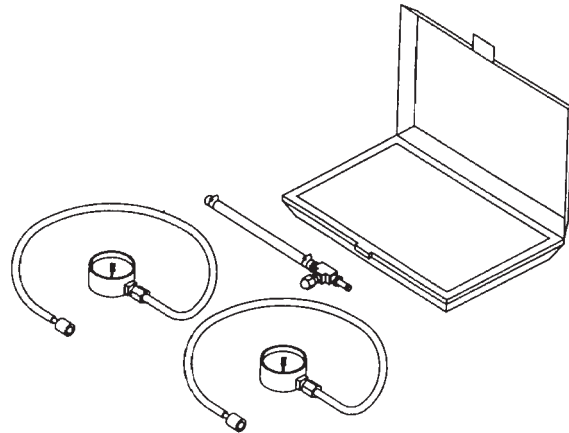

Test Kit, Fuel Pressure—5069

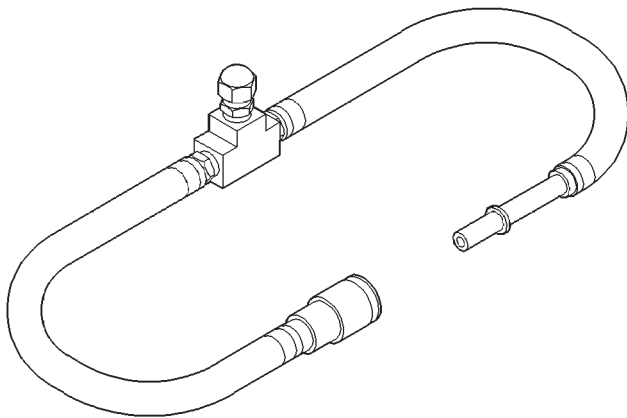

Adapters, Fuel Pressure Test—6541, 6539, 6631 or 6923

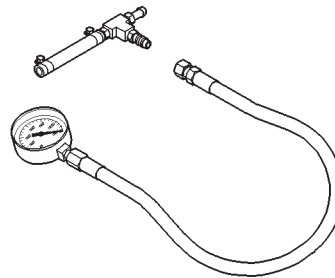

Test Kit, Fuel Pressure—C-4799-B



O2S (Oxygen Sensor) Remover/Installer—C-4907



Fuel Line Removal Tool—6782

