

# DIFFERENTIAL AND DRIVELINE

## CONTENTS

	page		page
181 FBI AXLE .....	16	216 RBA AXLE .....	88
194 RBI AXLE .....	52	PROPELLER SHAFTS .....	1

## PROPELLER SHAFTS

## INDEX

	page		page
<b>GENERAL INFORMATION</b>		<b>REMOVAL AND INSTALLATION</b>	
FRONT PROPELLER SHAFT .....	1	FRONT PROPELLER SHAFT .....	7
LUBRICATION .....	3	REAR PROPELLER SHAFT .....	8
PRECAUTIONS .....	4	<b>DISASSEMBLY AND ASSEMBLY</b>	
PROPELLER SHAFT JOINT ANGLE .....	2	DOUBLE CARDAN JOINT .....	10
PROPELLER SHAFT JOINTS .....	2	SINGLE CARDAN UNIVERSAL JOINT .....	8
PROPELLER SHAFTS .....	1	<b>CLEANING AND INSPECTION</b>	
<b>DIAGNOSIS AND TESTING</b>		SINGLE AND DOUBLE CARDAN JOINT .....	14
RUNOUT .....	5	<b>ADJUSTMENTS</b>	
UNBALANCE .....	4	AXLE PINION ANGLE ADJUSTMENT .....	14
VIBRATION .....	4	FRONT PROPELLER SHAFT MEASUREMENT ..	14
<b>SERVICE PROCEDURES</b>		<b>SPECIFICATIONS</b>	
DRIVELINE ANGLE MEASUREMENT		TORQUE .....	15
PREPARATION .....	6	<b>SPECIAL TOOLS</b>	
PROPELLER SHAFT ANGLE MEASUREMENT ...	6	PROPELLER SHAFT .....	15

## GENERAL INFORMATION

### PROPELLER SHAFTS

The function of a propeller shaft is to transmit power from one point to another in a smooth action. The shaft is designed to send torque through an angle from the transmission (transfer case on 4WD vehicles) to the axle (Fig. 1).

The propeller shaft must operate through constantly changing relative angles between the transmission and axle. It must also be capable of changing length while transmitting torque. The axle rides suspended by springs in a floating motion. This means the propeller shaft must be able to change angles when going over various roads. This is accomplished through universal joints, which permit the propeller shaft to operate at different angles. The slip joints (or yokes) permit contraction or expansion.

Tubular propeller shafts are balanced by the manufacturer with weights spot welded to the tube.

The propeller shaft is designed and built with the yoke lugs in line with each other which is called phasing. This design produces the smoothest running condition. An out of phase shaft can cause a vibration.


**Before undercoating a vehicle, the propeller shaft and the U-joints should be covered. This will prevent the undercoating from causing an out of balance condition and vibration.**

**CAUTION:** Use exact replacement parts for attaching the propeller shafts. This will ensure safe operation. The specified torque must always be applied when tightening the fasteners.

### FRONT PROPELLER SHAFT

There are two front propeller shafts used on ZJ vehicles. Both shafts use a double cardan joint at the transfer case end. The difference between the two

## GENERAL INFORMATION (Continued)

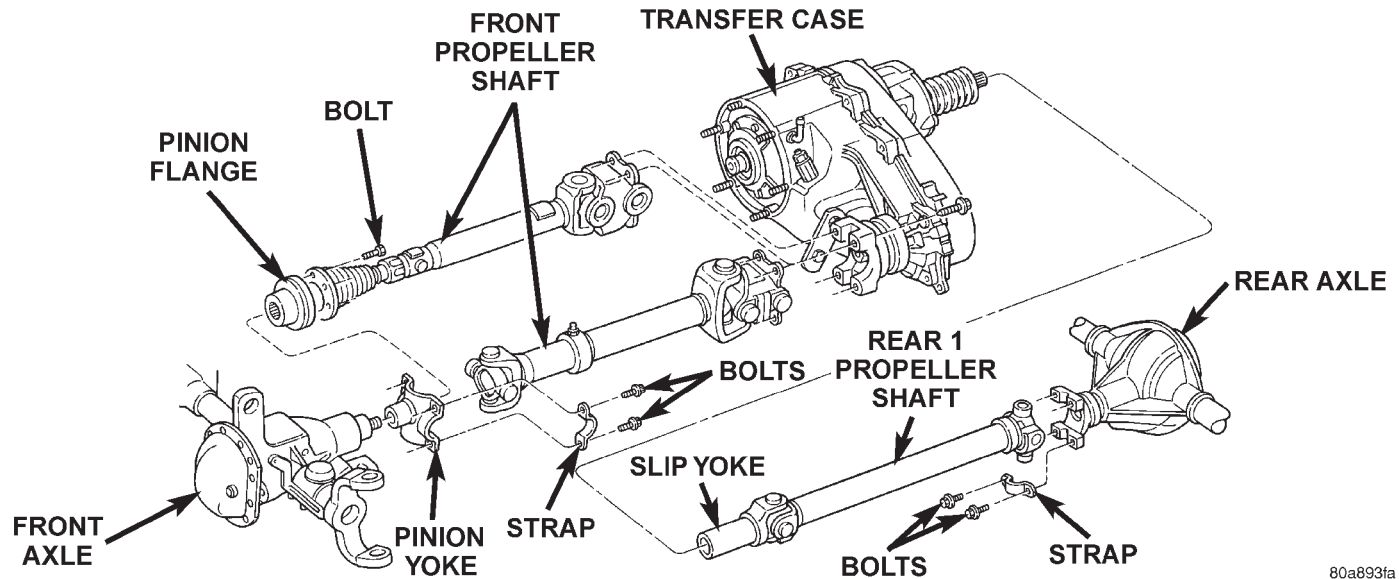

80a893fa

**Fig. 1 Front & Rear Propeller Shafts**

shafts is how they connect to the front axle and how they handle the variation in length required by suspension travel. The one shaft has a Constant Velocity (CV) joint at the axle end of the propeller shaft which contracts and extends as necessary. The CV joint has a splined shaft which allows the overall shaft length to be adjusted for optimum joint travel. This spline shaft is then locked in place with a nut. The second shaft uses a single Cardan universal joint at the axle end and a slip yoke to handle length changes.


**PROPELLER SHAFT JOINTS**

Three different types of propeller shaft joints are used in ZJ vehicles (Fig. 2), (Fig. 3), and (Fig. 4). None of the three joints are serviceable. If worn or damaged, they must be replaced. If a vehicle has a damaged or worn Constant Velocity (CV) joint, or boot, the propeller shaft must be replaced.

**PROPELLER SHAFT JOINT ANGLE**

When two shafts come together at a common joint, the bend that is formed is called the operating angle. The larger the angle, the larger the amount of angular acceleration and deceleration of the joint. This speeding up and slowing down of the joint must be cancelled to produce a smooth power flow. This is done through the phasing of a propeller shaft and ensuring that the proper propeller shaft joint working angles are maintained.

A propeller shaft is properly phased when the yoke ends are in the same plane, or in line. A twisted

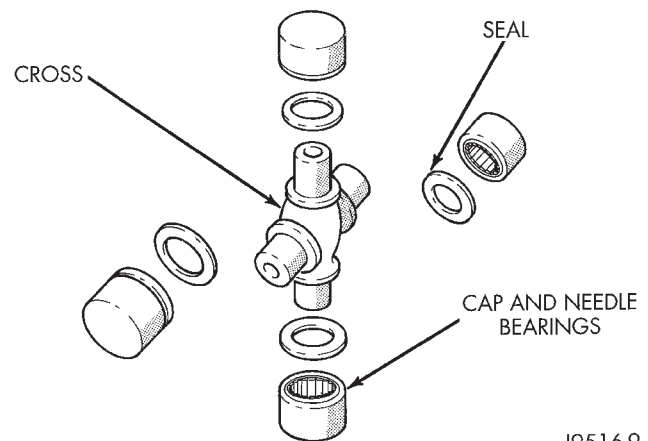

J9516-9

**Fig. 2 Single Cardan U-Joint**


shaft will make the yokes out of phase and cause a noticeable vibration.

When taking propeller shaft joint angle measurements, or checking the phasing, of two piece shafts, consider each shaft separately.

Ideally the driveline system should have;

- Angles that are equal or opposite within 1 degree of each other.
- Have a 3 degree maximum operating angle.
- Have at least a 1/2 degree continuous operating (propeller shaft) angle.


## GENERAL INFORMATION (Continued)

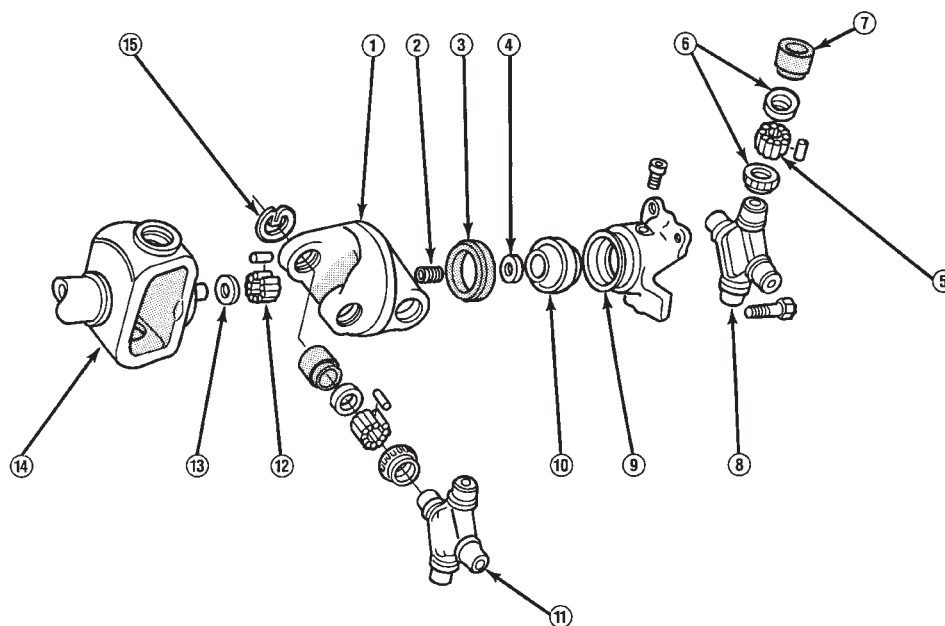

- |                         |                 |                      |
|-------------------------|-----------------|----------------------|
| 1. LINK YOKE            | 6. SEAL         | 11. FRONT SPIDER     |
| 2. SOCKET SPRING        | 7. BEARING CAP  | 12. NEEDLE BEARINGS  |
| 3. SOCKET BALL RETAINER | 8. REAR SPIDER  | 13. THRUST WASHER    |
| 4. THRUST WASHER        | 9. SOCKET YOKE  | 14. DRIVE SHAFT YOKE |
| 5. NEEDLE BEARINGS      | 10. SOCKET BALL | 15. RETAINING CLIP   |

J9216-21

**Fig. 3 Double Cardan U-Joint**

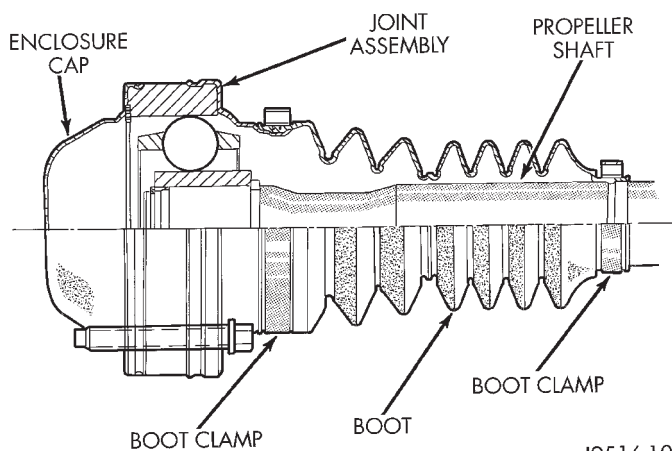

J9516-10

**Fig. 4 Constant Velocity Joint**

Engine speed (rpm) is the main factor in determining the maximum allowable operating angle. As a guide to the maximum normal operating angles refer to (Fig. 5).

## LUBRICATION

The slip yoke on the one style of front propeller shaft is equipped with a lubrication fitting. Use a multi-purpose NLGI Grade 2 EP lubricant. The factory installed universal joints are lubricated for the

PROPELLER SHAFT R.P.M.	MAX. NORMAL OPERATING ANGLES
5000	3°
4500	3°
4000	4°
3500	5°
3000	5°
2500	7°
2000	8°
1500	11°

J9316-4

**Fig. 5 Maximum Angles And Engine Speed**

life of the vehicle and do not need lubrication. All universal joints should be inspected for leakage and damage each time the vehicle is serviced. If seal leakage or damage exists, the universal joint should be replaced.


The Constant Velocity joint should also be inspected each time the vehicle is serviced. The CV joint boot is designed to last the life of the vehicle and to keep the joint lubricated. If grease leakage or boot damage is found, the propeller shaft must be replaced.

## GENERAL INFORMATION (Continued)

## PRECAUTIONS

Use the exact replacement parts when installing the propeller shafts. The use of the correct replacement parts helps to ensure safe operation. All fasteners must be torqued to the specified values for safe operation.

Also make alignment reference marks (Fig. 6) on the propeller shaft yoke and axle, or transmission, yoke prior to servicing. This helps to eliminate possible vibration.

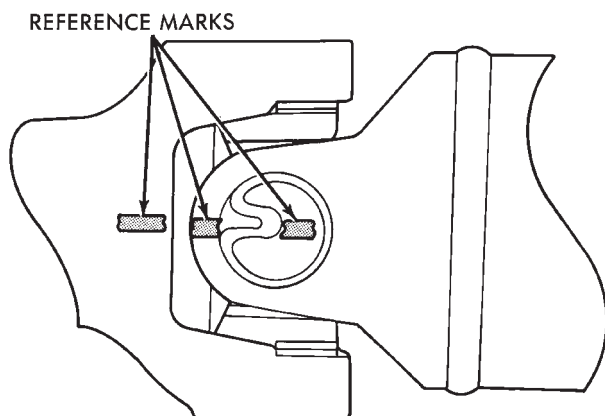

J9316-2

Fig. 6 Reference Marks on Yokes

**CAUTION:** Do not allow the propeller shaft to drop or hang from any propeller shaft joint during removal. Attach the propeller shaft to the vehicle underside with wire to prevent damage to the joints.

**CAUTION:** It is very important to protect the external machined surface of the slip yoke from damage during and after propeller shaft removal. If the yoke is damaged, the transmission extension seal may be damaged and therefore cause a leak.

## DIAGNOSIS AND TESTING

## VIBRATION

Tires that are out-of-round, or wheels that are unbalanced, will cause a low frequency vibration. Refer to Group 22, Tires and Wheels, for additional information.

Brake drums that are unbalanced will cause a harsh, low frequency vibration. Refer to Group 5, Brakes, for additional information.

Driveline vibration can also result from loose or damaged engine mounts. Refer to Group 9, Engines, for additional information.

Propeller shaft vibration increases as the vehicle speed is increased. A vibration that occurs within a specific speed range is not usually caused by a propeller shaft being unbalanced. Defective universal joints, or an incorrect propeller shaft angle, are usually the cause of such a vibration.

## UNBALANCE

**NOTE:** Removing and re-indexing the propeller shaft 180° relative to the yoke may eliminate some vibrations.

## DRIVELINE VIBRATION

Drive Condition	Possible Cause	Correction
<b>PROPELLER SHAFT</b>	<ul style="list-style-type: none"> <li>a. Undercoating or other foreign material on shaft.</li> <li>b. Loose U-joint clamp screws.</li> <li>c. Loose or bent U-joint yoke or excessive runout.</li> <li>d. Incorrect drive line angularity.</li> <li>e. Rear spring center bolt not in seat.</li> <li>f. Worn U-joint bearings.</li> <li>g. Propeller shaft damaged (bent tube) or out of balance.</li> <li>h. Broken rear spring.</li> <li>i. Excessive runout or unbalanced condition.</li> <li>j. Excessive drive pinion gear shaft yoke runout.</li> </ul>	<ul style="list-style-type: none"> <li>a. Clean exterior of shaft and wash with solvent.</li> <li>b. Tighten screws properly.</li> <li>c. Install replacement yoke.</li> <li>d. Correct angularity</li> <li>e. Loosen spring U-bolts and seat center bolts.</li> <li>f. Replace U-joint.</li> <li>g. Install replacement propeller shaft.</li> <li>h. Replace rear spring.</li> <li>i. Reindex propeller shaft 180°, test and correct as necessary.</li> <li>j. Reindex propeller shaft 180° and evaluate.</li> </ul>
<b>UNIVERSAL JOINT NOISE</b>	<ul style="list-style-type: none"> <li>a. U-joint clamp screws loose.</li> <li>b. Lack of lubrication.</li> </ul>	<ul style="list-style-type: none"> <li>a. Tighten screws with specified torque.</li> <li>b. Replace U-joint.</li> </ul>


J9216-7



## DIAGNOSIS AND TESTING (Continued)

If propeller shaft is suspected of being unbalanced, it can be verified with the following procedure:

- (1) Raise the vehicle.
- (2) Clean all the foreign material from the propeller shaft and the universal joints.
- (3) Inspect the propeller shaft for missing balance weights, broken welds, and bent areas. **If the propeller shaft is bent, it must be replaced.**
- (4) Inspect the universal joints to ensure that they are not worn, are properly installed, and are correctly aligned with the shaft.
- (5) Check the universal joint clamp screws torque.
- (6) Remove the wheels and tires. Install the wheel lug nuts to retain the brake drums or rotors.
- (7) Mark and number the shaft six inches from the yoke end at four positions 90° apart.
- (8) Run and accelerate the vehicle until vibration occurs. Note the intensity and speed the vibration occurred. Stop the engine.
- (9) Install a screw clamp at position 1 (Fig. 7).

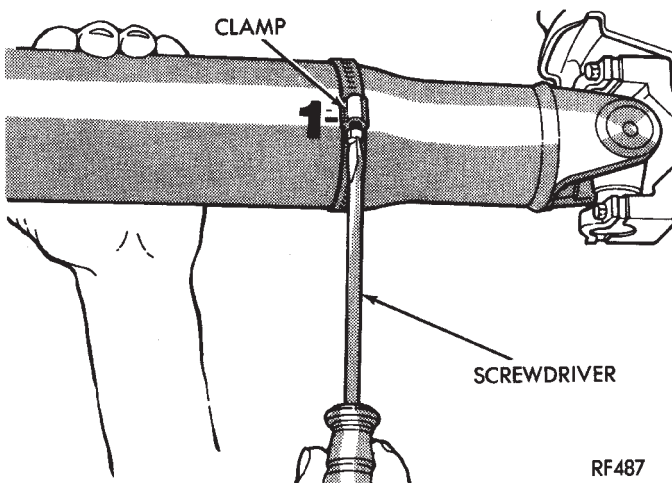

**Fig. 7 Clamp Screw At Position 1**

(10) Start the engine and re-check for vibration. If there is little or no change in vibration, move the clamp to one of the other three positions. Repeat the vibration test.

(11) If there is no difference in vibration at the other positions, the source of the vibration may not be propeller shaft.


(12) If the vibration decreased, install a second clamp (Fig. 8) and repeat the test.

(13) If the additional clamp causes an additional vibration, separate the clamps (1/4 inch above and below the mark). Repeat the vibration test (Fig. 9).


(14) Increase distance between the clamp screws and repeat the test until the amount of vibration is at the lowest level. Bend the slack end of the clamps so the screws will not loosen.

(15) If the vibration remains unacceptable, apply the same steps to the front end of the propeller shaft.

(16) Install the wheel and tires. Lower the vehicle.

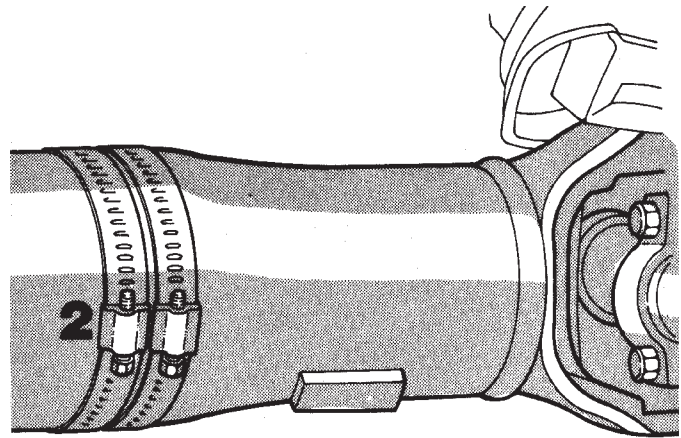

**Fig. 8 Two Clamp Screws At The Same Position**

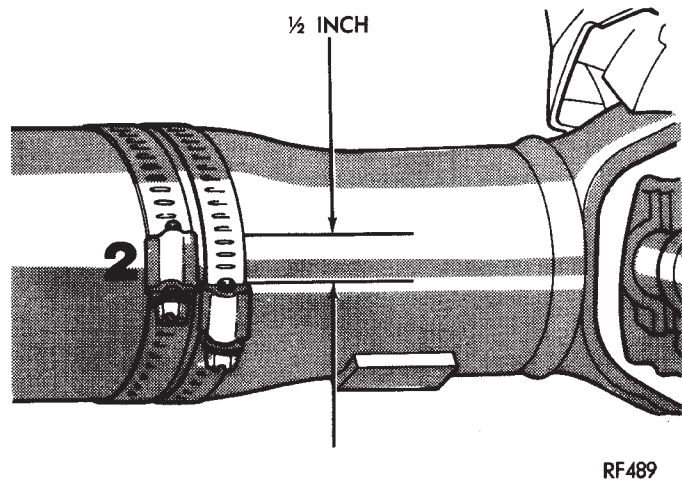

**Fig. 9 Clamp Screws Separated**

### RUNOUT

(1) Remove dirt, rust, paint, and undercoating from the propeller shaft surface where the dial indicator will contact the shaft.

(2) The dial indicator must be installed perpendicular to the shaft surface.

(3) Measure runout at the center and ends of the shaft sufficiently far away from weld areas to ensure that the effects of the weld process will not enter into the measurements.

(4) Refer to Runout Specifications chart.

(5) If the propeller shaft run-out is out of specification, remove the propeller shaft, index the shaft 180°, and re-install the propeller shaft. Measure shaft runout again.

(6) If the propeller shaft runout is now within specifications, mark the shaft and yokes for proper orientation.

(7) If the propeller shaft runout is not within specifications, verify that the runout of the transmission/transfer case and axle are within specifications.

## DIAGNOSIS AND TESTING (Continued)

Correct as necessary and re-measure propeller shaft runout.

(8) Replace the propeller shaft if the runout still exceeds the limits.

## RUNOUT SPECIFICATIONS

Front of shaft . . . . .	0.010 in. (0.25 mm)
Center of shaft . . . . .	0.015 in. (0.38 mm)
Rear of shaft . . . . .	0.010 in. (0.25 mm)

NOTE: Measure front/rear runout approximately 3 inches (76 mm) from the weld seam at each end of the shaft tube for tube lengths over 30 inches. Under 30 inches the max. runout is 0.20 inch for full length of the tube.

J9116-15

## SERVICE PROCEDURES

## DRIVELINE ANGLE MEASUREMENT PREPARATION

Before measuring universal joint angles, the following must be done;

- Inflate all tires to correct pressure.
- Check the angles in the same loaded or unloaded condition as when the vibration occurred. Propeller shaft angles change according to the amount of load in the vehicle.
- Check the condition of all suspension components and verify all fasteners are torqued to specifications.
- Check the condition of the engine and transmission mounts and verify all fasteners are torqued to specifications.

## PROPELLER SHAFT ANGLE MEASUREMENT

To accurately check driveline alignment, raise and support the vehicle at the axles as level as possible. Allow the wheels and propeller shaft to turn. Remove any external bearing snap rings, if equipped, from universal joint so that the inclinometer base sits flat.

The same basic procedure applies to both styles of front propeller shafts and the rear propeller shaft. To obtain the front (output) angle on the CV style front propeller shaft, the inclinometer is placed on the machined ring of the pinion flange. To obtain the propeller shaft angle measurement on the CV style front propeller shaft, the inclinometer is placed on the propeller shaft tube.


(1) Rotate the shaft until transmission/transfer case output yoke bearing cap is facing downward, if necessary.

**Always make measurements from front to rear.**

(2) Place Inclinometer on yoke bearing cap, or the pinion flange ring, (A) parallel to the shaft (Fig. 10).

Center bubble in sight glass and record measurement.

**This measurement will give you the transmission or Output Yoke Angle (A).**

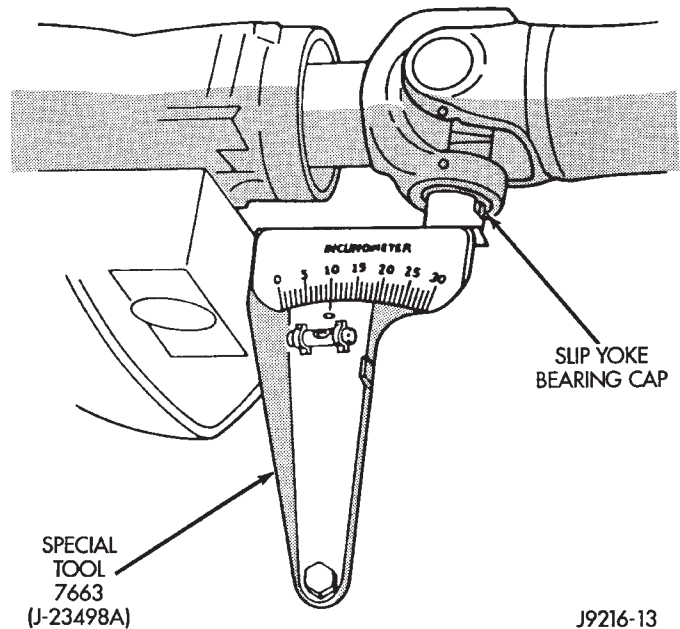


J9216-13

**Fig. 10 Front (Output) Angle Measurement (A)**

(3) Rotate propeller shaft 90 degrees and place Inclinometer on yoke bearing cap, or propeller shaft tube on CV style propeller shaft, parallel to the shaft (Fig. 11). Center bubble in sight glass and record measurement. This measurement can also be taken at the rear end of the shaft.

**This measurement will give you the propeller shaft angle (C).**

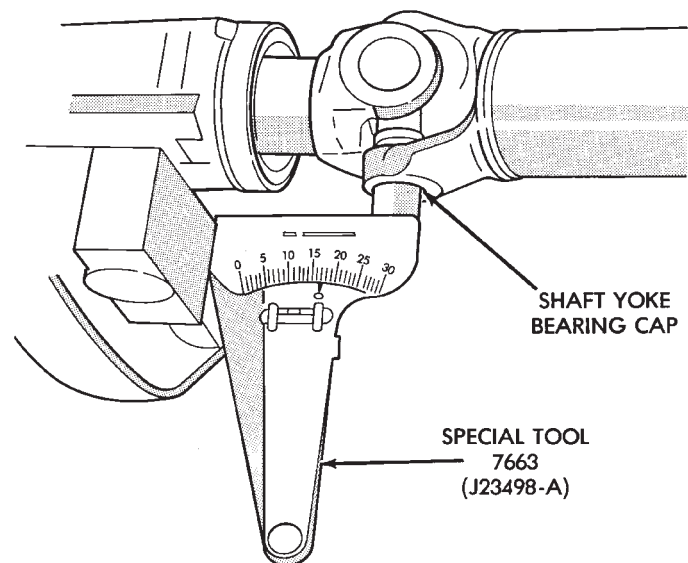

J9216-9

**Fig. 11 Propeller Shaft Angle Measurement (C)**

## SERVICE PROCEDURES (Continued)

(4) Subtract smaller figure from larger (C minus A) to obtain transmission output operating angle.


(5) Rotate propeller shaft 90 degrees and place Inclinator on pinion yoke bearing cap parallel to the shaft (Fig. 12). Center bubble in sight glass and record measurement.

**This measurement will give you the pinion shaft or input yoke angle (B).**

(6) Subtract smaller figure from larger (C minus B) to obtain axle Input Operating Angle.

Refer to rules given below and the example in (Fig. 13) for additional information.

- Good cancellation of U-joint operating angles (within 1°).
- Operating angles less than 3°.
- At least 1/2 of one degree continuous operating (propeller shaft) angle.

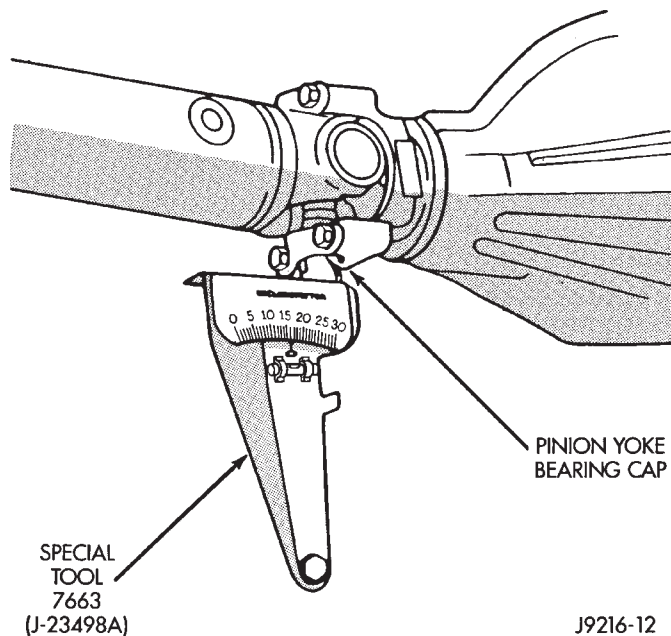

J9216-12

**Fig. 12 Rear (Input) Angle Measurement (B)**


## REMOVAL AND INSTALLATION

### FRONT PROPELLER SHAFT

**NOTE:** If front propeller shaft must be replaced, the new shaft length must be measured and adjusted before the vehicle is returned to use.

#### REMOVAL

- (1) Raise and support vehicle on safety stands.
- (2) Shift the transmission and transfer case, if necessary, into the Neutral position.
- (3) Using a suitable marker, mark a line across the yoke at the transfer case, the link yoke, and pro-

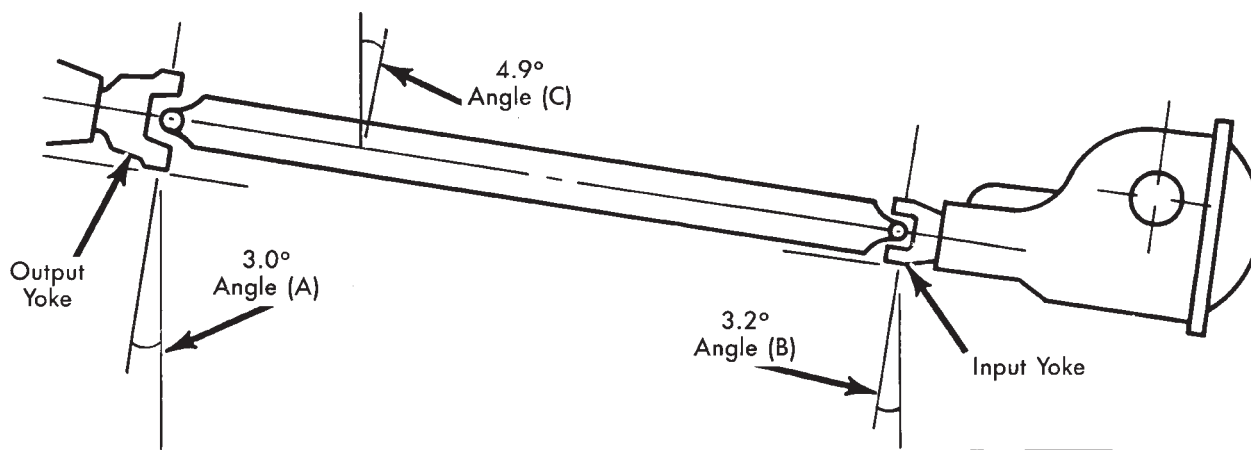

Horizontal Level

(A) Output Yoke = 3.0°  
(C) Prop. Shaft = 4.9°

Transmission Output  
Operating Angle 1.9°

(B) Axle Input Yoke = 3.2°  
(C) Prop. Shaft = 4.9°

Axle Input  
Operating Angle 1.7°

Trans. Output Operating Angle 1.9°  
Axle Input Operating Angle -1.7°

Amount of U-Joint Cancellation 0.2°

J9316-3

**Fig. 13 Universal Joint Angle Example**



## REMOVAL AND INSTALLATION (Continued)

propeller shaft yoke at the rear of the front propeller shaft for installation reference.

(4) Mark a line across the propeller shaft yoke, or CV joint, and the pinion shaft yoke, or pinion flange, for installation reference.

**CAUTION:** Do not loosen lock nut on the CV joint style propeller shaft or collapse the front propeller shaft. Driveline vibration can result.

(5) Remove bolts holding the front universal joint, or CV joint, to the pinion yoke, or flange.

(6) Remove bolts holding rear universal joint to the transfer case yoke.

(7) Separate the rear universal joint from the transfer case yoke.

(8) Push rear of propeller shaft upward to clear transfer case yoke.

(9) Separate front universal joint, or CV joint, from front axle.

(10) Separate propeller shaft from vehicle.

## INSTALLATION

(1) Position front propeller shaft under vehicle with rear universal joint over the transfer case yoke.

(2) Place front universal joint, or CV joint, into the axle pinion yoke, or flange. CV joint should rotate freely in the pinion flange.

(3) Align mark on the rear link yoke and universal joint to the mark on the transfer case yoke.

(4) Loosely install bolts to hold universal joint to transfer case yoke.

(5) Align mark on front universal joint, or CV joint, to the mark on the axle pinion yoke, or flange.

(6) Install bolts to hold front universal joint, or CV joint, to axle pinion yoke, or flange. Tighten bolts to 41 N·m (30 ft. lbs.) for the CV style propeller shaft and 19 N·m (14 ft. lbs) for the universal joint style propeller shaft.

(7) Tighten bolts to hold universal joint to transfer case yoke to 27 N·m (20 ft. lbs.).

(8) Lower vehicle and road test to verify repair.

## REAR PROPELLER SHAFT

## REMOVAL


(1) Raise and support vehicle on safety stands.

(2) Shift the transmission and transfer case, if necessary, to their Neutral positions.

(3) Using a suitable marker, mark a line across the axle pinion yoke and the propeller shaft yoke for installation reference.

(4) Remove the bolts holding the universal joint clamps to the pinion yoke.

(5) Slide the slip yoke off of the transmission, or transfer case, output shaft and remove the propeller shaft (Fig. 14).

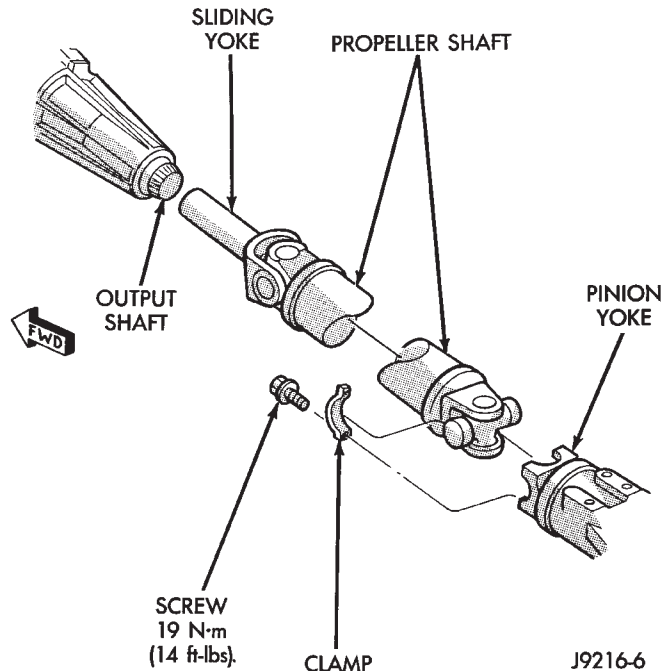

**Fig. 14 Rear Propeller Shaft**

## INSTALLATION

(1) Slide the slip yoke on the transmission, or transfer case, output shaft.

(2) Align the installation reference marks made on the propeller shaft and pinion yoke.

(3) Position universal joint into pinion yoke.

(4) Install the universal joint clamp and clamp bolts to the pinion yoke. Tighten bolts to 19 N·m (14 ft. lbs.).

(5) Lower the vehicle.

## DISASSEMBLY AND ASSEMBLY

## SINGLE CARDAN UNIVERSAL JOINT

## DISASSEMBLY

Individual components of cardan universal joints are not serviceable. If worn or leaking, they must be replaced as an assembly.

(1) Remove the propeller shaft.

(2) Using a soft drift, tap the outside of the bearing cap assembly to loosen snap ring.

(3) Remove snap rings from both sides of yoke (Fig. 15).



(4) Set the yoke in an arbor press or vise with a socket whose inside diameter is large enough to receive the bearing cap positioned beneath the yoke.

(5) Position the yoke with the grease fitting, if equipped, pointing up.

(6) Place a socket with an outside diameter smaller than the upper bearing cap on the upper bearing cap and press the cap through the yoke to release the lower bearing cap (Fig. 16).




## DISASSEMBLY AND ASSEMBLY (Continued)

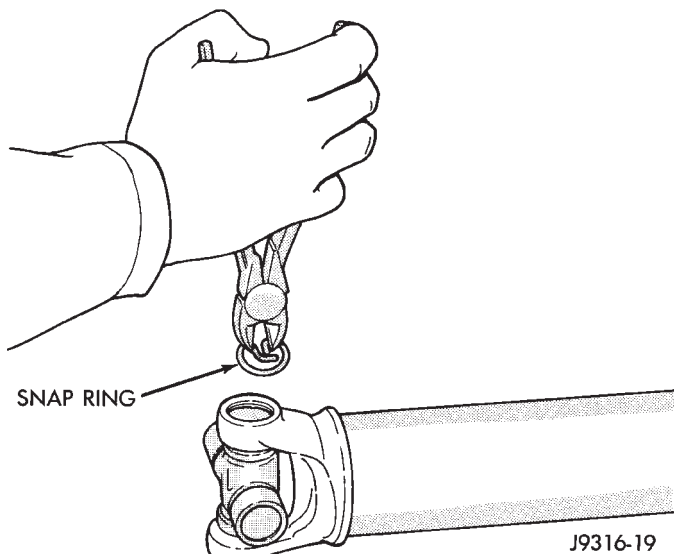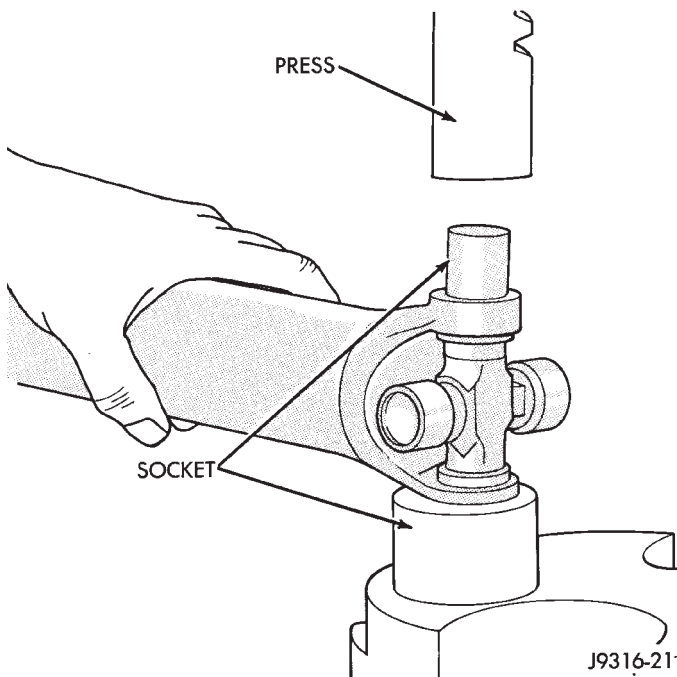**Fig. 15 Remove Snap Ring****Fig. 16 Press Out Bearing**

(7) If the bearing cap will not pull out of the yoke by hand after pressing, tap the yoke ear near the bearing cap to dislodge the cap.


(8) To remove the opposite bearing cap, turn the yoke over and straighten the cross in the open hole. Then, carefully press the end of the cross until the remaining bearing cap can be removed (Fig. 17).

**CAUTION:** If the cross or bearing cap are not straight during installation, the bearing cap will score the walls of the yoke bore and damage can occur.

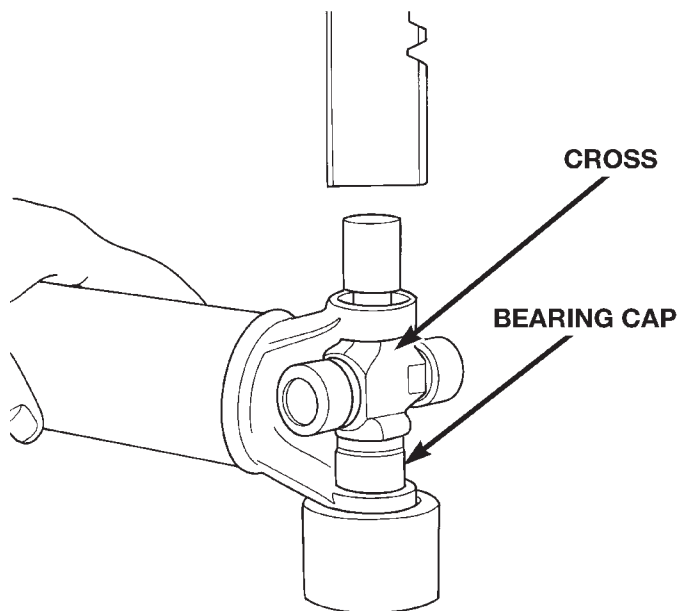**Fig. 17 Press Out Remaining Bearing****ASSEMBLY**


(1) Apply extreme pressure (EP) N.L.G.I. Grade 1 or 2 grease to inside of yoke bores to aid in installation.

(2) Position the cross in the yoke with its lube fitting, if equipped, pointing up (Fig. 18).

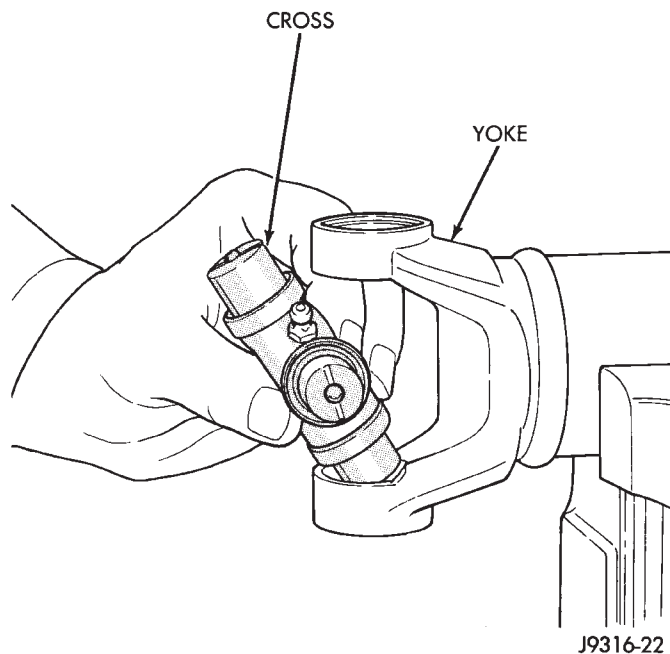**Fig. 18 Install Cross In Yoke**

(3) Place a bearing cap over the trunnion and align the cap with the yoke bore (Fig. 19). Keep the needle bearings upright in the bearing assembly. A

## DISASSEMBLY AND ASSEMBLY (Continued)

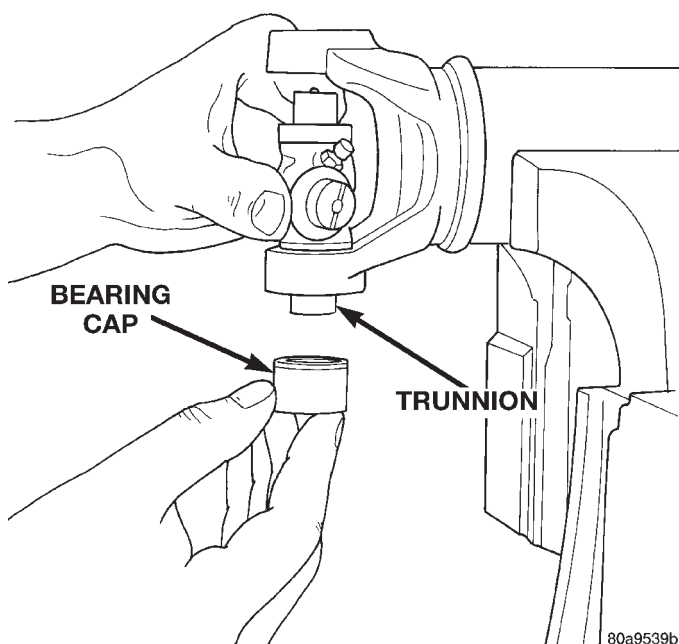**Fig. 19 Install Bearing On Trunnion**

needle bearing lying at the bottom of the cap will prevent proper assembly.

(4) Press the bearing cap into the yoke bore enough to install a snap ring.

(5) Install a snap ring.

(6) Repeat Step 3 and Step 4 to install the opposite bearing cap. If the joint is stiff or binding, strike the yoke with a soft hammer to seat the needle bearings.

(7) Add grease to lube fitting, if equipped.

(8) Install the propeller shaft.

**DOUBLE CARDAN JOINT****DISASSEMBLY**

Individual components of cardan universal joints are not serviceable. If worn or leaking, they must be replaced as an assembly.


(1) Remove the propeller shaft.

(2) Using a soft drift, tap the outside of the bearing cap assembly to loosen snap ring.


(3) Remove all the bearing cap snap rings (Fig. 20).

(4) Set the joint in an arbor press or vise with a socket whose inside diameter is large enough to receive the bearing cap positioned beneath the link yoke.

(5) Place a socket with an outside diameter smaller than the upper bearing cap on the upper bearing cap and partially press one bearing cap from the outboard side of the link yoke enough to grasp the bearing cap with vise jaws (Fig. 21). Be sure to remove grease fittings that interfere with removal.

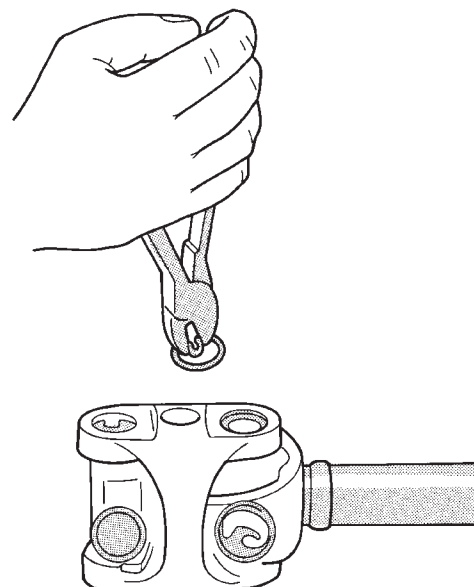

J9316-5

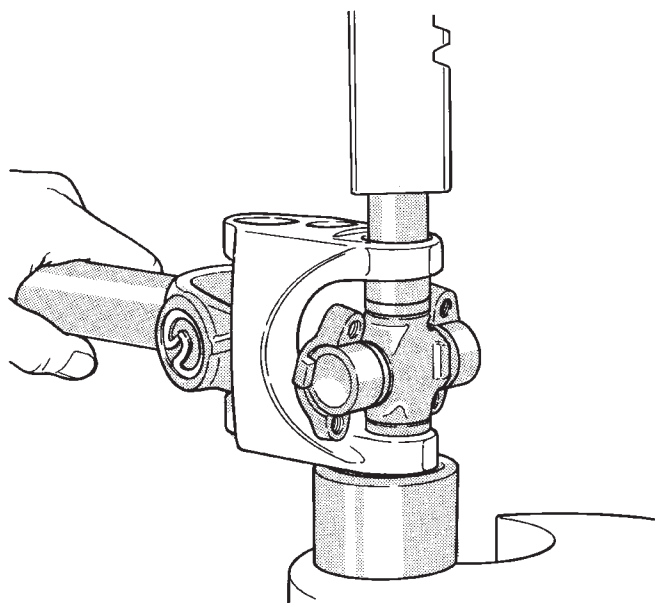**Fig. 20 Remove Snap Rings**

J9316-6


**Fig. 21 Press Out Bearing**

(6) Grasp the protruding bearing by vise jaws. Tap the link yoke with a mallet and drift to dislodge the bearing cap from the yoke (Fig. 22).

(7) Flip assembly and repeat Step 4, Step 5, and Step 6 to remove the opposite bearing cap. This will then allow removal of the cross centering kit assembly and spring (Fig. 23).

(8) Press the remaining bearing caps out the other end of the link yoke as described above to complete the disassembly.

## DISASSEMBLY AND ASSEMBLY (Continued)

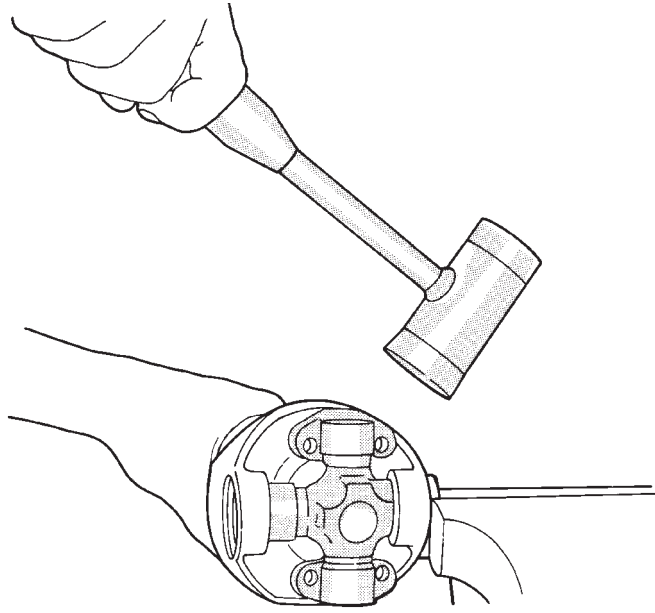


J9316-7


**Fig. 22 Remove Bearing From Yoke**

(2) Fit a cross into the propeller shaft yoke (Fig. 24).

(3) Place a bearing cap over the trunnion and align the cap with the yoke bore (Fig. 25). Keep the needle bearings upright in the bearing assembly. A needle bearing lying at the bottom of the cap will prevent proper assembly.

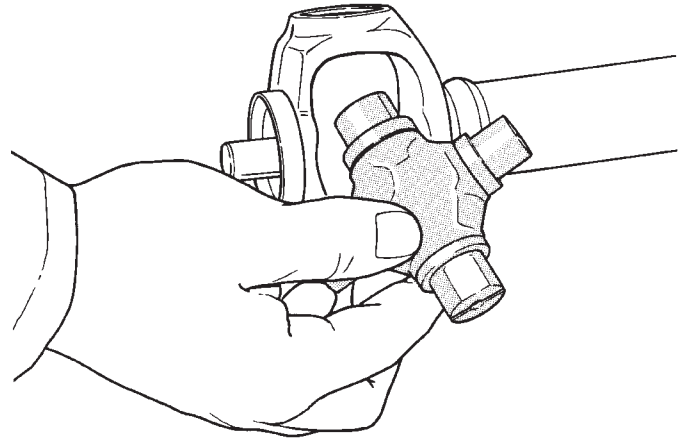

J9316-9

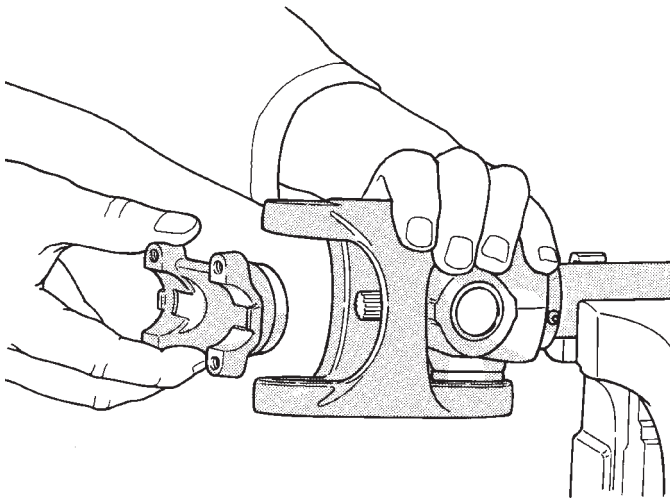**Fig. 24 Install Cross In Yoke**


J9316-8

**Fig. 23 Remove Centering Kit**

## ASSEMBLY

**During assembly, ensure that the alignment marks on the link yoke and propeller shaft yoke are aligned.**

(1) Apply extreme pressure (EP) N.L.G.I. Grade 1 or 2 grease to inside of yoke bores to aid in installation.

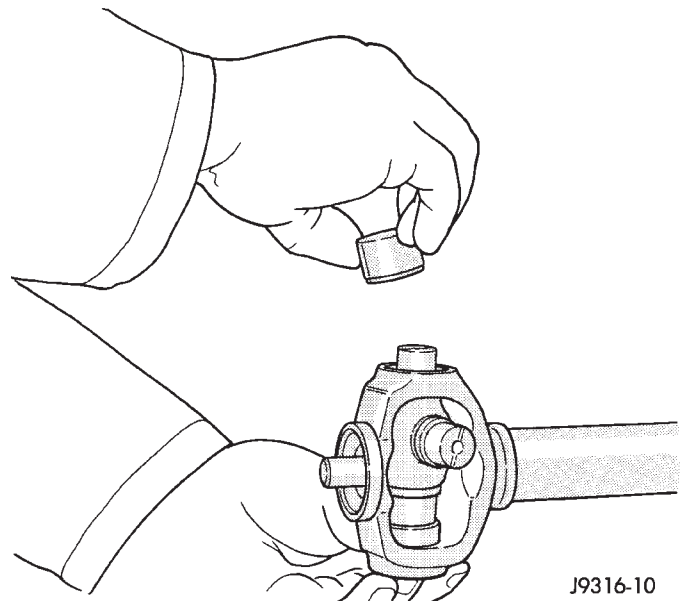


J9316-10

**Fig. 25 Install Bearing Cap**

## DISASSEMBLY AND ASSEMBLY (Continued)


(4) Press the bearing cap into the yoke bore enough to install a snap ring (Fig. 26).

(5) Install a snap ring.

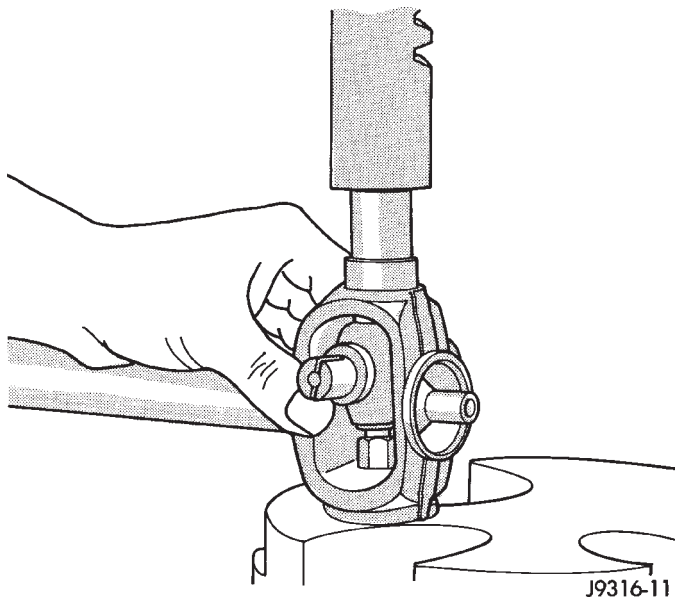

**Fig. 26 Press In Bearing Cap**


(6) Flip the propeller shaft yoke and install the bearing cap onto the opposite trunnion. Install a snap ring (Fig. 27).

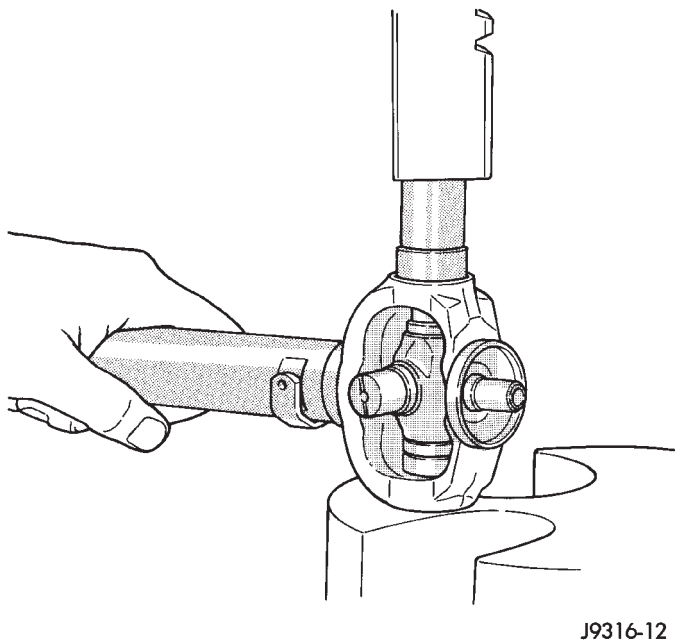

**Fig. 27 Press In Bearing Cap**


(7) Fit the link yoke on the remaining two trunnions and press both bearing caps into place (Fig. 28).

(8) Install snap rings.

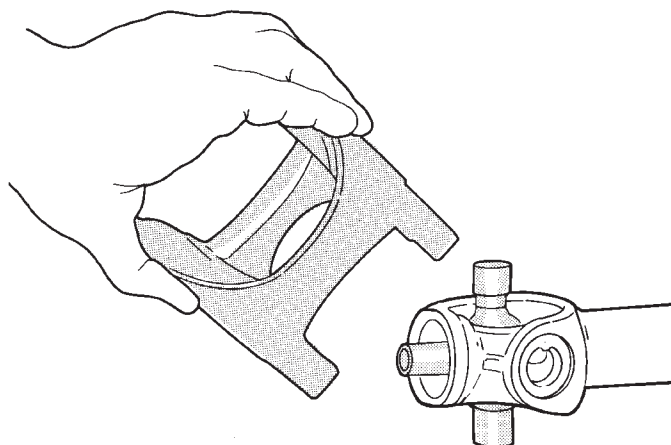

**Fig. 28 Install Link Yoke**

(9) Install the centering kit assembly inside the link yoke making sure the spring is properly positioned (Fig. 29).

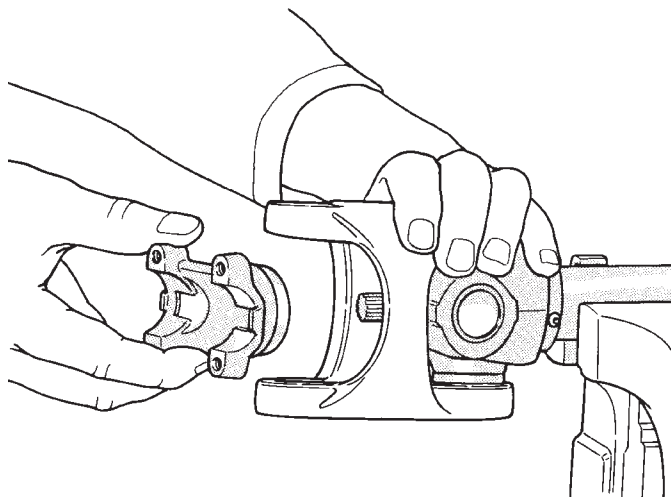


**Fig. 29 Install Centering Kit**



## DISASSEMBLY AND ASSEMBLY (Continued)


(10) Place two bearing caps on opposite trunnions of the remaining cross. Fit the open trunnions into the link yoke bores and the bearing caps into the centering kit (Fig. 30).

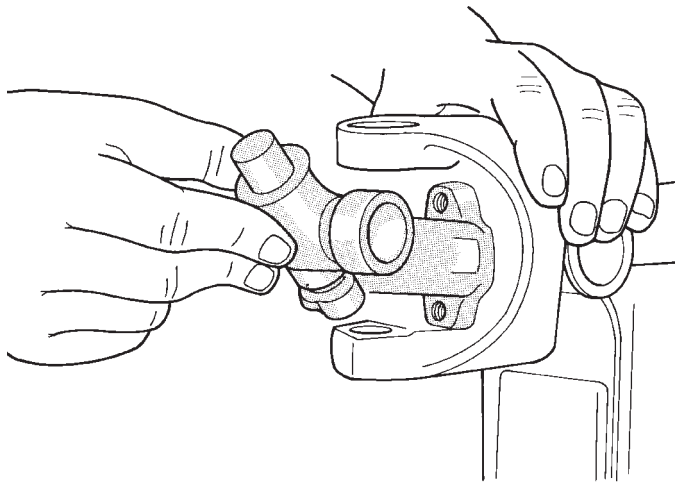

J9316-15

**Fig. 30 Install Remaining Cross**

(11) Press the remaining two bearing caps into place and install snap rings (Fig. 31).

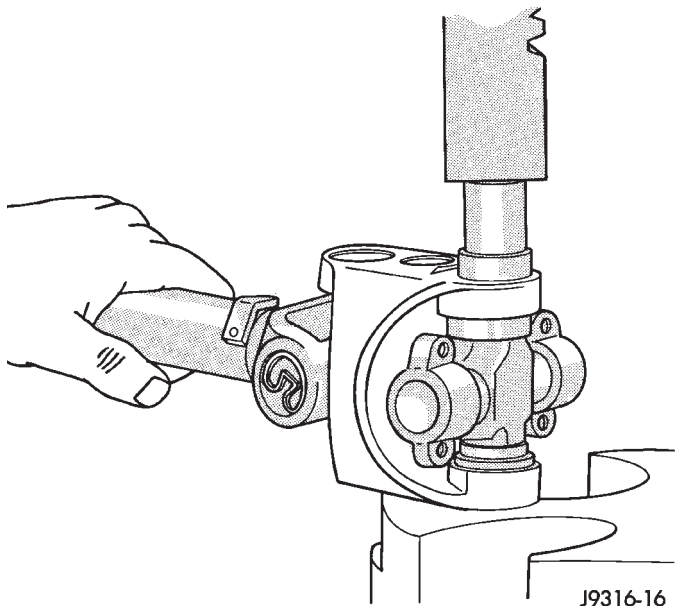


J9316-16

**Fig. 31 Press In Bearing Cap**

(12) Tap the snap rings to allow them to seat into the grooves (Fig. 32).


(13) Check for proper assembly. Flex the joint beyond center, it should snap over-center in both directions when correctly assembled (Fig. 33).

(14) Install the propeller shaft.

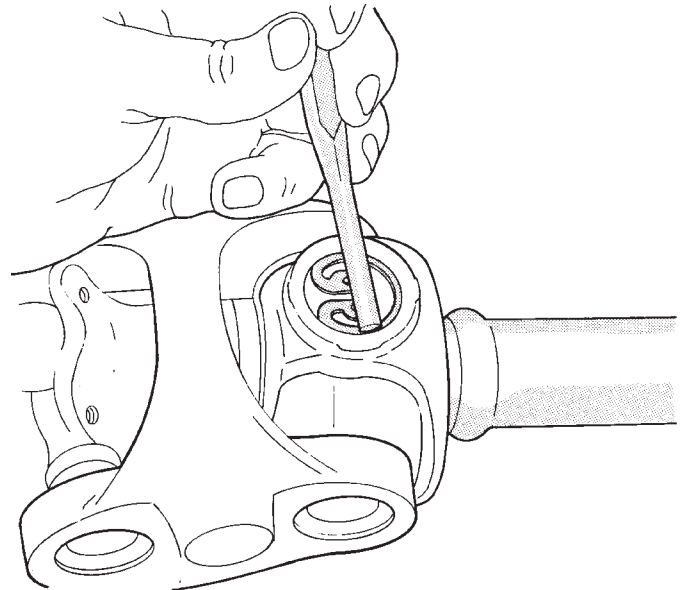

J9316-17

**Fig. 32 Seat Snap Rings In Groove**

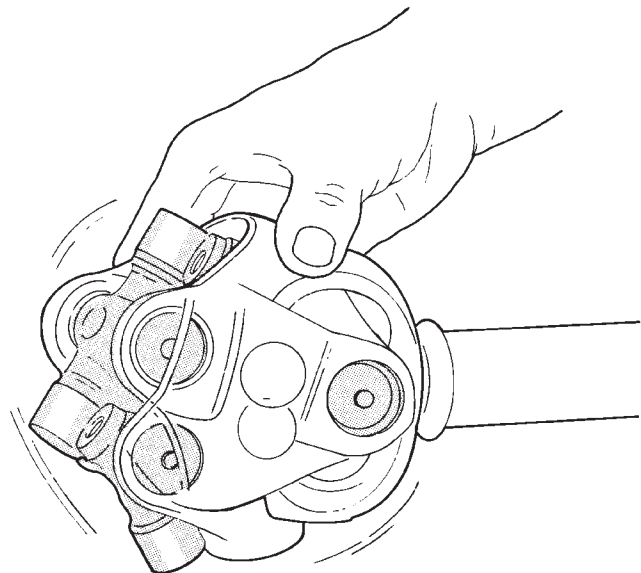

J9316-18

**Fig. 33 Check Assembly**

## CLEANING AND INSPECTION

### SINGLE AND DOUBLE CARDAN JOINT

(1) Clean all the universal joint yoke bores with cleaning solvent and a wire brush.

(2) Inspect the yokes for distortion, cracks, and worn bearing cap bores.

## ADJUSTMENTS


### FRONT PROPELLER SHAFT MEASUREMENT

**NOTE:** A propeller shaft that has been in use for a long period of time cannot be adjusted. If the length of the propeller is incorrect and causing vibration, replace the propeller shaft.

This measurement is only necessary for the CV style propeller shaft and is to be taken with the shaft installed and the vehicle at proper ride height.

(1) Place vehicle on floor or drive-on hoist with full weight of vehicle on suspension.


(2) Measure the distance from the face of the CV joint cup to the end of the CV joint boot (Fig. 34).

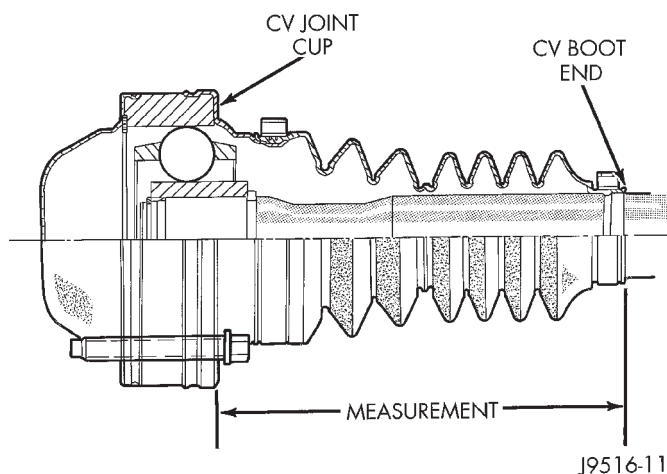

**Fig. 34 Measurement**

(3) Loosen the lock nut and adjust the distance by moving the end of the shaft in or out of the other end.

(4) When the shaft is adjusted to the correct length of 142.7 mm (5.61 in.), tighten the lock-nut (Fig. 35) to 115 N·m (85 ft. lbs.).

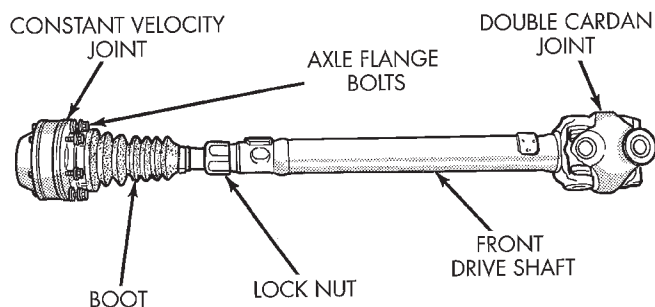


**Fig. 35 Lock-nut**

### AXLE PINION ANGLE ADJUSTMENT

The pinion angle of the front axle can be adjusted by the use of adjustment cams in the lower suspension arms (Fig. 36). The primary function for the cams is to adjust the caster angle for the alignment of the front suspension. When using the cams to adjust the pinion angle, make sure that both cams are moved equally. After the pinion angle is adjusted, the front suspension alignment should be checked to ensure that side-to-side caster angles variance is within the acceptable range. Having the correct pinion angle does have priority over having the preferred caster angle.

A cam kit is available to be installed in the rear axle lower suspension arms in order to provide adjustability of the pinion angle. Follow the procedures supplied with the kit in order to ensure a safe installation.

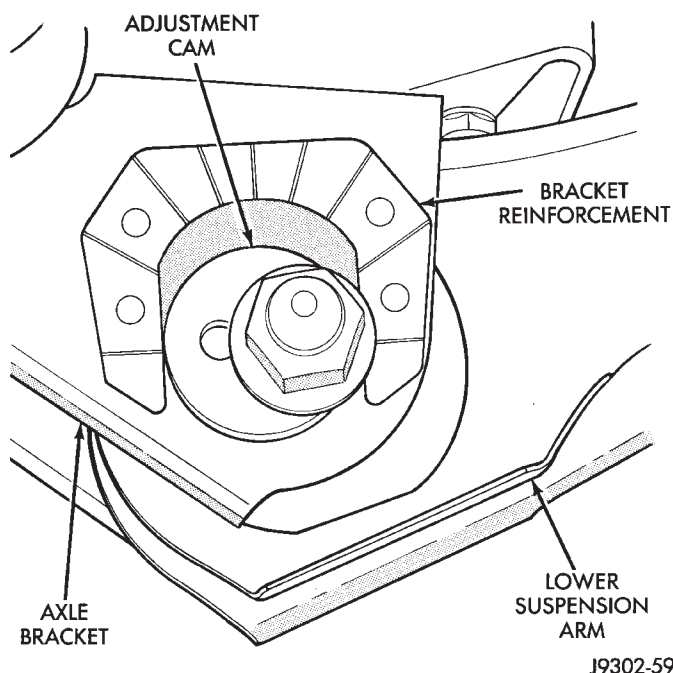

**Fig. 36 Adjustment Cam**


# SPECIFICATIONS

## TORQUE

DESCRIPTION	TORQUE
<b>Front Propeller Shaft</b>	
<b>Bolts, Rear Yoke</b> . . . . .	27 N·m (20 ft. lbs.)
<b>Bolts, Front Yoke</b> . . . . .	41 N·m (30 ft. lbs.)
<b>Nut, Lock</b> . . . . .	115 N·m (85 ft. lbs.)
<b>Rear Propeller Shaft</b>	
<b>Bolts, Rear Yoke</b> . . . . .	19 N·m (14 ft. lbs.)

# SPECIAL TOOLS

## PROPELLER SHAFT

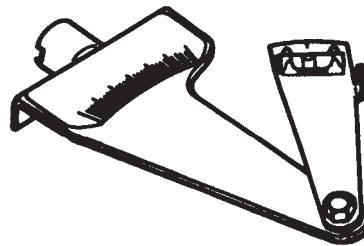

*Inclinometer—7663*

## 181 FBI AXLE

## INDEX

	page		page
<b>GENERAL INFORMATION</b>		<b>DIFFERENTIAL</b> . . . . .	31
181 FBI AXLE . . . . .	16	<b>DRIVE AXLE ASSEMBLY</b> . . . . .	21
LUBRICANT SPECIFICATIONS . . . . .	16	<b>HUB BEARING AND AXLE SHAFT</b> . . . . .	28
<b>DESCRIPTION AND OPERATION</b>		<b>PINION GEAR</b> . . . . .	34
STANDARD DIFFERENTIAL . . . . .	17	<b>PINION SHAFT SEAL</b> . . . . .	24
<b>DIAGNOSIS AND TESTING</b>		<b>RING GEAR</b> . . . . .	38
BEARING NOISE . . . . .	18	<b>STEERING KNUCKLE AND BALL STUDS</b> . . . . .	30
DRIVELINE SNAP . . . . .	18	<b>DISASSEMBLY AND ASSEMBLY</b>	
FRONT AXLES . . . . .	19	FINAL ASSEMBLY . . . . .	39
GEAR NOISE . . . . .	17	STANDARD DIFFERENTIAL . . . . .	39
GENERAL INFORMATION . . . . .	17	<b>CLEANING AND INSPECTION</b>	
LOW SPEED KNOCK . . . . .	18	AXLE COMPONENTS . . . . .	40
VIBRATION . . . . .	18	CARDAN U-JOINT . . . . .	40
<b>SERVICE PROCEDURES</b>		<b>ADJUSTMENTS</b>	
LUBRICANT CHANGE . . . . .	21	DIFFERENTIAL BEARING PRELOAD AND	
<b>REMOVAL AND INSTALLATION</b>		GEAR BACKLASH . . . . .	43
AXLE BUSHING REPLACEMENT . . . . .	31	GEAR CONTACT PATTERN ANALYSIS . . . . .	46
AXLE CONSTANT-VELOCITY (C/V) JOINT		PINION GEAR DEPTH . . . . .	40
BOOT . . . . .	23	<b>SPECIFICATIONS</b>	
AXLE SHAFT OIL SEAL . . . . .	34	181 FBI AXLE . . . . .	48
AXLE SHAFT—CARDAN U-JOINT . . . . .	22	181 FBI AXLE . . . . .	48
COLLAPSIBLE SPACER . . . . .	25	<b>SPECIAL TOOLS</b>	
DIFFERENTIAL SIDE BEARINGS . . . . .	33	181 FBI AXLE . . . . .	48

## GENERAL INFORMATION

## 181 FBI AXLE

The 181 Front Beam-design Iron (FBI) axle consists of a cast iron differential housing with axle shaft tubes extending from either side. The tubes are pressed into the differential housing and welded.

The integral type housing, hypoid gear design has the centerline of the pinion set below the centerline of the ring gear.

The axle has a fitting for a vent hose used to relieve internal pressure caused by lubricant vaporization and internal expansion.

The axles are equipped with semi-floating axle shafts, meaning that loads are supported by the hub bearings. The axle shafts are retained by nuts at the hub bearings. The hub bearings are bolted to the steering knuckle at the outboard end of the axle tube yoke. The hub bearings are serviced as an assembly.

For vehicles with ABS brakes, the ABS wheel speed sensors are attached to the knuckle assemblies. The tone rings for the ABS system are pressed onto the axle shaft. **Do not damage ABS tone wheel or the sensor when removing axle shafts.**

The stamped steel cover provides a means for inspection and servicing the differential.

The 181 FBI axle has the assembly part number and gear ratio listed on a tag. The tag is attached to the housing cover by a cover bolt. Build date identification codes are stamped on the cover side of the axle shaft tube.

The differential case is a one-piece design. The differential pinion mate shaft is retained with a roll pin. Differential bearing preload and ring gear backlash is adjusted by the use of shims (select thickness). The shims are located between the differential bearing cones and case. Pinion bearing preload is set and maintained by the use of a collapsible spacer.

## LUBRICANT SPECIFICATIONS

A multi-purpose, hypoid gear lubricant which conforms to the following specifications should be used. Mopar® Hypoid Gear Lubricant conforms to all of these specifications.

- The lubricant should have MIL-L-2105C and API GL 5 quality specifications.
- Lubricant is a thermally stable SAE 80W-90 gear lubricant.



## GENERAL INFORMATION (Continued)

• Lubricant for axles intended for heavy-duty or trailer tow use is SAE 75W-140 SYNTHETIC gear lubricant.

The 181 FBI axle lubricant capacity is 1.2 L (2.5 pts.).

**CAUTION:** If axle is submerged in water, lubricant must be replaced immediately to avoid possible premature axle failure.

## DESCRIPTION AND OPERATION

## STANDARD DIFFERENTIAL


The differential gear system divides the torque between the axle shafts. It allows the axle shafts to rotate at different speeds when turning corners.

Each differential side gear is splined to an axle shaft. The pinion gears are mounted on a pinion mate shaft and are free to rotate on the shaft. The pinion gear is fitted in a bore in the differential case and is positioned at a right angle to the axle shafts.

In operation, power flow occurs as follows:

- The pinion gear rotates the ring gear
- The ring gear (bolted to the differential case) rotates the case
- The differential pinion gears (mounted on the pinion mate shaft in the case) rotate the side gears
- The side gears (splined to the axle shafts) rotate the shafts


During straight-ahead driving, the differential pinion gears do not rotate on the pinion mate shaft. This occurs because input torque applied to the gears is divided and distributed equally between the two side gears. As a result, the pinion gears revolve with the pinion mate shaft but do not rotate around it (Fig. 1).

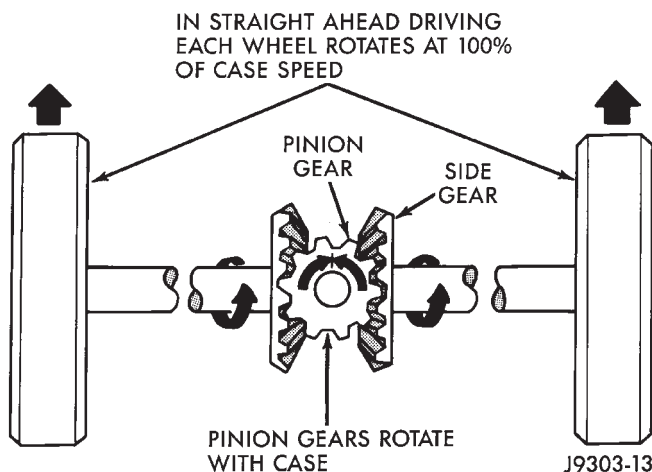

**Fig. 1 Differential Operation—Straight Ahead Driving**

When turning corners, the outside wheel must travel a greater distance than the inside wheel to complete a turn. The difference must be compensated

for to prevent the tires from scuffing and skidding through turns. To accomplish this, the differential allows the axle shafts to turn at unequal speeds (Fig. 2). In this instance, the input torque applied to the pinion gears is not divided equally. The pinion gears now rotate around the pinion mate shaft in opposite directions. This allows the side gear and axle shaft attached to the outside wheel to rotate at a faster speed.

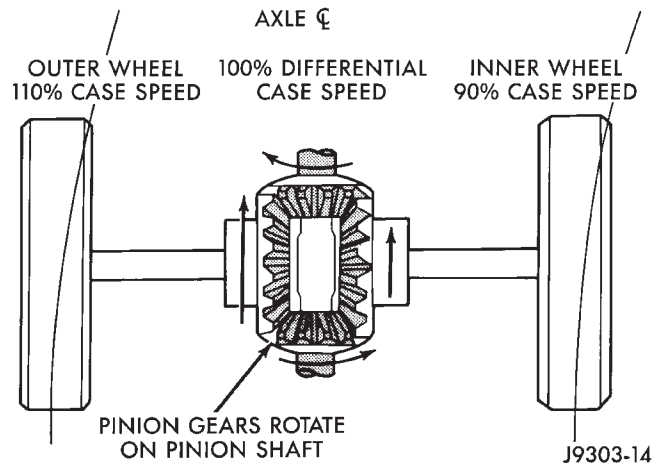

**Fig. 2 Differential Operation—On Turns**

## DIAGNOSIS AND TESTING

## GENERAL INFORMATION

Axle bearing problem conditions are usually caused by:

- Insufficient or incorrect lubricant.
- Foreign matter/water contamination.
- Incorrect bearing preload torque adjustment.
- Incorrect backlash.

Axle gear problem conditions are usually the result of:

- Insufficient lubrication.
- Incorrect or contaminated lubricant.
- Overloading (excessive engine torque) or exceeding vehicle weight capacity.
- Incorrect clearance or backlash adjustment.

Axle component breakage is most often the result of:

- Severe overloading.
- Insufficient lubricant.
- Incorrect lubricant.
- Improperly tightened components.

## GEAR NOISE

Axle gear noise can be caused by insufficient lubricant, incorrect backlash, tooth contact, or worn/damaged gears.

Gear noise usually happens at a specific speed range. The range is 30 to 40 mph, or above 50 mph. The noise can also occur during a specific type of

## DIAGNOSIS AND TESTING (Continued)

driving condition. These conditions are acceleration, deceleration, coast, or constant load.

When road testing, accelerate the vehicle to the speed range where the noise is the greatest. Shift out-of-gear and coast through the peak-noise range. If the noise stops or changes greatly:

- Check for insufficient lubricant.
- Incorrect ring gear backlash.
- Gear damage.

Differential side and pinion gears can be checked by turning the vehicle. They usually do not cause noise during straight-ahead driving when the gears are unloaded. The side gears are loaded during vehicle turns. A worn pinion gear mate shaft can also cause a snapping or a knocking noise.

**BEARING NOISE**

The axle shaft, differential and pinion gear bearings can all produce noise when worn or damaged. Bearing noise can be either a whining, or a growling sound.

Pinion gear bearings have a constant-pitch noise. This noise changes only with vehicle speed. Pinion bearing noise will be higher because it rotates at a faster rate. Drive the vehicle and load the differential. If bearing noise occurs, the rear pinion bearing is the source of the noise. If the bearing noise is heard during a coast, the front pinion bearing is the source.

Worn or damaged differential bearings usually produce a low pitch noise. Differential bearing noise is similar to pinion bearing noise. The pitch of differential bearing noise is also constant and varies only with vehicle speed.

Axle shaft bearings produce noise and vibration when worn or damaged. The noise generally changes when the bearings are loaded. Road test the vehicle. Turn the vehicle sharply to the left and to the right. This will load the bearings and change the noise level. Where axle bearing damage is slight, the noise is usually not noticeable at speeds above 30 mph.

**LOW SPEED KNOCK**

Low speed knock is generally caused by a worn U-joint or by worn side-gear thrust washers. A worn pinion gear shaft bore will also cause low speed knock.

**VIBRATION**

Vibration at the rear of the vehicle is usually caused by a:

- Damaged drive shaft.
- Missing drive shaft balance weight(s).
- Worn or out-of-balance wheels.
- Loose wheel lug nuts.
- Worn U-joint(s).
- Loose/broken springs.
- Damaged axle shaft bearing(s).
- Loose pinion gear nut.
- Excessive pinion yoke run out.
- Bent axle shaft(s).

Check for loose or damaged front-end components or engine/transmission mounts. These components can contribute to what appears to be a rear-end vibration. Do not overlook engine accessories, brackets and drive belts.

All driveline components should be examined before starting any repair.

Refer to Group 22, Wheels and Tires, for additional vibration information.

**DRIVELINE SNAP**

A snap or clunk noise when the vehicle is shifted into gear (or the clutch engaged), can be caused by:

- High engine idle speed
- Loose engine/transmission/transfer case mounts
- Worn U-joints
- Loose spring mounts
- Loose pinion gear nut and yoke
- Excessive ring gear backlash
- Excessive side gear/case clearance

The source of a snap or a clunk noise can be determined with the assistance of a helper. Raise the vehicle on a hoist with the wheels free to rotate. Instruct the helper to shift the transmission into gear. Listen for the noise, a mechanics stethoscope is helpful in isolating the source of a noise.

## DIAGNOSIS AND TESTING (Continued)

## FRONT AXLES

## DIAGNOSIS

CONDITION	POSSIBLE CAUSES	CORRECTION
WHEEL NOISE	<ol style="list-style-type: none"> <li>1. Wheel loose.</li> <li>2. Faulty, brinelled wheel bearing.</li> </ol>	<ol style="list-style-type: none"> <li>1. Tighten loose nuts.</li> <li>2. Faulty or brinelled bearings must be replaced.</li> </ol>
AXLE SHAFT NOISE	<ol style="list-style-type: none"> <li>1. Misaligned axle shaft tube.</li> <li>2. Bent or sprung axle shaft.</li> <li>3. End play in drive pinion bearings.</li> <li>4. Excessive gear backlash between ring gear and pinion gear.</li> <li>5. Improper adjustment of drive pinion gear shaft bearings.</li> <li>6. Loose drive pinion gearshaft yoke nut.</li> <li>7. Improper wheel bearing adjustment.</li> <li>8. Scuffed gear tooth contact surfaces.</li> </ol>	<ol style="list-style-type: none"> <li>1. Inspect axle shaft tube alignment. Correct as necessary.</li> <li>2. Replace bent or sprung axle shaft.</li> <li>3. Refer to Drive Pinion Bearing Pre-Load Adjustment.</li> <li>4. Check adjustment of ring gear backlash and pinion gear. Correct as necessary.</li> <li>5. Adjust drive pinion shaft bearings.</li> <li>6. Tighten drive pinion gearshaft yoke nut with specified torque.</li> <li>7. Readjust as necessary.</li> <li>8. If necessary, replace scuffed gears.</li> </ol>
AXLE SHAFT BROKE	<ol style="list-style-type: none"> <li>1. Misaligned axle shaft tube.</li> <li>2. Vehicle overloaded.</li> <li>3. Erratic clutch operation.</li> <li>4. Grabbing clutch.</li> </ol>	<ol style="list-style-type: none"> <li>1. Replace broken axle shaft after correcting axle shaft tube alignment.</li> <li>2. Replace broken axle shaft. Avoid excessive weight on vehicle.</li> <li>3. Replace broken axle shaft after inspecting for other possible causes. Avoid erratic use of clutch.</li> <li>4. Replace broken axle shaft. Inspect clutch and make necessary repairs or adjustments.</li> </ol>
DIFFERENTIAL CASE CRACKED	<ol style="list-style-type: none"> <li>1. Improper adjustment of differential bearings.</li> <li>2. Excessive ring gear backlash.</li> <li>3. Vehicle overloaded.</li> <li>4. Erratic clutch operation.</li> </ol>	<ol style="list-style-type: none"> <li>1. Replace cracked case; examine gears and bearings for possible damage. At reassembly, adjust differential bearings properly.</li> <li>2. Replace cracked case; examine gears and bearings for possible damage. At reassembly, adjust ring gear backlash properly.</li> <li>3. Replace cracked case; examine gears and bearings for possible damage. Avoid excessive weight on vehicle.</li> <li>4. Replace cracked case. After inspecting for other possible causes, examine gears and bearings for possible damage. Avoid erratic use of clutch.</li> </ol>
DIFFERENTIAL GEARS SCORED	<ol style="list-style-type: none"> <li>1. Insufficient lubrication.</li> <li>2. Improper grade of lubricant.</li> <li>3. Excessive spinning of one wheel/tire.</li> </ol>	<ol style="list-style-type: none"> <li>1. Replace scored gears. Scoring marks on the drive face of gear teeth or in the bore are caused by instantaneous fusing of the mating surfaces. Scored gears should be replaced. Fill rear differential housing to required capacity with proper lubricant. Refer to Specifications.</li> <li>2. Replace scored gears. Inspect all gears and bearings for possible damage. Clean and refill differential housing to required capacity with proper lubricant.</li> <li>3. Replace scored gears. Inspect all gears, pinion bores and shaft for damage. Service as necessary.</li> </ol>
LOSS OF LUBRICANT	<ol style="list-style-type: none"> <li>1. Lubricant level too high.</li> </ol>	<ol style="list-style-type: none"> <li>1. Drain excess lubricant by removing fill plug and allow lubricant to level at lower edge of fill plug hole.</li> </ol>

## DIAGNOSIS AND TESTING (Continued)

## CONTINUED


CONDITION	POSSIBLE CAUSES	CORRECTION
LOSS OF LUBRICANT	<ol style="list-style-type: none"> <li>2. Worn axle shaft seals.</li> <li>3. Cracked differential housing.</li> <li>4. Worn drive pinion gear shaft seal.</li> <li>5. Scored and worn yoke.</li> <li>6. Axle cover not properly sealed.</li> </ol>	<ol style="list-style-type: none"> <li>2. Replace worn seals.</li> <li>3. Repair or replace housing as necessary.</li> <li>4. Replace worn drive pinion gear shaft seal.</li> <li>5. Replace worn or scored yoke and seal.</li> <li>6. Remove cover and clean flange and reseal.</li> </ol>
AXLE OVERHEATING	<ol style="list-style-type: none"> <li>1. Lubricant level too low.</li> <li>2. Incorrect grade of lubricant.</li> <li>3. Bearings adjusted too tight.</li> <li>4. Excessive gear wear.</li> <li>5. Insufficient ring gear backlash.</li> </ol>	<ol style="list-style-type: none"> <li>1. Refill differential housing.</li> <li>2. Drain, flush and refill with correct amount of the correct lubricant.</li> <li>3. Readjust bearings.</li> <li>4. Inspect gears for excessive wear or scoring. Replace as necessary.</li> <li>5. Readjust ring gear backlash and inspect gears for possible scoring.</li> </ol>
GEAR TEETH BROKE (RING GEAR AND PINION)	<ol style="list-style-type: none"> <li>1. Overloading.</li> <li>2. Erratic clutch operation.</li> <li>3. Ice-spotted pavements.</li> <li>4. Improper adjustments.</li> </ol>	<ol style="list-style-type: none"> <li>1. Replace gears. Examine other gears and bearings for possible damage.</li> <li>2. Replace gears and examine the remaining parts for possible damage. Avoid erratic clutch operation.</li> <li>3. Replace gears. Examine the remaining parts for possible damage. Replace parts as required.</li> <li>4. Replace gears. Examine other parts for possible damage. Ensure ring gear backlash is correct.</li> </ol>
AXLE NOISE	<ol style="list-style-type: none"> <li>1. Insufficient lubricant.</li> <li>2. Improper ring gear and drive pinion gear adjustment.</li> <li>3. Unmatched ring gear and drive pinion gear.</li> <li>4. Worn teeth on ring gear or drive pinion gear.</li> <li>5. Loose drive pinion gear shaft bearings.</li> <li>6. Loose differential bearings.</li> <li>7. Misaligned or sprung ring gear.</li> <li>8. Loose differential bearing cap bolts</li> </ol>	<ol style="list-style-type: none"> <li>1. Refill axle with correct amount of the proper lubricant. Also inspect for leaks and correct as necessary.</li> <li>2. Check ring gear and pinion gear teeth contact pattern.</li> <li>3. Remove unmatched ring gear and drive pinion gear. Replace with matched gear and drive pinion gear set.</li> <li>4. Check teeth on ring gear and drive pinion gear for correct contact. If necessary, replace with new matched set.</li> <li>5. Adjust drive pinion gearshaft bearing preload torque.</li> <li>6. Adjust differential bearing preload torque.</li> <li>7. Measure ring gear runout.</li> <li>8. Tighten with specified torque</li> </ol>



## SERVICE PROCEDURES

## LUBRICANT CHANGE

- (1) Raise and support the vehicle.
- (2) Remove the lubricant fill hole plug from the differential housing cover.
- (3) Remove the differential housing cover and drain the lubricant from the housing.
- (4) Clean the housing cavity with a flushing oil, light engine oil or lint free cloth. **Do not use water, steam, kerosene or gasoline for cleaning.**
- (5) Remove the sealant from the housing and cover surfaces. Use solvent to clean the mating surfaces.
- (6) Apply a bead of Mopar® Silicone Rubber Sealant, or equivalent, to the housing cover (Fig. 3).

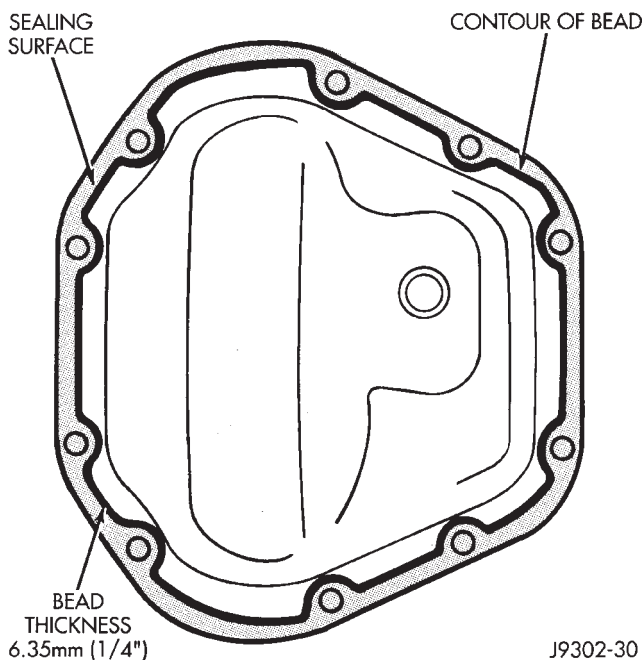

*Fig. 3 Typical Housing Cover With Sealant*

**Install the housing cover within 5 minutes after applying the sealant.**

- (7) Install the cover and any identification tag. Tighten the cover bolts in a criss-cross pattern to 41 N·m (30 ft. lbs.) torque.
- (8) Refill the differential with Mopar® Hypoid Gear Lubricant, or equivalent, to bottom of the fill plug hole. Refer to the Lubricant Specifications in this group for the quantity necessary.
- (9) Install the fill hole plug and lower the vehicle. Tighten fill plug to 34 N·m (25 ft. lbs.).

## REMOVAL AND INSTALLATION

## DRIVE AXLE ASSEMBLY

## REMOVAL

- (1) Raise and support the vehicle.
- (2) Position a suitable lifting device under the axle.
- (3) Secure axle to device.
- (4) Remove the wheels and tires.
- (5) Remove the brake rotors and calipers from the axle. Refer to Group 5, Brakes, for proper procedures.
- (6) Disconnect the wheel sensor wiring harness from the vehicle wiring harness, if necessary.
- (7) Disconnect the vent hose from the axle shaft tube.
- (8) Mark the propeller shaft and yoke, or pinion flange, for installation alignment reference.
- (9) Remove propeller shaft.
- (10) Disconnect stabilizer bar links at the axle.
- (11) Disconnect shock absorbers from axle brackets.
- (12) Disconnect track bar.
- (13) Disconnect the tie rod and drag link from the steering knuckle. Refer to Group 2, Suspension, for proper procedures.
- (14) Disconnect the steering damper from the axle bracket.
- (15) Disconnect the upper and lower suspension arms from the axle brackets.
- (16) Lower the lifting device enough to remove the axle. The coil springs will drop with the axle.
- (17) Remove the coil springs from the axle.

## INSTALLATION

**CAUTION:** The weight of the vehicle must be supported by the springs before suspension arms and track bar fasteners can be tightened. If the springs are not at their normal ride position, ride height and handling could be affected.

- (1) Install the springs and retainer clips. Tighten the retainer bolts to 21 N·m (16 ft. lbs.) torque.
- (2) Support the axle on a suitable lifting device and position axle under the vehicle.
- (3) Raise the axle and align it with the spring pads.
- (4) Position the upper and lower suspension arms in the axle brackets. Loosely install bolts and nuts to hold suspension arms to the axle brackets.
- (5) Connect the vent hose to the axle shaft tube.
- (6) Connect the track bar to the axle bracket. Loosely install the bolt to hold the track bar to the axle bracket.
- (7) Install the shock absorbers and tighten the bolts to 23 N·m (17 ft. lbs.) torque.

## REMOVAL AND INSTALLATION (Continued)

(8) Install the stabilizer bar links to the axle brackets. Tighten the nut to 95 N·m (70 ft. lbs.) torque.

(9) Install the drag link and tie rod to the steering knuckles. Refer to Group 2, Suspension, for proper procedures.

(10) Install the steering damper to the axle bracket and tighten the nut to 75 N·m (55 ft. lbs.) torque.

(11) Install the brake rotors and calipers. Refer to Group 5, Brakes, for the proper procedures.

(12) Connect the wheel speed sensor wiring harness to the vehicle wiring harness, if necessary.

(13) Align the previously made marks on the propeller shaft and the yoke, or pinion flange.

(14) Install the bolts to hold the propeller shaft to the pinion flange, if equipped.

(15) Install the straps and bolts to hold the propeller shaft to the yoke, if equipped.

(16) Check and fill axle lubricant. Refer to the Lubricant Specifications in this group for the quantity necessary.

(17) Install the wheel and tire assemblies.

(18) Remove the lifting device from the axle and lower the vehicle.

(19) Tighten the upper suspension arm nuts to 75 N·m (55 ft. lbs.) torque. Tighten the lower suspension arm nuts to 115 N·m (85 ft. lbs.) torque.

(20) Tighten the track bar bolt at the axle bracket to 100 N·m (74 ft. lbs.) torque.

(21) Check the front wheel alignment.

## AXLE SHAFT—CARDAN U-JOINT

Single cardan U-joint components are not serviceable. If defective, they must be replaced as a unit. If the bearings, seals, spider, or bearing caps are damaged or worn, replace the complete U-joint.

## REMOVAL

**CAUTION:** Clamp only the narrow forged portion of the yoke in the vise. Also, to avoid distorting the yoke, do not over tighten the vise jaws.


(1) Remove axle shaft.

(2) Remove the bearing cap retaining snap rings (Fig. 4).

**It can be helpful to saturate the bearing caps with penetrating oil prior to removal.**

(3) Locate a socket where the inside diameter is larger in diameter than the bearing cap. Place the socket (receiver) against the yoke and around the perimeter of the bearing cap to be removed.


(4) Locate a socket where the outside diameter is smaller in diameter than the bearing cap. Place the socket (driver) against the opposite bearing cap.

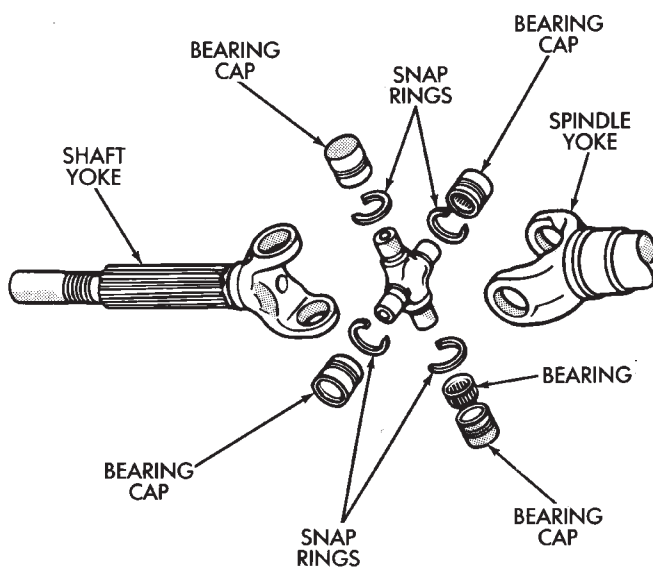

J8902-15

**Fig. 4 Axle Shaft Outer U-Joint**

(5) Position the yoke with the sockets in a vise (Fig. 5).

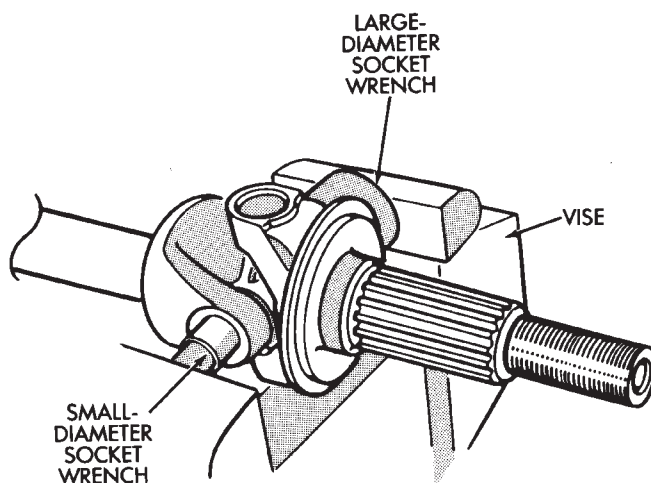

J8902-16

**Fig. 5 Yoke Bearing Cap Removal**

(6) Compress the vise jaws to force the bearing cap into the larger socket (receiver).

(7) Release the vise jaws. Remove the sockets and bearing cap that was partially forced out of the yoke.

(8) Repeat the above procedure for the remaining bearing cap.

(9) Remove the remaining bearing cap, bearings, seals and spider from the propeller shaft yoke.

## REMOVAL AND INSTALLATION (Continued)

## INSTALLATION


- (1) Pack the bearing caps 1/3 full of wheel bearing lubricant. Apply extreme pressure (EP), lithium-base lubricant to aid in installation.
- (2) Position the spider in the yoke. Insert the seals and bearings. Tap the bearing caps into the yoke bores far enough to hold the spider in position.
- (3) Place the socket (driver) against one bearing cap. Position the yoke with the socket wrench in a vise.
- (4) Compress the vise to force the bearing caps into the yoke. Force the caps enough to install the retaining clips.
- (5) Install the bearing cap retaining clips.
- (6) Install axle shaft.

## AXLE CONSTANT-VELOCITY (C/V) JOINT BOOT

**The only service procedure to be performed on the axle C/V joint, is the replacement of the joint seal boot.** If any failure of internal axle shaft components is diagnosed during a vehicle road test, the axle shaft must be replaced as an assembly.

## REMOVAL

- (1) Remove axle shaft.
- (2) Remove large boot clamp retaining C/V joint sealing boot, to C/V joint housing and discard.
- (3) Remove small clamp that retains outer C/V joint sealing boot to axle shaft and discard (Fig. 6).
- (4) Remove sealing boot from outer C/V joint housing and slide it down and off the axle shaft.

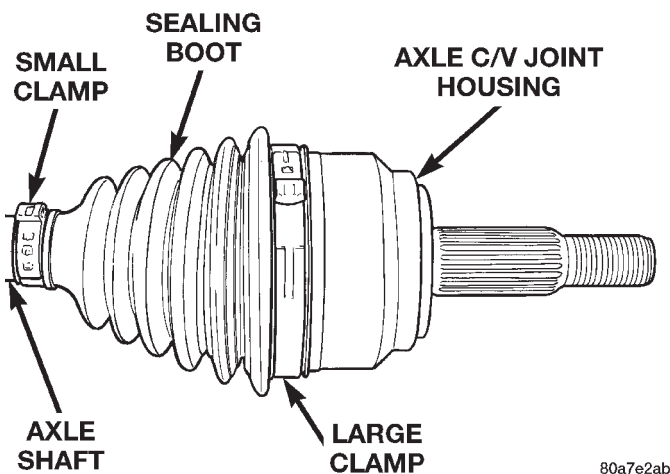


**Fig. 6 Outer C/V Joint Seal Boot Clamps**


- (5) Thoroughly clean and inspect axle C/V joint assembly and axle shaft for any signs of excessive wear. **If any parts show signs of excessive wear, the axle shaft assembly will require replacement. Component parts of these axle shaft assemblies are not serviceable.**

## INSTALLATION

- (1) Slide new sealing boot large clamp over axle shaft and onto C/V joint.
- (2) Slide the axle C/V joint sealing boot onto the axle shaft.
- (3) Distribute 1/2 the amount of grease provided in seal boot service package (**DO NOT USE ANY OTHER TYPE OF GREASE**) into axle C/V joint assembly housing. Put the remaining amount into the sealing boot.
- (4) Install axle C/V joint boot small clamp evenly on sealing boot.
- (5) Position axle C/V joint boot into retaining groove in axle C/V joint housing. Then, install large retaining clamp evenly on sealing boot.
- (6) Clamp small sealing boot clamp onto axle shaft using Crimper C-4975-A. Place crimping tool C-4975-A over bridge of clamp (Fig. 7).
- (7) Tighten nut on crimping tool C-4975-A until jaws on tool are closed completely together, face to face (Fig. 8).

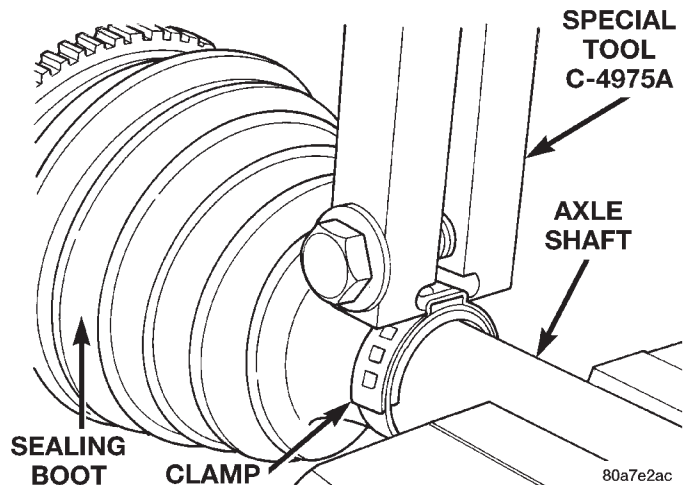

**Fig. 7 Crimping Tool Installed On Boot Clamp**

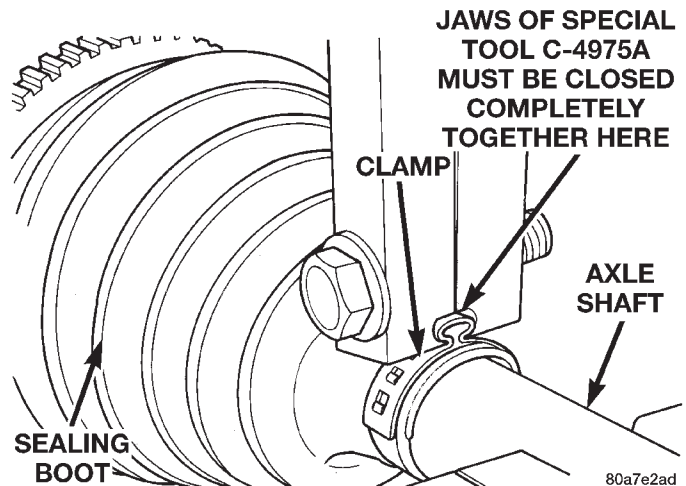


**Fig. 8 Sealing Boot Retaining Clamp Installed**

## REMOVAL AND INSTALLATION (Continued)

**CAUTION:** Seal must not be dimpled, stretched or out of shape in any way. If seal is NOT shaped correctly, equalize pressure in seal and shape it by hand.

(8) Clamp large sealing boot clamp onto axle shaft using Crimper C-4975-A. Place crimping tool C-4975-A over bridge of clamp (Fig. 9).

(9) Tighten nut on crimping tool C-4975-A until jaws on tool are closed completely together, face to face.

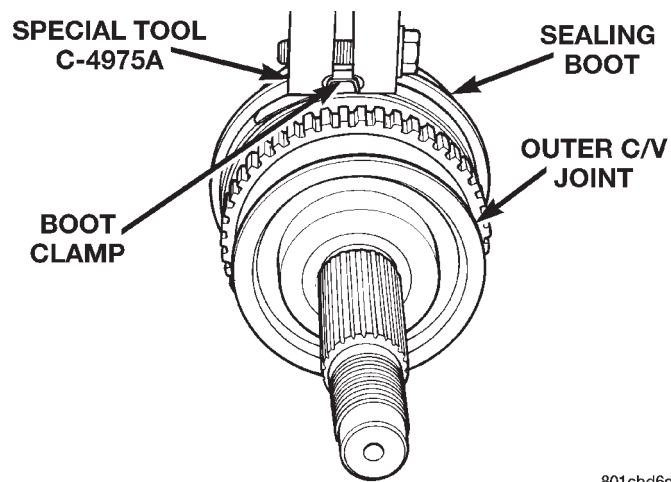


**Fig. 9 Crimping Tool Installed On Large Boot Clamp**  
PINION SHAFT SEAL

## REMOVAL


- (1) Raise and support the vehicle.
- (2) Remove wheel and tire assemblies.
- (3) Remove brake rotors and calipers. Refer to Group 5, Brakes, for proper procedures.
- (4) Mark the propeller shaft and pinion yoke, or pinion flange, for installation reference.
- (5) Remove the propeller shaft from the yoke, or pinion flange.
- (6) Rotate the pinion gear three or four times.
- (7) Measure the amount of torque necessary to rotate the pinion gear with a (in. lbs.) dial-type torque wrench. Record the torque reading for installation reference.
- (8) Using a short piece of pipe and Holder 6958 to hold the pinion yoke, or pinion flange, remove the pinion nut and washer.
- (9) Use Remover C-452 and Wrench C-3281 to remove the pinion yoke, or pinion flange, (Fig. 10).
- (10) Use Remover 7794-A and slide hammer to remove the pinion shaft seal (Fig. 11).

## INSTALLATION


- (1) Apply a light coating of gear lubricant on the lip of pinion seal. Install seal with Installer C-3972-A and Handle C-4171 (Fig. 12).

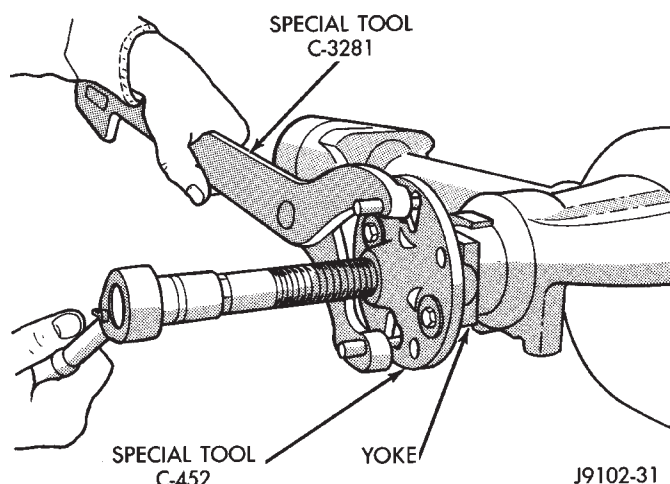

**Fig. 10 Pinion Yoke Removal**

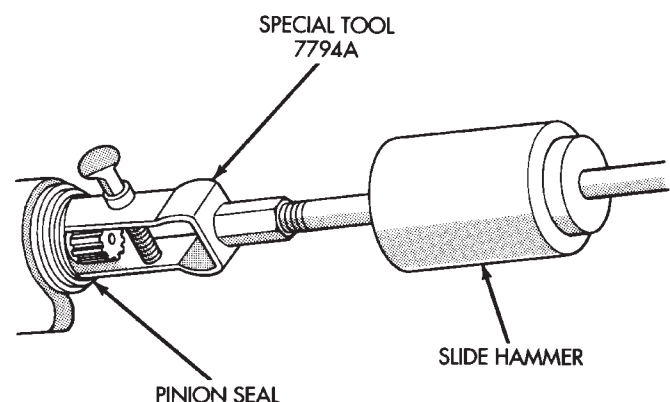

**Fig. 11 Seal Removal**

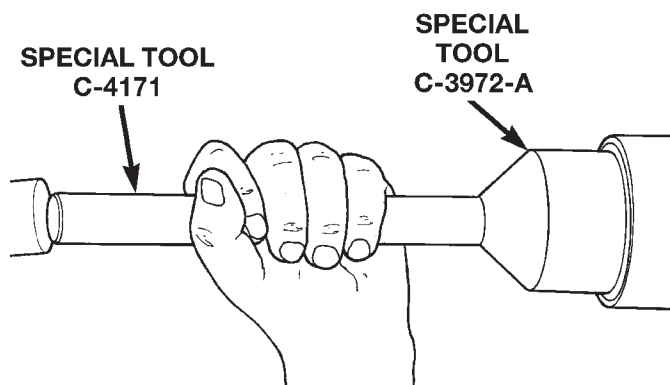


**Fig. 12 Pinion Seal Installation**



## REMOVAL AND INSTALLATION (Continued)

(2) Install yoke, or pinion flange, on the pinion gear with Installer W-162-D, Cup 8109, and Holder 6958 (Fig. 13).

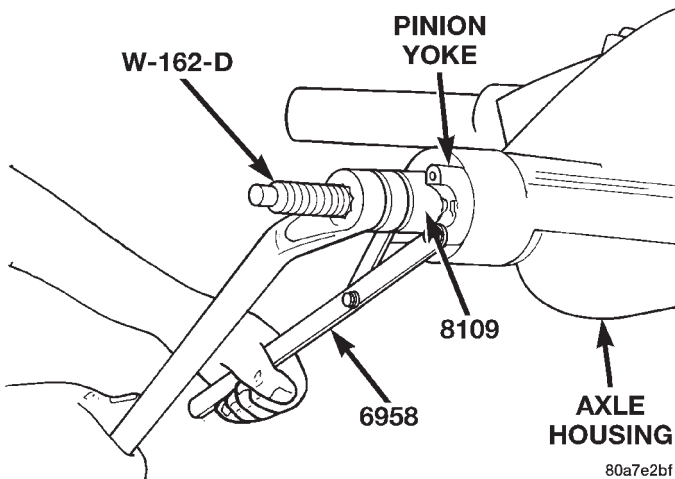


**Fig. 13 Pinion Yoke Installation**

**CAUTION:** Do not exceed the minimum tightening torque when installing the pinion yoke retaining nut at this point. Damage to collapsible spacer or bearings may result.

(3) Install the pinion washer and a new nut on the pinion gear. **Tighten the nut only enough to remove the shaft end play.**


(4) Rotate the pinion shaft using a (in. lbs.) torque wrench. Rotating torque should be equal to the reading recorded during removal, plus an additional 0.56 N·m (5 in. lbs.) (Fig. 14).

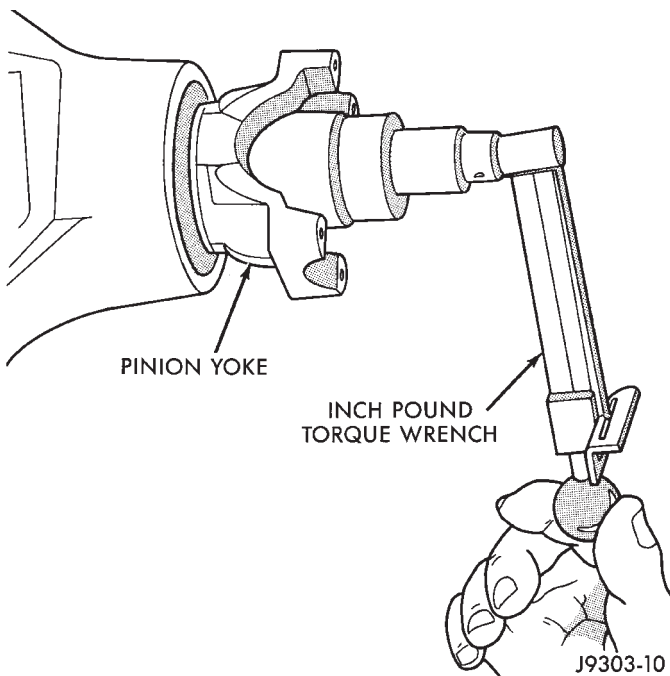

**Fig. 14 Check Pinion Rotation Torque**

(5) If the rotating torque is low, use Holder 6958 to hold the pinion yoke (Fig. 15), and tighten the pinion shaft nut in 6.8 N·m (5 ft. lbs.) increments until proper rotating torque is achieved.

**CAUTION:** If the maximum tightening torque is reached prior to reaching the required rotating torque, the collapsible spacer may have been damaged. Replace the collapsible spacer.

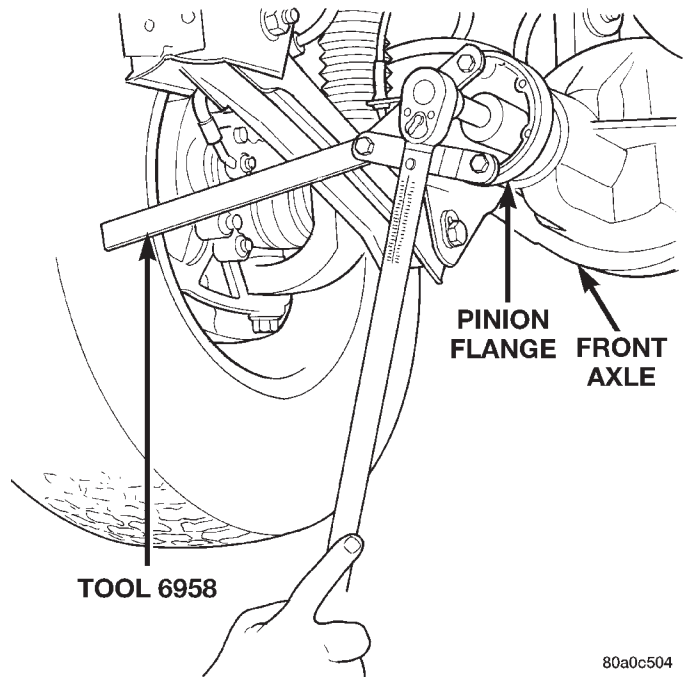

**Fig. 15 Tightening Pinion Shaft Nut**

(6) Align the installation reference marks on the propeller shaft and yoke, or pinion flange, and install the propeller shaft.

(7) Check and fill the gear lubricant. Refer to the Lubricant Specifications for gear lubricant requirements.

(8) Install the brake rotors and calipers. Refer to Group 5, Brakes, for proper procedures.

(9) Install wheel and tire assemblies.

(10) Lower the vehicle.

## COLLAPSIBLE SPACER

### REMOVAL W/PINION INSTALLED

- (1) Raise and support the vehicle.
- (2) Remove wheel and tire assemblies.
- (3) Remove brake rotors and calipers. Refer to Group 5, Brakes, for proper procedures.
- (4) Mark the propeller shaft and pinion yoke, or pinion flange, for installation reference.
- (5) Remove the propeller shaft from the yoke, or pinion flange.
- (6) Rotate the pinion gear three or four times.

## REMOVAL AND INSTALLATION (Continued)

(7) Measure the amount of torque necessary to rotate the pinion gear with a (in. lbs.) dial-type torque wrench. Record the torque reading for installation reference.


(8) Using a short piece of pipe and Holder 6958 to hold the pinion yoke, or pinion flange, remove the pinion nut and washer.

(9) Use Remover C-452 and Wrench C-3281 to remove the pinion yoke, or flange, (Fig. 16).


(10) Use Remover 7794-A and slide hammer to remove the pinion shaft seal (Fig. 17).

(11) Remove the front pinion bearing using a pair of suitable pick tools to pull the bearing straight off the pinion gear shaft. It may be necessary to lightly tap the end of the pinion gear with a rawhide or rubber mallet if the bearing becomes bound on the pinion shaft.

(12) Remove the collapsible spacer.

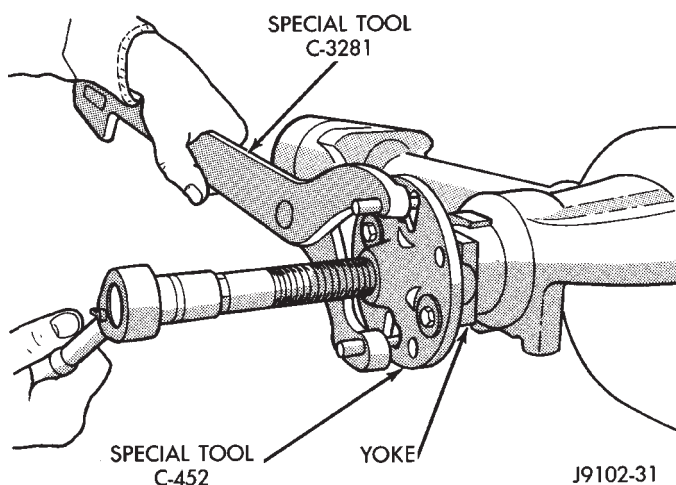

**Fig. 16 Pinion Yoke Removal**

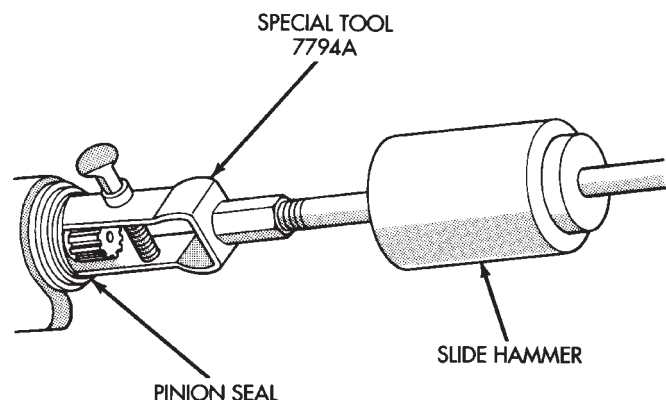

**Fig. 17 Seal Removal**

## REMOVAL W/PINION REMOVED

(1) Raise and support the vehicle.

(2) Remove wheel and tire assemblies.

(3) Remove brake rotors and calipers. Refer to Group 5, Brakes, for proper procedures.

(4) Mark the propeller shaft and pinion yoke, or pinion flange, for installation reference.

(5) Remove the propeller shaft from the yoke, or pinion flange.

(6) Rotate the pinion gear three or four times.

(7) Measure the amount of torque necessary to rotate the pinion gear with a (in. lbs.) dial-type torque wrench. Record the torque reading for installation reference.


(8) Remove differential assembly from axle housing.

(9) Using Holder 6958 to hold yoke, or flange, and a short length of 1 in. pipe, remove the pinion nut and washer.

(10) Using Remover C-452 and Wrench C-3281, remove the pinion yoke, or flange, from pinion shaft (Fig. 16).

(11) Remove the pinion gear from housing (Fig. 18). Catch the pinion with your hand to prevent it from falling and being damaged.

(12) Remove collapsible spacer from pinion shaft.

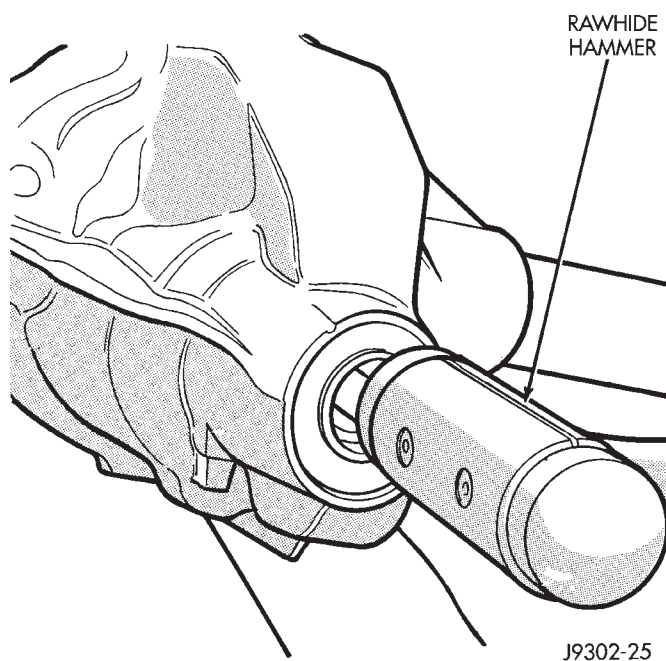


**Fig. 18 Remove Pinion Gear**

## REMOVAL AND INSTALLATION (Continued)

## INSTALLATION

(1) Install a new collapsible preload spacer on pinion shaft (Fig. 19).

(2) If pinion gear was removed, install pinion gear in housing.

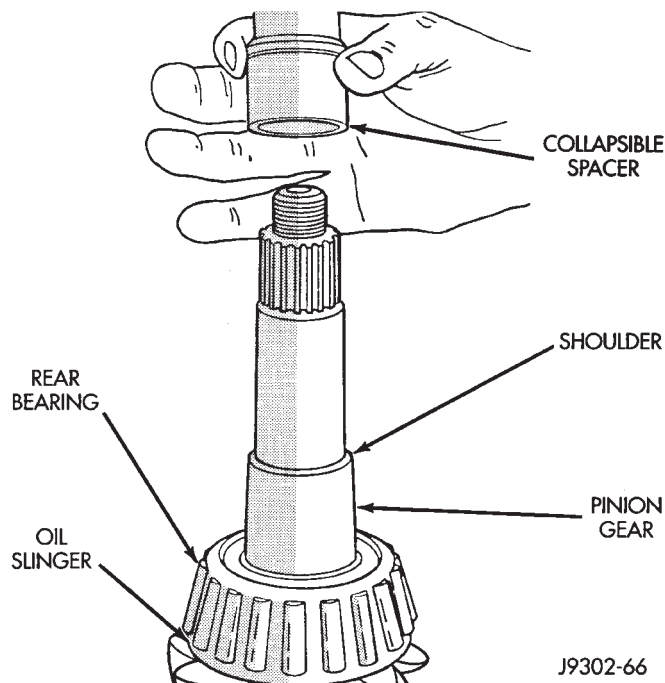

**Fig. 19 Collapsible Preload Spacer**

(3) Install pinion front bearing, if necessary.


(4) Apply a light coating of gear lubricant on the lip of pinion seal. Install seal with Installer C-3972-A and Handle C-4171 (Fig. 20), if necessary.

(5) Install yoke, or pinion flange, with Installer W-162-D, Cup 8109, and holder 6958 (Fig. 21).


(6) If the original pinion bearings are being used, install differential assembly and axle shafts, if necessary.

**NOTE:** If new pinion bearings were installed, do not install the differential assembly and axle shafts until after the pinion bearing preload and rotating torque are set.

(7) Install the pinion washer and a new nut on the pinion gear. Tighten the nut to 217 N·m (160 ft. lbs.)

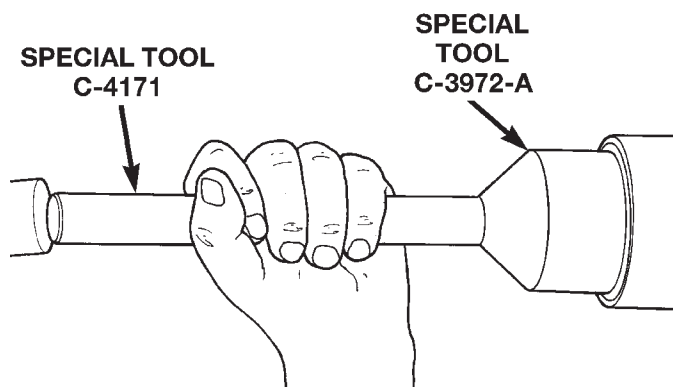

**Fig. 20 Pinion Seal Installation**

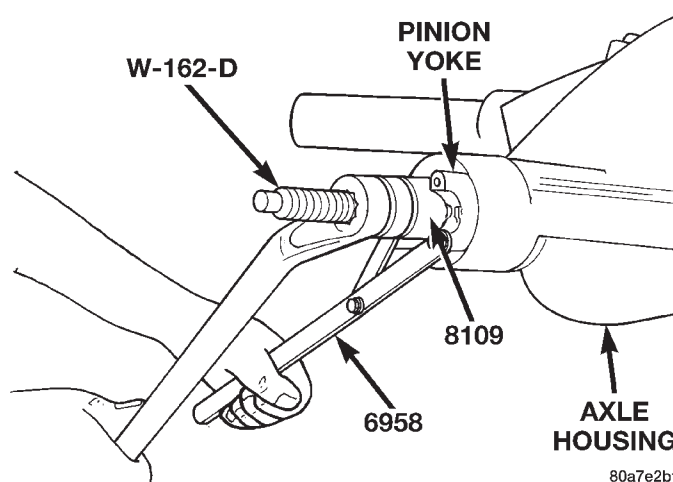

**Fig. 21 Pinion Yoke Installation**

minimum. **Do not over-tighten.** Maximum torque is 353 N·m (260 ft. lbs.).


**CAUTION:** Never loosen pinion gear nut to decrease pinion gear bearing rotating torque and never exceed specified preload torque. If preload torque is exceeded a new collapsible spacer must be installed. The torque sequence will then have to be repeated.

**NOTE:** If the spacer requires more than 353 N·m (260 ft. lbs.) of torque to crush, the collapsible spacer is defective and must be replaced.

## REMOVAL AND INSTALLATION (Continued)

(8) Using yoke holder 6958, a short length of 1 in. pipe, and a torque wrench set at 353 N·m (260 ft. lbs.), crush collapsible spacer until bearing end play is taken up (Fig. 22).

(9) Slowly tighten the nut in 6.8 N·m (5 ft. lbs.) increments until the rotating torque is achieved. Measure the rotating torque frequently to avoid over crushing the collapsible spacer (Fig. 23).

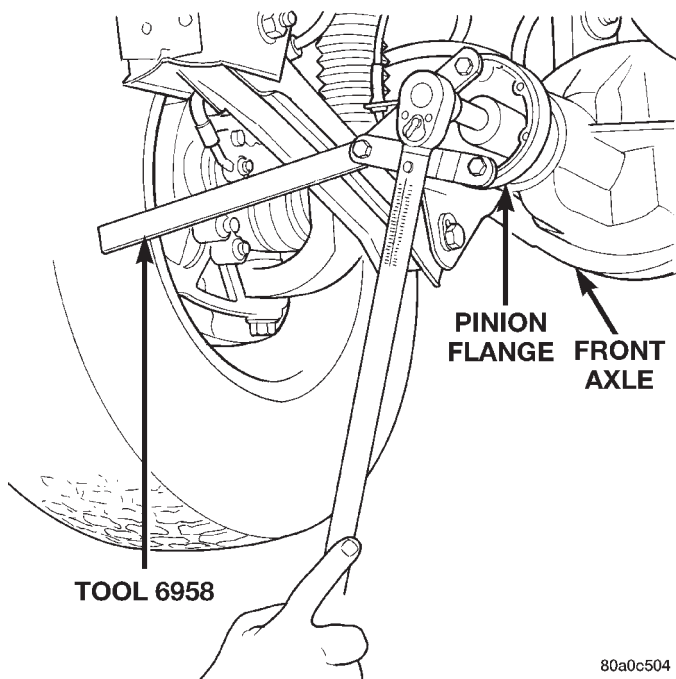

**Fig. 22 Tightening Pinion Nut**

(10) Check rotating torque with an inch pound torque wrench (Fig. 23). The torque necessary to rotate the pinion gear should be:

- Original Bearings — The reading recorded during removal, plus an additional 0.56 N·m (5 in. lbs.).
- New Bearings — 2 to 5 N·m (15 to 35 in. lbs.).

(11) Install differential assembly and axle shafts, if necessary.


(12) Align marks made previously on yoke, or pinion flange, and propeller shaft and install propeller shaft.

(13) Install brake rotors and calipers. Refer to Group 5, Brakes, for proper procedures.

(14) Add gear lubricant, if necessary. Refer to Lubricant Specifications of this section for lubricant requirements.

(15) Install wheel and tire assemblies.

(16) Lower vehicle.

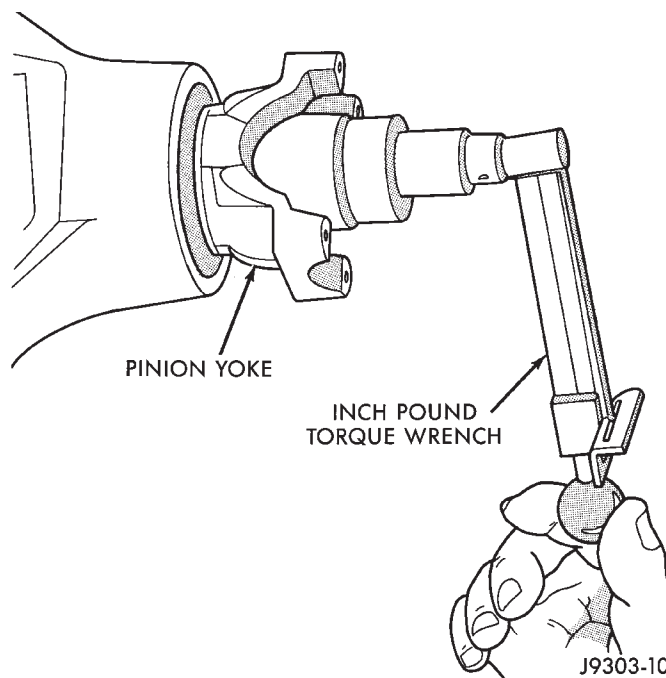


**Fig. 23 Check Pinion Gear Rotation Torque—Typical HUB BEARING AND AXLE SHAFT**

If the axle shaft and hub bearing are being removed in order to service another component, the axle shaft and hub bearing can be removed as an assembly.


## REMOVAL

- (1) Raise and support the vehicle.
- (2) Remove the wheel and tire assembly.
- (3) Remove the brake caliper and rotor. Refer to Group 5, Brakes, for proper procedures.
- (4) Remove ABS wheel speed sensor, if necessary. Refer to Group 5, Brakes, for proper procedures.
- (5) Remove the cotter pin, nut retainer, and axle hub nut (Fig. 24), if necessary.

## REMOVAL AND INSTALLATION (Continued)

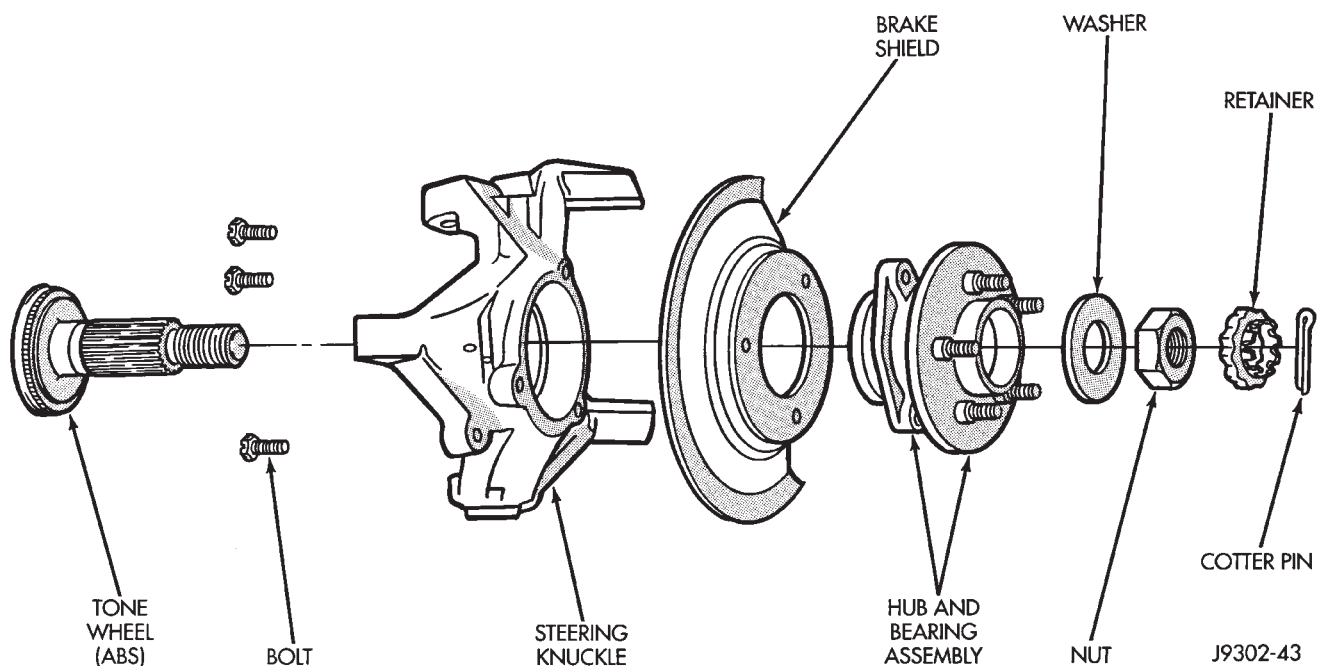**Fig. 24 Hub, Knuckle and Axle Shaft**


- (6) Remove the hub to knuckle bolts (Fig. 25).
- (7) Remove the hub from the steering knuckle and axle shaft, if necessary.
- (8) Remove hub bearing and axle shaft assembly (Fig. 26), or axle shaft from axle. **Avoid damaging the axle shaft oil seals in the axle housing.**

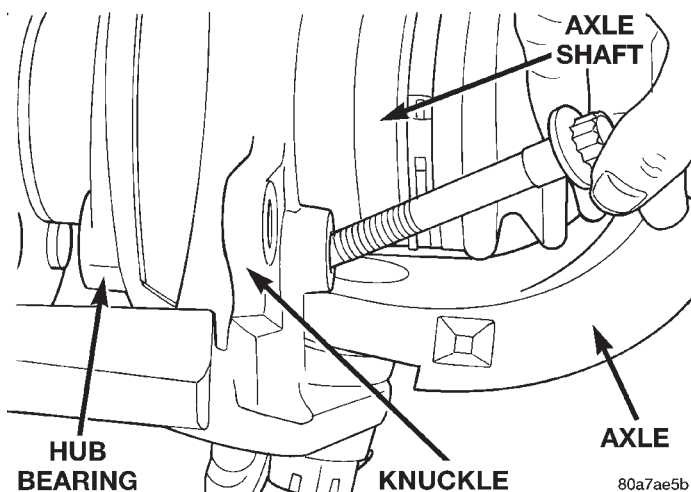**Fig. 25 Hub Bearing Bolts**

- (9) Remove the brake rotor shield from the hub bearing or knuckle (Fig. 24).

**INSTALLATION**

- (1) Thoroughly clean the axle shaft (Fig. 24) and apply a thin film of Mopar® Wheel Bearing Grease, or equivalent, to the shaft splines, seal contact surface, and hub bore.

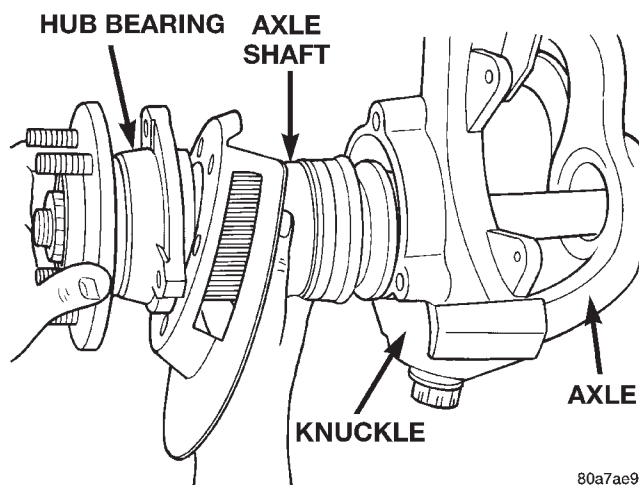**Fig. 26 Hub Bearing and Axle Assembly**

- (2) Install the brake rotor shield to the knuckle.
- (3) Install the hub bearing and axle shaft assembly, or axle shaft, into the housing and differential side gears. **Avoid damaging the axle shaft oil seals in the axle housing.**
- (4) Install the hub bearing, if necessary.
- (5) Install the hub to knuckle bolts and tighten to 102 N·m (75 ft. lbs.) torque.
- (6) Install the hub washer and nut, if necessary. Tighten the hub nut to 237 N·m (175 ft. lbs.) torque. Install the nut retainer and a new cotter pin (Fig. 24).
- (7) Install ABS wheel speed sensor, if necessary. Refer to Group 5, Brakes, for proper procedures.



## REMOVAL AND INSTALLATION (Continued)

- (8) Install the brake rotor and caliper. Refer to Group 5, Brakes, for proper procedures.
- (9) Install the wheel and tire assembly.
- (10) Remove support and lower the vehicle.

**STEERING KNUCKLE AND BALL STUDS**


Ball stud service procedures below require removal of the hub bearing and axle shaft. Removal and installation of upper and lower ball studs require the use of Tool Kit 6289.

**KNUCKLE REMOVAL**


- (1) Remove hub bearing and axle shaft.
- (2) Disconnect the tie-rod or drag link from the steering knuckle arm. Refer to Group 2, Suspension, for proper procedures.
- (3) Remove the cotter pins from the upper and lower ball studs.
- (4) Remove the upper and lower ball stud nuts.
- (5) Strike the steering knuckle with a brass hammer to loosen knuckle from the ball studs. Remove knuckle from ball studs (Fig. 27).

**UPPER BALL STUD REPLACEMENT**


- (1) Position tools as shown to remove and install ball stud (Fig. 28).

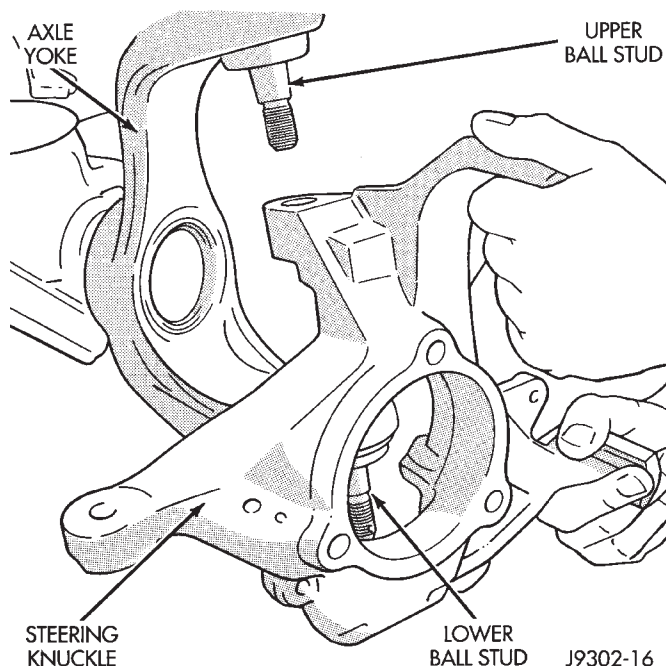**Fig. 27 Steering Knuckle Removal/Installation****LOWER BALL STUD REPLACEMENT**

- (1) Position tools as shown to remove and install ball stud (Fig. 29).

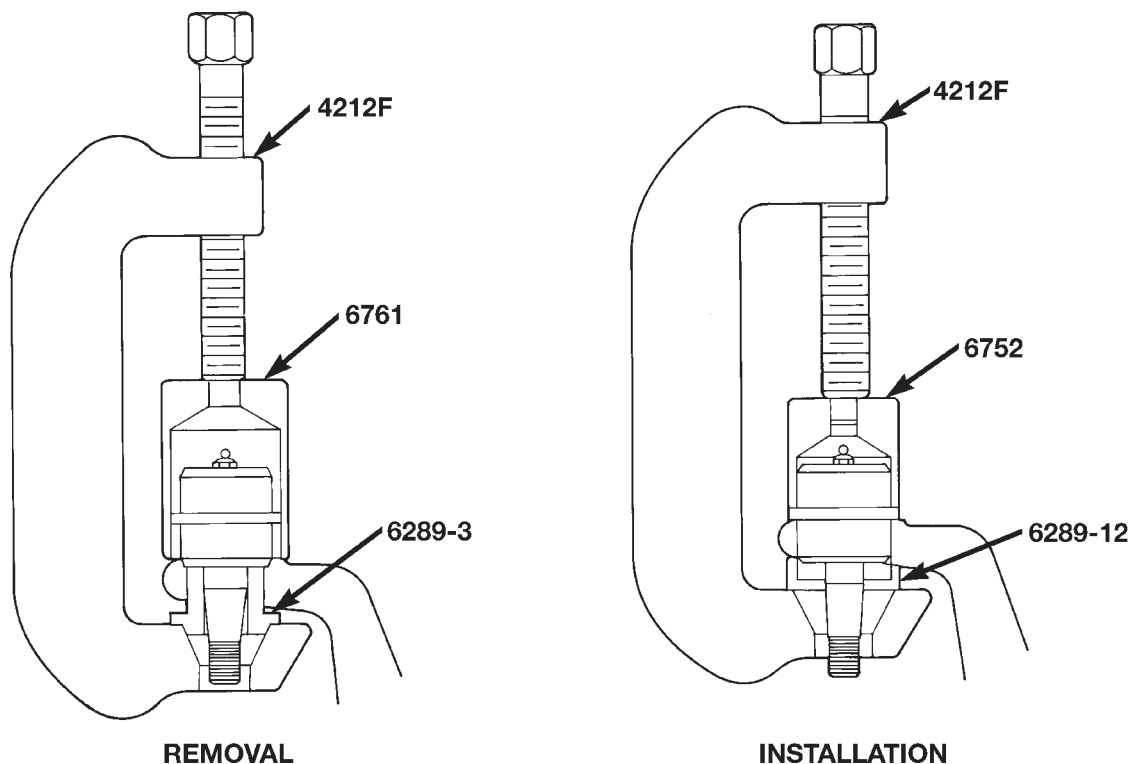**Fig. 28 Upper Ball Stud Remove/Install**

## REMOVAL AND INSTALLATION (Continued)

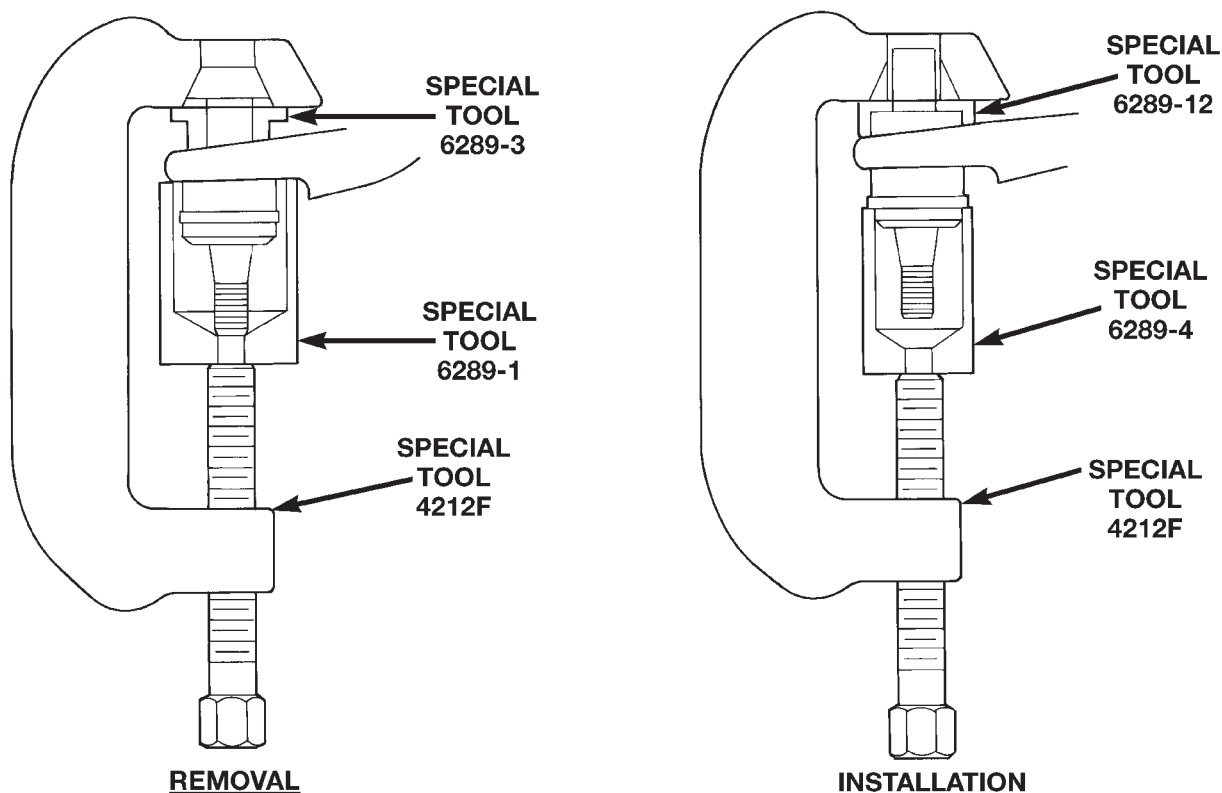

80a7e2a8

**Fig. 29 Lower Ball Stud Remove/Install**

### KNUCKLE INSTALLATION

- (1) Position the steering knuckle on the ball studs.
- (2) Install and tighten the bottom retaining nut to 109 N·m (80 ft. lbs.) torque. Install new cotter pin.
- (3) Install and tighten the top retaining nut to 101 N·m (75 ft. lbs.) torque. Install new cotter pin.
- (4) Install the hub bearing and axle shaft.
- (5) Connect the tie-rod or drag link end to the steering knuckle arm. Refer to Group 2, Suspension, for proper procedures.


### AXLE BUSHING REPLACEMENT

Refer to Group 2, Suspension, for the proper axle bushing procedures.

## DIFFERENTIAL

### REMOVAL

- (1) Raise and support vehicle.
- (2) Remove the lubricant fill hole plug from the differential housing cover.
- (3) Remove the differential housing cover and allow fluid to drain.
- (4) Remove hub bearings and axle shafts.
- (5) Note the installation reference letters stamped on the bearing caps and housing machined sealing surface (Fig. 30).

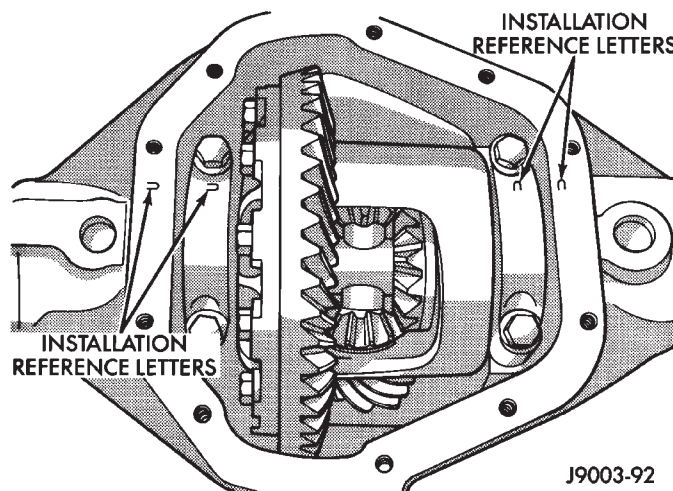


J9003-92

**Fig. 30 Bearing Cap Identification**

- (6) Loosen the differential bearing cap bolts.
- (7) Position Spreader W-129-B, utilizing some items from Adapter Kit 6987, with the tool dowel pins seated in the locating holes (Fig. 31). Install the hold-down clamps and tighten the tool turnbuckle finger-tight.
- (8) Install a Guide Pin C-3288-B at the left side of the differential housing. Attach Dial Indicator C-3339 to guide pin. Load the lever adapter against the


## REMOVAL AND INSTALLATION (Continued)

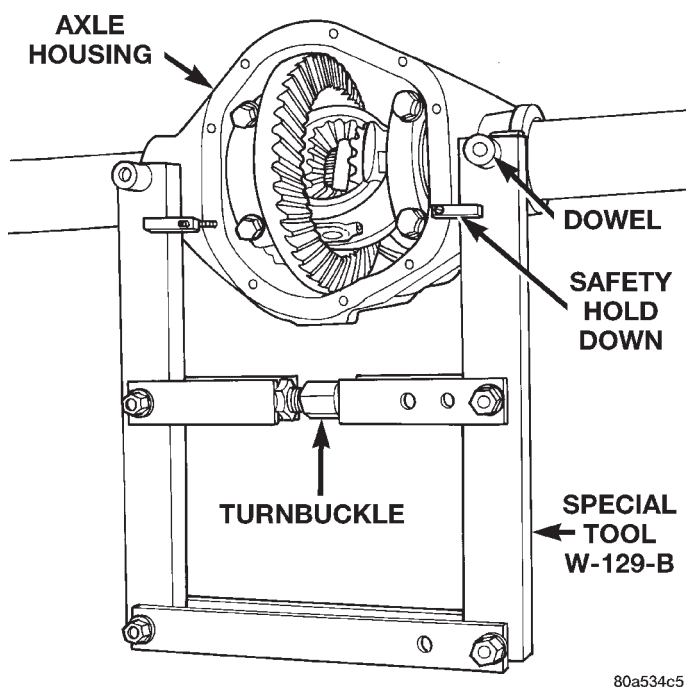**Fig. 31 Install Axle Housing Spreader**

opposite side of the housing (Fig. 32) and zero the indicator.


**CAUTION:** Do not spread over 0.50 mm (0.020 in). If the housing is over-spread, it could be distorted or damaged.

(9) Spread the housing enough to remove the differential case from the housing. Measure the distance with the dial indicator (Fig. 33).

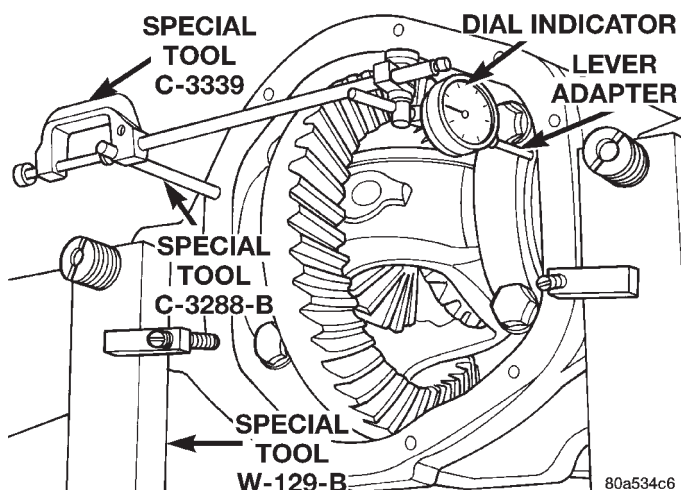
**Fig. 32 Install Dial Indicator**

(10) Remove the dial indicator.

(11) While holding the differential case in position, remove the differential bearing cap bolts and caps.

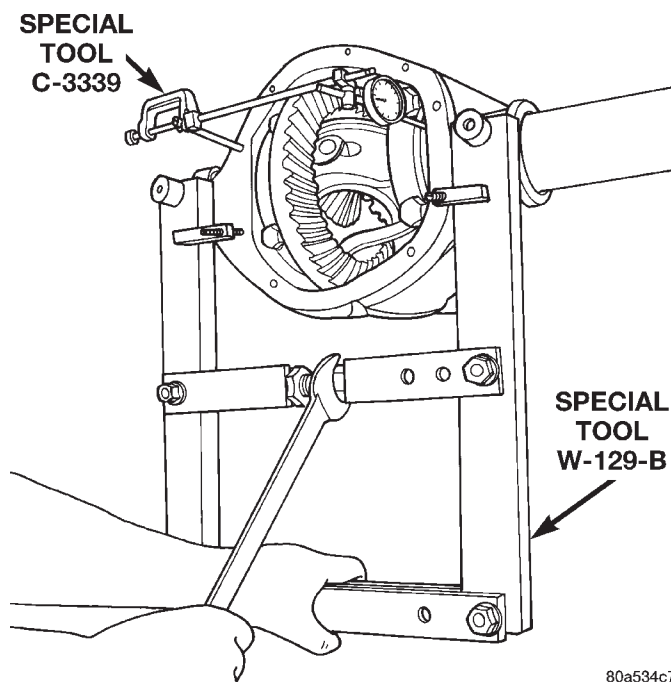**Fig. 33 Spread Axle Housing**

(12) Remove the differential from the housing. Ensure that the differential bearing cups remain in position on the differential bearings (Fig. 34).

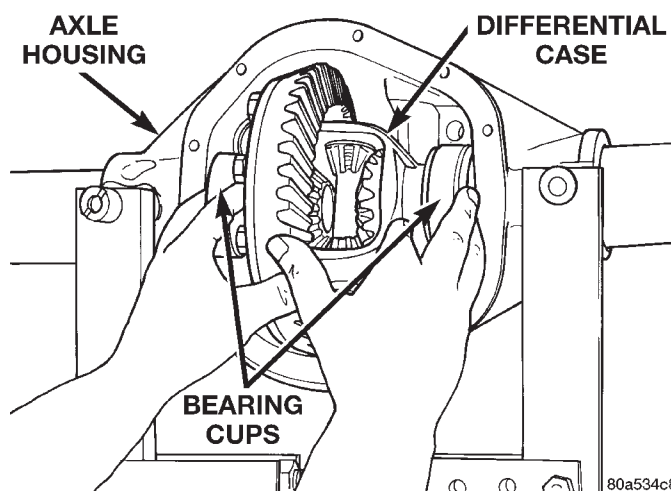**Fig. 34 Differential Case Removal**

(13) Mark or tag the differential bearing cups to indicate which side of the differential they were removed from.


(14) Remove spreader from housing.

**INSTALLATION**

If replacement differential bearings or differential case are being installed, differential side bearing shim requirements may change. Refer to the Differential Bearing Preload and Gear Backlash procedures in this section to determine the proper shim selection.

## REMOVAL AND INSTALLATION (Continued)

(1) Position Spreader W-129-B, utilizing some items from Adapter Kit 6987, with the tool dowel pins seated in the locating holes (Fig. 35). Install the holddown clamps and tighten the tool turnbuckle finger-tight.

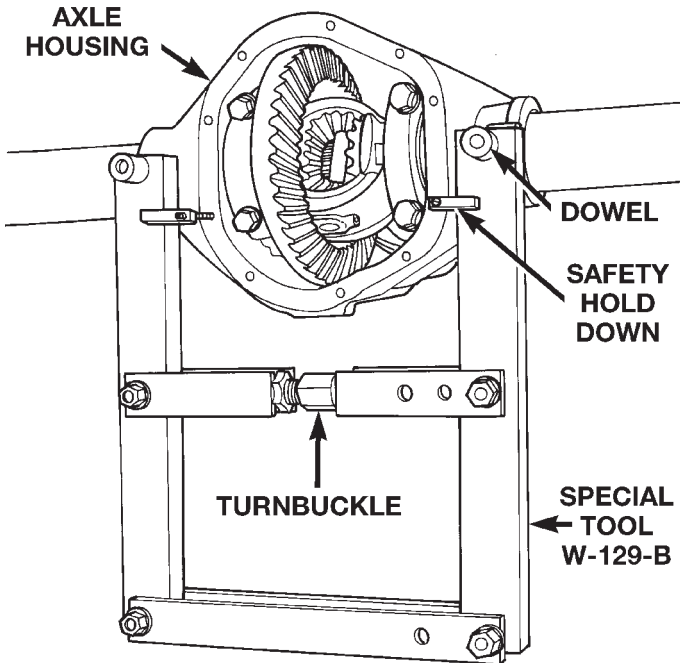

**Fig. 35 Install Axle Housing Spreader**

(2) Install a Guide Pin C-3288-B at the left side of the differential housing. Attach Dial Indicator C-3339 to guide pin. Load the lever adapter against the opposite side of the housing (Fig. 32) and zero the indicator.

**CAUTION:** Do not spread over 0.50 mm (0.020 in). If the housing is over-spread, it could be distorted or damaged.

(3) Spread the housing enough to install the case in the housing. Measure the distance with the dial indicator (Fig. 33).

(4) Remove the dial indicator.

(5) Install differential case in the housing. Ensure that the differential bearing cups remain in position on the differential bearings. Tap the differential case to ensure the bearings cups are fully seated in the housing.


(6) Install the bearing caps at their original locations (Fig. 36).

(7) Loosely install differential bearing cap bolts.

(8) Remove axle housing spreader.

(9) Tighten the bearing cap bolts to 61 N·m (45 ft. lbs.) torque.

(10) Install the hub bearings and axle shafts.

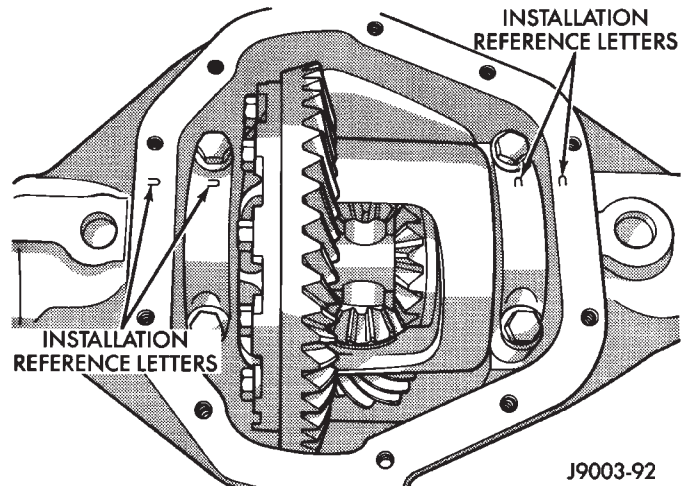


**Fig. 36 Differential Bearing Cap Reference Letters**

## DIFFERENTIAL SIDE BEARINGS

## REMOVAL

(1) Remove differential case from axle housing.

(2) Remove the bearings from the differential case with Puller/Press C-293-PA, C-293-39 Adapter Blocks, and Plug SP-3289 (Fig. 37).

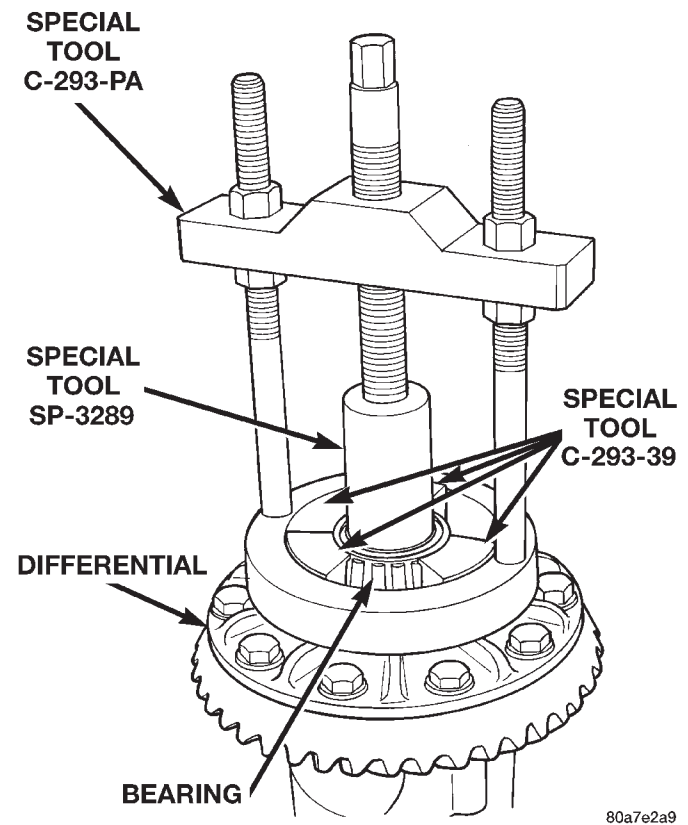

**Fig. 37 Differential Bearing Removal**




## REMOVAL AND INSTALLATION (Continued)

## INSTALLATION

If replacement differential side bearings or differential case are being installed, differential side bearing shim requirements may change. Refer to the Differential Bearing Preload and Gear Backlash procedures in this section to determine the proper shim selection.

(1) Install differential side bearing shims onto differential case hubs.

(2) Using Installer C-3716-A and Handle C-4171, install differential side bearings (Fig. 38).

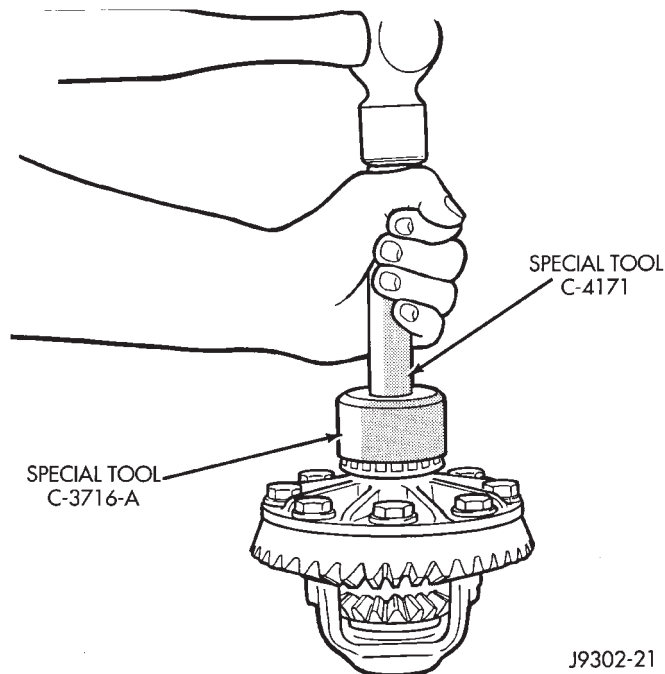

**Fig. 38 Differential Side Bearing Installation**

(3) Install differential in axle housing.


## AXLE SHAFT OIL SEAL

## REMOVAL

- (1) Raise and support vehicle.
- (2) Remove differential assembly.
- (3) Remove the inner axle shaft seals with a pry bar.

## INSTALLATION

- (1) Remove any sealer remaining from original seals.
- (2) Remove sealer from axle tube to housing junction, if necessary.
- (3) Install oil seals with Discs 8110 and Turnbuckle 6797 (Fig. 39). Tighten tool until disc bottoms in housing.
- (4) Install differential assembly.

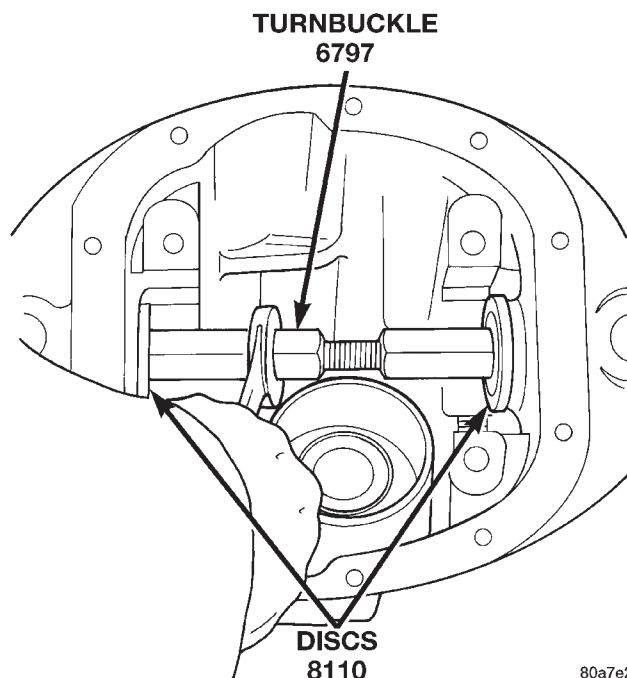


**Fig. 39 Axle Seal Installation**

## PINION GEAR

**NOTE:** The ring and pinion gears are serviced as a matched set. Do not replace the pinion gear without replacing the ring gear.

## REMOVAL


- (1) Remove differential assembly from axle housing.
- (2) Mark pinion yoke, or flange, and propeller shaft for installation alignment.
- (3) Disconnect propeller shaft from pinion yoke, or flange. Using suitable wire, tie propeller shaft to underbody.
- (4) Using Holder 6958 to hold yoke, or flange, and a short length of 1 in. pipe, remove the pinion nut and washer (Fig. 40).
- (5) Using Remover C-452 and Holder C-3281, remove the pinion yoke, or flange, from pinion shaft (Fig. 41).

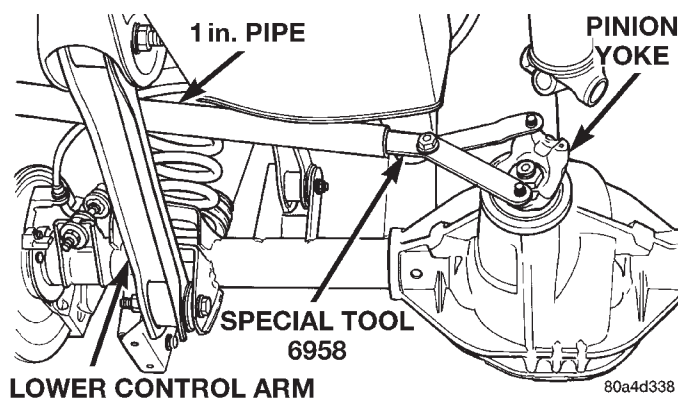


**Fig. 40 Pinion Yoke Holder—Typical**



## REMOVAL AND INSTALLATION (Continued)

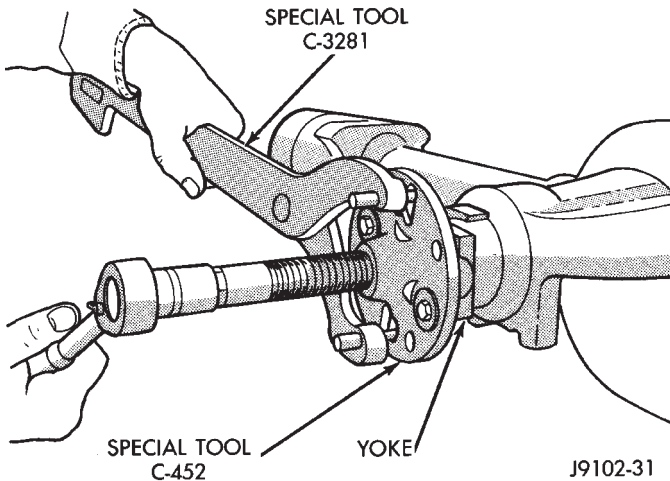**Fig. 41 Pinion Yoke Removal**


(6) Remove the pinion gear and collapsible spacer from housing (Fig. 42). Catch the pinion with your hand to prevent it from falling and being damaged.

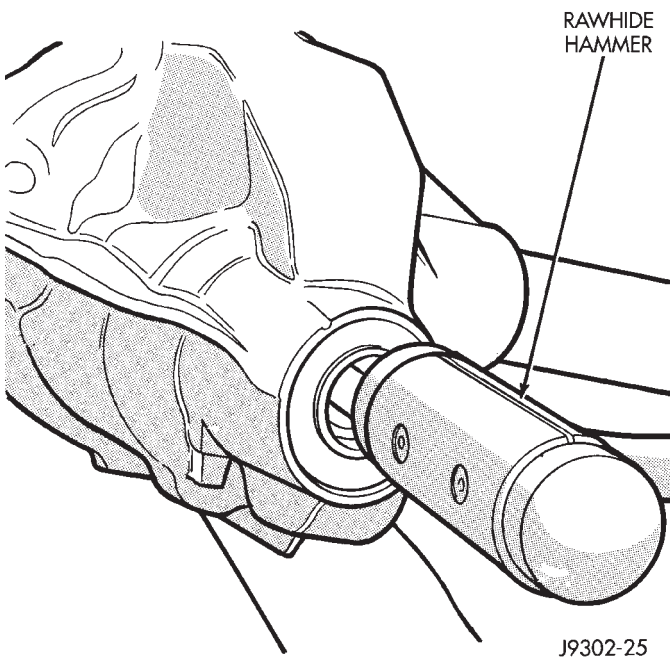**Fig. 42 Remove Pinion Gear**


(7) Remove the front pinion bearing cup, bearing, oil slinger, if equipped, and pinion seal with Remover C-4345 and Handle C-4171 (Fig. 43).

(8) Remove the rear pinion bearing cup from axle housing (Fig. 44). Use Remover D-149 and Handle C-4171.

(9) Remove the depth shims from rear pinion bearing cup bore in axle housing. Record the thickness of the depth shims.

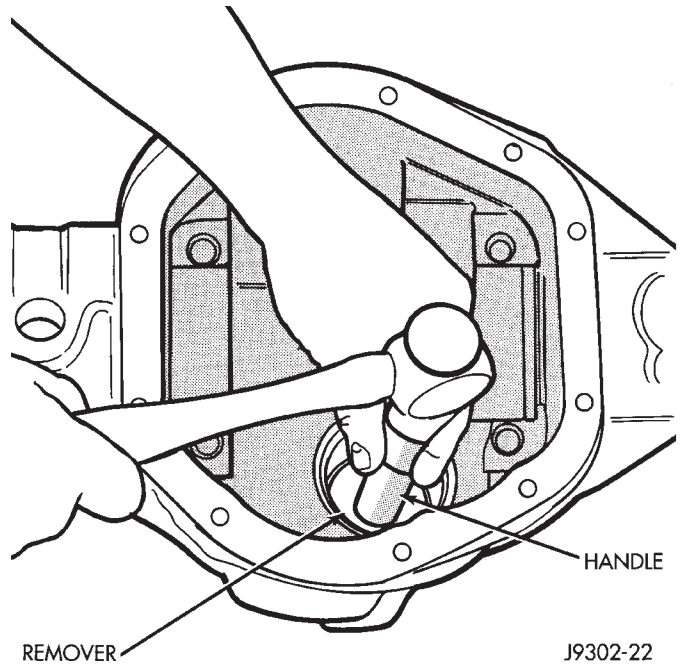**Fig. 43 Front Bearing Cup Removal**

**NOTE:** The pinion depth shims can be very thin. Verify that all shims have been removed before proceeding.


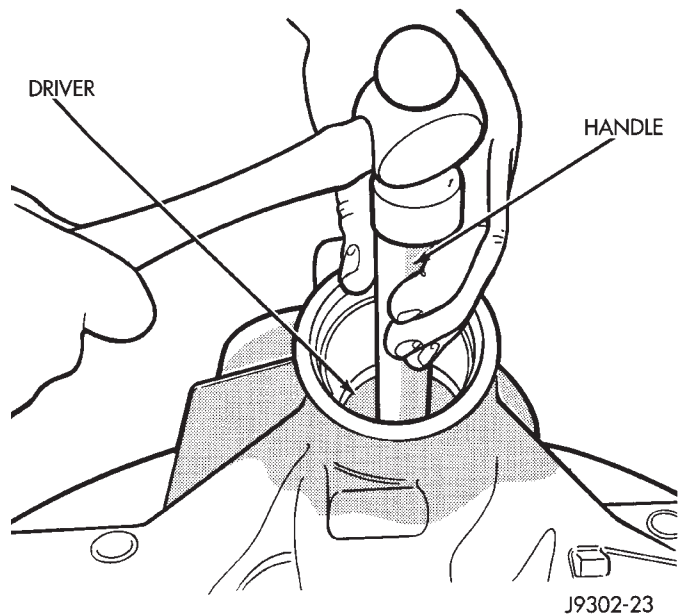
**Fig. 44 Rear Bearing Cup Removal**

(10) Remove the collapsible preload spacer from pinion gear (Fig. 45).

(11) Remove the rear pinion bearing from the pinion with Puller/Press C-293-PA and Adapters C-293-39 (Fig. 46).

**Place 4 adapter blocks so they do not damage the bearing cage.**

## REMOVAL AND INSTALLATION (Continued)

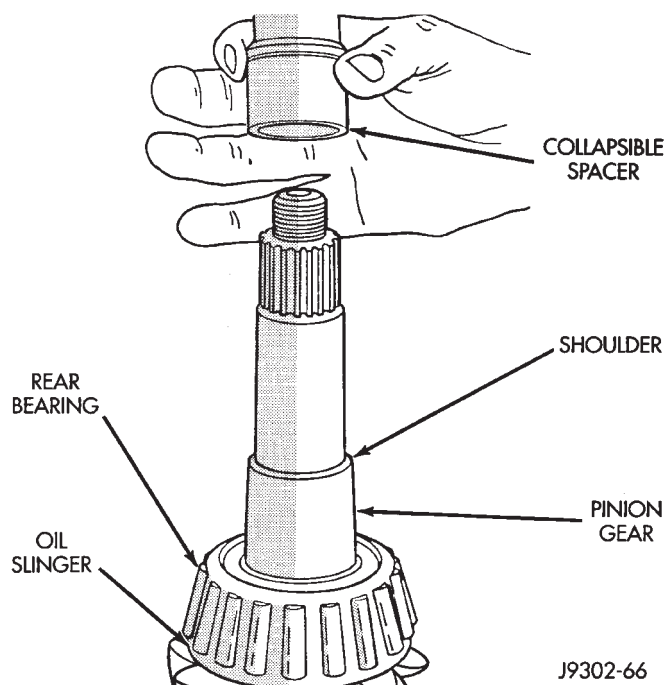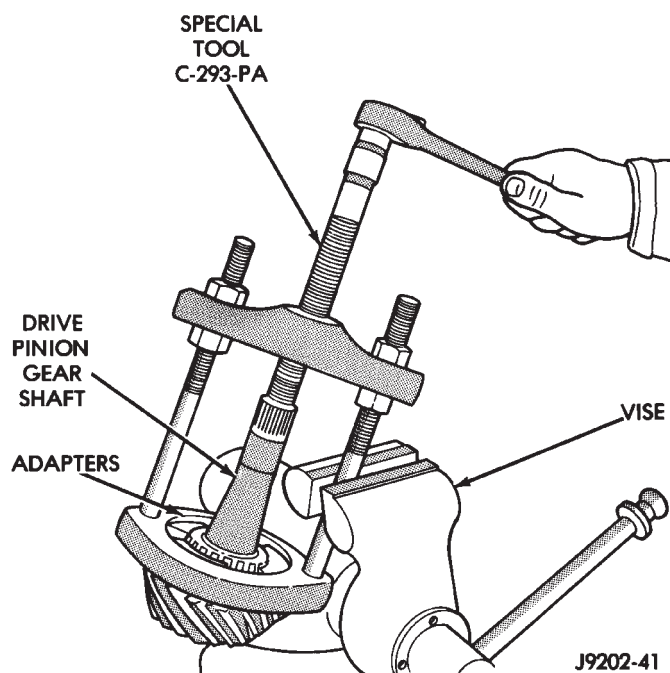
**Fig. 45 Collapsible Spacer****Fig. 46 Inner Bearing Removal**

## INSTALLATION


**NOTE:** Pinion depth shims are placed between the rear pinion bearing cup and axle housing to achieve proper ring and pinion gear mesh. If the factory installed ring and pinion gears are reused, the pinion depth shim should not require replacement. Refer to Pinion Gear Depth to select the proper thickness shim before installing pinion gear.

(1) Place proper thickness depth shim in rear pinion bearing cup bore in the axle housing.

(2) Apply Mopar® Door Ease, or equivalent, stick lubricant to outside surface of rear pinion bearing cup. Install the bearing cup with Installer D-146 and Driver Handle C-4171 (Fig. 47). Verify cup is correctly seated.

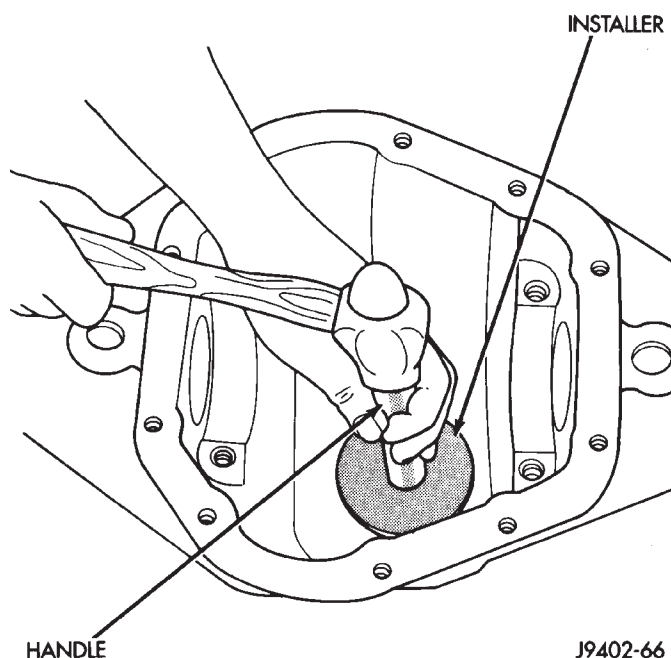**Fig. 47 Rear Pinion Bearing Cup Installation**


(3) Apply Mopar® Door Ease, or equivalent, stick lubricant to outside surface of front pinion bearing cup. Install the bearing cup with Installer D-130 and Handle C-4171 (Fig. 48).

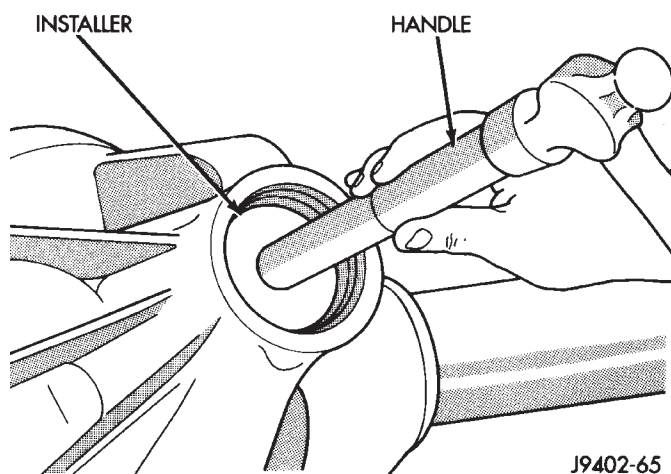**Fig. 48 Pinion Outer Bearing Cup Installation**

(4) Install front pinion bearing, and oil slinger, if equipped.


## REMOVAL AND INSTALLATION (Continued)

(5) Apply a light coating of gear lubricant on the lip of pinion seal. Install seal with Installer C-3972-A and Handle C-4171 (Fig. 49).

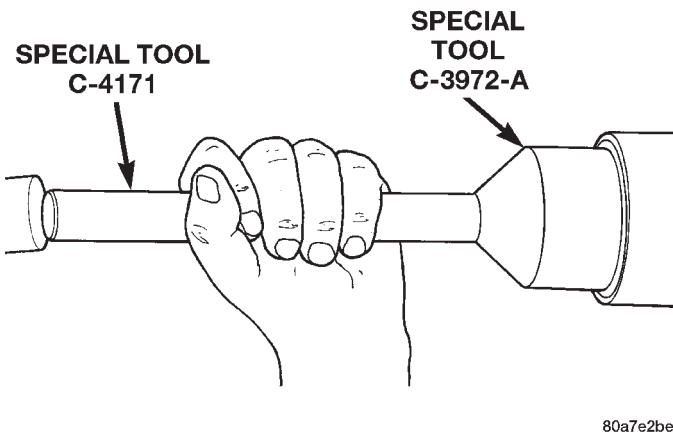

**Fig. 49 Pinion Seal Installation**

(6) Install the rear pinion bearing and oil slinger, if equipped, on the pinion gear with Installer W-262 and a shop press (Fig. 50).

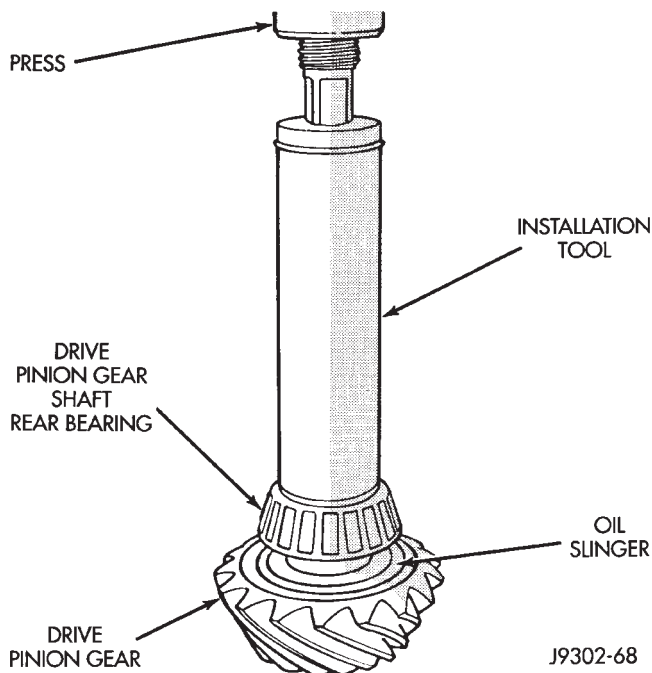


**Fig. 50 Rear Pinion Bearing Installation**


(7) Install a new collapsible preload spacer on pinion shaft and install pinion gear in housing (Fig. 51).

(8) Install yoke, or flange, with Installer W-162-B, Cup 8109, and Holder 6958 (Fig. 52).

(9) Install the pinion washer and a new nut on the pinion gear. Tighten the nut to 216 N·m (160 ft. lbs.) minimum. **Do not over-tighten.** Maximum torque is 352 N·m (260 ft. lbs.).

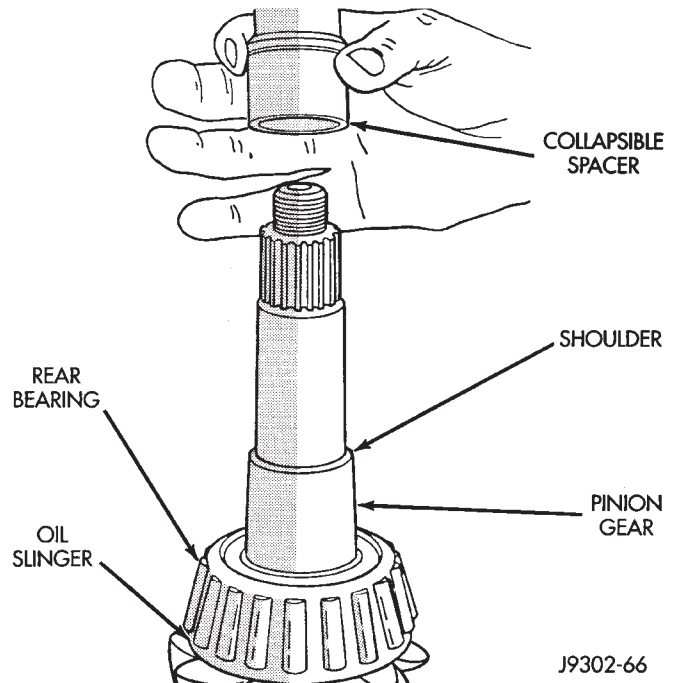

**Fig. 51 Collapsible Preload Spacer**

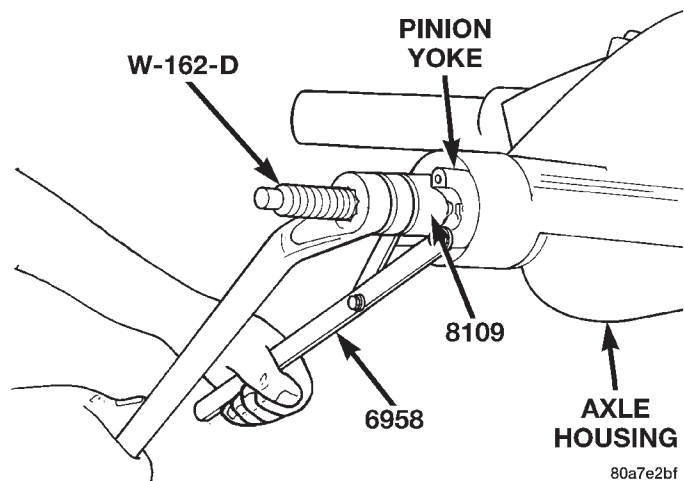

**Fig. 52 Pinion Yoke Installation**


**CAUTION:** Never loosen pinion gear nut to decrease pinion gear bearing rotating torque and never exceed specified preload torque. If preload torque is exceeded a new collapsible spacer must be installed. The torque sequence will then have to be repeated.

**NOTE:** If the spacer requires more than 352 N·m (260 ft. lbs.) of torque to crush, the collapsible spacer is defective.

(10) Using Holder 6958, a short length of 1 in. pipe, and torque wrench (set at 352 N·m (260 ft. lbs.)), crush collapsible spacer until bearing end play is taken up (Fig. 53).

## REMOVAL AND INSTALLATION (Continued)

(11) Slowly tighten the nut in 6.8 N·m (5 ft. lb.) increments until the rotating torque is achieved. Measure the rotating torque frequently to avoid over crushing the collapsible spacer (Fig. 54).

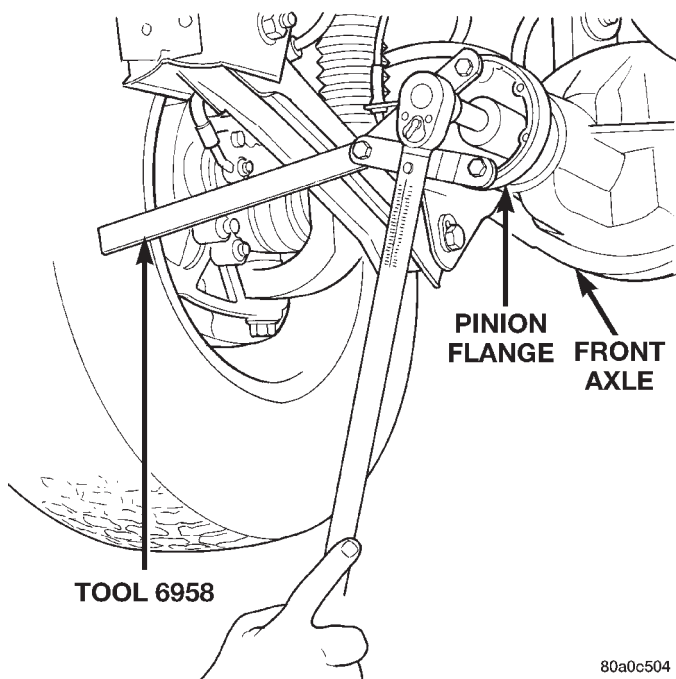

**Fig. 53 Tightening Pinion Nut**

(12) Check bearing rotating torque with an inch pound torque wrench (Fig. 54). The torque necessary to rotate the pinion gear should be:

- Original Bearings — 1 to 3 N·m (10 to 20 in. lbs.).
- New Bearings — 2 to 5 N·m (15 to 35 in. lbs.).

(13) Install differential assembly.

## RING GEAR


The ring and pinion gears are service in a matched set. Do not replace the ring gear without replacing the pinion gear.

## REMOVAL


- (1) Remove differential from axle housing.
- (2) Place differential case in a suitable vise with soft metal jaw protectors. (Fig. 55)
- (3) Remove bolts holding ring gear to differential case.
- (4) Using a soft hammer, drive ring gear from differential case (Fig. 55).

## INSTALLATION

**CAUTION:** Do not reuse the bolts that held the ring gear to the differential case. The bolts can fracture causing extensive damage.

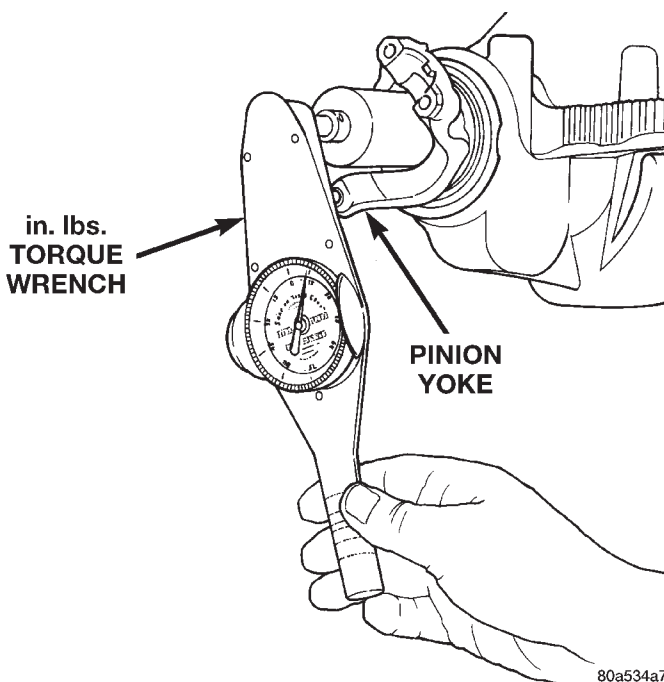

**Fig. 54 Check Pinion Gear Rotation Torque**


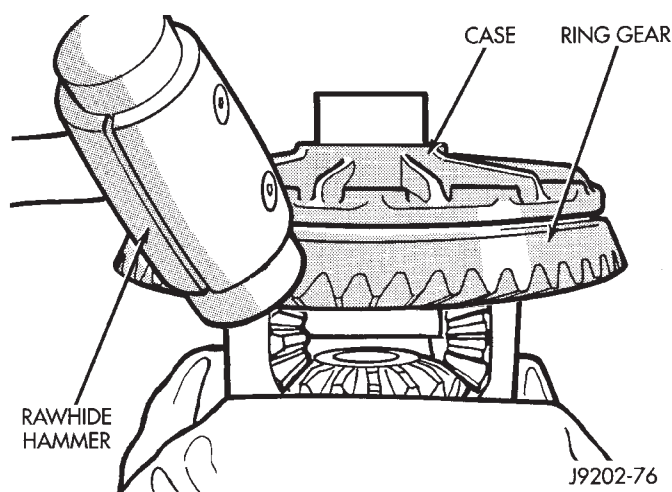


**Fig. 55 Ring Gear Removal**

- (1) Invert the differential case and start two ring gear bolts. This will provide case-to-ring gear bolt hole alignment.
- (2) Invert the differential case in the vise.
- (3) Install new ring gear bolts and alternately tighten to 95–122 N·m (70–90 ft. lbs.) torque (Fig. 56).
- (4) Install differential in axle housing and verify gear mesh and contact pattern.



## REMOVAL AND INSTALLATION (Continued)

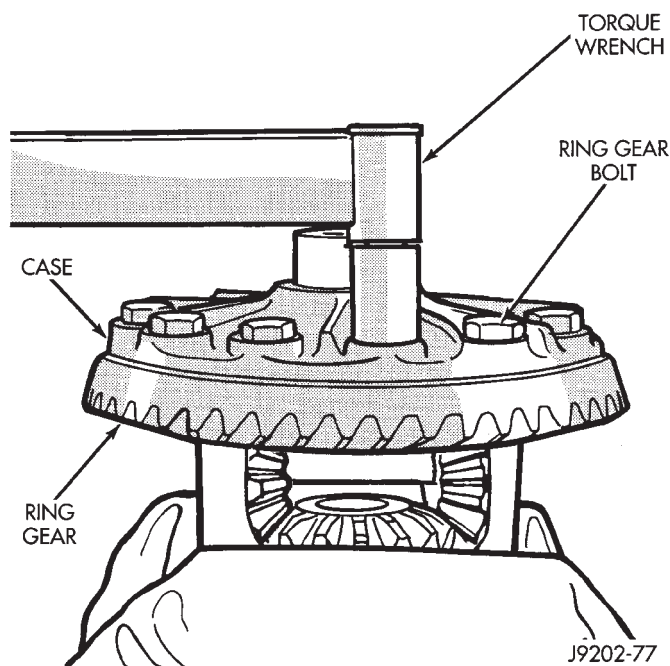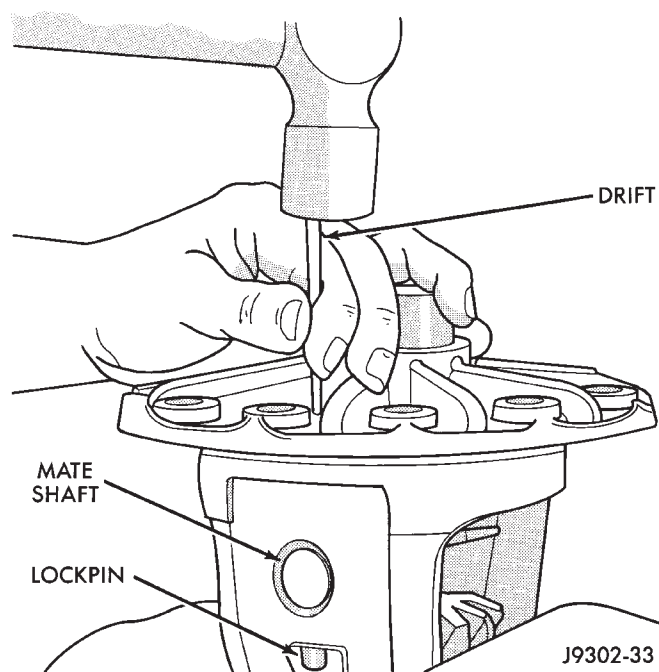**Fig. 56 Ring Gear Bolt Installation****Fig. 57 Mate Shaft Roll Pin Removal**

## DISASSEMBLY AND ASSEMBLY


## STANDARD DIFFERENTIAL

## DISASSEMBLY

- (1) Remove the ring gear.
- (2) Using a suitable roll pin punch, drive out the roll pin holding pinion gear mate shaft in the differential case (Fig. 57).
- (3) Remove the pinion gear mate shaft from the differential case and the pinion mate gears.
- (4) Rotate differential side gears and remove the pinion mate gears and thrust washers (Fig. 58).
- (5) Remove the differential side gears and thrust washers.

## ASSEMBLY

- (1) Install the differential side gears and thrust washers.
- (2) Install the pinion mate gears and thrust washers.
- (3) Install the pinion gear mate shaft. Align the roll pin holes in shaft and the differential case.
- (4) Install the roll pin to hold the pinion mate shaft in the differential case (Fig. 59).
- (5) Install the ring gear.
- (6) Lubricate all differential components with hypoid gear lubricant.

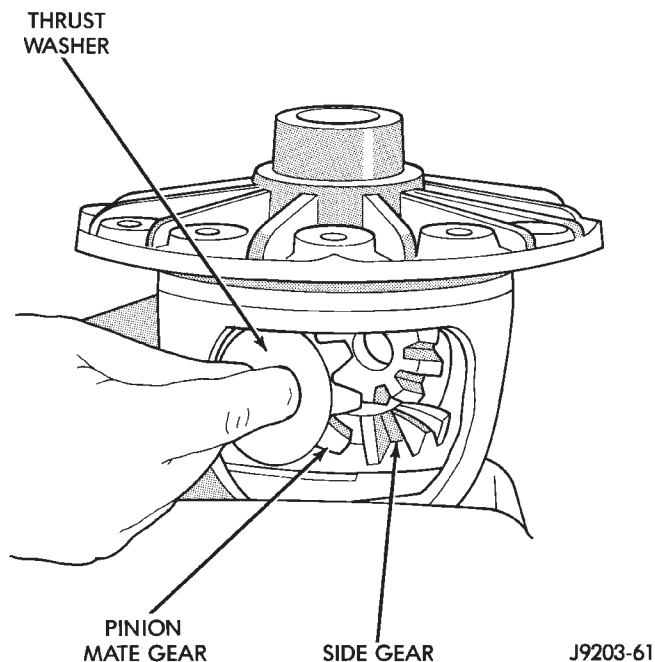**Fig. 58 Pinion Mate Gear Removal**

## FINAL ASSEMBLY

- (1) Scrape the residual sealant from the housing and cover mating surfaces. Clean the mating surfaces with mineral spirits. Apply a bead of Mopar® Silicone Rubber Sealant, or equivalent, on the housing cover (Fig. 60).

**Install the housing cover within 5 minutes after applying the sealant.**



## DISASSEMBLY AND ASSEMBLY (Continued)

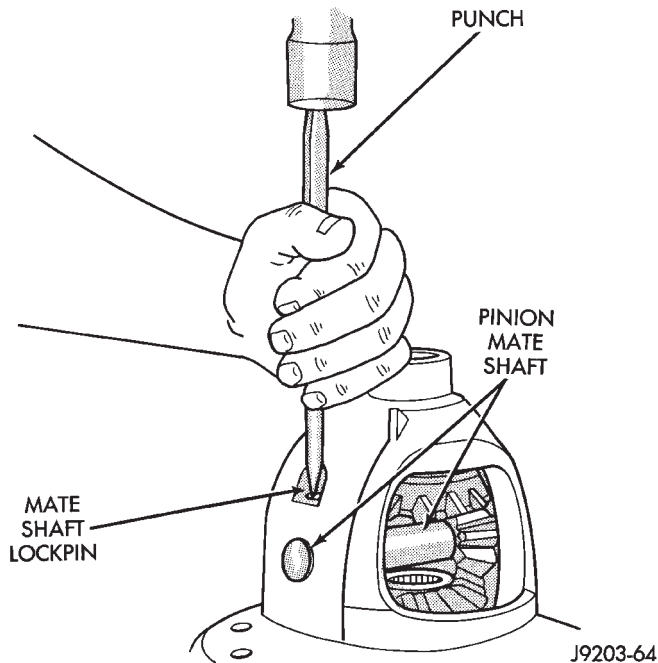


Fig. 59 Mate Shaft Roll Pin Installation

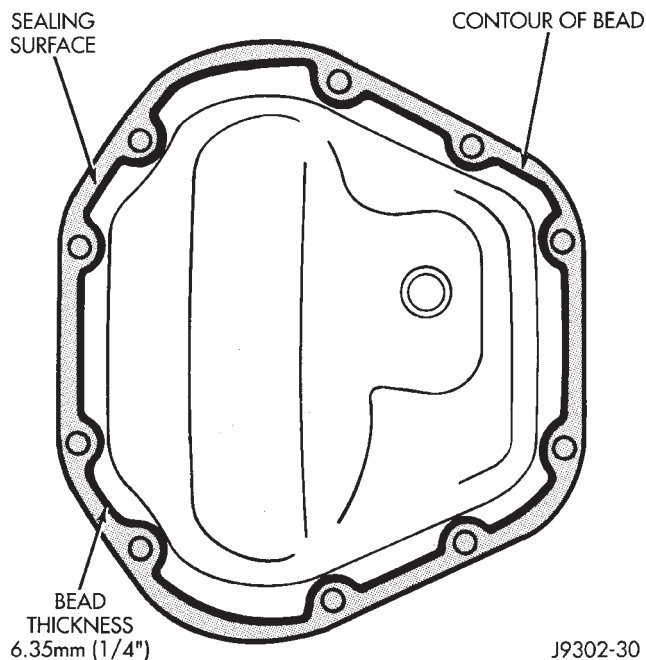


Fig. 60 Typical Housing Cover With Sealant

(2) Install the cover on the differential with the attaching bolts. Install the identification tag. Tighten the cover bolts to 41 N·m (30 ft. lbs.) torque.

**CAUTION:** Overfilling the differential can result in lubricant foaming and overheating.

(3) Refill the differential housing with gear lubricant. Refer to the Lubricant Specifications section of this group for the gear lubricant requirements.

(4) Install the fill hole plug.

## CLEANING AND INSPECTION

## CARDAN U-JOINT

Clean all the U-joint yoke bores with cleaning solvent and a wire brush. Ensure that all the rust and foreign matter are removed from the bores.

Inspect the yokes for distortion, cracks and worn bearing cap bores.

Replace the complete U-joint if any of the components are defective.

## AXLE COMPONENTS

Wash differential components with cleaning solvent and dry with compressed air. **Do not steam clean the differential components.**

Wash bearings with solvent and towel dry, or dry with compressed air. **DO NOT** spin bearings with compressed air. **Cup and bearing must be replaced as matched sets only.**

Clean axle shaft tubes and oil channels in housing. Inspect for;

- Smooth appearance with no broken/dented surfaces on the bearing rollers or the roller contact surfaces.
- Bearing cups must not be distorted or cracked.
- Machined surfaces should be smooth and without any raised edges.
- Raised metal on shoulders of cup bores should be removed with a hand stone.
- Wear and damage to pinion gear mate shaft, pinion gears, side gears and thrust washers. Replace as a matched set only.
- Ring and pinion gear for worn and chipped teeth.
- Ring gear for damaged bolt threads. Replaced as a matched set only.
- Pinion yoke for cracks, worn splines, pitted areas, and a rough/corroded seal contact surface. Repair or replace as necessary.
- Preload shims for damage and distortion. Install new shims, if necessary.

## ADJUSTMENTS


## PINION GEAR DEPTH

## GENERAL INFORMATION

Ring and pinion gears are supplied as matched sets only. The identifying numbers for the ring and pinion gear are etched into the face of each gear (Fig. 61). A plus (+) number, minus (−) number or zero (0) is etched into the face of the pinion gear. This number is the amount (in thousandths of an inch) the

## ADJUSTMENTS (Continued)


depth varies from the standard depth setting of a pinion etched with a (0). The standard setting from the center line of the ring gear to the back face of the pinion is 92.08 mm (3.625 in.). The standard depth provides the best gear tooth contact pattern. Refer to Backlash and Contact Pattern Analysis paragraph in this section for additional information.

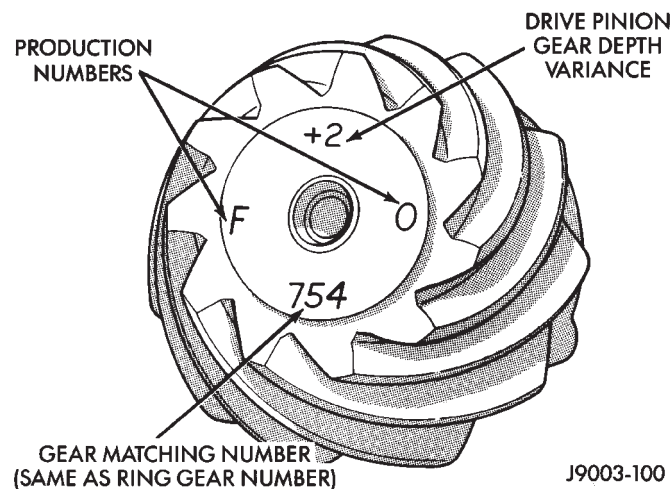

**Fig. 61 Pinion Gear ID Numbers**

Compensation for pinion depth variance is achieved with select shims. The shims are placed behind the rear pinion bearing cup (Fig. 62).

If a new gear set is being installed, note the depth variance etched into both the original and replacement pinion gear. Add or subtract the thickness of the original depth shims to compensate for the difference in the depth variances. Refer to the Depth Variance chart.

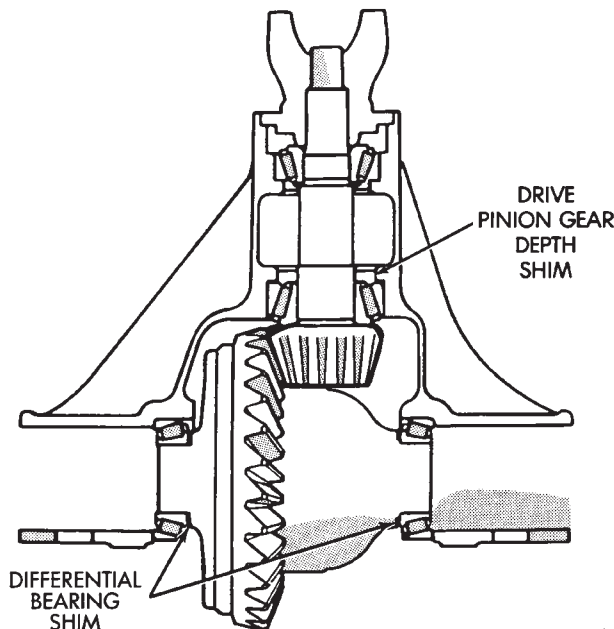

**Fig. 62 Shim Locations**

Note where Old and New Pinion Marking columns intersect. Intersecting figure represents plus or minus the amount needed.

Note the etched number on the face of the drive pinion gear (-1, -2, 0, +1, +2, etc.). The numbers represent thousands of an inch deviation from the standard. If the number is negative, add that value to the required thickness of the depth shims. If the number is positive, subtract that value from the thickness of the depth shim. If the number is 0 no change is necessary.


### PINION GEAR DEPTH VARIANCE

Original Pinion Gear Depth Variance	Replacement Pinion Gear Depth Variance								
	-4	-3	-2	-1	0	+1	+2	+3	+4
+4	+0.008	+0.007	+0.006	+0.005	+0.004	+0.003	+0.002	+0.001	0
+3	+0.007	+0.006	+0.005	+0.004	+0.003	+0.002	+0.001	0	-0.001
+2	+0.006	+0.005	+0.004	+0.003	+0.002	+0.001	0	-0.001	-0.002
+1	+0.005	+0.004	+0.003	+0.002	+0.001	0	-0.001	-0.002	-0.003
0	+0.004	+0.003	+0.002	+0.001	0	-0.001	-0.002	-0.003	-0.004
-1	+0.003	+0.002	+0.001	0	-0.001	-0.002	-0.003	-0.004	-0.005
-2	+0.002	+0.001	0	-0.001	-0.002	-0.003	-0.004	-0.005	-0.006
-3	+0.001	0	-0.001	-0.002	-0.003	-0.004	-0.005	-0.006	-0.007
-4	0	-0.001	-0.002	-0.003	-0.004	-0.005	-0.006	-0.007	-0.008

## ADJUSTMENTS (Continued)

## PINION DEPTH MEASUREMENT AND ADJUSTMENT

Measurements are taken with pinion bearing cups and pinion bearings installed in the axle housing without any shims placed behind the rear pinion bearing cup. Take measurements with Pinion Gauge Set 6774 and Dial Indicator C-3339 (Fig. 63).

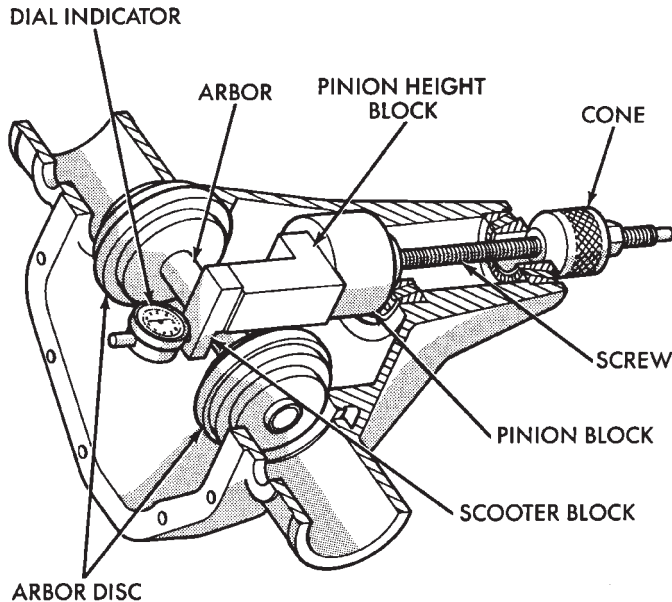


J9403-45

**Fig. 63 Pinion Gear Depth Gauge Tools—Typical**

(1) Assemble Pinion Height Block 6739, Pinion Block 6733, and rear pinion bearing onto Screw 6741 (Fig. 63).

(2) Insert assembled height gauge components, rear bearing and screw into axle housing through pinion bearing cups (Fig. 64).

(3) Install front pinion bearing cone and Cone-nut 6740 hand tight (Fig. 63).

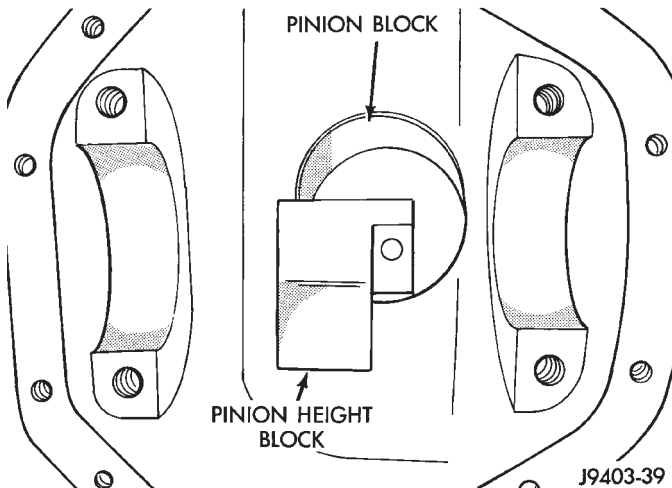


J9403-39

**Fig. 64 Pinion Height Block—Typical**

(4) Place Arbor Disc 6732 on Arbor D-115-3 in position in axle housing side bearing cradles (Fig. 65). Install differential bearing caps on Arbor Discs and tighten cap bolts to 41 N·m (30 ft. lbs.).

**NOTE:** Arbor Discs 6732 has different step diameters to fit other axles. Choose proper step for axle being serviced.

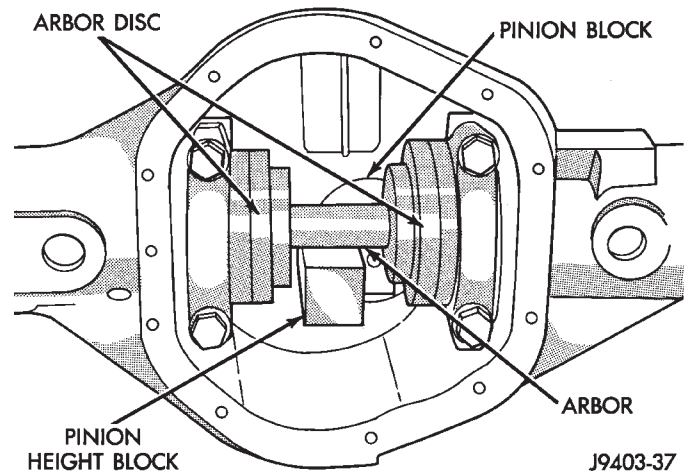

J9403-37

**Fig. 65 Gauge Tools In Housing—Typical**

(5) Assemble Dial Indicator C-3339 into Scooter Block D-115-2 and secure set screw.

(6) Place Scooter Block/Dial Indicator in position in axle housing so dial probe and scooter block are flush against the rearward surface of the pinion height block (Fig. 63). Hold scooter block in place and zero the dial indicator face to the pointer. Tighten dial indicator face lock screw.


(7) With scooter block still in position against the pinion height block, slowly slide the dial indicator probe over the edge of the pinion height block.

(8) Slide the dial indicator probe across the gap between the pinion height block and the arbor bar with the scooter block against the pinion height block (Fig. 66). When the dial probe contacts the arbor bar, the dial pointer will turn clockwise. Bring dial pointer back to zero against the arbor bar, do not turn dial face. Continue moving the dial probe to the crest of the arbor bar and record the highest reading. If the dial indicator can not achieve the zero reading, the rear bearing cup or the pinion depth gauge set is not installed correctly.

(9) Select a shim equal to the dial indicator reading plus the drive pinion gear depth variance number etched in the face of the pinion gear (Fig. 61). For example, if the depth variance is -2, add +0.002 in. to the dial indicator reading.

## ADJUSTMENTS (Continued)

**NOTE:** If an oil slinger is used behind the inner pinion bearing cone, deduct the thickness of the slinger from the dial indicator reading and use that total for shim selection.

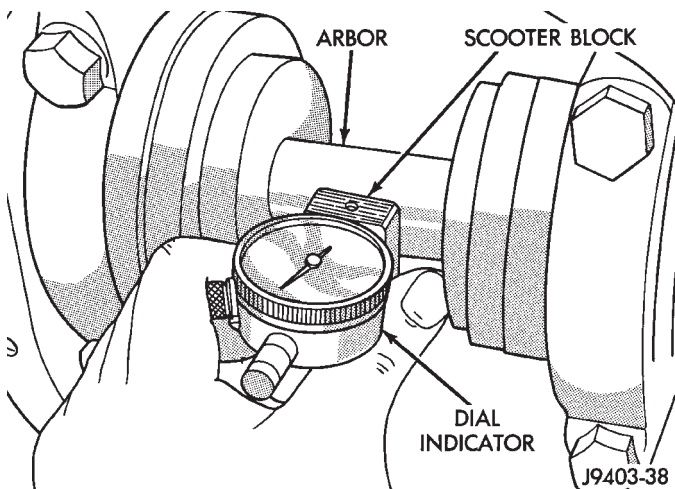


**Fig. 66 Pinion Gear Depth Measurement—Typical**  
**DIFFERENTIAL BEARING PRELOAD AND GEAR BACKLASH**

## INTRODUCTION

Differential side bearing preload and gear backlash is achieved by selective shims positioned behind the differential side bearing cones. The proper shim thickness can be determined using slip-fit dummy bearings D-348 in place of the differential side bearings and a dial indicator C-3339. Before proceeding with the differential bearing preload and gear backlash measurements, measure the pinion gear depth and prepare the pinion gear for installation. Establishing proper pinion gear depth is essential to establishing gear backlash and tooth contact patterns. After the overall shim thickness to take up differential side play is measured, the pinion gear is installed, and the gear backlash shim thickness is measured. The overall shim thickness is the total of the dial indicator reading and the preload specification added together. The gear backlash measurement determines the thickness of the shim used on the ring gear side of the differential case. Subtract the gear backlash shim thickness from the total overall shim thickness and select that amount for the pinion gear side of the differential (Fig. 67). Differential shim measurements are performed with axle spreader W-129-B removed.


## SHIM SELECTION

**NOTE:** It is difficult to salvage the differential side bearings during the removal procedure. Install replacement bearings if necessary.

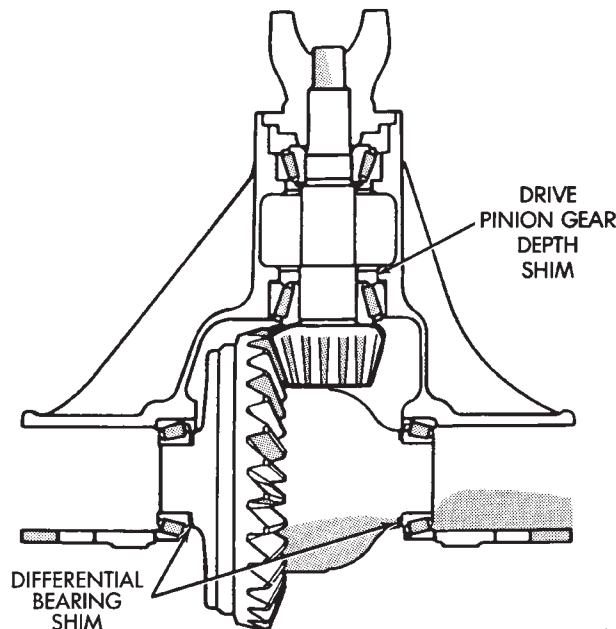

**Fig. 67 Axle Adjustment Shim Locations**

- (1) Remove differential side bearings from differential case.
- (2) Remove factory installed shims from differential case.
- (3) Install ring gear on differential case and tighten bolts to specification.
- (4) Install dummy side bearings D-348 on differential case.
- (5) Install differential case in axle housing.
- (6) Install the marked bearing caps in their correct positions. Install and snug the bolts (Fig. 68).

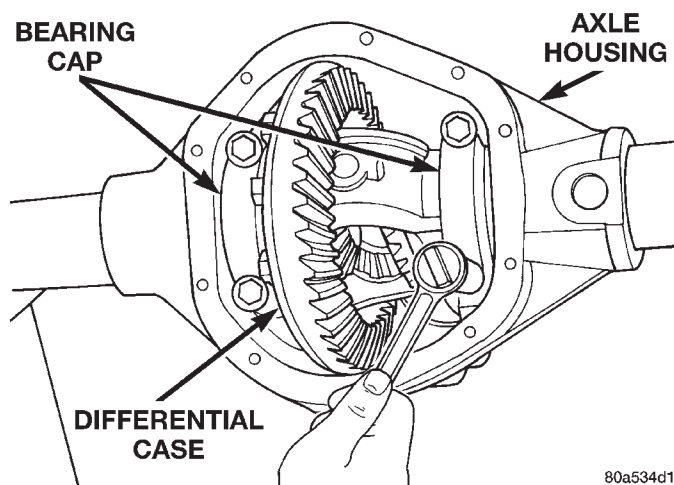


**Fig. 68 Tighten Bolts Holding Bearing Caps**


- (7) Using a dead-blow type mallet, seat the differential dummy bearings to each side of the axle housing (Fig. 69) and (Fig. 70).



## ADJUSTMENTS (Continued)

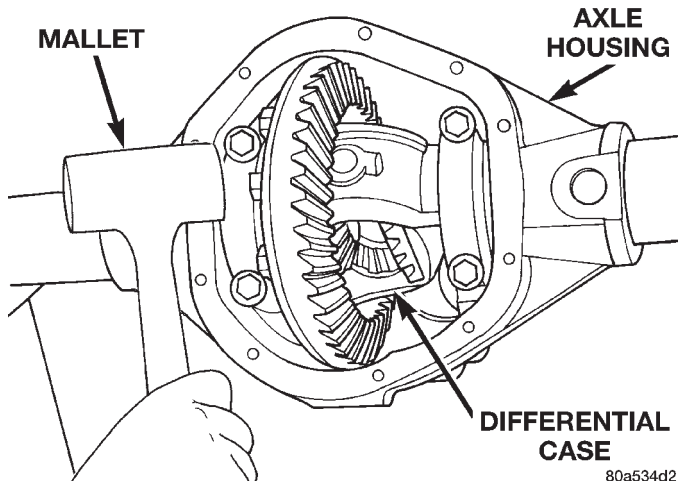

**Fig. 69 Seat Pinion Gear Side Differential Dummy Side Bearing**

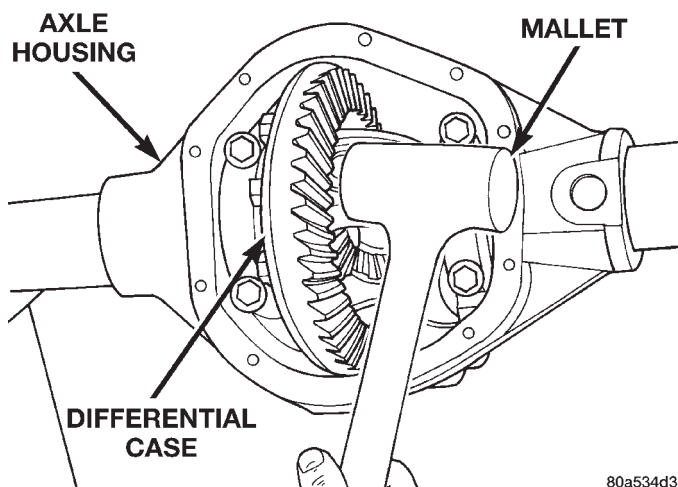

**Fig. 70 Seat Ring Gear Side Differential Dummy Side Bearing**


(8) Thread guide stud C-3288-B into rear cover bolt hole below ring gear (Fig. 71).

(9) Attach a dial indicator C-3339 to guide stud. Position the dial indicator plunger on a flat surface between the ring gear bolt heads (Fig. 71).


(10) Push and hold differential case to pinion gear side of axle housing (Fig. 72).

(11) Zero dial indicator face to pointer (Fig. 72).

(12) Push and hold differential case to ring gear side of the axle housing (Fig. 73).

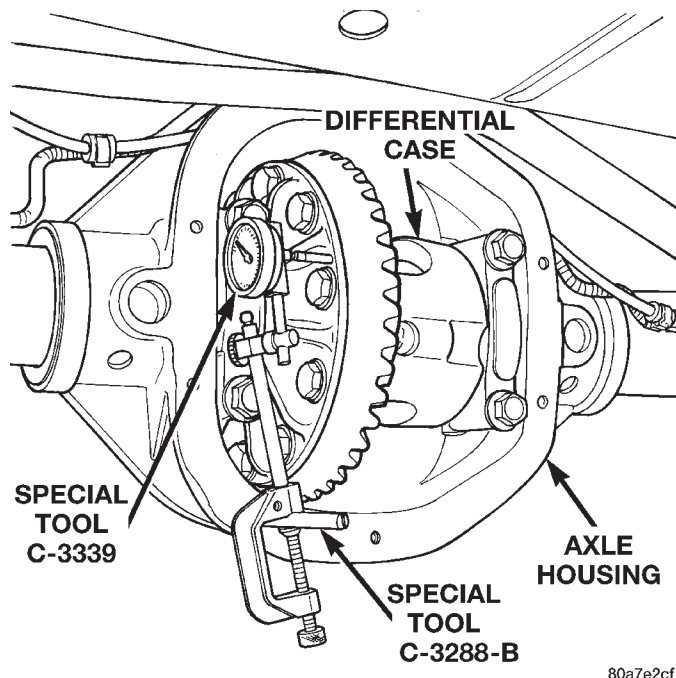

**Fig. 71 Differential Side play Measurement**

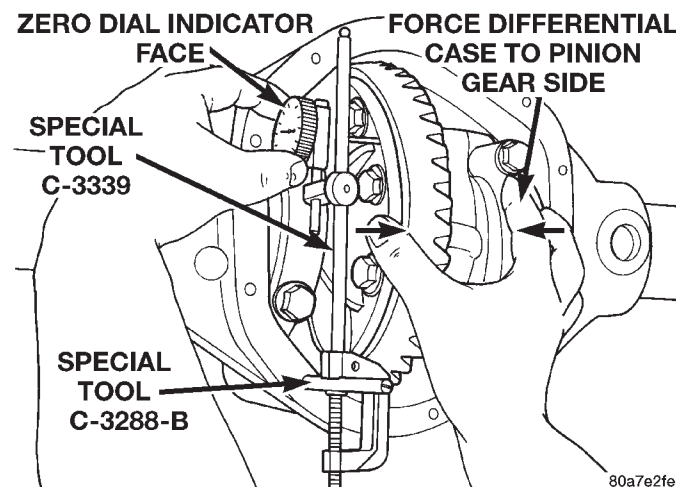


**Fig. 72 Hold Differential Case and Zero Dial Indicator**



## ADJUSTMENTS (Continued)

(13) Record dial indicator reading (Fig. 73).

(14) Add 0.008 in. (0.2 mm) to the zero end play total. This new total represents the thickness of shims to compress, or preload the new bearings when the differential is installed.

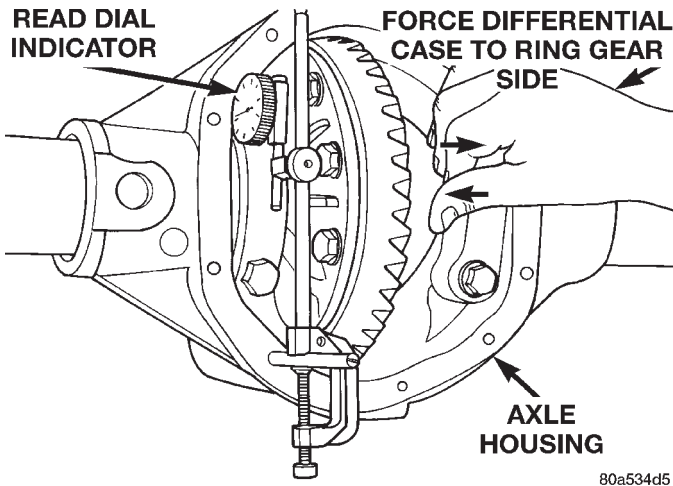

**Fig. 73 Hold Differential Case and Read Dial Indicator**

(15) Rotate dial indicator out of the way on the guide stud.

(16) Remove differential case and dummy bearings from axle housing.

(17) Install the pinion gear in axle housing. Install the pinion yoke, or flange, and establish the correct pinion rotating torque.

(18) Install differential case and dummy bearings D-348 in axle housing (without shims), install bearing caps and tighten bolts snug.

(19) Seat ring gear side dummy bearing (Fig. 70).

(20) Position the dial indicator plunger on a flat surface between the ring gear bolt heads. (Fig. 71).

(21) Push and hold differential case toward pinion gear (Fig. 74).

(22) Zero dial indicator face to pointer (Fig. 74).

(23) Push and hold differential case to ring gear side of the axle housing (Fig. 75).

(24) Record dial indicator reading (Fig. 75).


(25) Subtract 0.002 in. (0.05 mm) from the dial indicator reading to compensate for backlash between ring and pinion gears. This total is the thickness shim required to achieve proper backlash.

(26) Subtract the backlash shim thickness from the total preload shim thickness. The remainder is the shim thickness required on the pinion side of the axle housing.


(27) Rotate dial indicator out of the way on guide stud.

(28) Remove differential case and dummy bearings from axle housing.

(29) Install side bearing shims on differential case hubs.

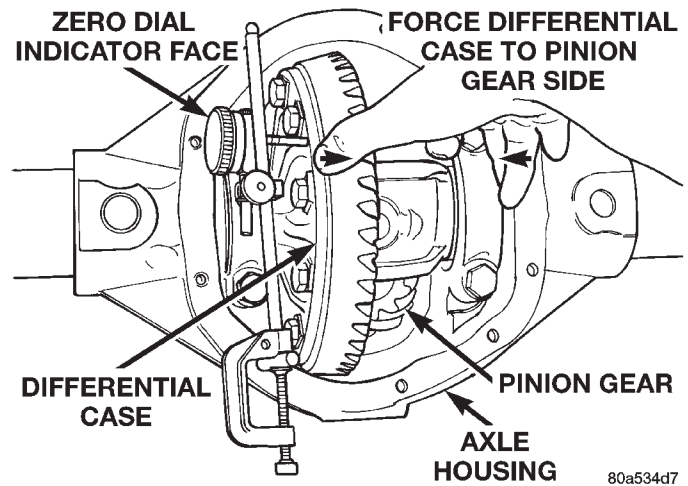

**Fig. 74 Hold Differential Case and Zero Dial Indicator**

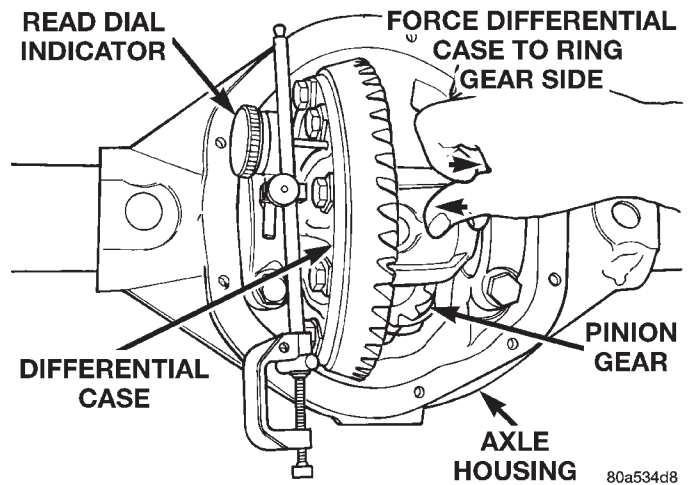

**Fig. 75 Hold Differential Case and Read Dial Indicator**

(30) Install side bearings and cups on differential case.

(31) Install spreader W-129-B, utilizing some items from Adapter Set 6987, on axle housing and spread axle opening enough to receive differential case.

(32) Install differential case in axle housing.

(33) Remove spreader from axle housing.

(34) Rotate the differential case several times to seat the side bearings.

(35) Position the indicator plunger against a ring gear tooth (Fig. 76).

(36) Push and hold ring gear upward while not allowing the pinion gear to rotate.

(37) Zero dial indicator face to pointer.


(38) Push and hold ring gear downward while not allowing the pinion gear to rotate. Dial indicator reading should be between 0.12 mm (0.005 in.) and 0.20 mm (0.008 in.). If backlash is not within specifications transfer the necessary amount of shim thick-

## ADJUSTMENTS (Continued)

ness from one side of the axle housing to the other (Fig. 77).

(39) Verify differential case and ring gear runout by measuring ring to pinion gear backlash at several locations around the ring gear. Readings should not vary more than 0.05 mm (0.002 in.). If readings vary more than specified, the ring gear or the differential case is defective.

After the proper backlash is achieved, perform Gear Contact Pattern Analysis procedure.

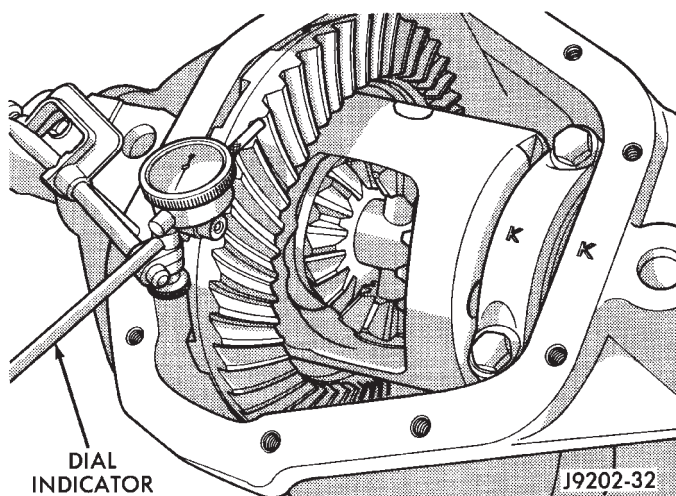


**Fig. 76 Ring Gear Backlash Measurement**

## GEAR CONTACT PATTERN ANALYSIS

The ring and pinion gear teeth contact patterns will show if the pinion gear depth is correct in the axle housing. It will also show if the ring gear backlash has been adjusted correctly. The backlash can be adjusted within specifications to achieve desired tooth contact patterns.

(1) Apply a thin coat of hydrated ferric oxide, or equivalent, to the drive and coast side of the ring gear teeth.

(2) Wrap, twist, and hold a shop towel around the pinion yoke to increase the turning resistance of the pinion gear. This will provide a more distinct contact pattern.


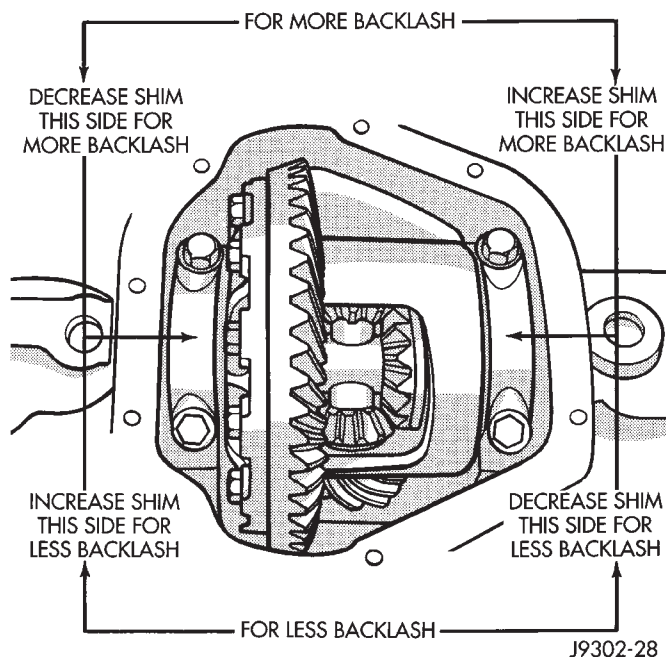

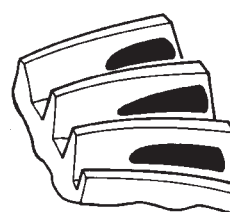

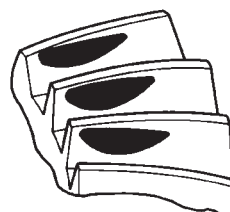
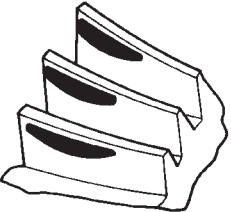
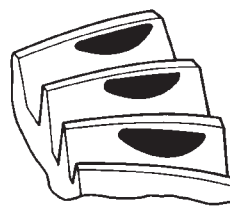
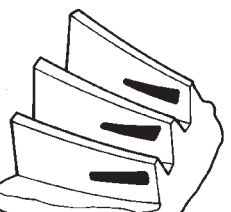



**Fig. 77 Backlash Shim Adjustment**

(3) Using a boxed end wrench on a ring gear bolt, Rotate the differential case one complete revolution in both directions while a load is being applied from shop towel.

The areas on the ring gear teeth with the greatest degree of contact against the pinion gear teeth will squeegee the compound to the areas with the least amount of contact. Note and compare patterns on the ring gear teeth to Gear Tooth Contact Patterns chart (Fig. 78) and adjust pinion depth and gear backlash as necessary.

## ADJUSTMENTS (Continued)
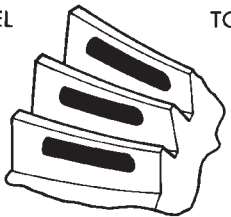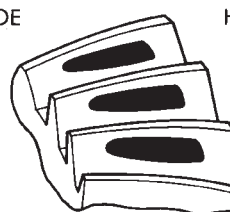
<p>DRIVE SIDE OF RING GEAR TEETH</p> <p>HEEL                      TOE</p> 	<p>COAST SIDE OF RING GEAR TEETH</p> <p>TOE                      HEEL</p> 	<p>DESIRABLE CONTACT PATTERN. PATTERN SHOULD BE CENTERED ON THE DRIVE SIDE OF TOOTH. PATTERN SHOULD BE CENTERED ON THE COAST SIDE OF TOOTH, BUT MAY BE SLIGHTLY TOWARD THE TOE. THERE SHOULD ALWAYS BE SOME CLEARANCE BETWEEN CONTACT PATTERN AND TOP OF THE TOOTH.</p>
		<p>RING GEAR BACKLASH CORRECT. <b>THINNER</b> PINION GEAR DEPTH SHIM REQUIRED.</p>
		<p>RING GEAR BACKLASH CORRECT. <b>THICKER</b> PINION GEAR DEPTH SHIM REQUIRED.</p>
		<p>PINION GEAR DEPTH SHIM CORRECT. <b>DECREASE</b> RING GEAR BACKLASH.</p>
		<p>PINION GEAR DEPTH SHIM CORRECT. <b>INCREASE</b> RING GEAR BACKLASH.</p>

J9003-24

Fig. 78 Gear Tooth Contact Patterns

## SPECIFICATIONS

## 181 FBI AXLE






Axle Type	Hypoid
Lubricant	SAE Thermally Stable 80W-90
Lube Capacity	1.2 L (2.5 pts.)
Axle Ratio	3.07, 3.55, 3.73, 4.10
Differential Side Gear Clearance	.012–.020 mm (0.005–0.008 in.)
Ring Gear Diameter	18.09 cm (7.125 in.)
Backlash	.0–.015 mm (0.005–0.008 in.)
Pinion Std. Depth	.92.1 mm (3.625 in.)
Pinion Bearing Rotating Torque	
Original Bearings	1–2 N·m (10–20 in. lbs.)
New Bearings	1.5–4 N·m (15–35 in. lbs.)

## 181 FBI AXLE


DESCRIPTION	TORQUE
Fill Hole Plug	34 N·m (25 ft. lbs.)
Diff. Cover Bolt	41 N·m (30 ft. lbs.)
Bearing Cap Bolt	61 N·m (45 ft. lbs.)
Ring Gear Bolt	.95–122 N·m (70–90 ft. lbs.)
Axle Nut	237 N·m (175 ft. lbs.)
Hub Brg. Bolt	102 N·m (75 ft. lbs.)
Lower Ball Stud	108 N·m (80 ft. lbs.)
Upper Ball Stud	101 N·m (75 ft. lbs.)

## SPECIAL TOOLS


## 181 FBI AXLE

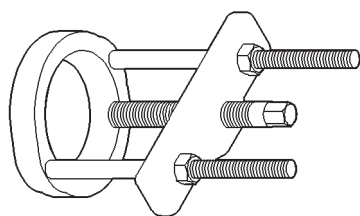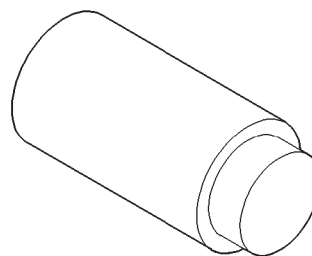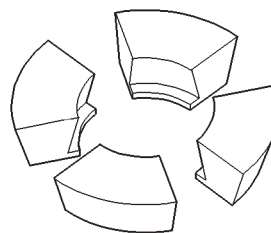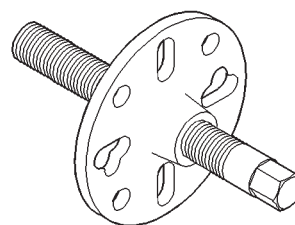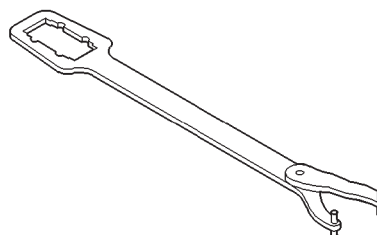*Puller—C-293-PA**Plug—SP-3289**Adapter—C-293-39**Puller—C-452**Wrench—C-3281*


SPECIAL TOOLS (Continued)

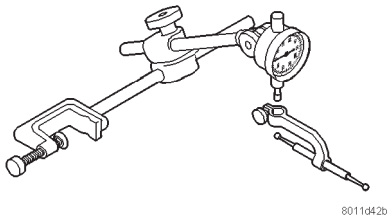


**Dial Indicator—C-3339**

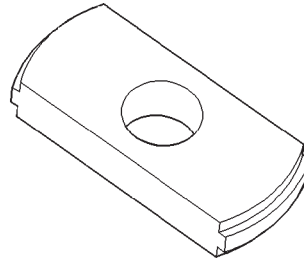


**Remover—D-149**

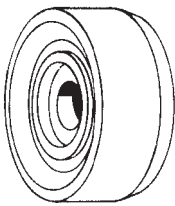


**Driver—C-3716-A**

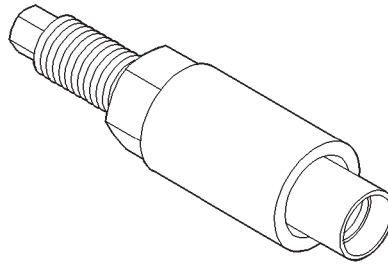


**Installer—W-162-D**

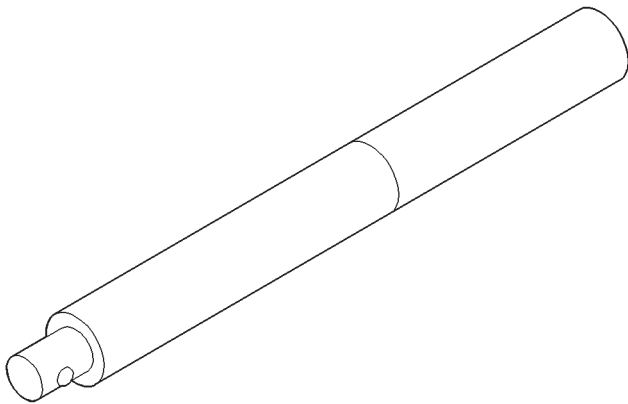


**Handle—C-4171**

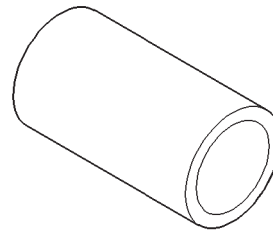

**Cup—8109**

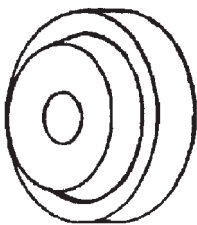










**Installer—D-146**

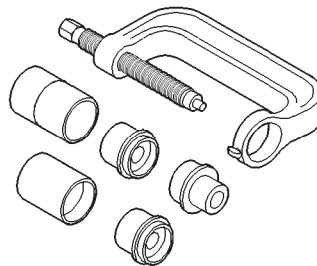


**Remover/Installer—6289**




## SPECIAL TOOLS (Continued)

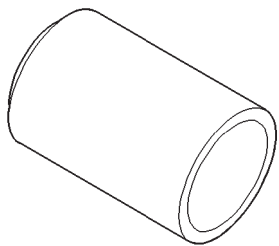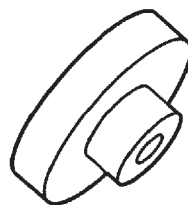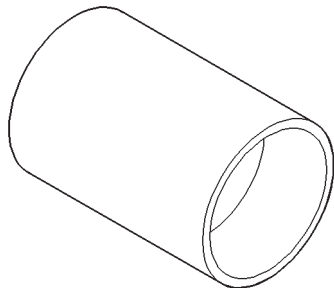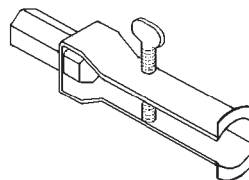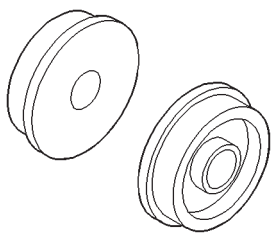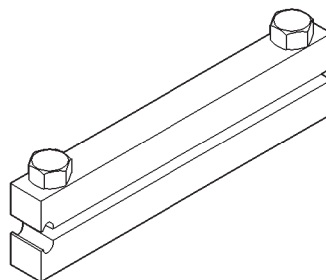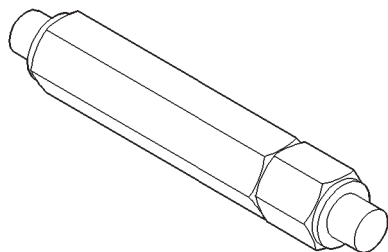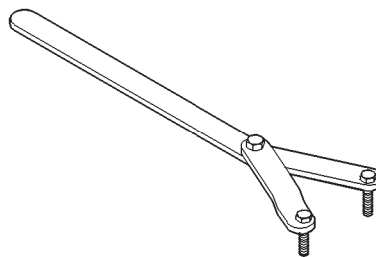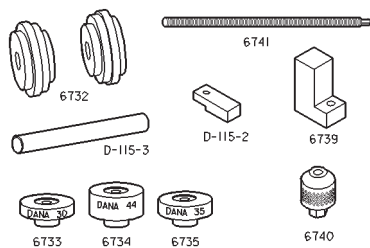**Installer—6761****Gauge Block—6733****Installer—6752****Puller—7794-A****Installer Discs—8110****Installer—C-4975-A****Turnbuckle—6797****Spanner—6958****Tool Set, Pinion Depth—6774**


SPECIAL TOOLS (Continued)

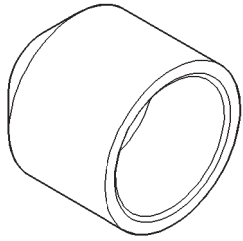


**Installer—C-3972-A**

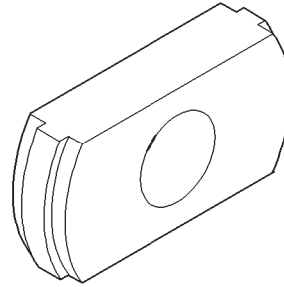


**Remover—C-4345**

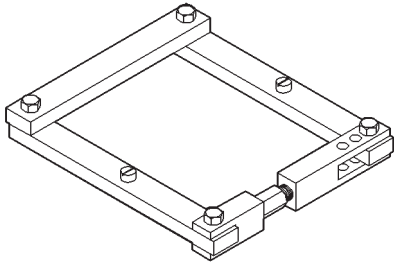


**Spreader—W-129-B**

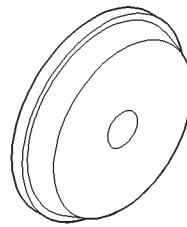


**Installer—D-130**

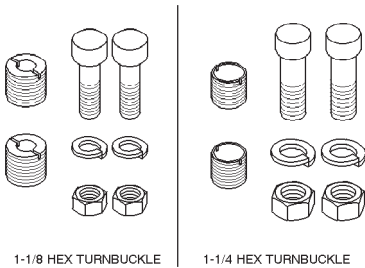

**Adapter Kit—6987**

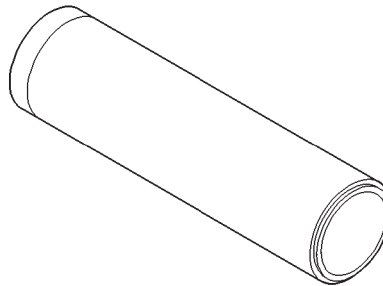

**Installer—W-262**

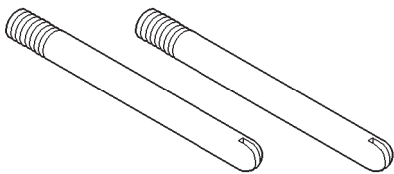

**Pilot Stud—C-3288-B**

## 194 RBI AXLE

## INDEX

	page		page
<b>GENERAL INFORMATION</b>		<b>DIFFERENTIAL</b> .....	65
194 RBI AXLE .....	52	<b>FINAL ASSEMBLY</b> .....	72
LUBRICANT SPECIFICATIONS .....	52	<b>PINION GEAR</b> .....	68
<b>DESCRIPTION AND OPERATION</b>		<b>PINION SHAFT SEAL</b> .....	59
STANDARD DIFFERENTIAL .....	53	<b>REAR AXLE</b> .....	58
TRAC-LOK OPERATION .....	53	<b>RING GEAR</b> .....	67
<b>DIAGNOSIS AND TESTING</b>		<b>DISASSEMBLY AND ASSEMBLY</b>	
BEARING NOISE .....	54	STANDARD DIFFERENTIAL .....	73
DRIVELINE SNAP .....	55	TRAC-LOK DIFFERENTIAL .....	73
GEAR NOISE .....	54	<b>CLEANING AND INSPECTION</b>	
GENERAL INFORMATION .....	54	AXLE COMPONENTS .....	77
LOW SPEED KNOCK .....	55	TRAC-LOK .....	78
TRAC-LOK DIFFERENTIAL NOISE .....	55	<b>ADJUSTMENTS</b>	
TRAC-LOK TEST .....	58	DIFFERENTIAL BEARING PRELOAD AND	
VIBRATION .....	55	GEAR BACKLASH .....	80
<b>SERVICE PROCEDURES</b>		GEAR CONTACT PATTERN ANALYSIS .....	82
LUBRICANT CHANGE .....	58	PINION GEAR DEPTH .....	78
<b>REMOVAL AND INSTALLATION</b>		<b>SPECIFICATIONS</b>	
AXLE SHAFT SEAL AND BEARING .....	64	194 RBI AXLE .....	84
AXLE SHAFT .....	64	194 RBI AXLE .....	84
COLLAPSIBLE SPACER .....	61	<b>SPECIAL TOOLS</b>	
DIFFERENTIAL SIDE BEARINGS .....	67	194 RBI AXLE .....	84

## GENERAL INFORMATION

## 194 RBI AXLE

The 194 Rear Beam-design Iron (RBI) axle housing has an iron center casting (differential housing) with axle shaft tubes extending from either side. The tubes are pressed into and welded to the differential housing to form a one-piece axle housing.

The integral type, hypoid gear design, housing has the centerline of the pinion set below the centerline of the ring gear.

The axle has a vent hose to relieve internal pressure caused by lubricant vaporization and internal expansion.

The axles are equipped with semi-floating axle shafts, meaning that loads are supported by the axle shaft and bearings. The axle shafts are retained by C-clips in the differential side gears.

The cover provides a means for servicing the differential without removing the axle.

For vehicles equipped with ABS brakes, the axles have a tone ring pressed onto the axle shaft. Use care when removing axle shafts to ensure that the tone wheel or the wheel speed sensor are not damaged.

The 194 RBI axle has the assembly part number and gear ratio listed on a tag. The tag is attached to the differential housing by a cover bolt. Build date identification codes are stamped on the cover side of an axle shaft tube.

The differential case is a one-piece design. The differential pinion mate shaft is retained with a threaded pin. Differential bearing preload and ring gear backlash is adjusted by the use of selective spacer shims. Pinion bearing preload is set and maintained by the use of a collapsible spacer (Fig. 1).


## LUBRICANT SPECIFICATIONS

A multi-purpose, hypoid gear lubricant which conforms to the following specifications should be used. Mopar® Hypoid Gear Lubricant conforms to all of these specifications.

- The lubricant should have MIL-L-2105C and API GL 5 quality specifications.
- Lubricant is a thermally stable SAE 80W-90 gear lubricant.
- Lubricant for axles intended for heavy-duty or trailer tow use is SAE 75W-140 SYNTHETIC gear lubricant.

Trac-lok differentials require the addition of 4 oz. of friction modifier to the axle lubricant. The 194 RBI

## GENERAL INFORMATION (Continued)

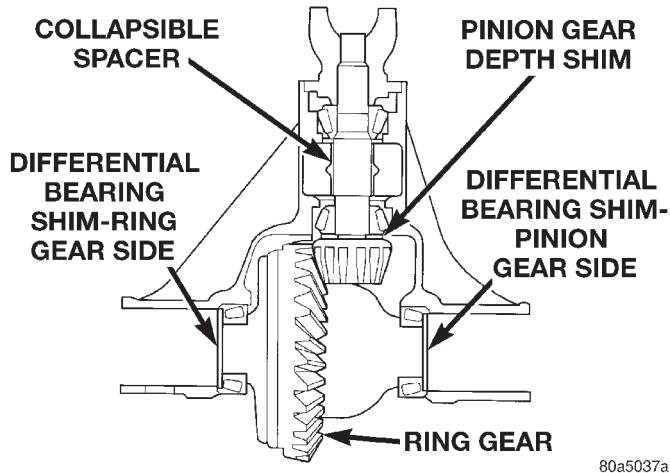

80a5037a

**Fig. 1 Shim Locations**

axle lubricant capacity is 1.66L (3.50 pts.) total, including the friction modifier if necessary.

**CAUTION:** If axle is submerged in water, lubricant must be replaced immediately to avoid possible premature axle failure.

## DESCRIPTION AND OPERATION

**STANDARD DIFFERENTIAL**

The differential gear system divides the torque between the axle shafts. It allows the axle shafts to rotate at different speeds when turning corners.


Each differential side gear is splined to an axle shaft. The pinion gears are mounted on a pinion mate shaft and are free to rotate on the shaft. The pinion gear is fitted in a bore in the differential case and is positioned at a right angle to the axle shafts.

In operation, power flow occurs as follows:


- The pinion gear rotates the ring gear
- The ring gear (bolted to the differential case) rotates the case
- The differential pinion gears (mounted on the pinion mate shaft in the case) rotate the side gears
- The side gears (splined to the axle shafts) rotate the shafts

During straight-ahead driving, the differential pinion gears do not rotate on the pinion mate shaft. This occurs because input torque applied to the gears is divided and distributed equally between the two side gears. As a result, the pinion gears revolve with the pinion mate shaft but do not rotate around it (Fig. 2).

When turning corners, the outside wheel must travel a greater distance than the inside wheel to complete a turn. The difference must be compensated for to prevent the tires from scuffing and skidding through turns. To accomplish this, the differential allows the axle shafts to turn at unequal speeds (Fig.

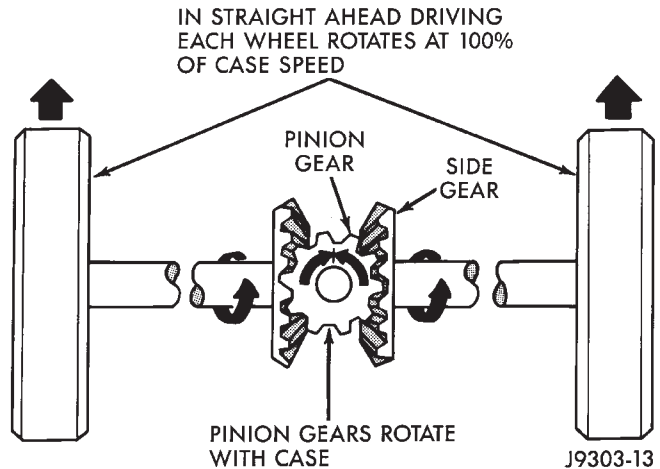**Fig. 2 Differential Operation—Straight Ahead Driving**

3). In this instance, the input torque applied to the pinion gears is not divided equally. The pinion gears now rotate around the pinion mate shaft in opposite directions. This allows the side gear and axle shaft attached to the outside wheel to rotate at a faster speed.

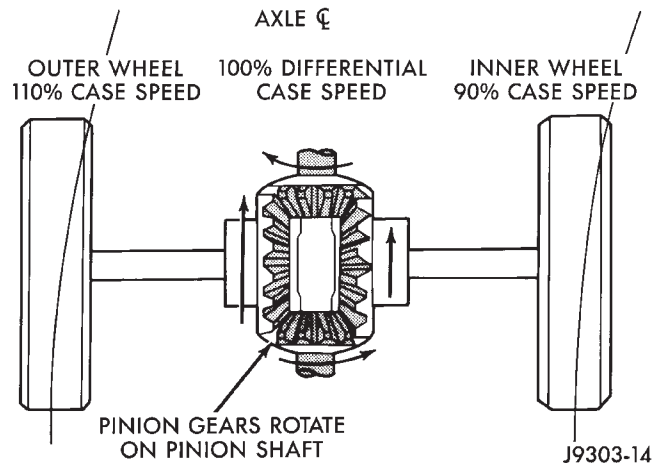
**Fig. 3 Differential Operation—On Turns****TRAC-LOK OPERATION**

In a conventional differential, if one wheel spins, the opposite wheel will generate only as much torque as the spinning wheel.

In the Trac-lok differential, part of the ring gear torque is transmitted through clutch packs which contain multiple discs. The clutches will have radial grooves on the plates, and concentric grooves on the discs or bonded fiber material that is smooth in appearance.

In operation, the Trac-lok clutches are engaged by two concurrent forces. The first being the preload force exerted through Belleville spring washers within the clutch packs. The second is the separating forces generated by the side gears as torque is applied through the ring gear (Fig. 4).

## DESCRIPTION AND OPERATION (Continued)

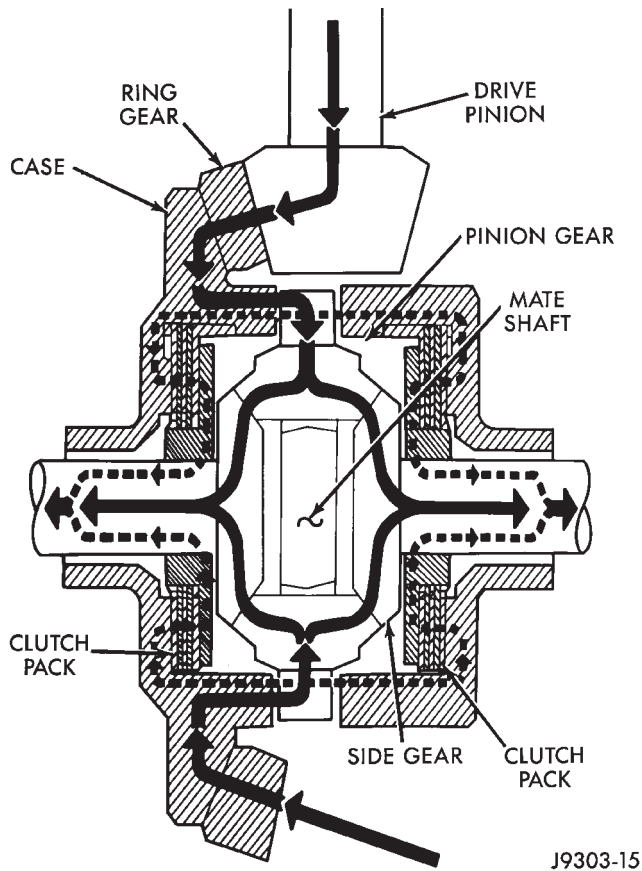

**Fig. 4 Trac-lok Limited Slip Differential Operation**

The Trac-lok design provides the differential action needed for turning corners and for driving straight ahead during periods of unequal traction. When one wheel loses traction, the clutch packs transfer additional torque to the wheel having the most traction. Trac-lok differentials resist wheel spin on bumpy roads and provide more pulling power when one wheel loses traction. Pulling power is provided continuously until both wheels have traction. If both wheels slip due to unequal traction, Trac-lok operation is normal. In extreme cases of differences of traction, the wheel with the least traction may spin.

## DIAGNOSIS AND TESTING

### GENERAL INFORMATION

Axle bearing problem conditions are usually caused by:

- Insufficient or incorrect lubricant.
- Foreign matter/water contamination.
- Incorrect bearing preload torque adjustment.
- Incorrect backlash.

Axle gear problem conditions are usually the result of:

- Insufficient lubrication.
- Incorrect or contaminated lubricant.

- Overloading (excessive engine torque) or exceeding vehicle weight capacity.

- Incorrect clearance or backlash adjustment.

Axle component breakage is most often the result of:

- Severe overloading.
- Insufficient lubricant.
- Incorrect lubricant.
- Improperly tightened components.

### GEAR NOISE

Axle gear noise can be caused by insufficient lubricant, incorrect backlash, tooth contact, or worn/damaged gears.

Gear noise usually happens at a specific speed range. The range is 30 to 40 mph, or above 50 mph. The noise can also occur during a specific type of driving condition. These conditions are acceleration, deceleration, coast, or constant load.

When road testing, accelerate the vehicle to the speed range where the noise is the greatest. Shift out-of-gear and coast through the peak-noise range. If the noise stops or changes greatly:

- Check for insufficient lubricant.
- Incorrect ring gear backlash.
- Gear damage.

Differential side and pinion gears can be checked by turning the vehicle. They usually do not cause noise during straight-ahead driving when the gears are unloaded. The side gears are loaded during vehicle turns. A worn pinion gear mate shaft can also cause a snapping or a knocking noise.

### BEARING NOISE

The axle shaft, differential and pinion gear bearings can all produce noise when worn or damaged. Bearing noise can be either a whining, or a growling sound.

Pinion gear bearings have a constant-pitch noise. This noise changes only with vehicle speed. Pinion bearing noise will be higher because it rotates at a faster rate. Drive the vehicle and load the differential. If bearing noise occurs, the rear pinion bearing is the source of the noise. If the bearing noise is heard during a coast, the front pinion bearing is the source.

Worn or damaged differential bearings usually produce a low pitch noise. Differential bearing noise is similar to pinion bearing noise. The pitch of differential bearing noise is also constant and varies only with vehicle speed.

Axle shaft bearings produce noise and vibration when worn or damaged. The noise generally changes when the bearings are loaded. Road test the vehicle. Turn the vehicle sharply to the left and to the right. This will load the bearings and change the noise



## DIAGNOSIS AND TESTING (Continued)

level. Where axle bearing damage is slight, the noise is usually not noticeable at speeds above 30 mph.

**LOW SPEED KNOCK**

Low speed knock is generally caused by a worn U-joint or by worn side-gear thrust washers. A worn pinion gear shaft bore will also cause low speed knock.

**VIBRATION**

Vibration at the rear of the vehicle is usually caused by a:

- Damaged drive shaft.
- Missing drive shaft balance weight(s).
- Worn or out-of-balance wheels.
- Loose wheel lug nuts.
- Worn U-joint(s).
- Loose/broken springs.
- Damaged axle shaft bearing(s).
- Loose pinion gear nut.
- Excessive pinion yoke run out.
- Bent axle shaft(s).

Check for loose or damaged front-end components or engine/transmission mounts. These components can contribute to what appears to be a rear-end vibration. Do not overlook engine accessories, brackets and drive belts.

All driveline components should be examined before starting any repair.

Refer to Group 22, Wheels and Tires, for additional vibration information.

**DRIVELINE SNAP**

A snap or clunk noise when the vehicle is shifted into gear (or the clutch engaged), can be caused by:

- High engine idle speed
- Loose engine/transmission/transfer case mounts
- Worn U-joints
- Loose spring mounts
- Loose pinion gear nut and yoke
- Excessive ring gear backlash
- Excessive side gear/case clearance

The source of a snap or a clunk noise can be determined with the assistance of a helper. Raise the vehicle on a hoist with the wheels free to rotate. Instruct the helper to shift the transmission into gear. Listen for the noise, a mechanics stethoscope is helpful in isolating the source of a noise.

**TRAC-LOK DIFFERENTIAL NOISE**

The most common problem is a chatter noise when turning corners. Before removing a Trac-lok unit for repair, drain, flush and refill the axle with the specified lubricant. Refer to Lubricant change in this Group.

A container of Mopar® Trac-lok Lubricant (friction modifier) should be added after repair service or during a lubricant change.

After changing the lubricant, drive the vehicle and make 10 to 12 slow, figure-eight turns. This maneuver will pump lubricant through the clutches. This will correct the condition in most instances. If the chatter persists, clutch damage could have occurred.

## DIAGNOSIS AND TESTING (Continued)

## DIAGNOSIS CHART

CONDITION	POSSIBLE CAUSES	CORRECTION
WHEEL NOISE	<ol style="list-style-type: none"> <li>1. Wheel loose.</li> <li>2. Faulty, brinelled wheel bearing.</li> </ol>	<ol style="list-style-type: none"> <li>1. Tighten loose nuts.</li> <li>2. Faulty or brinelled bearings must be replaced.</li> </ol>
AXLE SHAFT NOISE	<ol style="list-style-type: none"> <li>1. Misaligned axle shaft tube.</li> <li>2. Bent or sprung axle shaft.</li> <li>3. End play in drive pinion bearings.</li> <li>4. Excessive gear backlash between ring gear and pinion gear.</li> <li>5. Improper adjustment of drive pinion gear shaft bearings.</li> <li>6. Loose drive pinion gearshaft yoke nut.</li> <li>7. Improper wheel bearing adjustment.</li> <li>8. Scuffed gear tooth contact surfaces.</li> </ol>	<ol style="list-style-type: none"> <li>1. Inspect axle shaft tube alignment. Correct as necessary.</li> <li>2. Replace bent or sprung axle shaft.</li> <li>3. Refer to Drive Pinion Bearing Pre-Load Adjustment.</li> <li>4. Check adjustment of ring gear backlash and pinion gear. Correct as necessary.</li> <li>5. Adjust drive pinion shaft bearings.</li> <li>6. Tighten drive pinion gearshaft yoke nut with specified torque.</li> <li>7. Readjust as necessary.</li> <li>8. If necessary, replace scuffed gears.</li> </ol>
AXLE SHAFT BROKE	<ol style="list-style-type: none"> <li>1. Misaligned axle shaft tube.</li> <li>2. Vehicle overloaded.</li> <li>3. Erratic clutch operation.</li> <li>4. Grabbing clutch.</li> </ol>	<ol style="list-style-type: none"> <li>1. Replace broken axle shaft after correcting axle shaft tube alignment.</li> <li>2. Replace broken axle shaft. Avoid excessive weight on vehicle.</li> <li>3. Replace broken axle shaft after inspecting for other possible causes. Avoid erratic use of clutch.</li> <li>4. Replace broken axle shaft. Inspect clutch and make necessary repairs or adjustments.</li> </ol>
DIFFERENTIAL CASE CRACKED	<ol style="list-style-type: none"> <li>1. Improper adjustment of differential bearings.</li> <li>2. Excessive ring gear backlash.</li> <li>3. Vehicle overloaded.</li> <li>4. Erratic clutch operation.</li> </ol>	<ol style="list-style-type: none"> <li>1. Replace cracked case; examine gears and bearings for possible damage. At reassembly, adjust differential bearings properly.</li> <li>2. Replace cracked case; examine gears and bearings for possible damage. At reassembly, adjust ring gear backlash properly.</li> <li>3. Replace cracked case; examine gears and bearings for possible damage. Avoid excessive weight on vehicle.</li> <li>4. Replace cracked case. After inspecting for other possible causes, examine gears and bearings for possible damage. Avoid erratic use of clutch.</li> </ol>
DIFFERENTIAL GEARS SCORED	<ol style="list-style-type: none"> <li>1. Insufficient lubrication.</li> <li>2. Improper grade of lubricant.</li> <li>3. Excessive spinning of one wheel/tire.</li> </ol>	<ol style="list-style-type: none"> <li>1. Replace scored gears. Scoring marks on the drive face of gear teeth or in the bore are caused by instantaneous fusing of the mating surfaces. Scored gears should be replaced. Fill rear differential housing to required capacity with proper lubricant. Refer to Specifications.</li> <li>2. Replace scored gears. Inspect all gears and bearings for possible damage. Clean and refill differential housing to required capacity with proper lubricant.</li> <li>3. Replace scored gears. Inspect all gears, pinion bores and shaft for damage. Service as necessary.</li> </ol>
LOSS OF LUBRICANT	<ol style="list-style-type: none"> <li>1. Lubricant level too high.</li> </ol>	<ol style="list-style-type: none"> <li>1. Drain excess lubricant by removing fill plug and allow lubricant to level at lower edge of fill plug hole.</li> </ol>

## DIAGNOSIS AND TESTING (Continued)

## CONT., DIAGNOSIS CHART

CONDITION	POSSIBLE CAUSES	CORRECTION
LOSS OF LUBRICANT	<ol style="list-style-type: none"> <li>2. Worn axle shaft seals.</li> <li>3. Cracked differential housing.</li> <li>4. Worn drive pinion gear shaft seal.</li> <li>5. Scored and worn yoke.</li> <li>6. Axle cover not properly sealed.</li> </ol>	<ol style="list-style-type: none"> <li>2. Replace worn seals.</li> <li>3. Repair or replace housing as necessary.</li> <li>4. Replace worn drive pinion gear shaft seal.</li> <li>5. Replace worn or scored yoke and seal.</li> <li>6. Remove cover and clean flange and reseal.</li> </ol>
AXLE OVERHEATING	<ol style="list-style-type: none"> <li>1. Lubricant level too low.</li> <li>2. Incorrect grade of lubricant.</li> <li>3. Bearings adjusted too tight.</li> <li>4. Excessive gear wear.</li> <li>5. Insufficient ring gear backlash.</li> </ol>	<ol style="list-style-type: none"> <li>1. Refill differential housing.</li> <li>2. Drain, flush and refill with correct amount of the correct lubricant.</li> <li>3. Readjust bearings.</li> <li>4. Inspect gears for excessive wear or scoring. Replace as necessary.</li> <li>5. Readjust ring gear backlash and inspect gears for possible scoring.</li> </ol>
GEAR TEETH BROKE (RING GEAR AND PINION)	<ol style="list-style-type: none"> <li>1. Overloading.</li> <li>2. Erratic clutch operation.</li> <li>3. Ice-spotted pavements.</li> <li>4. Improper adjustments.</li> </ol>	<ol style="list-style-type: none"> <li>1. Replace gears. Examine other gears and bearings for possible damage.</li> <li>2. Replace gears and examine the remaining parts for possible damage. Avoid erratic clutch operation.</li> <li>3. Replace gears. Examine the remaining parts for possible damage. Replace parts as required.</li> <li>4. Replace gears. Examine other parts for possible damage. Ensure ring gear backlash is correct.</li> </ol>
AXLE NOISE	<ol style="list-style-type: none"> <li>1. Insufficient lubricant.</li> <li>2. Improper ring gear and drive pinion gear adjustment.</li> <li>3. Unmatched ring gear and drive pinion gear.</li> <li>4. Worn teeth on ring gear or drive pinion gear.</li> <li>5. Loose drive pinion gear shaft bearings.</li> <li>6. Loose differential bearings.</li> <li>7. Misaligned or sprung ring gear.</li> <li>8. Loose differential bearing cap bolts</li> </ol>	<ol style="list-style-type: none"> <li>1. Refill axle with correct amount of the proper lubricant. Also inspect for leaks and correct as necessary.</li> <li>2. Check ring gear and pinion gear teeth contact pattern.</li> <li>3. Remove unmatched ring gear and drive pinion gear. Replace with matched gear and drive pinion gear set.</li> <li>4. Check teeth on ring gear and drive pinion gear for correct contact. If necessary, replace with new matched set.</li> <li>5. Adjust drive pinion gearshaft bearing preload torque.</li> <li>6. Adjust differential bearing preload torque.</li> <li>7. Measure ring gear runout.</li> <li>8. Tighten with specified torque</li> </ol>


## DIAGNOSIS AND TESTING (Continued)

## TRAC-LOK TEST

**WARNING: WHEN SERVICING VEHICLES WITH A TRAC-LOK DIFFERENTIAL DO NOT USE THE ENGINE TO TURN THE AXLE AND WHEELS. BOTH REAR WHEELS MUST BE RAISED AND THE VEHICLE SUPPORTED. A TRAC-LOK AXLE CAN EXERT ENOUGH FORCE IF ONE WHEEL IS IN CONTACT WITH A SURFACE TO CAUSE THE VEHICLE TO MOVE.**

The differential can be tested without removing the differential case by measuring rotating torque. Make sure brakes are not dragging during this measurement.

- (1) Place blocks in front and rear of both front wheels.
- (2) Raise one rear wheel until it is completely off the ground.
- (3) Engine off, transmission in neutral, and parking brake off.
- (4) Remove wheel and bolt Special Tool 6790 to studs.
- (5) Use torque wrench on special tool to rotate wheel and read rotating torque (Fig. 5).

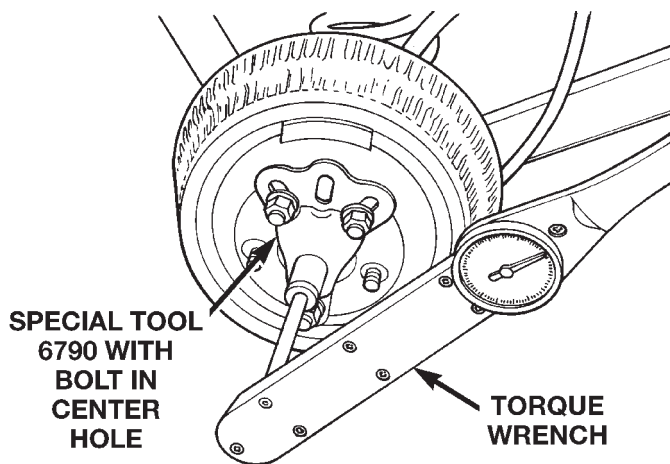

80a4d327

**Fig. 5 Trac-lok Test —Typical**

- (6) If rotating torque is less than 22 N·m (30 ft. lbs.) or more than 271 N·m (200 ft. lbs.) on either wheel the unit should be serviced.

## SERVICE PROCEDURES


## LUBRICANT CHANGE

- (1) Raise and support the vehicle.
- (2) Remove the lubricant fill hole plug from the differential housing cover.
- (3) Remove the differential housing cover and drain the lubricant from the housing.

- (4) Clean the housing cavity with a flushing oil, light engine oil, or lint free cloth. **Do not use water, steam, kerosene, or gasoline for cleaning.**

- (5) Remove the original sealant from the housing and cover surfaces.

- (6) Apply a bead of Mopar® Silicone Rubber Sealant, or equivalent, to the housing cover (Fig. 6).

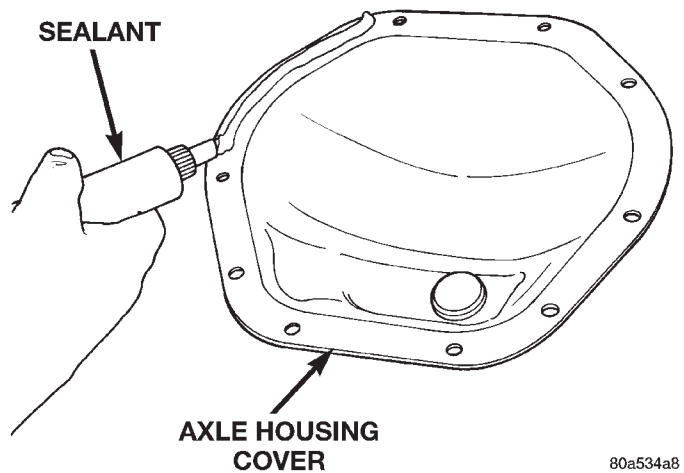

80a534a8

**Fig. 6 Apply Sealant**

**Install the housing cover within 5 minutes after applying the sealant.**

- (7) Install the cover and any identification tag. Tighten the cover bolts to 41 N·m (30 ft. lbs.) torque.

- (8) For Trac-lok differentials, a quantity of Mopar® Trac-lok lubricant (friction modifier), or equivalent, must be added after repair service or a lubricant change. Refer to the Lubricant Specifications section of this group for the quantity necessary.

- (9) Fill differential with Mopar® Hypoid Gear Lubricant, or equivalent, to bottom of the fill plug hole. Refer to the Lubricant Specifications section of this group for the quantity necessary.

**CAUTION: Overfilling the differential can result in lubricant foaming and overheating.**

- (10) Install the fill hole plug and lower the vehicle.

- (11) Trac-lok differential equipped vehicles should be road tested by making 10 to 12 slow figure-eight turns. This maneuver will pump the lubricant through the clutch discs to eliminate a possible chatter noise complaint.

## REMOVAL AND INSTALLATION

## REAR AXLE

## REMOVAL

- (1) Raise and support the vehicle.

## REMOVAL AND INSTALLATION (Continued)

- (2) Position a suitable lifting device under the axle.
- (3) Secure axle to device.
- (4) Remove the wheels and tires.
- (5) Remove the brake rotors and calipers from the axle. Refer to Group 5, Brakes, for proper procedures.
- (6) Disconnect parking brake cables from brackets and lever.
- (7) Remove wheel speed sensors, if necessary. Refer to Group 5, Brakes, for proper procedures.
- (8) Disconnect the brake hose at the axle junction block. Do not disconnect the brake hydraulic lines at the calipers. Refer to Group 5, Brakes, for proper procedures.
- (9) Disconnect the vent hose from the axle shaft tube.
- (10) Mark the propeller shaft and yokes for installation alignment reference.
- (11) Remove propeller shaft.
- (12) Disconnect stabilizer bar links.
- (13) Disconnect shock absorbers from axle.
- (14) Disconnect track bar.
- (15) Disconnect upper and lower suspension arms from the axle brackets.
- (16) Separate the axle from the vehicle.

## INSTALLATION

**NOTE:** The weight of the vehicle must be supported by the springs before suspension arms and track bar fasteners can be tightened. If the springs are not at their normal ride position, vehicle ride height and handling could be affected.

- (1) Raise the axle with lifting device and align coil springs.
- (2) Position the upper and lower suspension arms on the axle brackets. Install nuts and bolts, do not tighten bolts at this time.
- (3) Install track bar and attachment bolts, do not tighten bolts at this time.
- (4) Install shock absorbers and tighten nuts to 60 N·m (44 ft. lbs.) torque.
- (5) Install stabilizer bar links and tighten nuts to 36 N·m (27 ft. lbs.) torque.
- (6) Install the wheel speed sensors, if necessary. Refer to Group 5, Brakes, for proper procedures.
- (7) Connect parking brake cable to brackets and lever.
- (8) Install the brake rotors and calipers. Refer to Group 5, Brakes, for proper procedures.
- (9) Connect the brake hose to the axle junction block. Refer to Group 5, Brakes, for proper procedures.
- (10) Install axle vent hose.

- (11) Align propeller shaft and pinion yoke reference marks. Install U-joint straps and bolts. Tighten to 19 N·m (14 ft. lbs.) torque.
- (12) Install the wheels and tires.
- (13) Add gear lubricant, if necessary. Refer to Lubricant Specifications in this section for lubricant requirements.
- (14) Remove lifting device from axle and lower the vehicle.
- (15) Tighten lower suspension arm bolts to 177 N·m (130 ft. lbs.) torque.
- (16) Tighten upper suspension arm bolts to 75 N·m (55 ft. lbs.) torque.
- (17) Tighten track bar bolts to 100 N·m (74 ft. lbs.) torque.

## PINION SHAFT SEAL

## REMOVAL

- (1) Raise and support the vehicle.
- (2) Remove wheel and tire assemblies.
- (3) Remove the brake rotors and calipers. Refer to Group 5, Brakes, for proper procedures.
- (4) Mark the propeller shaft and pinion yoke for installation alignment reference.
- (5) Remove the propeller shaft from the yoke.
- (6) Rotate the pinion gear three or four times.
- (7) Measure the amount of torque necessary to rotate the pinion gear with a (in. lbs.) dial-type torque wrench. Record the torque reading for installation reference.
- (8) Using a short piece of pipe and Holder 6958 to hold the pinion yoke, remove the pinion nut and washer (Fig. 7).
- (9) Use Remover C-452 and Wrench C-3281 to remove the pinion yoke (Fig. 8).



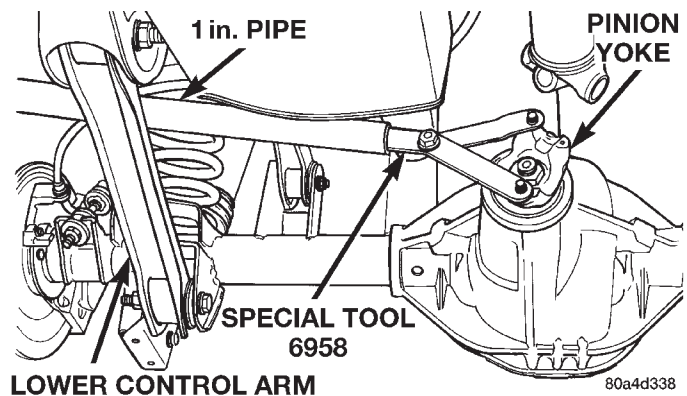


Fig. 7 Pinion Yoke Holder

- (10) Use Remover 7794-A and slide hammer to remove the pinion gear seal (Fig. 9).

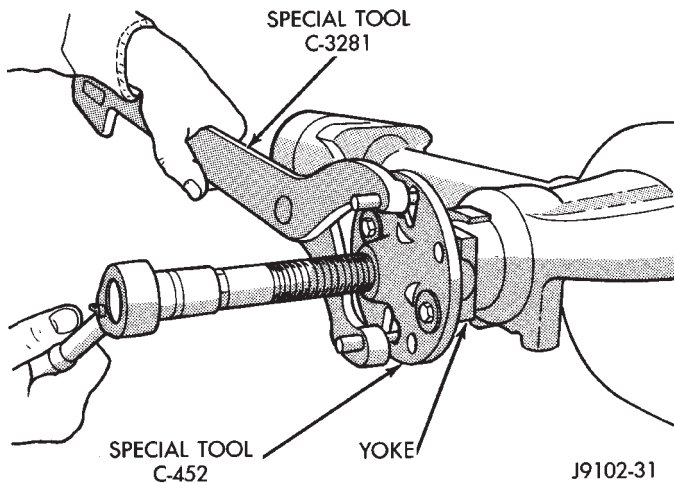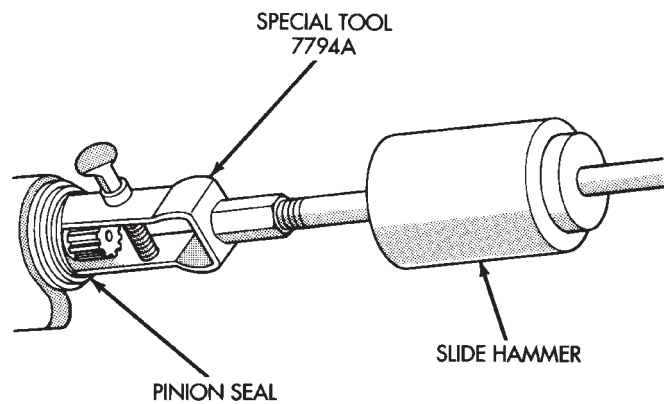

## REMOVAL AND INSTALLATION (Continued)


**Fig. 8 Pinion Yoke Removal**

J9402-59X

**Fig. 9 Seal Removal**

## INSTALLATION

(1) Apply a light coating of gear lubricant on the lip of pinion seal. Install seal with Installer C-3972-A and Handle C-4171 (Fig. 10).

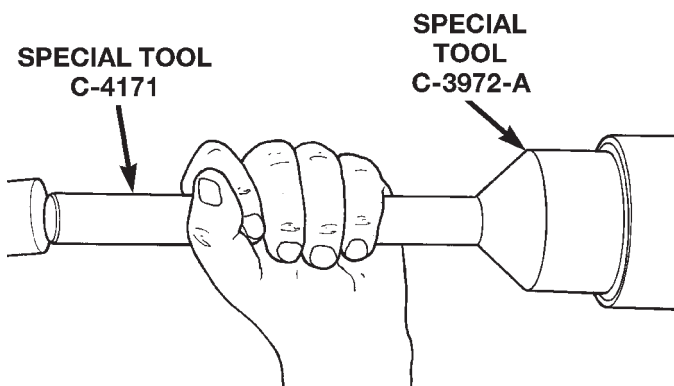
**Fig. 10 Pinion Seal Installation**

(2) Install yoke on the pinion gear with Screw 8112, Cup 8109, and Holder 6958 (Fig. 11).

**CAUTION:** Do not exceed the minimum tightening torque when installing the pinion yoke at this point. Damage to the collapsible spacer or bearings may result.

(3) Install the yoke washer and a new nut on the pinion gear and tighten the pinion nut until there is zero bearing end-play.

(4) Tighten the nut to 271 N·m (200 ft. lbs.).

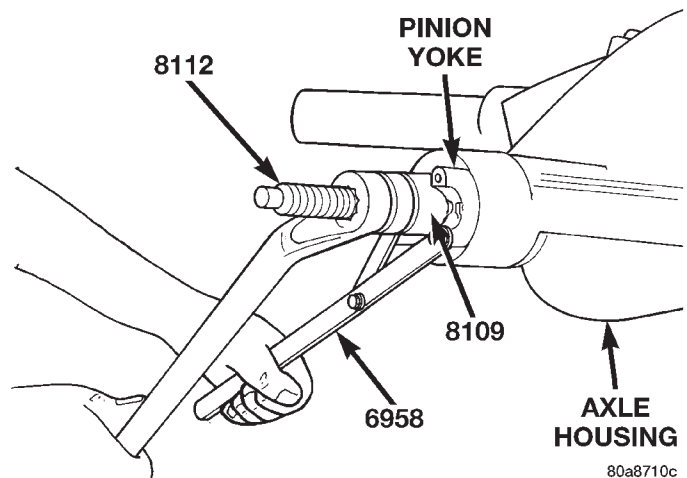

80a8710c

**Fig. 11 Pinion Yoke Installation**

**CAUTION:** Never loosen pinion gear nut to decrease pinion gear bearing rotating torque and never exceed specified preload torque. If preload torque or rotating torque is exceeded a new collapsible spacer must be installed. The torque sequence will then have to be repeated.

(5) Rotate the pinion shaft using a (in. lbs.) torque wrench. Rotating torque should be equal to the reading recorded during removal plus an additional 0.56 N·m (5 in. lbs.) (Fig. 12).



(6) If the rotating torque is low, use Holder 6958 to hold the pinion yoke (Fig. 13), and tighten the pinion shaft nut in 6.8 N·m (5 ft. lbs.) increments until the proper rotating torque is achieved.

**CAUTION:** If the maximum tightening torque is reached prior to reaching the required rotating torque, the collapsible spacer may have been damaged. Replace the collapsible spacer.

(7) Align the installation reference marks on the propeller shaft and yoke and install the propeller shaft.

(8) Add gear lubricant to the differential housing, if necessary. Refer to the Lubricant Specifications for gear lubricant requirements.

## REMOVAL AND INSTALLATION (Continued)

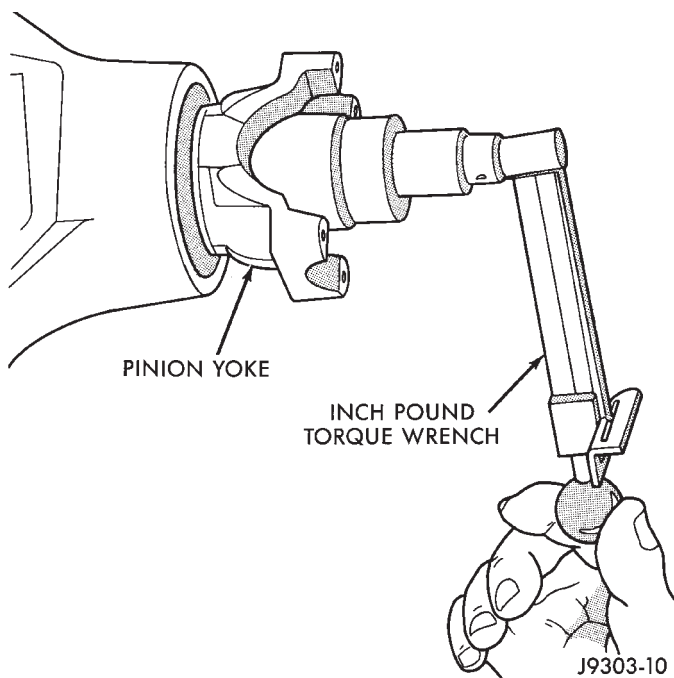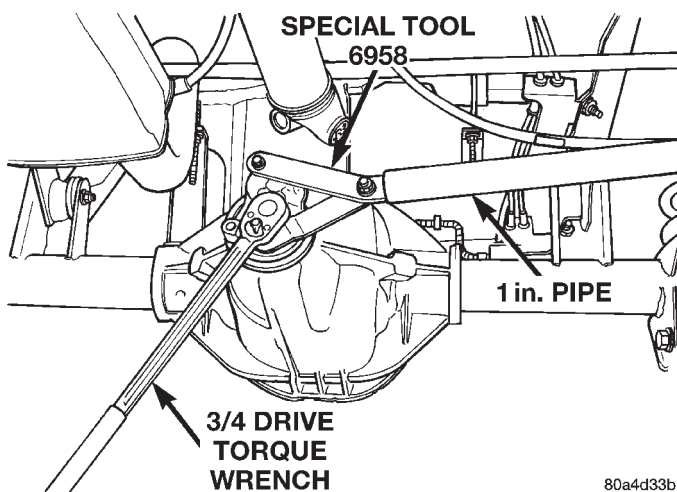**Fig. 12 Check Pinion Rotation Torque****Fig. 13 Tightening Pinion Shaft Nut**

- (9) Install the brake rotors and calipers. Refer to Group 5, Brakes, for proper procedures.
- (10) Install wheel and tire assemblies.
- (11) Lower the vehicle.

**COLLAPSIBLE SPACER****REMOVAL W/PINION INSTALLED**

- (1) Raise and support the vehicle.
- (2) Remove wheel and tire assemblies.
- (3) Remove rear brake rotors and calipers. Refer to Group 5, Brakes, for proper procedures.
- (4) Mark the propeller shaft and pinion yoke for installation reference.
- (5) Remove the propeller shaft from the yoke.
- (6) Rotate the pinion gear three or four times.

(7) Measure the amount of torque necessary to rotate the pinion gear with a (in. lbs.) dial-type torque wrench. Record the torque reading for installation reference.



(8) Using a short piece of pipe and Holder 6958 to hold the pinion yoke, remove the pinion nut and washer (Fig. 14).

(9) Use Remover C-452 and Wrench C-3281 to remove the pinion yoke (Fig. 15).

(10) Use Remover 7794-A and slide hammer to remove the pinion shaft seal (Fig. 16).


(11) Remove the front pinion bearing using a pair of suitable pick tools to pull the bearing straight off the pinion gear shaft. It may be necessary to lightly tap the end of the pinion gear with a rawhide or rubber mallet if the bearing becomes bound on the pinion shaft.

(12) Remove the collapsible spacer.

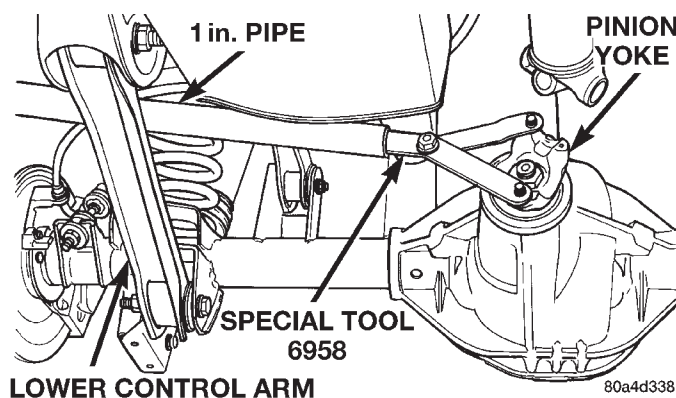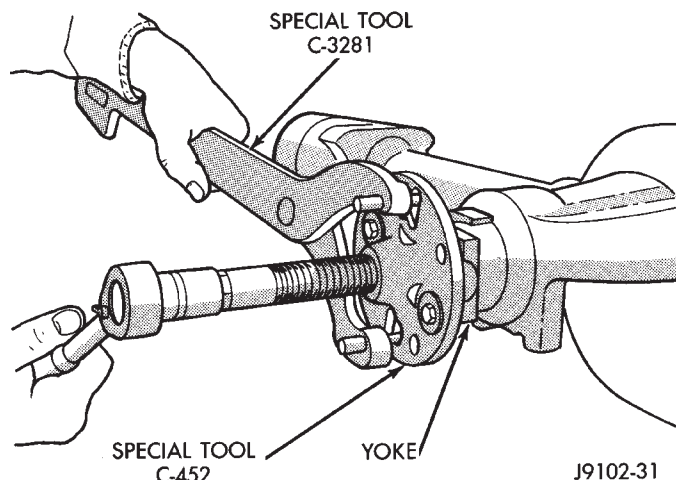**Fig. 14 Pinion Yoke Holder****Fig. 15 Pinion Yoke Removal****REMOVAL W/PINION REMOVED**

- (1) Raise and support the vehicle.
- (2) Remove wheel and tire assemblies.
- (3) Remove rear brake rotors and calipers. Refer to Group 5, Brakes, for proper procedures.

## REMOVAL AND INSTALLATION (Continued)

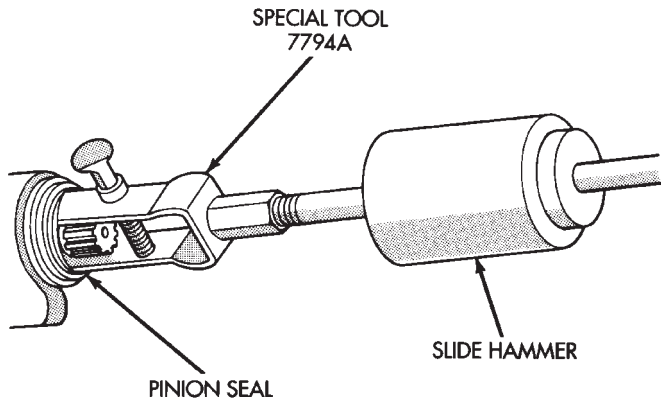

J9402-59X

**Fig. 16 Seal Removal**

(4) Mark the propeller shaft and pinion yoke for installation reference.

(5) Remove the propeller shaft from the yoke.

(6) Rotate the pinion gear three or four times.

(7) Measure the amount of torque necessary to rotate the pinion gear with a (in. lbs.) dial-type torque wrench. Record the torque reading for installation reference.

(8) Remove differential assembly from axle housing.

(9) Using Holder 6958 to hold yoke and a short length of 1 in. pipe, remove the pinion yoke nut and washer (Fig. 14).

(10) Using Remover C-452 and Wrench C-3281, remove the pinion yoke from pinion shaft (Fig. 15).

(11) Remove the pinion gear from housing (Fig. 17). Catch the pinion with your hand to prevent it from falling and being damaged.

(12) Remove collapsible spacer from pinion shaft.

**INSTALLATION**

(1) Install a new collapsible preload spacer on pinion shaft (Fig. 18).

(2) If pinion gear was removed, install pinion gear in housing.


(3) Install pinion front bearing, if necessary.

(4) Apply a light coating of gear lubricant on the lip of pinion seal. Install seal with Installer C-3972-A and Handle C-4171 (Fig. 19).


(5) Install yoke with Screw 8112, Cup 8109, and Holder 6958 (Fig. 20).

(6) If the original pinion bearings are being used, install differential assembly and axle shafts, if necessary.

**NOTE:** If new pinion bearings were installed, do not install the differential assembly and axle shafts until after the pinion bearing preload and rotating torque are set.

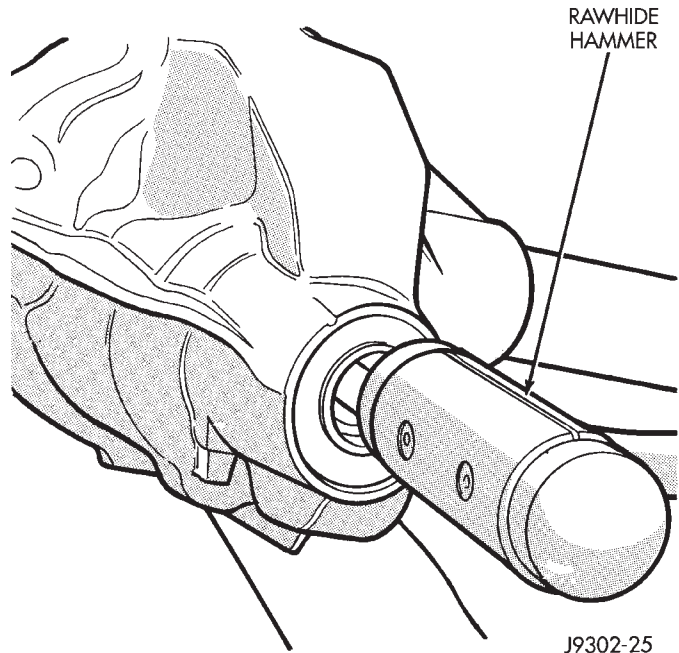

J9302-25

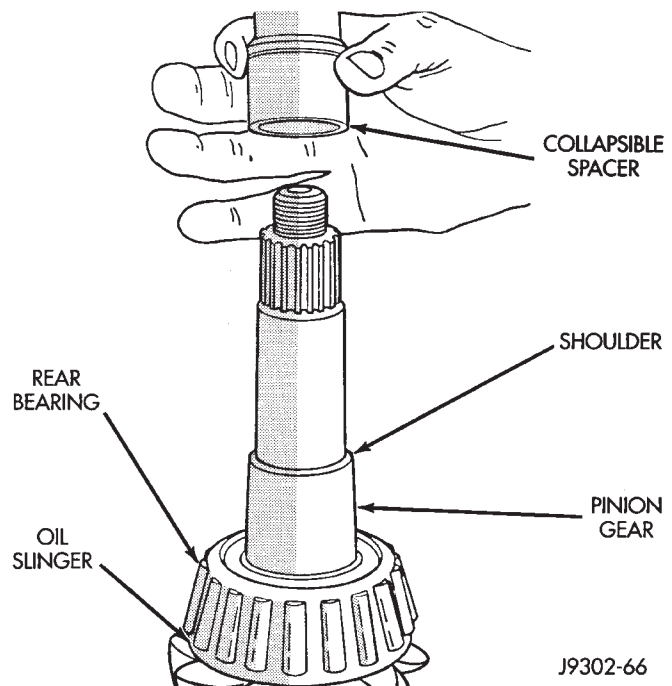**Fig. 17 Remove Pinion Gear**



J9302-66

**Fig. 18 Collapsible Preload Spacer**

(7) Install the yoke washer and a new nut on the pinion gear. Tighten the pinion nut until there is zero bearing end-play.

(8) Tighten the nut to 271 N·m (200 ft. lbs.).

## REMOVAL AND INSTALLATION (Continued)

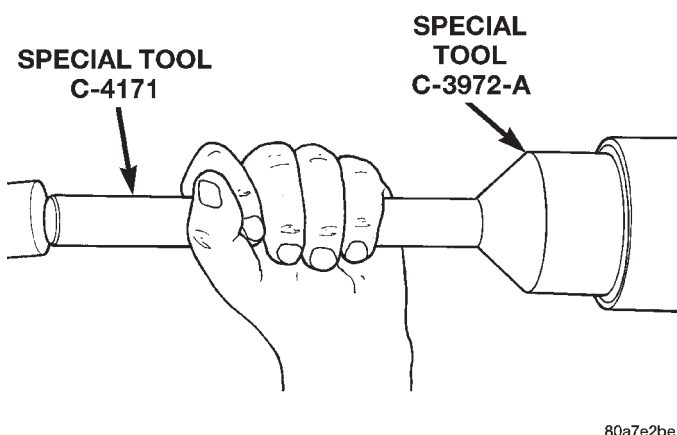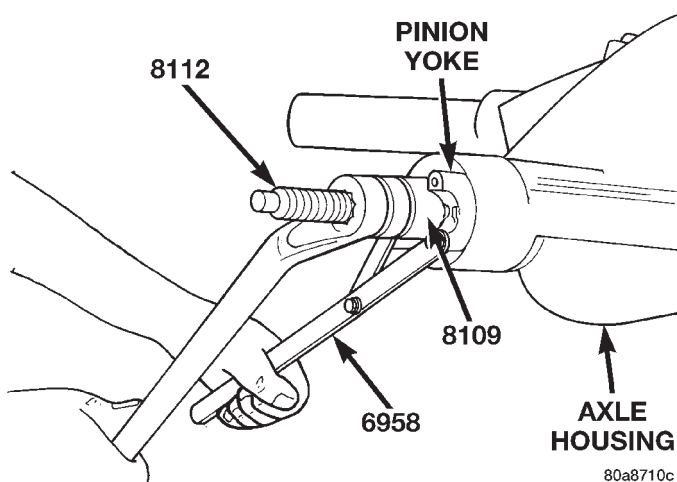
**Fig. 19 Pinion Seal Installation****Fig. 20 Pinion Yoke Installation**

**CAUTION:** Never loosen pinion gear nut to decrease pinion gear bearing rotating torque and never exceed specified preload torque. If preload torque or rotating torque is exceeded a new collapsible spacer must be installed. The torque sequence will then have to be repeated.

(9) Using yoke holder 6958, a short length of 1 in. pipe, and a torque wrench set at 474 N·m (350 ft. lbs.), crush collapsible spacer until bearing end play is taken up (Fig. 21).


**NOTE:** If more than 474 N·m (350 ft. lbs.) of torque is necessary to remove the bearing end play, the collapsible spacer is defective and must be replaced.

(10) Slowly tighten the nut in 6.8 N·m (5 ft. lbs.) increments until the rotating torque is achieved. Measure the rotating torque frequently to avoid over crushing the collapsible spacer (Fig. 22).

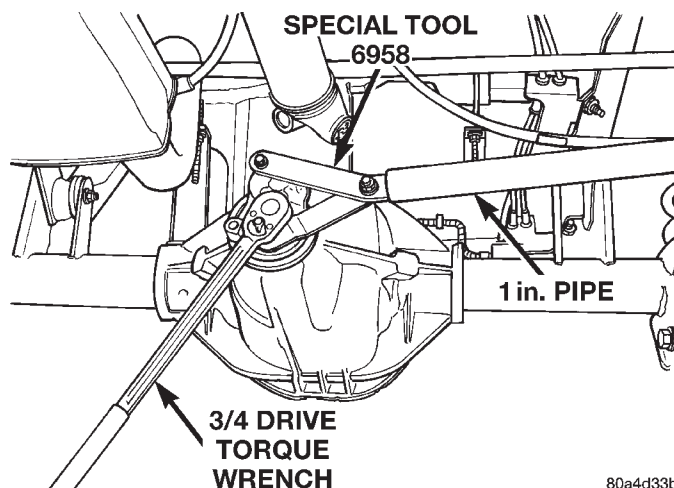**Fig. 21 Tightening Pinion Nut**

(11) Check rotating torque with an inch pound torque wrench (Fig. 22). The torque necessary to rotate the pinion gear should be:

- Original Bearings — The reading recorded during removal, plus an additional 0.56 N·m (5 in. lbs.).
- New Bearings — 2 to 5 N·m (15 to 35 in. lbs.).

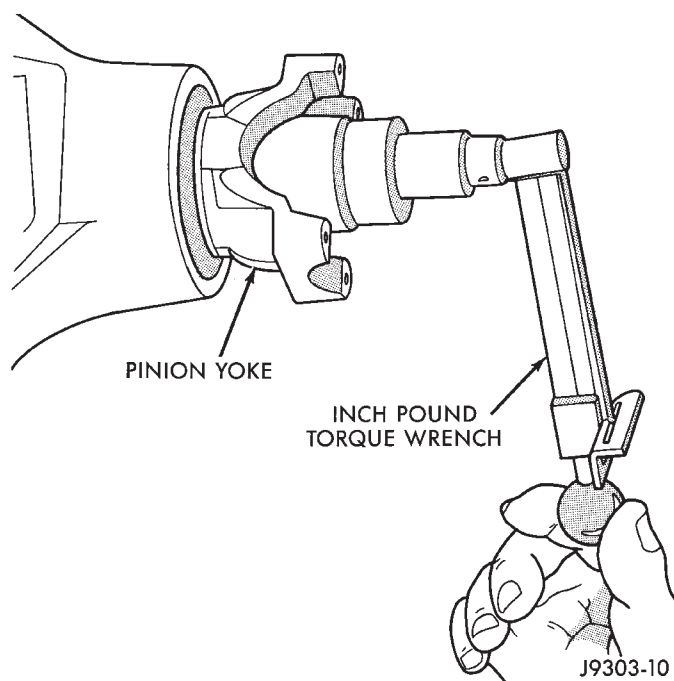**Fig. 22 Check Pinion Gear Rotation Torque**

(12) Install differential assembly and axle shafts, if necessary.

(13) Align marks made previously on yoke and propeller shaft and install propeller shaft.

(14) Install rear brake rotors and calipers. Refer to Group 5, Brakes, for proper procedures.

(15) Add gear lubricant, if necessary. Refer to Lubricant Specifications of this section for lubricant requirements.



## REMOVAL AND INSTALLATION (Continued)

- (16) Install wheel and tire assemblies.
- (17) Lower vehicle.

## AXLE SHAFT

## REMOVAL

- (1) Raise and support vehicle. Ensure that the transmission is in neutral.
- (2) Remove wheel and tire assembly.
- (3) Remove brake caliper and rotor. Refer to Group 5, Brakes, for proper procedure.
- (4) Clean all foreign material from housing cover area.
- (5) Loosen housing cover bolts. Drain lubricant from the housing and axle shaft tubes. Remove housing cover.
- (6) Rotate differential case so that pinion mate gear shaft lock screw is accessible. Remove lock screw and pinion mate gear shaft from differential case (Fig. 23).

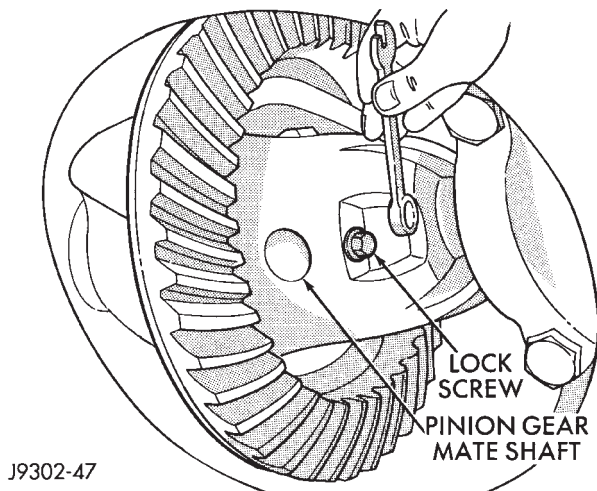


Fig. 23 Mate Shaft Lock Screw

- (7) Push axle shaft inward and remove axle shaft C-clip lock from the axle shaft (Fig. 24).

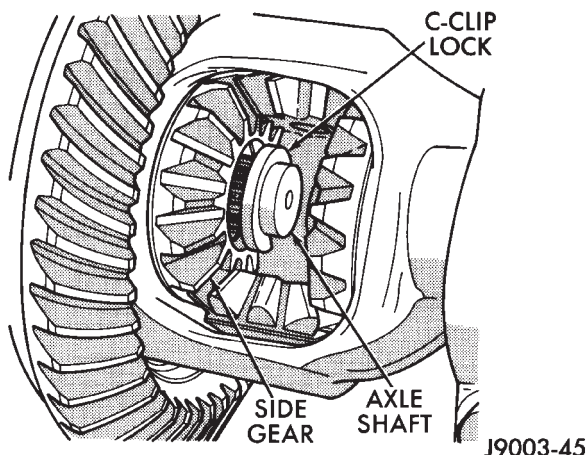


Fig. 24 Axle Shaft C-Clip Lock

(8) Remove axle shaft. Use care to prevent damage to axle shaft bearing and seal, which will remain in axle shaft tube. Also, exercise care not to damage the wheel speed sensor on vehicles equipped with ABS brakes.

- (9) Inspect axle shaft seal for leakage or damage.

(10) Inspect roller bearing contact surface on axle shaft for signs of brinelling, galling and pitting. If any of these conditions exist, the axle shaft and/or bearing and seal must be replaced.

## INSTALLATION

- (1) Lubricate bearing bore and seal lip with gear lubricant. Insert axle shaft through seal, bearing, and engage it into side gear splines.

**NOTE: Use care to prevent shaft splines from damaging axle shaft seal lip. Also, exercise care not to damage the wheel speed sensor on vehicles equipped with ABS brakes**

- (2) Insert C-clip lock in end of axle shaft. Push axle shaft outward to seat C-clip lock in side gear.

(3) Insert pinion mate shaft into differential case and through thrust washers and pinion gears.

- (4) Align hole in shaft with hole in the differential case and install lock screw with Loctite® on the threads. Tighten lock screw to 19 N·m (14 ft. lbs.) torque.

(5) Install cover and add fluid. Refer to Lubricant Change procedure in this section for procedure and lubricant requirements.

- (6) Install brake caliper and rotor. Refer to Group 5, Brakes, for proper procedures.

- (7) Install wheel and tire.
- (8) Lower vehicle.

## AXLE SHAFT SEAL AND BEARING

## REMOVAL

- (1) Remove the axle shaft.
- (2) Remove the axle shaft seal from the end of the axle shaft tube with a small pry bar.

**NOTE: The seal and bearing can be removed at the same time with the bearing removal tool.**

- (3) Remove the axle shaft bearing from the axle tube with Bearing Removal Tool Set 6310 using Adapter Foot 6310-5 (Fig. 25).


(4) Inspect the axle shaft tube bore for roughness and burrs. Remove as necessary.

## INSTALLATION

**Do not install the original axle shaft seal. Always install a new seal.**


- (1) Wipe the axle shaft tube bore clean.

## REMOVAL AND INSTALLATION (Continued)

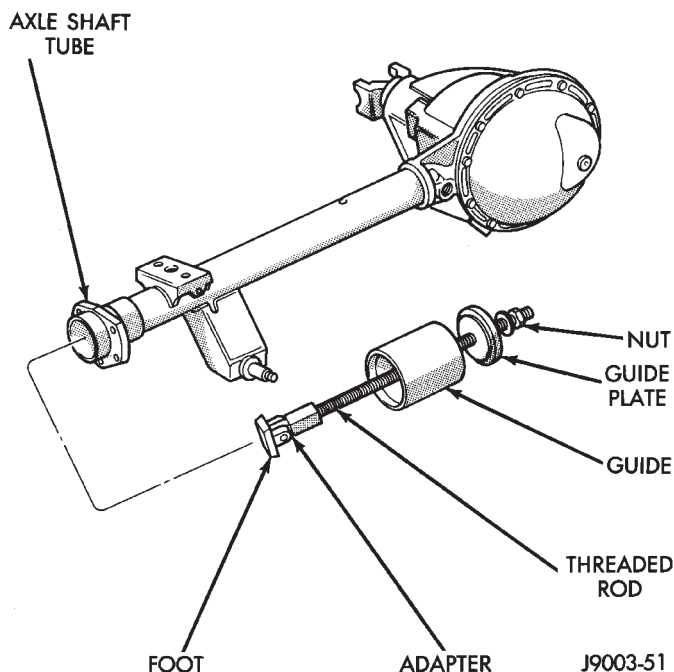**Fig. 25 Axle Shaft Bearing Removal**

(2) Install axle shaft bearing with Installer 6436 and Handle C-4171. Ensure that the part number on the bearing is against the installer.

(3) Install the new axle shaft seal with Installer 6437 and Handle C-4171 (Fig. 26).

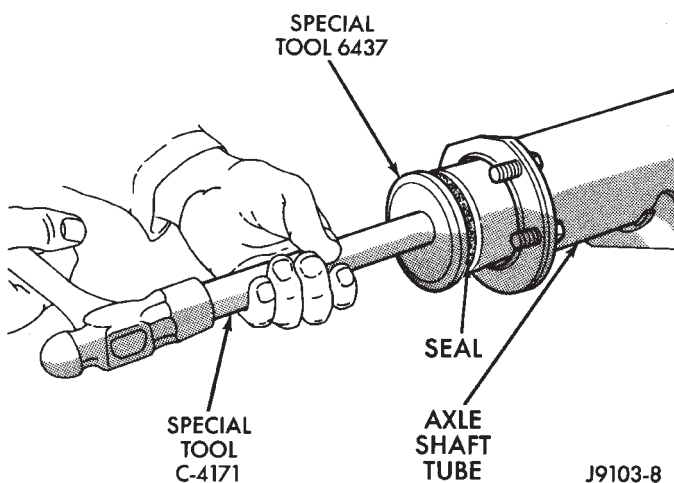
**Fig. 26 Axle Shaft Seal Installation**

(4) Install the axle shaft.


**DIFFERENTIAL****REMOVAL**

- (1) Raise and support vehicle.
- (2) Remove the lubricant fill hole plug from the differential housing cover.
- (3) Remove the differential housing cover and allow fluid to drain.

- (4) Remove axle shafts.
- (5) Note the installation reference letters stamped on the bearing caps and housing machined sealing surface (Fig. 27).

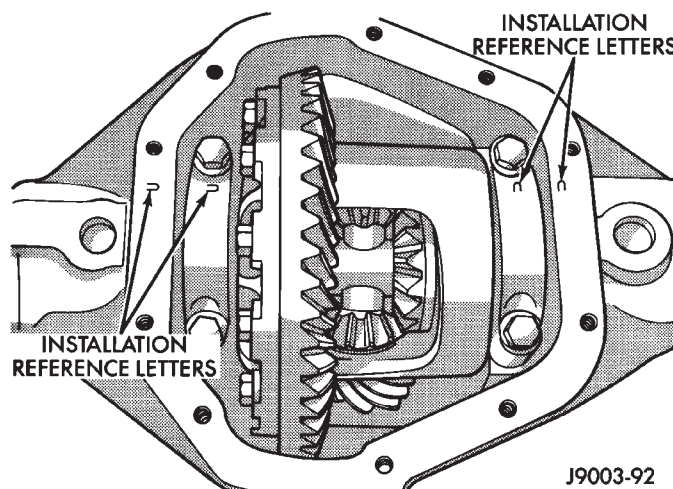**Fig. 27 Bearing Cap Identification**

- (6) Loosen the differential bearing cap bolts.
- (7) Position Spreader W-129-B, utilizing some items from Adapter set 6987, with the tool dowel pins seated in the locating holes (Fig. 28). Install the hold-down clamps and tighten the tool turnbuckle finger-tight.

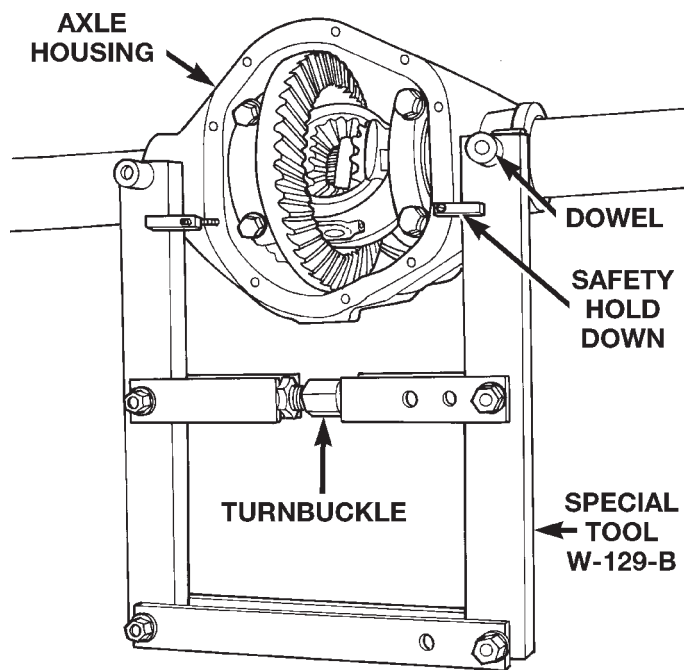
**Fig. 28 Install Axle Housing Spreader**

- (8) Install a Pilot Stud C-3288-B at the left side of the differential housing. Attach Dial Indicator C-3339 to pilot stud. Load the indicator plunger against the opposite side of the housing (Fig. 29) and zero the indicator.


## REMOVAL AND INSTALLATION (Continued)

**CAUTION:** Do not spread over 0.38 mm (0.015 in). If the housing is over-spread, it could be distorted or damaged.

(9) Spread the housing enough to remove the differential case from the housing. Measure the distance with the dial indicator (Fig. 30).

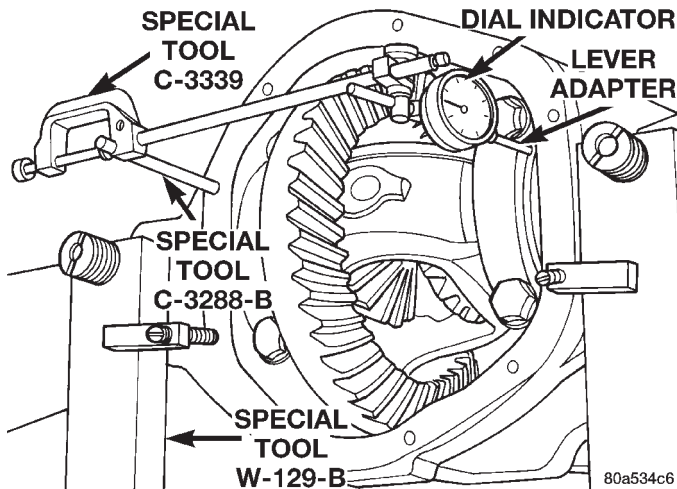


**Fig. 29 Install Dial Indicator**

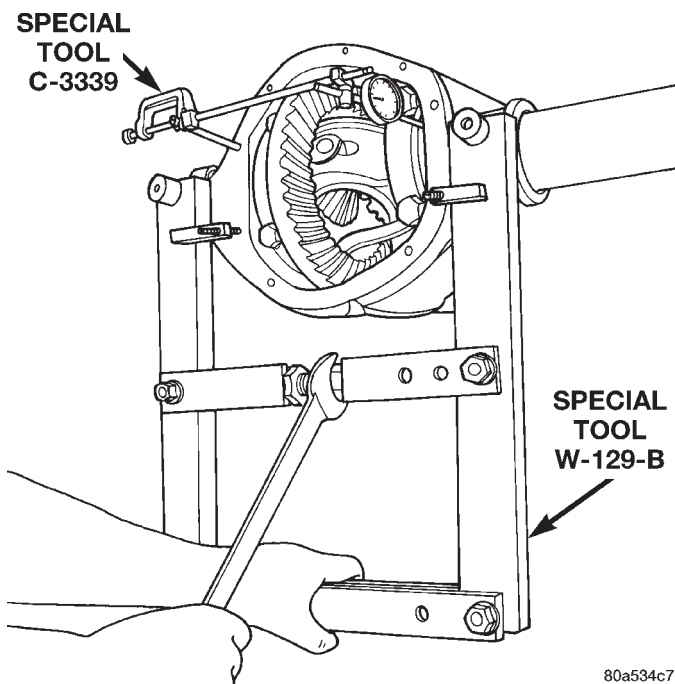

**Fig. 30 Spread Axle Housing**

- (10) Remove the dial indicator.
- (11) While holding the differential case in position, remove the differential bearing cap bolts and caps.
- (12) Remove the differential from the housing. Ensure that the differential bearing cups remain in position on the differential bearings (Fig. 31).

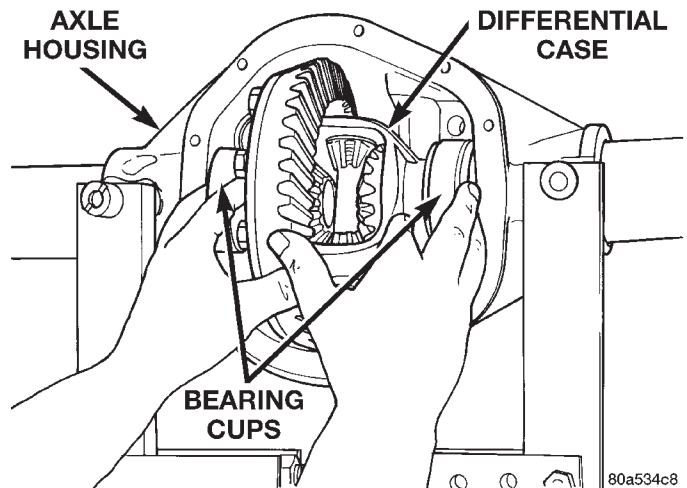

**Fig. 31 Differential Case Removal**

(13) Mark or tag the differential bearing cups to indicate which side of the differential they were removed from.

(14) Retrieve differential case preload shims from axle housing. Mark or tag the differential case preload shims to indicate which side of the differential they were removed from.

(15) Remove spreader from housing.

## INSTALLATION

If replacement differential bearings or differential case are being installed, differential side bearing shim requirements may change. Refer to the Differential Bearing Preload and Gear Backlash procedures in this section to determine the proper shim selection.

(1) Position Spreader W-129-B, utilizing some items from Adapter set 6987, with the tool dowel pins seated in the locating holes (Fig. 32). Install the hold-down clamps and tighten the tool turnbuckle finger-tight.

(2) Install a Pilot Stud C-3288-B at the left side of the differential housing. Attach Dial Indicator C-3339 to pilot stud. Load the indicator plunger against the opposite side of the housing (Fig. 29) and zero the indicator.

**CAUTION:** Do not spread over 0.38 mm (0.015 in). If the housing is over-spread, it could be distorted or damaged.


(3) Spread the housing enough to install the case in the housing. Measure the distance with the dial indicator (Fig. 30).

(4) Remove the dial indicator.

(5) Install differential case in the housing. Ensure that the differential bearing cups remain in position on the differential bearings and that the preload shims remain between the face of the bearing cup




## REMOVAL AND INSTALLATION (Continued)

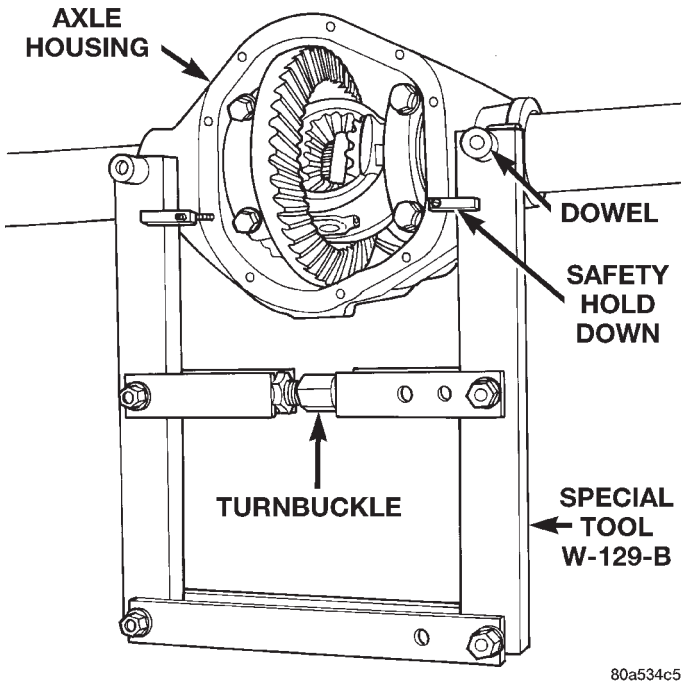**Fig. 32 Install Axle Housing Spreader**

and the housing. Tap the differential case to ensure the bearing cups and shims are fully seated in the housing.

(6) Install the bearing caps at their original locations (Fig. 33).

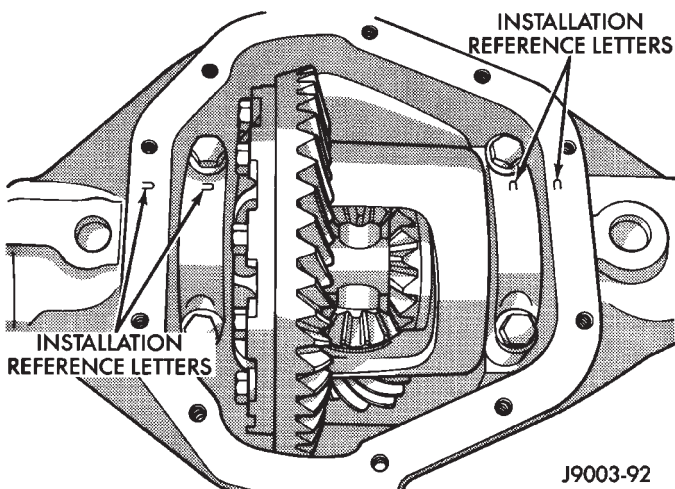
**Fig. 33 Differential Bearing Cap Reference Letters**

- (7) Loosely install differential bearing cap bolts.
- (8) Remove axle housing spreader.
- (9) Tighten the bearing cap bolts to 77 N·m (57 ft. lbs.) torque.
- (10) Install the axle shafts.

**DIFFERENTIAL SIDE BEARINGS****REMOVAL**

- (1) Remove differential from axle housing.

- (2) Remove the bearings from the differential case with Puller/Press C-293-PA, C-293-39 Blocks, and Plug SP-3289 (Fig. 34).

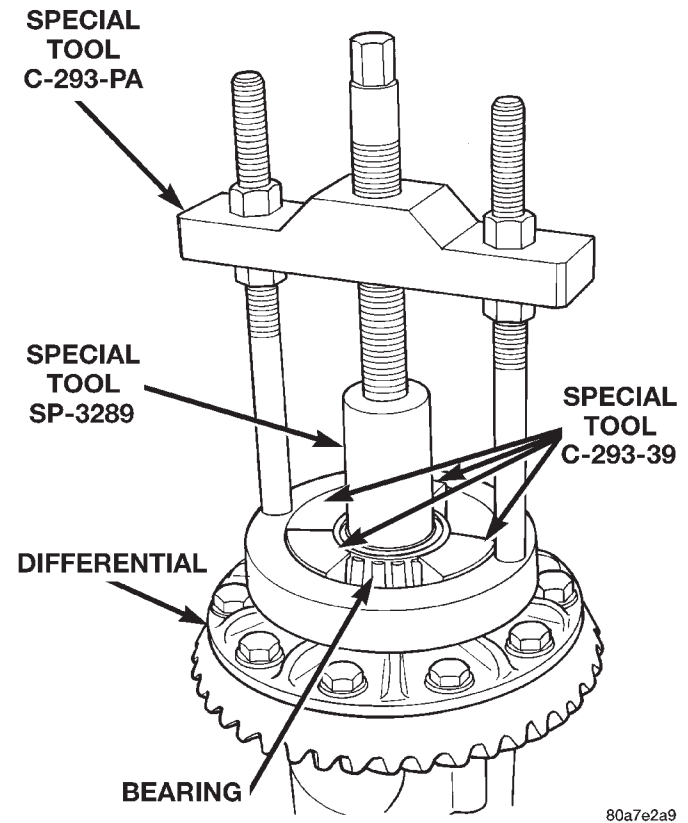**Fig. 34 Differential Bearing Removal****INSTALLATION**

- (1) Using tool C-3716-A with handle C-4171, install differential side bearings (Fig. 35).
- (2) Install differential in axle housing.

**RING GEAR**

The ring and pinion gears are service in a matched set. Do not replace the ring gear without replacing the pinion gear.



**REMOVAL**

- (1) Remove differential from axle housing.
- (2) Place differential case in a suitable vise with soft metal jaw protectors. (Fig. 36)
- (3) Remove bolts holding ring gear to differential case.
- (4) Using a soft hammer, drive ring gear from differential case (Fig. 36).

**INSTALLATION**

**CAUTION:** Do not reuse the bolts that held the ring gear to the differential case. The bolts can fracture causing extensive damage.


## REMOVAL AND INSTALLATION (Continued)

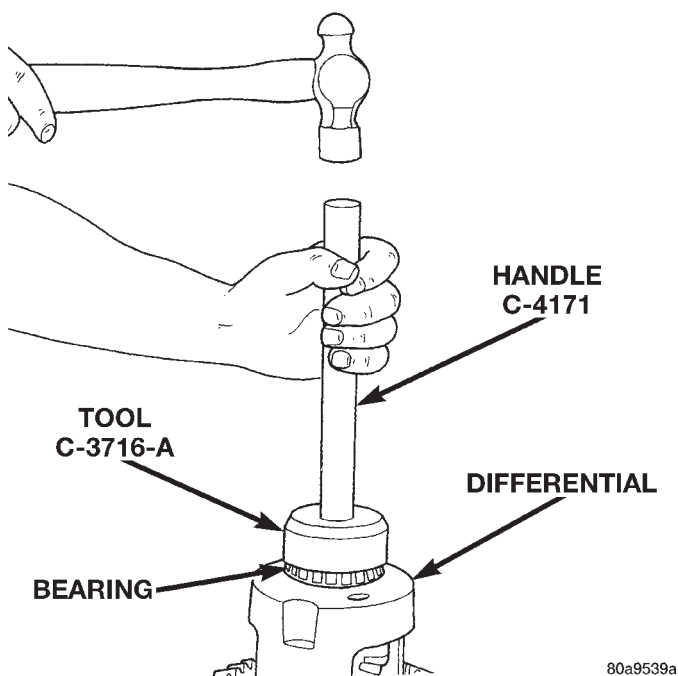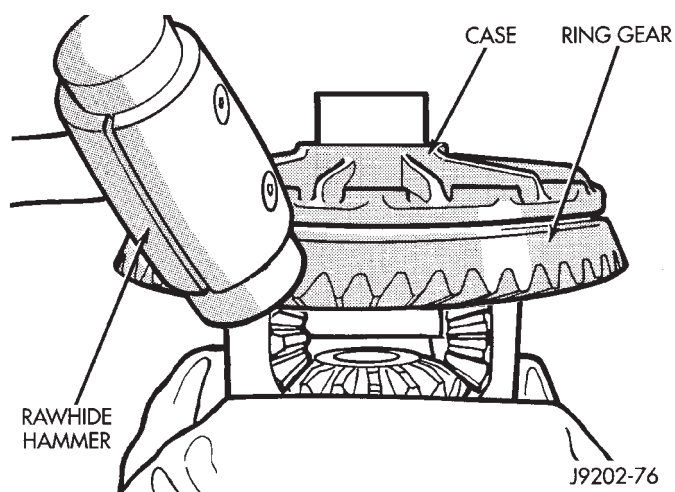**Fig. 35 Install Differential Side Bearings****Fig. 36 Ring Gear Removal**


- (1) Invert the differential case and start two ring gear bolts. This will provide case-to-ring gear bolt hole alignment.
- (2) Invert the differential case in the vise.
- (3) Install new ring gear bolts and alternately tighten to 95–122 N·m (70–90 ft. lbs.) torque (Fig. 37).
- (4) Install differential in axle housing and verify gear mesh and contact pattern.

**PINION GEAR**

The ring and pinion gears are serviced in a matched set. Do not replace the pinion gear without replacing the ring gear.

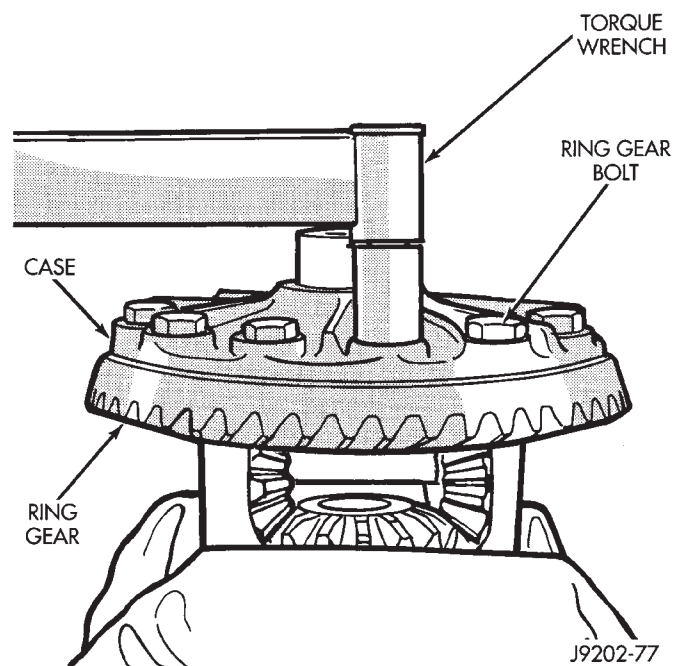
**Fig. 37 Ring Gear Bolt Installation****REMOVAL**

- (1) Remove differential from the axle housing.
- (2) Mark pinion yoke and propeller shaft for installation alignment.
- (3) Disconnect propeller shaft from pinion yoke. Using suitable wire, tie propeller shaft to underbody.
- (4) Using Holder 6958 to hold yoke and a short length of 1 in. pipe, remove the pinion yoke nut and washer (Fig. 38).
- (5) Using Remover C-452 and Wrench C-3281, remove the pinion yoke from pinion shaft (Fig. 39).

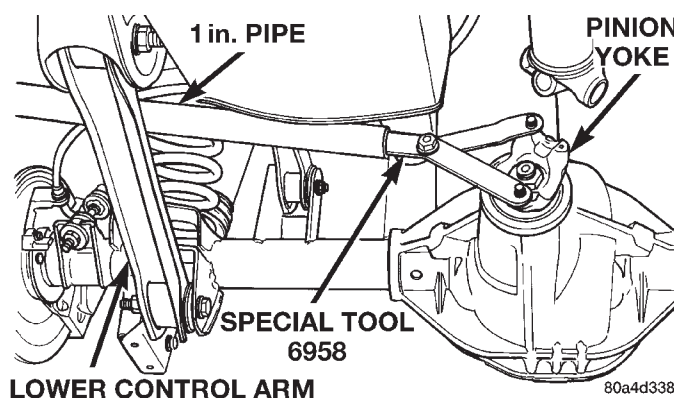
**Fig. 38 Pinion Yoke Holder**



## REMOVAL AND INSTALLATION (Continued)

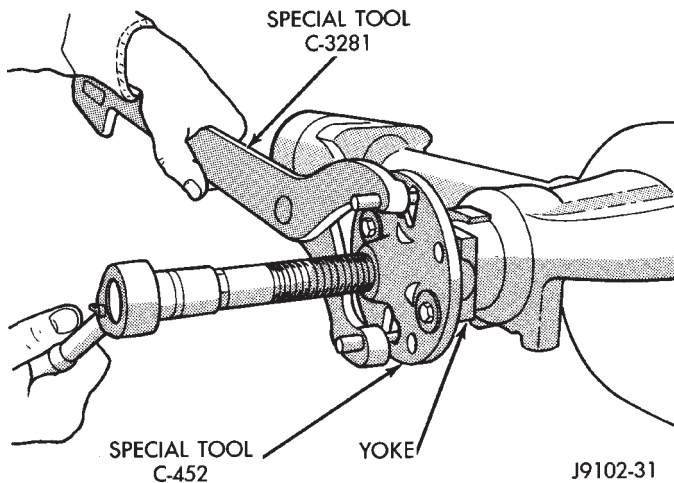**Fig. 39 Pinion Yoke Removal**



(6) Remove the pinion gear from housing (Fig. 40). Catch the pinion with your hand to prevent it from falling and being damaged.

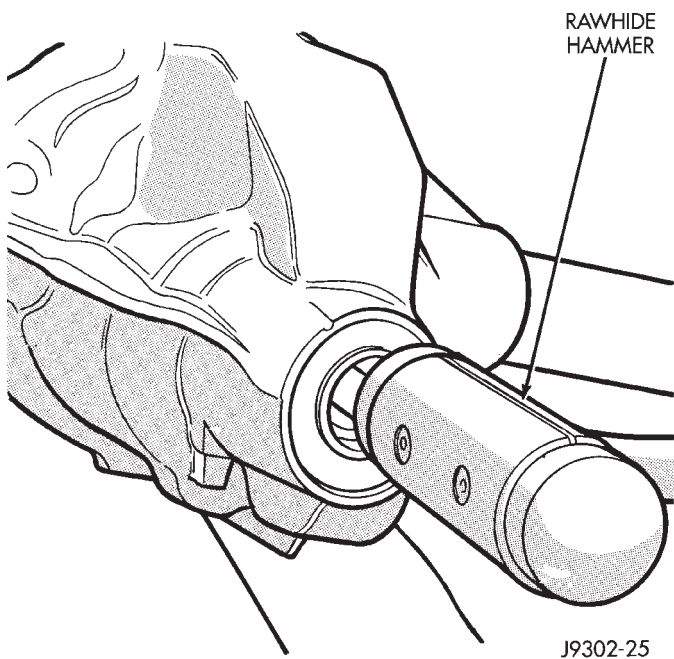**Fig. 40 Remove Pinion Gear**

(7) Use Remover 7794-A and slide hammer to remove the pinion shaft seal (Fig. 41).


(8) Remove oil slinger, if equipped, and front pinion bearing.

(9) Remove the front pinion bearing cup with Remover C-4345 and Handle C-4171 (Fig. 42).

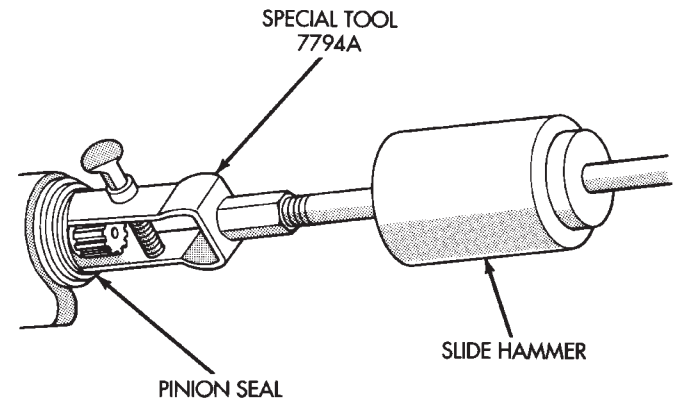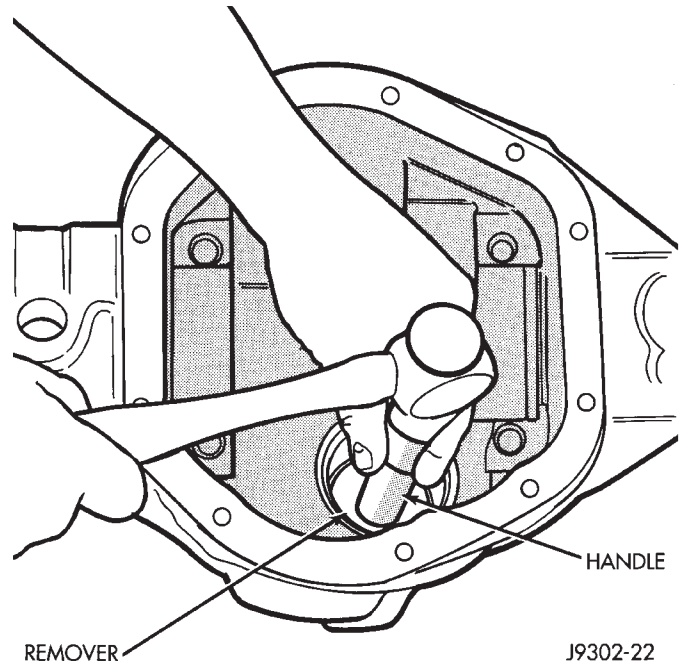**Fig. 41 Seal Removal****Fig. 42 Front Bearing Cup Removal**


## REMOVAL AND INSTALLATION (Continued)

(10) Remove the rear bearing cup from housing (Fig. 43). Use Remover D-149 and Handle C-4171.

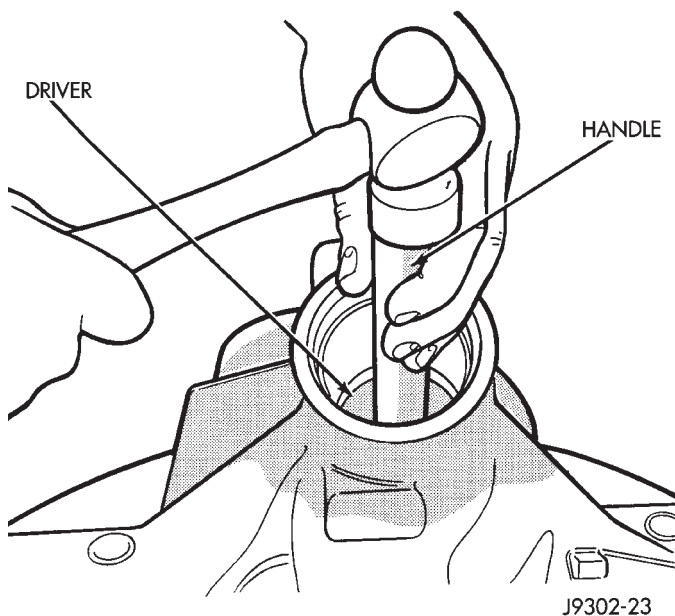

**Fig. 43 Rear Bearing Cup Removal**


(11) Remove the collapsible preload spacer (Fig. 44).

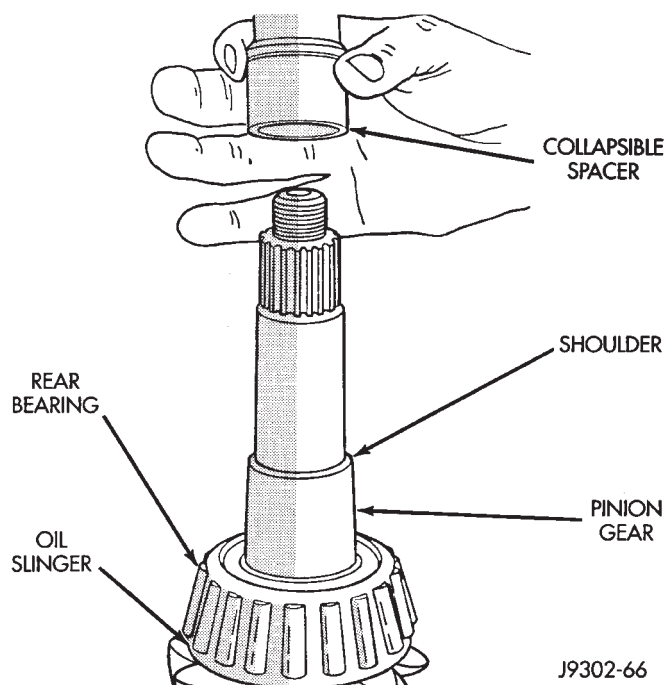

**Fig. 44 Collapsible Spacer**

(12) Remove the rear bearing from the pinion with Puller/Press C-293-PA and Adapters C-293-40 (Fig. 45).

**Place 4 adapter blocks so they do not damage the bearing cage.**

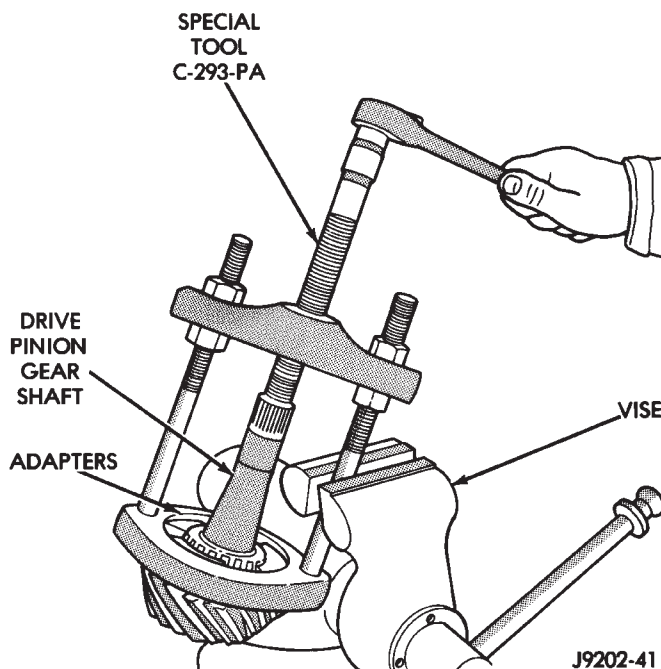


**Fig. 45 Rear Bearing Removal**

(13) Remove the depth shims from the pinion gear shaft. Record the thickness of the depth shims.

## INSTALLATION

(1) Apply Mopar® Door Ease, or equivalent, stick lubricant to outside surface of bearing cup.

(2) Install the pinion rear bearing cup with Installer D-146 and Driver Handle C-4171 (Fig. 46). Ensure cup is correctly seated.

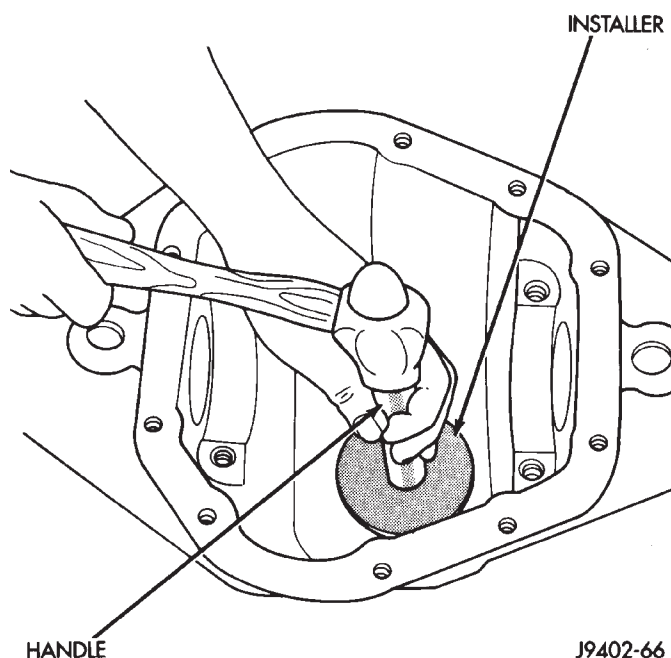


**Fig. 46 Pinion Rear Bearing Cup Installation**

## REMOVAL AND INSTALLATION (Continued)

(3) Apply Mopar® Door Ease, or equivalent, stick lubricant to outside surface of bearing cup.


(4) Install the pinion front bearing cup with Installer D-130 and Handle C-4171 (Fig. 47).

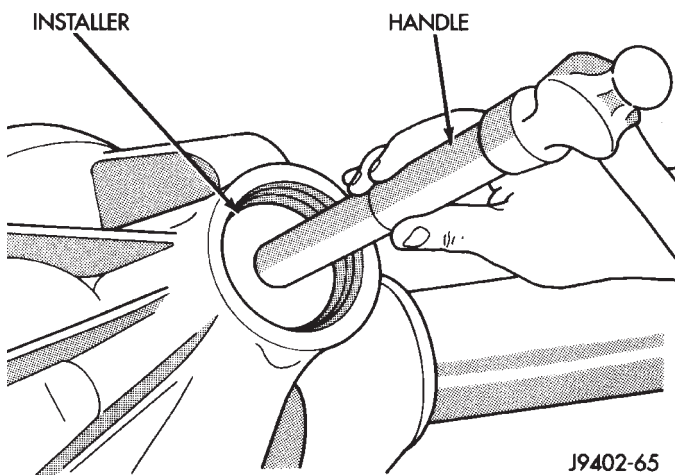

**Fig. 47 Pinion Front Bearing Cup Installation**

(5) Install pinion front bearing, and oil slinger, if equipped.

(6) Apply a light coating of gear lubricant on the lip of pinion seal. Install seal with Installer C-3972-A and Handle C-4171 (Fig. 48).

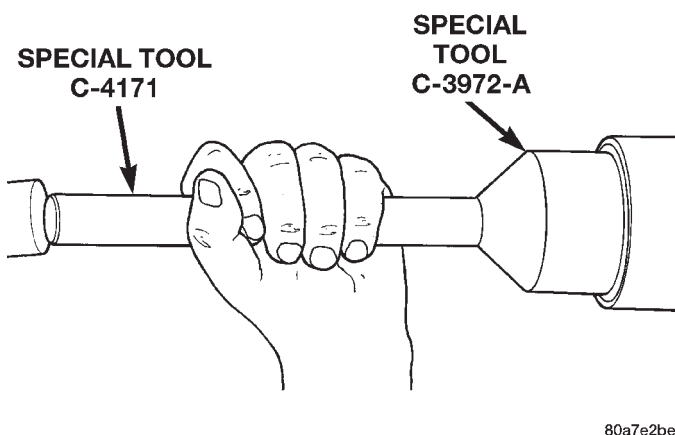


**Fig. 48 Pinion Seal Installation**

**NOTE:** Pinion depth shims are placed between the rear pinion bearing cone and pinion gear to achieve proper ring and pinion gear mesh. If the factory installed ring and pinion gears are reused, the pinion depth shim should not require replacement. If required, refer to Pinion Gear Depth to select the proper thickness shim before installing rear pinion bearing.

(7) Place the proper thickness depth shim on the pinion gear.


(8) Install the rear bearing and slinger, if equipped, on the pinion gear with Installer W-262 (Fig. 49).

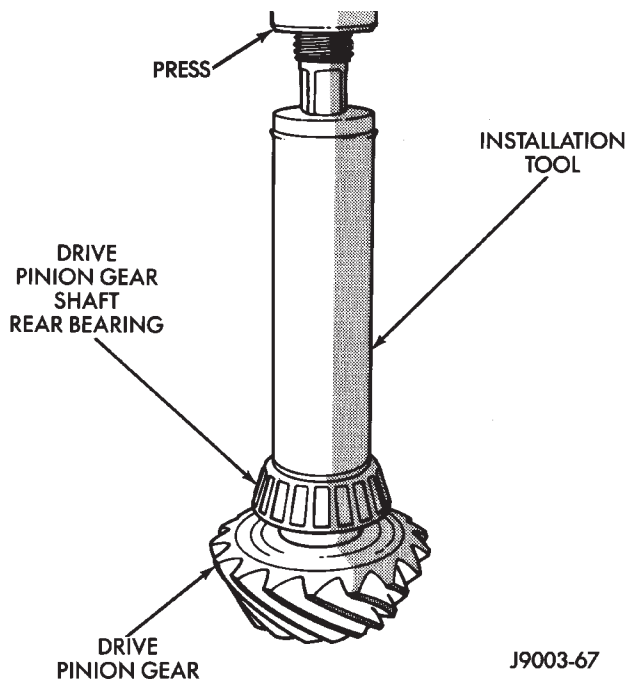

**Fig. 49 Shaft Rear Bearing Installation**

(9) Install a new collapsible preload spacer on pinion shaft and install pinion gear in housing (Fig. 50).


(10) Install pinion gear in housing.

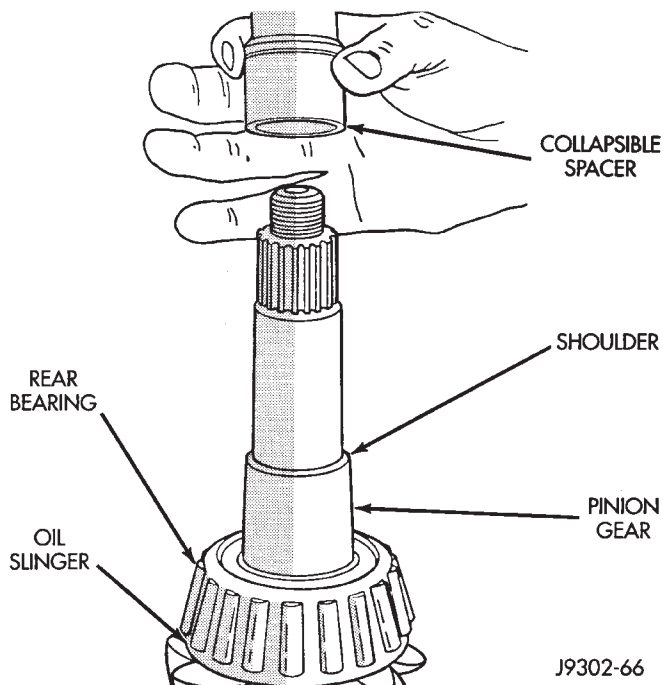

**Fig. 50 Collapsible Preload Spacer**

## REMOVAL AND INSTALLATION (Continued)

(11) Install yoke with Installer Screw 8112, Cup 8109, and holder 6958 (Fig. 51).

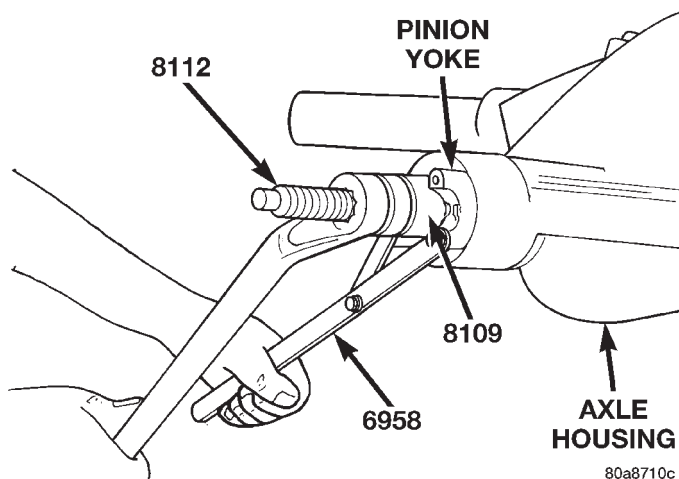

**Fig. 51 Pinion Yoke Installation**

(12) Install the yoke washer and a new nut on the pinion gear and tighten the pinion nut until there is zero bearing end-play.

(13) Tighten the nut to 271 N·m (200 ft. lbs.).

**CAUTION:** Never loosen pinion gear nut to decrease pinion gear bearing rotating torque and never exceed specified preload torque. If preload torque or rotating torque is exceeded a new collapsible spacer must be installed. The torque sequence will then have to be repeated.

(14) Using yoke holder 6958, a short length of 1 in. pipe, and a torque wrench set at 474 N·m (350 ft. lbs.), crush collapsible spacer until bearing end play is taken up (Fig. 52).

**NOTE:** If the spacer requires more than 474 N·m (350 ft. lbs.) torque to crush, the collapsible spacer is defective and must be replaced.


(15) Slowly tighten the nut in 6.8 N·m (5 ft. lbs.) increments until the rotating torque is achieved. Measure the rotating torque frequently to avoid over crushing the collapsible spacer (Fig. 53).

(16) Check bearing rotating torque with an inch pound torque wrench (Fig. 53). The torque necessary to rotate the pinion gear should be:


- Original Bearings — 1 to 3 N·m (10 to 20 in. lbs.).
  - New Bearings — 2 to 5 N·m (15 to 35 in. lbs.).
- (17) Install differential in housing.

### FINAL ASSEMBLY

(1) Scrape the residual sealant from the housing and cover mating surfaces. Clean the mating surfaces with mineral spirits. Apply a bead of Mopar® Silicone

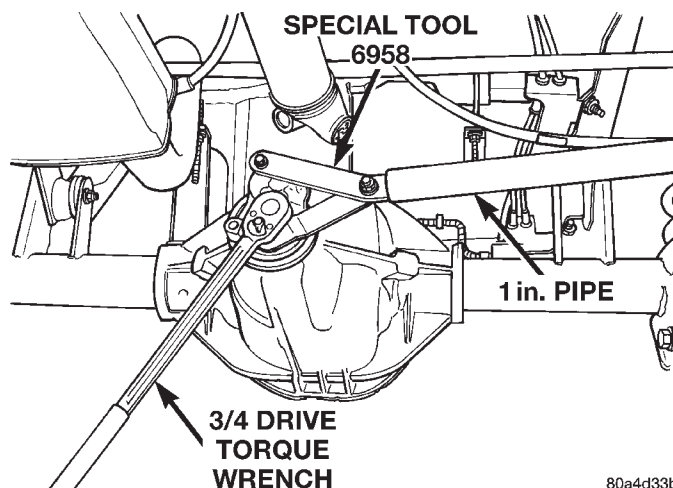

**Fig. 52 Tightening Pinion Nut**

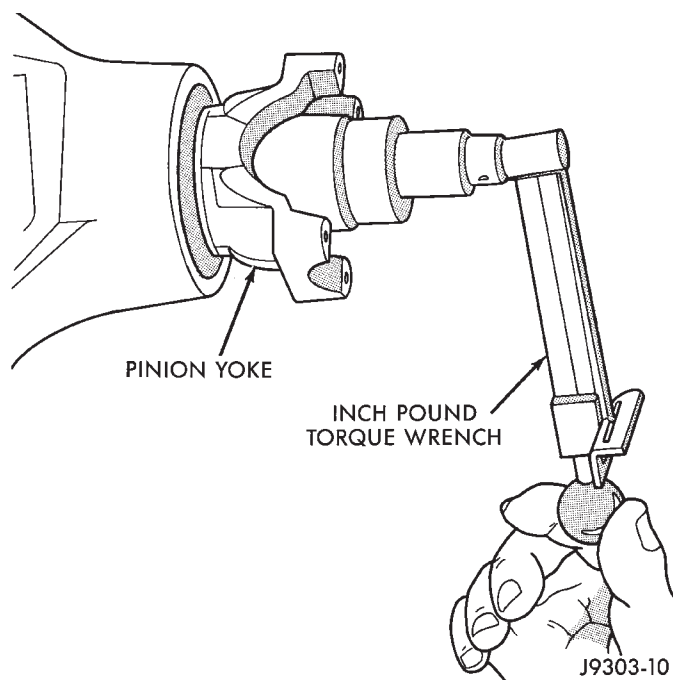

**Fig. 53 Check Pinion Gear Rotating Torque**

Rubber Sealant, or equivalent, on the housing cover (Fig. 54).

**Install the housing cover within 5 minutes after applying the sealant.**

(2) Install the cover on the differential with the attaching bolts. Install the identification tag. Tighten the cover bolts to 41 N·m (30 ft. lbs.) torque.


**CAUTION:** Overfilling the differential can result in lubricant foaming and overheating.

(3) Refill the differential housing with gear lubricant. Refer to the Lubricant Specifications section of this group for the gear lubricant requirements.

(4) Install the fill hole plug.




## REMOVAL AND INSTALLATION (Continued)

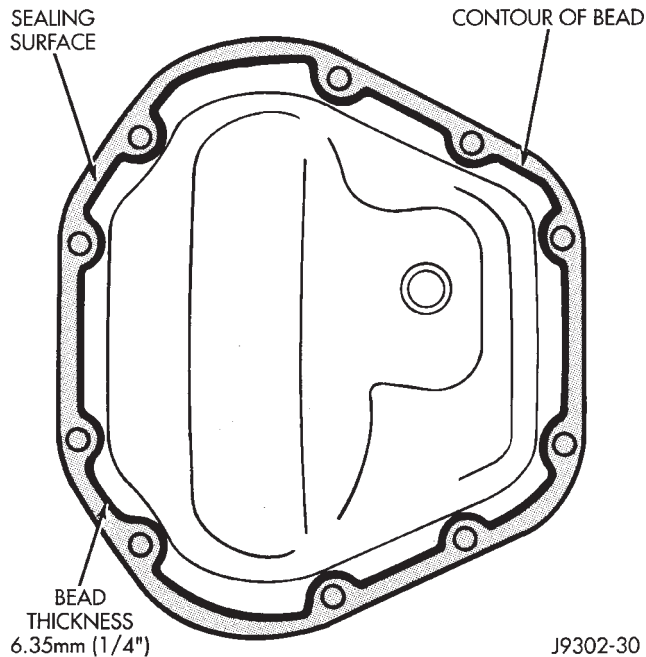

**Fig. 54 Typical Housing Cover With Sealant**

(4) Remove the differential side gears and thrust washers.

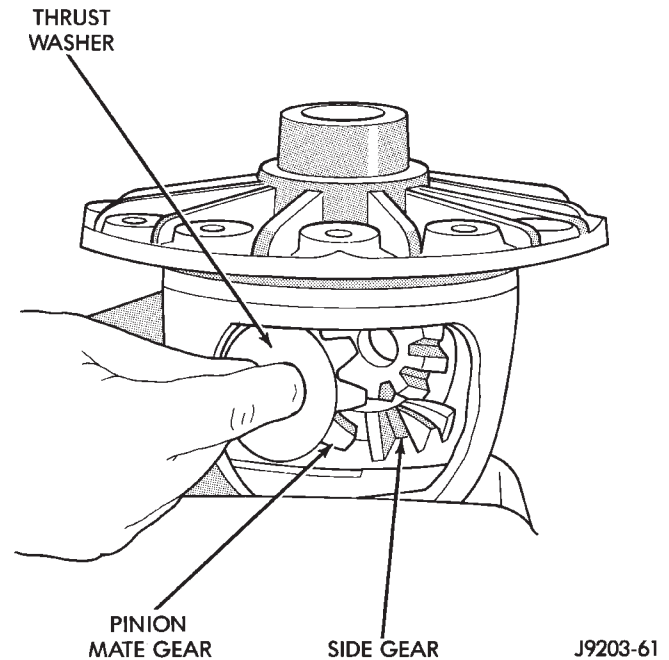


**Fig. 56 Pinion Mate Gear Removal**

## DISASSEMBLY AND ASSEMBLY

### STANDARD DIFFERENTIAL

#### DISASSEMBLY

- (1) Remove pinion gear mate shaft lock screw (Fig. 55).
- (2) Remove pinion gear mate shaft.
- (3) Rotate the differential side gears and remove the pinion mate gears and thrust washers (Fig. 56).

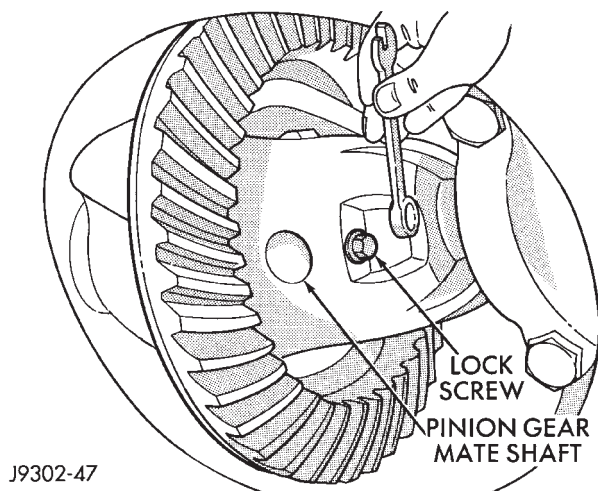

**Fig. 55 Pinion Gear Mate Shaft Lock Screw**

#### ASSEMBLY


- (1) Install the differential side gears and thrust washers.
- (2) Install the pinion mate gears and thrust washers.
- (3) Install the pinion gear mate shaft.
- (4) Align the hole in the pinion gear mate shaft with the hole in the differential case and install the pinion gear mate shaft lock screw.
- (5) Lubricate all differential components with hypoid gear lubricant.

### TRAC-LOK DIFFERENTIAL

The Trac-lok differential components are illustrated in (Fig. 57). Refer to this illustration during repair service.




## DISASSEMBLY AND ASSEMBLY (Continued)

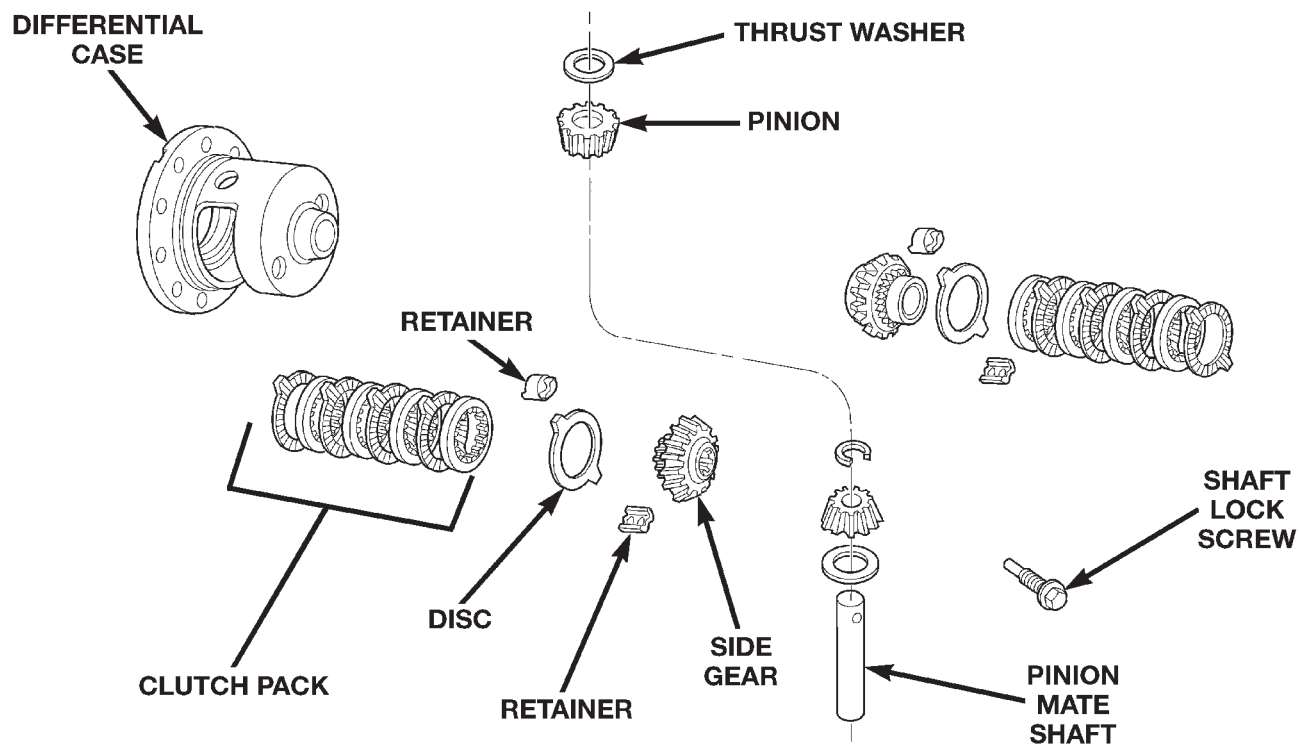

80a77404


**Fig. 57 Trac-lok Differential Components****DISASSEMBLY**

- (1) Clamp Side Gear Holding Tool 6965 in a vise.
- (2) Position the differential case on Side Gear Holding Tool 6965 (Fig. 58).

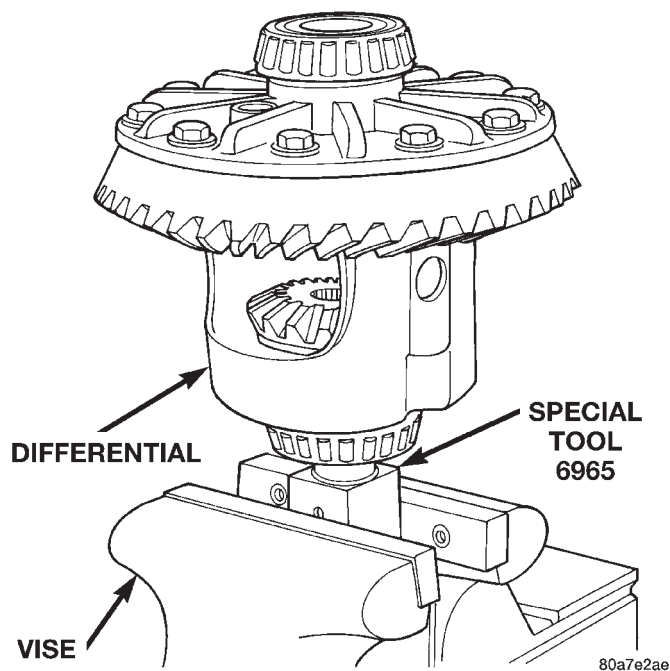**Fig. 58 Differential Case Holding Tool**


- (3) Remove ring gear, if necessary. Ring gear removal is necessary only if the ring gear is to be replaced. The Trac-lok differential can be serviced with the ring gear installed.

- (4) Remove the pinion gear mate shaft lock screw (Fig. 59).

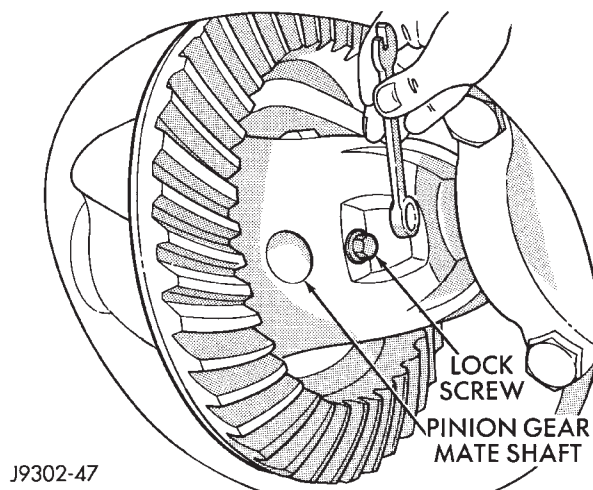**Fig. 59 Mate Shaft Lock Screw**

## DISASSEMBLY AND ASSEMBLY (Continued)


(5) Remove the pinion gear mate shaft. If necessary, use a drift and hammer (Fig. 60).

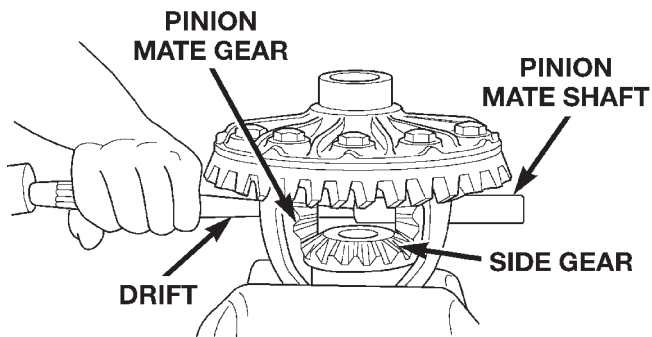

80a773e1

**Fig. 60 Mate Shaft Removal**

(6) Install and lubricate Step Plate C-6960-3 (Fig. 61).

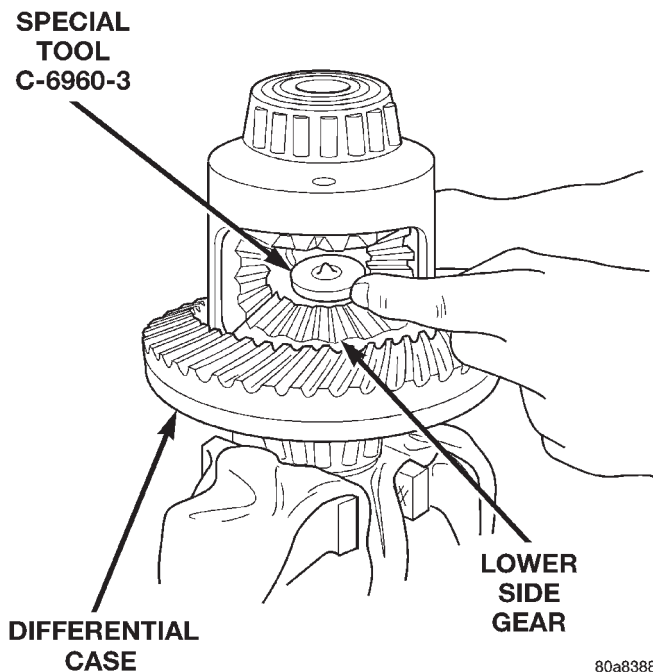


80a83886

**Fig. 61 Step Plate Tool Installation**

(7) Assemble Threaded Adapter C-6960-1 into top side gear. Thread Forcing Screw C-6960-4 into adapter until it becomes centered in adapter plate.


(8) Position a small screw driver in slot of Threaded Adapter C-6960-1 (Fig. 62) to prevent adapter from turning.

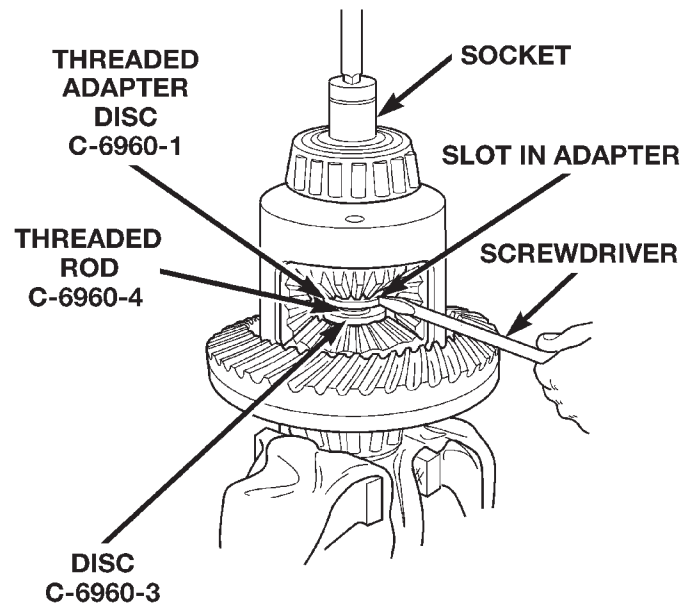

80a8387f

**Fig. 62 Threaded Adapter Installation**

(9) Tighten forcing screw tool 122 N·m (90 ft. lbs.) maximum to compress Belleville springs in clutch packs (Fig. 63).

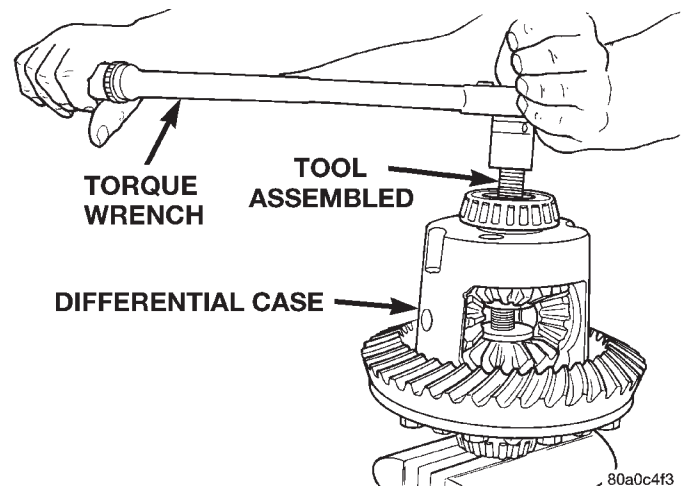


80a0c4f3

**Fig. 63 Tighten Belleville Spring Compressor Tool**

## DISASSEMBLY AND ASSEMBLY (Continued)

(10) Using an appropriate size feeler gauge, remove thrust washers from behind the pinion gears (Fig. 64).

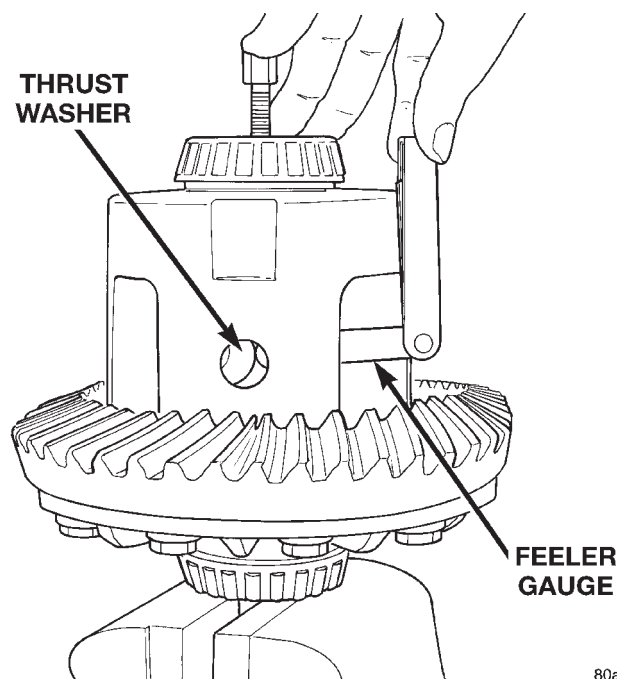

80a77406


**Fig. 64 Remove Pinion Gear Thrust Washer**

(11) Insert Turning Bar C-6960-2 in case (Fig. 65).

(12) Loosen the Forcing Screw C-6960-4 in small increments until the clutch pack tension is relieved and the differential case can be turned using Turning Bar C-6960-2.

(13) Rotate differential case until the pinion gears can be removed.

(14) Remove pinion gears from differential case.

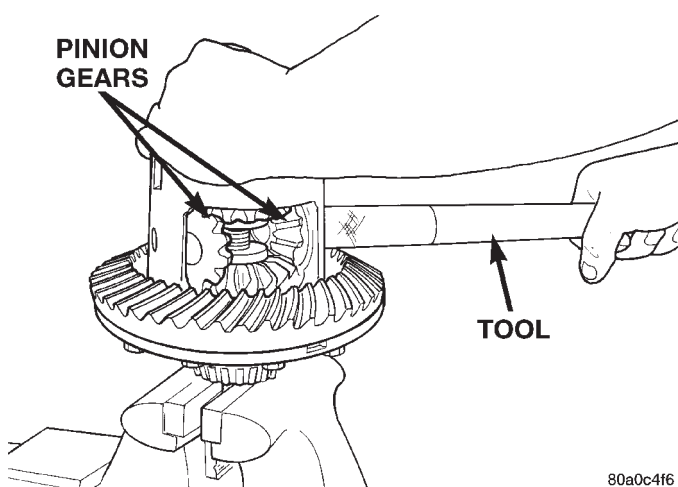


80a0c4f6

**Fig. 65 Pinion Gear Removal**

(15) Remove Forcing Screw C-6960-4, Step Plate C-6960-3, and Threaded Adapter C-6960-1.

(16) Remove top side gear, clutch pack retainer, and clutch pack. Keep plates in correct order during removal (Fig. 66).

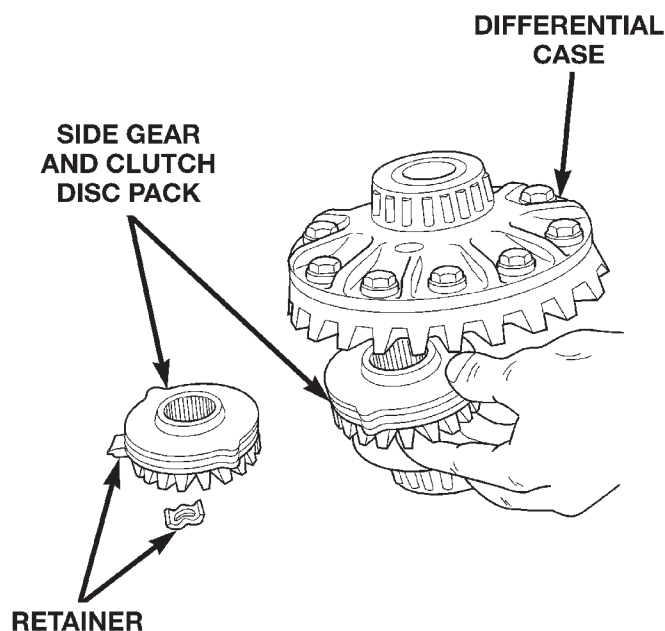

80a98382

**Fig. 66 Side Gear & Clutch Disc Removal**

(17) Remove differential case from Side Gear Holding Tool 6965. Remove side gear, clutch pack retainer, and clutch pack. Keep plates in correct order during removal.

## ASSEMBLY

**NOTE:** The clutch discs are replaceable as complete sets only. If one clutch disc pack is damaged, both packs must be replaced.

Lubricate each component with gear lubricant before assembly.

(1) Assemble the clutch discs into packs and secure disc packs with retaining clips (Fig. 67).

(2) Position assembled clutch disc packs on the side gear hubs.

(3) Install clutch pack and side gear in the ring gear side of the differential case (Fig. 68). **Be sure clutch pack retaining clips remain in position and are seated in the case pockets.**

(4) Position the differential case on Side Gear Holding Tool 6965.



(5) Install lubricated Step Plate C-6960-3 in lower side gear (Fig. 69).

(6) Install the upper side gear and clutch disc pack (Fig. 69).

(7) Hold assembly in position. Insert Threaded Adapter C-6960-1 into top side gear.

(8) Insert Forcing Screw C-6960-4.


## DISASSEMBLY AND ASSEMBLY (Continued)

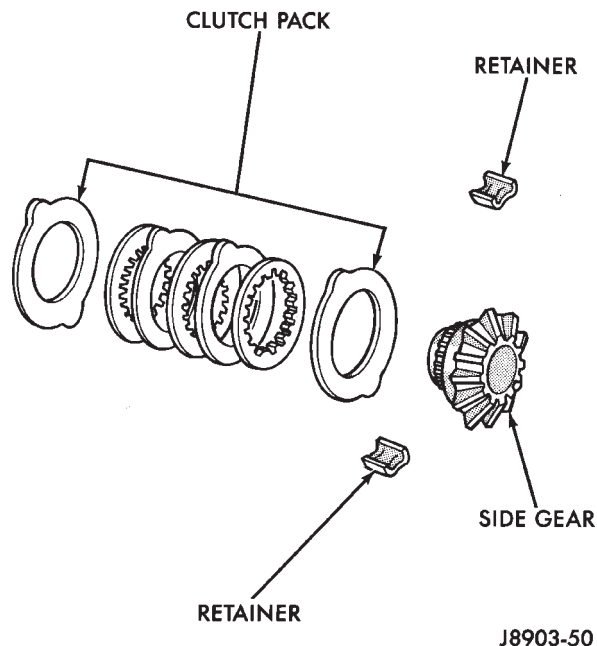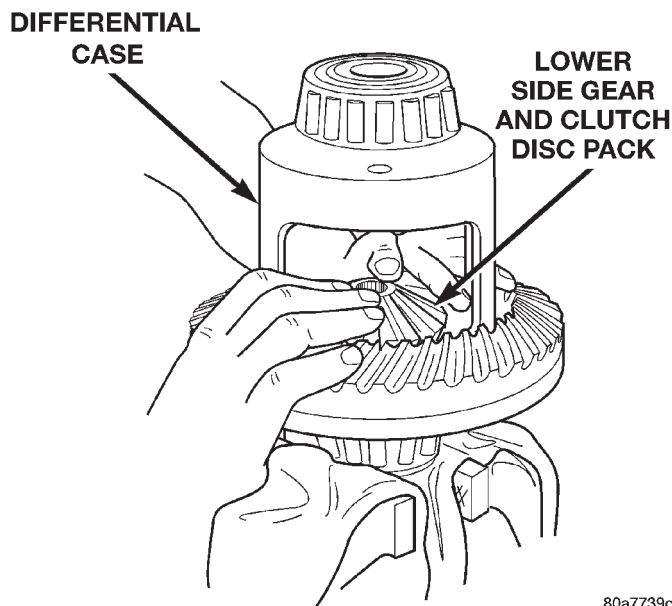**Fig. 67 Clutch Disc Pack****Fig. 68 Clutch Discs & Lower Side Gear Installation**

(9) Tighten forcing screw tool to slightly compress clutch discs.

(10) Place pinion gears in position in side gears and verify that the pinion mate shaft hole is aligned.

(11) Rotate case with Turning Bar C-6960-2 until the pinion mate shaft holes in pinion gears align with holes in case. It may be necessary to slightly tighten the forcing screw in order to install the pinion gears.

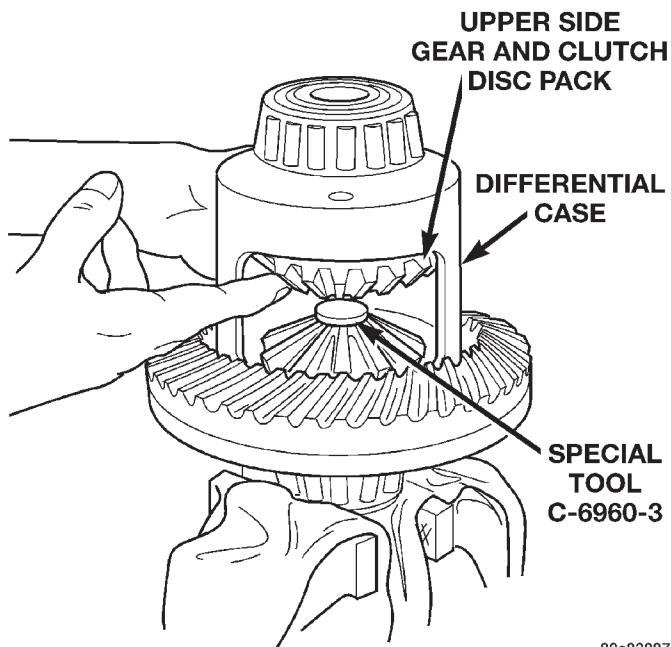**Fig. 69 Upper Side Gear & Clutch Disc Pack Installation**

(12) Tighten forcing screw to 122 N·m (90 ft. lbs.) maximum to compress the Belleville springs.

(13) Lubricate and install thrust washers behind pinion gears and align washers with a small screw driver. Insert mate shaft into each pinion gear to verify alignment.

(14) Remove Forcing Screw C-6960-4, Step Plate C-6960-3, and Threaded Adapter C-6960-1.

(15) Install pinion gear mate shaft and align holes in shaft and case.

(16) Install the pinion mate shaft lock screw finger tight to hold shaft during differential installation.

**If replacement gears and thrust washers were installed, it is not necessary to measure the gear backlash. Correct fit is due to close machining tolerances during manufacture.**

(17) Lubricate all differential components with hypoid gear lubricant.

## CLEANING AND INSPECTION

### AXLE COMPONENTS

Wash differential components with cleaning solvent and dry with compressed air. **Do not steam clean the differential components.**

Wash bearings with solvent and towel dry, or dry with compressed air. **DO NOT** spin bearings with compressed air. **Cup and bearing must be replaced as matched sets only.**

Clean axle shaft tubes and oil channels in housing. Inspect for;

## CLEANING AND INSPECTION (Continued)

- Smooth appearance with no broken/dented surfaces on the bearing rollers or the roller contact surfaces.

- Bearing cups must not be distorted or cracked.
- Machined surfaces should be smooth and without any raised edges.

- Raised metal on shoulders of cup bores should be removed with a hand stone.

- Wear and damage to pinion gear mate shaft, pinion gears, side gears and thrust washers. Replace as a matched set only.

- Ring and pinion gear for worn and chipped teeth.

- Ring gear for damaged bolt threads. Replaced as a matched set only.

- Pinion yoke for cracks, worn splines, pitted areas, and a rough/corroded seal contact surface. Repair or replace as necessary.

- Preload shims for damage and distortion. Install new shims, if necessary.

## TRAC-LOK

Clean all components in cleaning solvent. Dry components with compressed air. Inspect clutch pack plates for wear, scoring or damage. Replace both clutch packs if any one component in either pack is damaged. Inspect side and pinion gears. Replace any gear that is worn, cracked, chipped or damaged. Inspect differential case and pinion shaft. Replace if worn or damaged.

## PRESOAK PLATES AND DISC

Plates and discs with fiber coating (no grooves or lines) must be presoaked in Friction Modifier before assembly. Soak plates and discs for a minimum of 20 minutes.

## ADJUSTMENTS

## PINION GEAR DEPTH

## GENERAL INFORMATION

Ring and pinion gears are supplied as matched sets only. The identifying numbers for the ring and pinion gear are etched into the face of each gear (Fig. 70). A plus (+) number, minus (-) number or zero (0) is etched into the face of the pinion gear. This number is the amount (in thousandths of an inch) the depth varies from the standard depth setting of a pinion etched with a (0). The standard setting from the center line of the ring gear to the back face of the pinion is 96.850 mm (3.813 in.). The standard depth provides the best teeth contact pattern. Refer to Backlash and Contact Pattern Analysis Paragraph in this section for additional information.


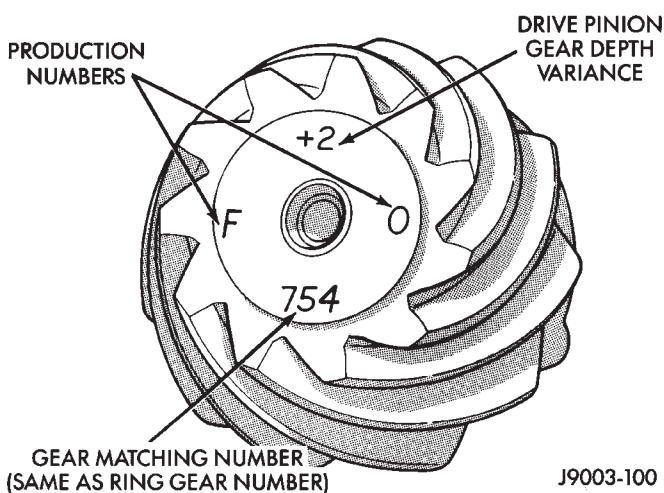


Fig. 70 Pinion Gear ID Numbers

Compensation for pinion depth variance is achieved with select shims. The shims are placed under the inner pinion bearing cone (Fig. 71).

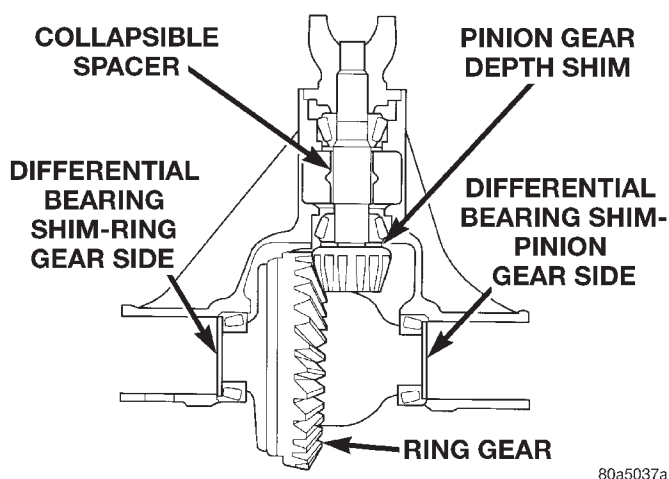

80a5037a

Fig. 71 Shim Locations

If a new gear set is being installed, note the depth variance etched into both the original and replacement pinion gear. Add or subtract the thickness of the original depth shims to compensate for the difference in the depth variances. Refer to the Depth Variance charts.

Note where Old and New Pinion Marking columns intersect. Intersecting figure represents plus or minus amount needed.

Note the etched number on the face of the drive pinion gear (-1, -2, 0, +1, +2, etc.). The numbers represent thousandths of an inch deviation from the standard. If the number is negative, add that value to the required thickness of the depth shim(s). If the number is positive, subtract that value from the thickness of the depth shim(s). If the number is 0 no change is necessary. Refer to the Pinion Gear Depth Variance Chart.



## ADJUSTMENTS (Continued)


## PINION GEAR DEPTH VARIANCE

Original Pinion Gear Depth Variance	Replacement Pinion Gear Depth Variance								
	-4	-3	-2	-1	0	+1	+2	+3	+4
+4	+0.008	+0.007	+0.006	+0.005	+0.004	+0.003	+0.002	+0.001	0
+3	+0.007	+0.006	+0.005	+0.004	+0.003	+0.002	+0.001	0	-0.001
+2	+0.006	+0.005	+0.004	+0.003	+0.002	+0.001	0	-0.001	-0.002
+1	+0.005	+0.004	+0.003	+0.002	+0.001	0	-0.001	-0.002	-0.003
0	+0.004	+0.003	+0.002	+0.001	0	-0.001	-0.002	-0.003	-0.004
-1	+0.003	+0.002	+0.001	0	-0.001	-0.002	-0.003	-0.004	-0.005
-2	+0.002	+0.001	0	-0.001	-0.002	-0.003	-0.004	-0.005	-0.006
-3	+0.001	0	-0.001	-0.002	-0.003	-0.004	-0.005	-0.006	-0.007
-4	0	-0.001	-0.002	-0.003	-0.004	-0.005	-0.006	-0.007	-0.008

J8902-46

## PINION DEPTH MEASUREMENT AND ADJUSTMENT

Measurements are taken with pinion cups and pinion bearings installed in housing. Take measurements with a Pinion Gauge Set, Pinion Block 6735, Arbor Discs 6732, and Dial Indicator C-3339 (Fig. 72).

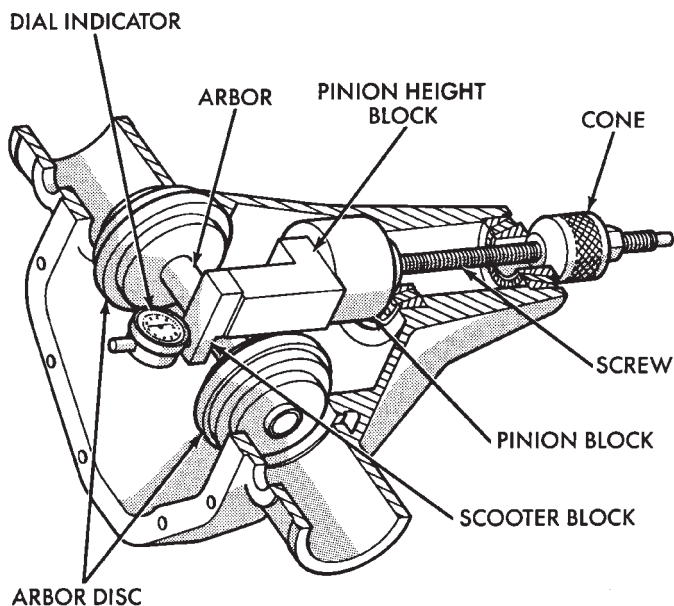


J9403-45

Fig. 72 Pinion Gear Depth Gauge Tools—Typical

(1) Assemble Pinion Height Block 6739, Pinion Block 6735, and rear pinion bearing onto Screw 6741 (Fig. 72).

(2) Insert assembled height gauge components, rear bearing and screw into axle housing through pinion bearing cups (Fig. 73).

(3) Install front pinion bearing and Cone 6740 hand tight (Fig. 72).

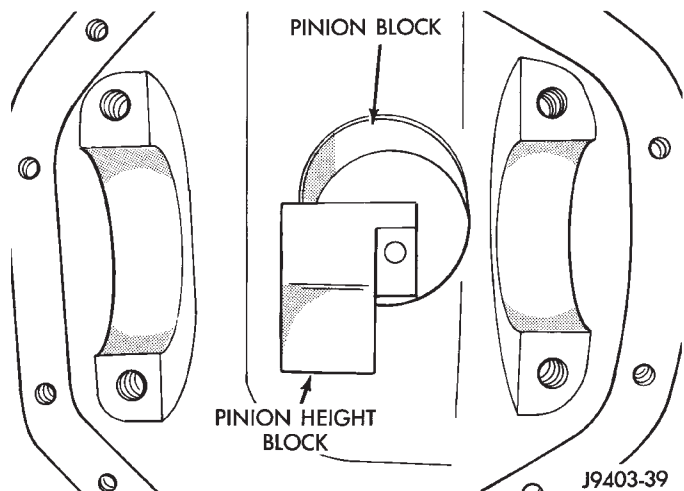


J9403-39

Fig. 73 Pinion Height Block—Typical

(4) Place Arbor Disc 6732 on Arbor D-115-3 in position in axle housing side bearing cradles (Fig. 74). Install differential bearing caps on Arbor Discs and tighten cap bolts. Refer to the Torque Specifications in this section.

## ADJUSTMENTS (Continued)

**NOTE:** Arbor Discs 6732 have different step diameters to fit other axle sizes. Pick correct size step for axle being serviced.

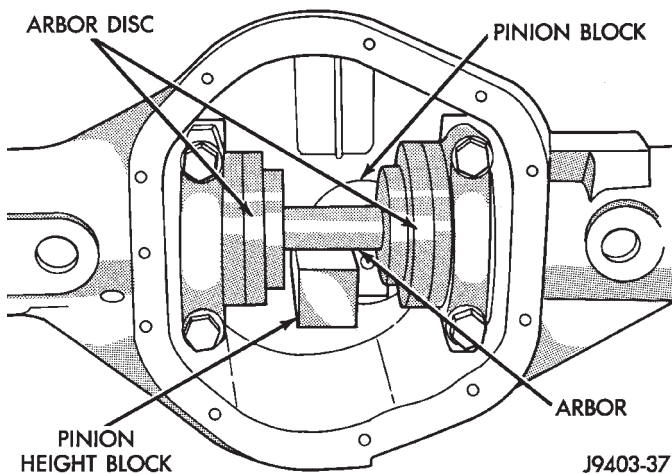

**Fig. 74 Gauge Tools In Housing—Typical**

(5) Assemble Dial Indicator C-3339 into Scooter Block D-115-2 and secure set screw.


(6) Place Scooter Block/Dial Indicator in position in axle housing so dial probe and scooter block are flush against the surface of the pinion height block. Hold scooter block in place and zero the dial indicator face to the pointer. Tighten dial indicator face lock screw.

(7) With scooter block still in position against the pinion height block, slowly slide the dial indicator probe over the edge of the pinion height block. Observe how many revolutions counterclockwise the dial pointer travels (approximately 0.125 in.) to the out-stop of the dial indicator.

(8) Slide the dial indicator probe across the gap between the pinion height block and the arbor bar with the scooter block against the pinion height block (Fig. 75). When the dial probe contacts the arbor bar, the dial pointer will turn clockwise. Bring dial pointer back to zero against the arbor bar, do not turn dial face. Continue moving the dial probe to the crest of the arbor bar and record the highest reading. If the dial indicator can not achieve the zero reading, the rear bearing cup or the pinion depth gauge set is not installed correctly.

(9) Select a shim equal to the dial indicator reading plus the drive pinion gear depth variance number etched in the face of the pinion gear (Fig. 70) using the opposite sign on the variance number. For example, if the depth variance is -2, add +0.002 in. to the dial indicator reading.

(10) Remove the pinion depth gauge components from the axle housing

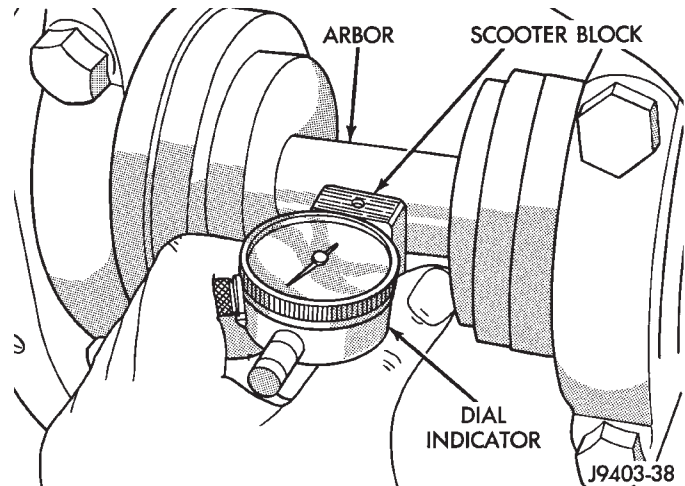

**Fig. 75 Pinion Gear Depth Measurement—Typical**

### DIFFERENTIAL BEARING PRELOAD AND GEAR BACKLASH


Differential side bearing preload and gear backlash is achieved by selective shims inserted between the bearing cup and the axle housing. The proper shim thickness can be determined using slip-fit dummy bearings D-348 in place of the differential side bearings and a dial indicator C-3339. Before proceeding with the differential bearing preload and gear backlash measurements, measure the pinion gear depth and prepare the pinion gear for installation. Establishing proper pinion gear depth is essential to establishing gear backlash and tooth contact patterns. After the overall shim thickness to take up differential side play is measured, the pinion gear is installed, and the gear backlash shim thickness is measured. The overall shim thickness is the total of the dial indicator reading, starting point shim thickness, and the preload specification added together. The gear backlash measurement determines the thickness of the shim used on the ring gear side of the differential case. Subtract the gear backlash shim thickness from the total overall shim thickness and select that amount for the pinion gear side of the differential (Fig. 76).

### SHIM SELECTION

**NOTE:** It is difficult to salvage the differential side bearings during the removal procedure. Install replacement bearings if necessary.

- (1) Remove side bearings from differential case.
- (2) Install ring gear, if necessary, on differential case and tighten bolts to specification.
- (3) Install dummy side bearings D-348 on differential case.
- (4) Install differential case in axle housing.


## ADJUSTMENTS (Continued)

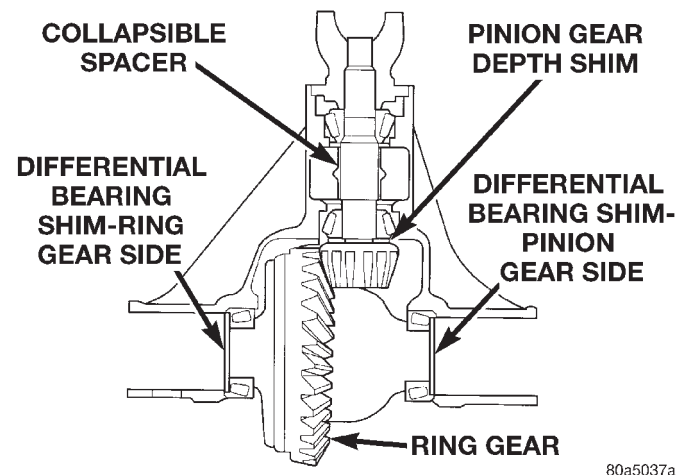

80a5037a

**Fig. 76 Axle Adjustment Shim Locations**

(5) Insert Dummy Shims 8107 (0.118 in. (3.0 mm)) starting point shims between the dummy bearing and the axle housing (Fig. 77).

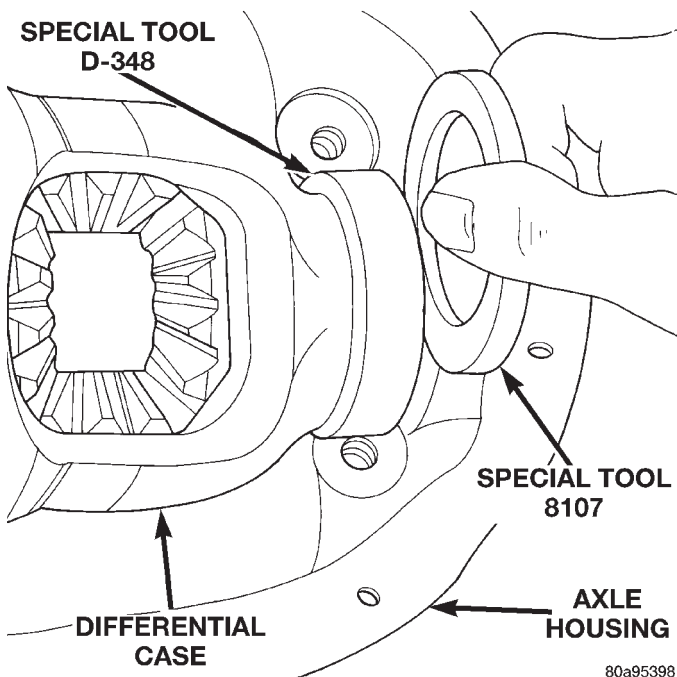

80a95398

**Fig. 77 Insert Starting Point Shims**

(6) Install the marked bearing caps in their correct positions. Install and tighten the bolts.


(7) Thread guide stud C-3288-B into rear cover bolt hole below ring gear (Fig. 78).

(8) Attach dial indicator C-3339 to guide stud. Position the dial indicator plunger on a flat surface on a ring gear bolt head (Fig. 78).

(9) Push firmly and hold differential case to pinion gear side of axle housing.

(10) Zero dial indicator face to pointer.

(11) Push firmly and hold differential case to ring gear side of the axle housing.

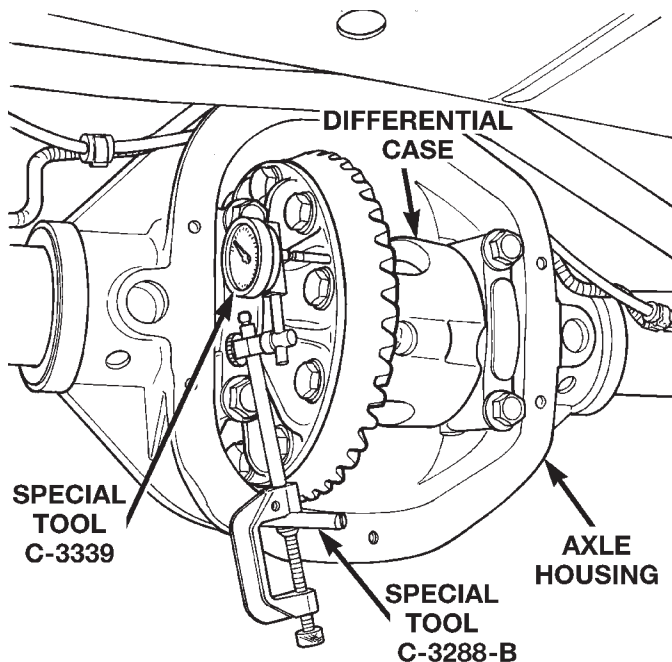

80a7e2cf

**Fig. 78 Differential Side Play Measurement**

(12) Record dial indicator reading.

(13) Add the dial indicator reading to the starting point shim thickness to determine total shim thickness to achieve zero differential end play.

(14) Add 0.008 in. (0.2 mm) to the zero end play total. This new total represents the thickness of shims to compress, or preload the new bearings when the differential is installed.

(15) Rotate dial indicator out of the way on guide stud.

(16) Remove differential case, dummy bearings, and starting point shims from axle housing.

(17) Install pinion gear in axle housing. Install the yoke and establish the correct pinion rotating torque.

(18) Install differential case and dummy bearings in axle housing (without shims) and tighten retaining cap bolts.

(19) Position the dial indicator plunger on a flat surface between the ring gear bolt heads (Fig. 78).

(20) Push and hold differential case toward pinion gear.

(21) Zero dial indicator face to pointer.

(22) Push and hold differential case to ring gear side of the axle housing.

(23) Record dial indicator reading.

(24) Subtract 0.002 in. (0.05 mm) from the dial indicator reading to compensate for backlash between ring and pinion gears. This total is the thickness of shim required to achieve proper backlash.

(25) Subtract the backlash shim thickness from the total preload shim thickness. The remainder is the shim thickness required on the pinion side of the axle housing.



## ADJUSTMENTS (Continued)

(26) Rotate dial indicator out of the way on guide stud.

(27) Remove differential case and dummy bearings from axle housing.

(28) Install new side bearing cones and cups on differential case.

(29) Install spreader W-129-B, utilizing some components of Adapter Set 6987, on axle housing and spread axle opening enough to receive differential case.

(30) Place side bearing shims in axle housing against axle tubes.

(31) Install differential case in axle housing.

(32) Rotate the differential case several times to seat the side bearings.

(33) Position the indicator plunger against a ring gear tooth (Fig. 79).


(34) Push and hold ring gear upward while not allowing the pinion gear to rotate.

(35) Zero dial indicator face to pointer.


(36) Push and hold ring gear downward while not allowing the pinion gear to rotate. Dial indicator reading should be between 0.12 mm (0.005 in.) and 0.20 mm (0.008 in.). If backlash is not within specifications transfer the necessary amount of shim thickness from one side of the differential housing to the other (Fig. 80).

(37) Verify differential case and ring gear runout by measuring ring to pinion gear backlash at several locations around the ring gear. Readings should not vary more than 0.05 mm (0.002 in.). If readings vary more than specified, the ring gear or the differential case is defective.

After the proper backlash is achieved, perform the Gear Contact Pattern Analysis procedure.

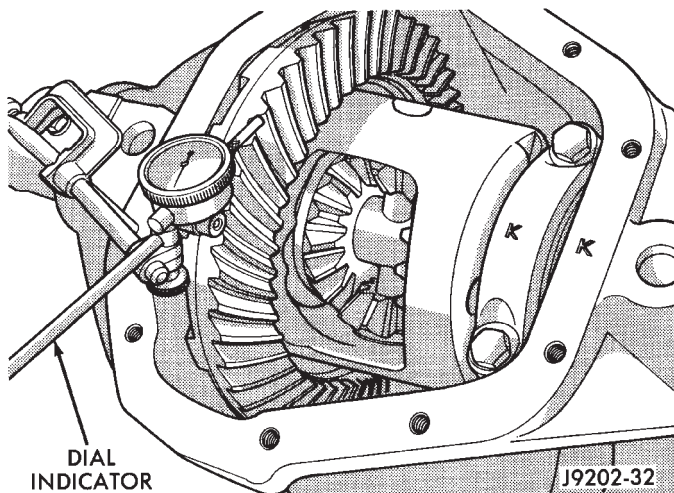

**Fig. 79 Ring Gear Backlash Measurement**

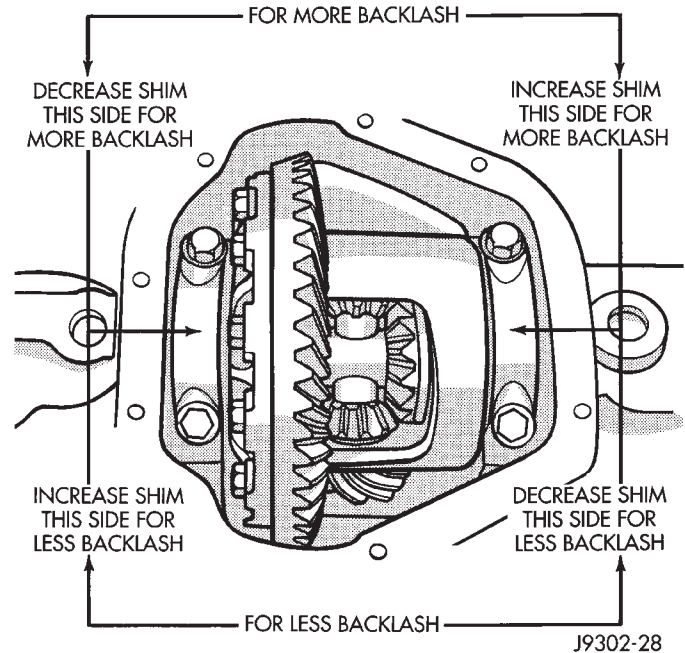

**Fig. 80 Backlash Shim Adjustment**

## GEAR CONTACT PATTERN ANALYSIS

The ring and pinion gear teeth contact patterns will show if the pinion gear depth is correct in the axle housing. It will also show if the ring gear backlash has been adjusted correctly. The backlash can be adjusted within specifications to achieve desired tooth contact patterns.



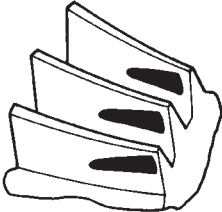
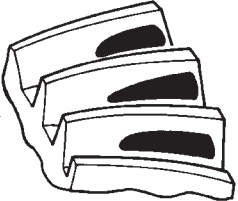
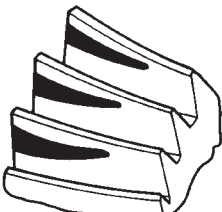
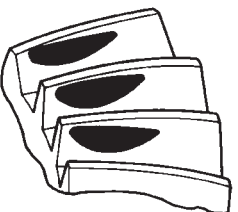
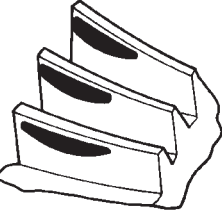
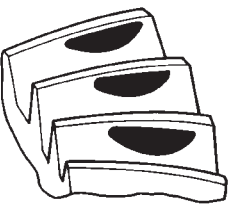
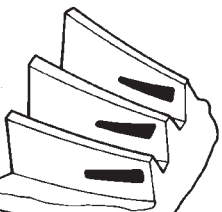

(1) Apply a thin coat of hydrated ferric oxide, or equivalent, to the drive and coast side of the ring gear teeth.

(2) Wrap, twist, and hold a shop towel around the pinion yoke to increase the turning resistance of the pinion gear. This will provide a more distinct contact pattern.

(3) Using a boxed end wrench on a ring gear bolt, Rotate the differential case one complete revolution in both directions while a load is being applied from shop towel.

The areas on the ring gear teeth with the greatest degree of contact against the pinion gear teeth will squeegee the compound to the areas with the least amount of contact. Note and compare patterns on the ring gear teeth to Gear Tooth Contact Patterns chart (Fig. 81) and adjust pinion depth and gear backlash as necessary.

ADJUSTMENTS (Continued)
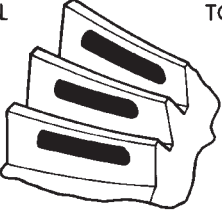
<div>DRIVE SIDE OF RING GEAR TEETH</div> <div>HEEL                      TOE</div> 	<div>COAST SIDE OF RING GEAR TEETH</div> <div>TOE                      HEEL</div> 	<p>DESIRABLE CONTACT PATTERN. PATTERN SHOULD BE CENTERED ON THE DRIVE SIDE OF TOOTH. PATTERN SHOULD BE CENTERED ON THE COAST SIDE OF TOOTH, BUT MAY BE SLIGHTLY TOWARD THE TOE. THERE SHOULD ALWAYS BE SOME CLEARANCE BETWEEN CONTACT PATTERN AND TOP OF THE TOOTH.</p>
		<p>RING GEAR BACKLASH CORRECT. <b>THINNER</b> PINION GEAR DEPTH SHIM REQUIRED.</p>
		<p>RING GEAR BACKLASH CORRECT. <b>THICKER</b> PINION GEAR DEPTH SHIM REQUIRED.</p>
		<p>PINION GEAR DEPTH SHIM CORRECT. <b>DECREASE</b> RING GEAR BACKLASH.</p>
		<p>PINION GEAR DEPTH SHIM CORRECT. <b>INCREASE</b> RING GEAR BACKLASH.</p>

J9003-24

Fig. 81 Gear Tooth Contact Patterns



## SPECIFICATIONS

## 194 RBI AXLE



**DESCRIPTION SPECIFICATION**

Axle Type . . . . .Semi-Floating Hypoid  
 Lubricant. . . . .SAE Thermally Stable 80W-90  
 Lubricant Trailer Tow . . . . .Synthetic 75W-140  
 Lube Capacity . . . . .1.66 L (3.50 pts.)  
 Axle Ratios. . . . .3.07, 3.55, 3.73, 4.10  
 Differential Bearing Preload . . . .0.1 mm (0.004 in.)  
 Differential Side Gear

Clearance . . . . .0-0.15 mm (0-0.006 in.)  
 Ring Gear Diameter . . . . .19.2 cm (7.562 in.)  
 Ring Gear Backlash . . .0-0.15 mm (0.005-0.008 in.)  
 Pinion Std. Depth . . . . .92.08 mm (3.625 in.)  
 Pinion Bearing Preload-

Original Bearings . . . . .1-2 N·m (10-20 in. lbs.)  
 Pinion Bearing Preload-

New Bearings . . . . .1.5-4 N·m (15-35 in. lbs.)  
 Maximum Carrier Spread . . . .0.51 mm (0.020 in.)

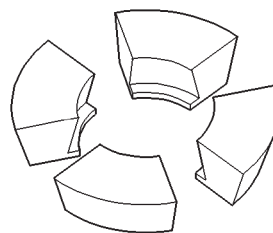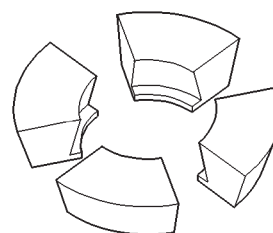**Adapter—C-293-39****Adapter—C-293-40**

## 194 RBI AXLE

**DESCRIPTION TORQUE**

**Bolt, Diff. Cover** . . . . .41 N·m (30 ft. lbs.)

**Bolt, Bearing Cap** . . . . .77 N·m (57 ft. lbs.)


**Nut, Pinion** . . . . .271-474 N·m  
 (200-350 ft. lbs.)

**Screw, Pinion Mate**

**Shaft Lock** . . . . .16.25 N·m  
 (12 ft. lbs.)



**Bolt, Ring Gear** . . . . .95-122 N·m (70-90 ft. lbs.)

**Bolt, ABS Sensor** . . . . .8 N·m (70 in. lbs.)

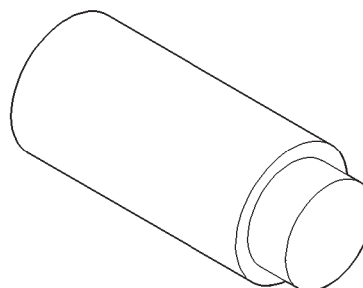
**Plug—SP-3289**

## SPECIAL TOOLS


## 194 RBI AXLE

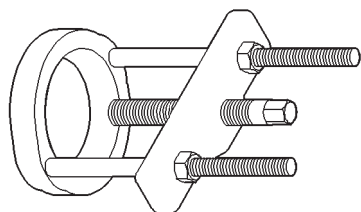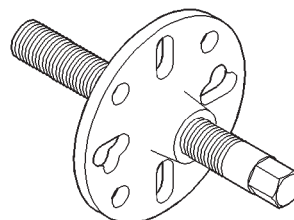**Puller—C-293-PA****Puller—C-452**


SPECIAL TOOLS (Continued)

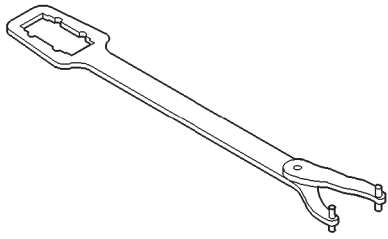


**Wrench—C-3281**

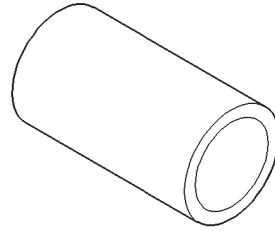


**Cup—8109**

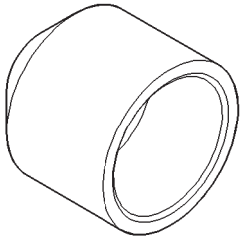


**Installer—C-3972-A**

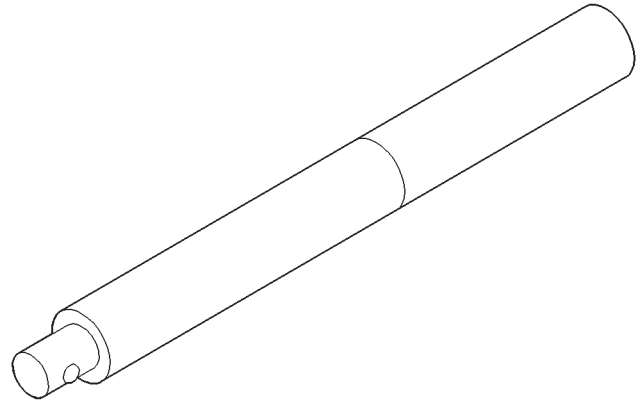


**Handle—C-4171**

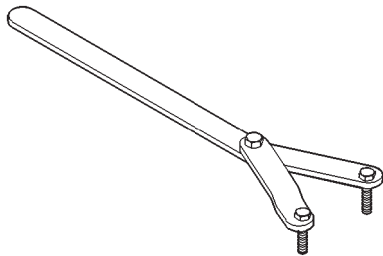


**Spanner—6958**

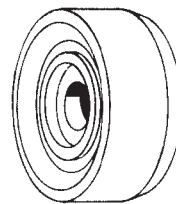

**Driver—C-3716-A**

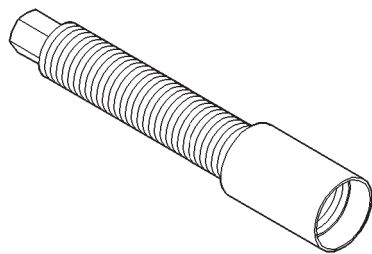


**Installer Screw—8112**

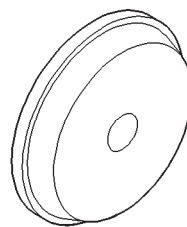


**Installer—D-130**


SPECIAL TOOLS (Continued)

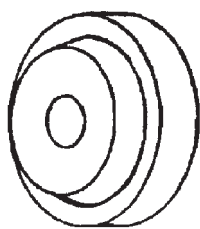



**Installer—D-146**

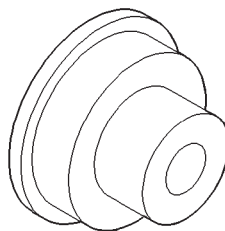

**Installer—6436**

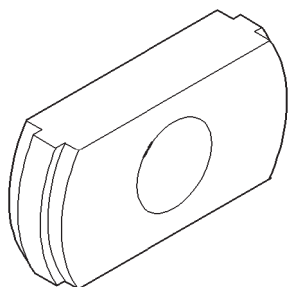


**Remover—C-4345**

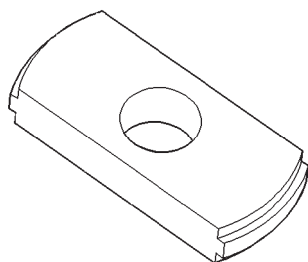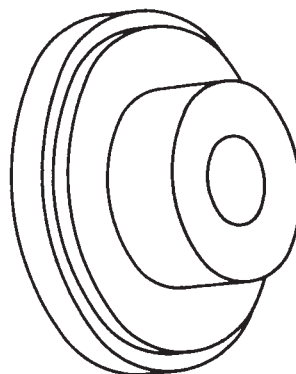


**Remover—D-149**


**Installer—6437**

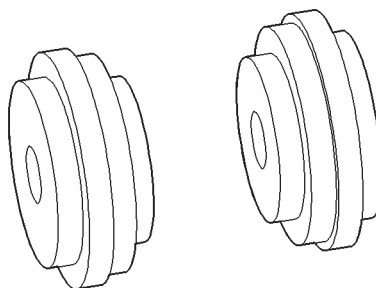

**Disc, Axle Arbor—6732**

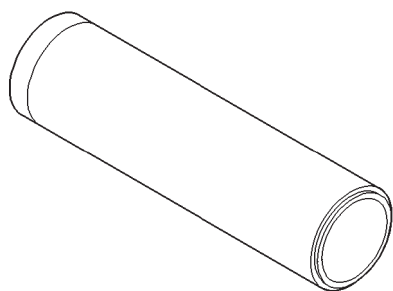


**Installer—W-262**

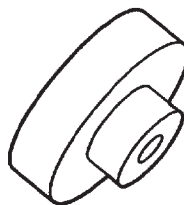


**Gauge Block—6735**


SPECIAL TOOLS (Continued)

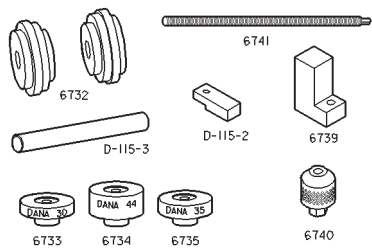


**Tool Set, Pinion Depth—6774**

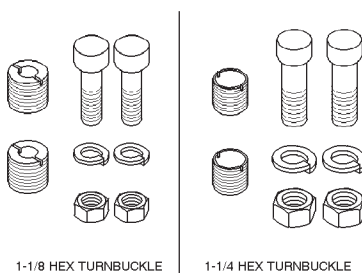


**Adapter Kit—6987**

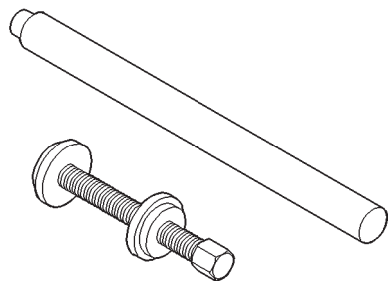


**Trac-lok Tool Set—6960**

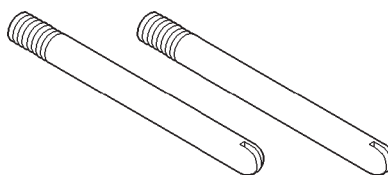


**Guide Pin—C-3288-B**

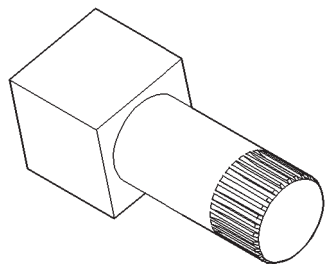


**Holder—6965**

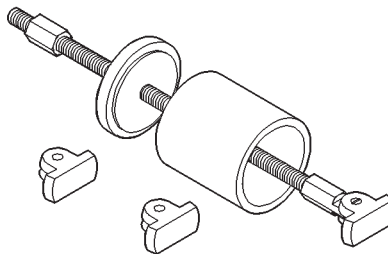


**Bearing Remover Tool Set—6310**

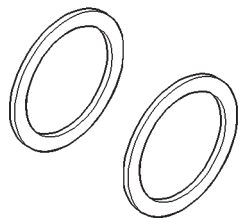


**Starting Point Shim—8107**

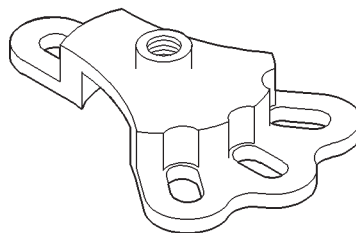

**Hub Puller—6790**

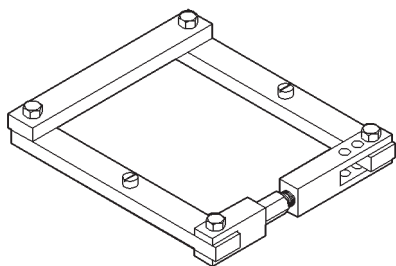

**Spreader—W-129-B**

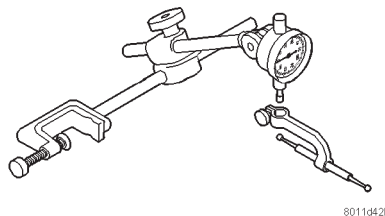

**Dial Indicator—C-3339**

## 216 RBA AXLE

## INDEX

	page		page
<b>GENERAL INFORMATION</b>		<b>DIFFERENTIAL</b> .....	101
216 RBA AXLE .....	88	<b>FINAL ASSEMBLY</b> .....	108
LUBRICANT SPECIFICATIONS .....	88	<b>PINION GEAR</b> .....	104
<b>DESCRIPTION AND OPERATION</b>		<b>PINION SHAFT SEAL</b> .....	95
STANDARD DIFFERENTIAL .....	89	<b>REAR AXLE</b> .....	94
TRAC-LOK OPERATION .....	89	<b>RING GEAR</b> .....	103
<b>DIAGNOSIS AND TESTING</b>		<b>DISASSEMBLY AND ASSEMBLY</b>	
BEARING NOISE .....	90	STANDARD DIFFERENTIAL .....	108
DRIVELINE SNAP .....	91	TRAC-LOK DIFFERENTIAL .....	108
GEAR NOISE .....	90	<b>CLEANING AND INSPECTION</b>	
GENERAL INFORMATION .....	90	AXLE COMPONENTS .....	112
LOW SPEED KNOCK .....	91	TRAC-LOK .....	113
TRAC-LOK DIFFERENTIAL NOISE .....	91	<b>ADJUSTMENTS</b>	
TRAC-LOK TEST .....	94	DIFFERENTIAL BEARING PRELOAD AND	
VIBRATION .....	91	GEAR BACKLASH .....	115
<b>SERVICE PROCEDURES</b>		GEAR CONTACT PATTERN ANALYSIS .....	117
LUBRICANT CHANGE .....	94	PINION GEAR DEPTH .....	113
<b>REMOVAL AND INSTALLATION</b>		<b>SPECIFICATIONS</b>	
AXLE SHAFT SEAL AND BEARING .....	100	216 RBA AXLE .....	119
AXLE SHAFT .....	99	TORQUE .....	119
COLLAPSIBLE SPACER .....	97	<b>SPECIAL TOOLS</b>	
DIFFERENTIAL SIDE BEARINGS .....	103	216 RBA AXLE .....	119

## GENERAL INFORMATION

## 216 RBA AXLE

The 216 Rear Beam-design Aluminum (RBA) axle housing has an aluminum center casting (differential housing) with axle shaft tubes extending from either side. The tubes are pressed into the differential housing to form a one-piece axle housing.

The integral type housing, hypoid gear design has the center-line of the pinion set below the center-line of the ring gear.

The axle has a vent hose to relieve internal pressure caused by lubricant vaporization and internal expansion.

The axles are equipped with semi-floating axle shafts, meaning that vehicle load is supported by the axle shaft and bearings. The axle shafts are retained by C-clips in the differential side gears.

The cover provides a means for servicing the differential without removing the axle.

For vehicles equipped with ABS brakes, the axles have a tone ring pressed onto the axle shaft. Use care when removing axle shafts to ensure that the tone wheel or the wheel speed sensor are not damaged.

The 216 RBA axle has the assembly part number and gear ratio listed on a tag. The tag is attached to the differential housing by a cover bolt. Build date identification codes are stamped on the cover side of an axle shaft tube.

The differential case is a one-piece design. The differential pinion mate shaft is retained with a threaded pin. Differential bearing preload and ring gear backlash is adjusted by the use of selective spacer shims. Pinion bearing preload is set and maintained by the use of a collapsible spacer (Fig. 1).

## LUBRICANT SPECIFICATIONS


A multi-purpose, hypoid gear lubricant which conforms to the following specifications should be used. Mopar® Hypoid Gear Lubricant conforms to all of these specifications.

- The lubricant should have MIL-L-2105C and API GL 5 quality specifications.
- Lubricant is a thermally stable SAE 80W-90 gear lubricant.
- Lubricant for axles intended for heavy-duty or trailer tow use is SAE 75W-140 SYNTHETIC gear lubricant.

Trac-lok differentials require the addition of 4 oz. of friction modifier to the axle lubricant. The 216



## GENERAL INFORMATION (Continued)

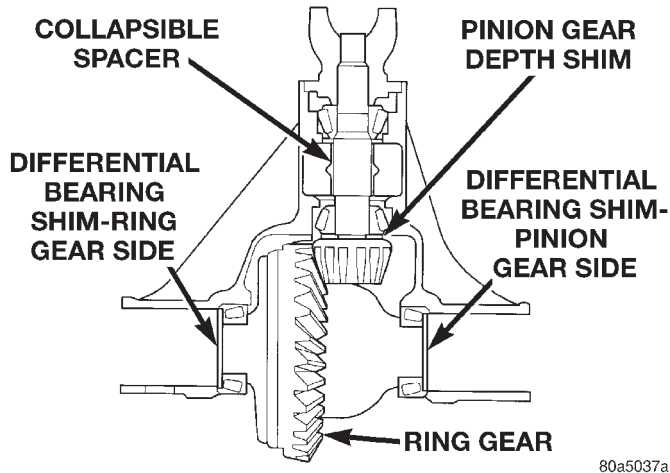

80a5037a

**Fig. 1 Shim Locations**

RBA axle lubricant capacity is 2.25 L (4.75 pts.) total, including the friction modifier if necessary.

**CAUTION:** If axle is submerged in water, lubricant must be replaced immediately to avoid possible premature axle failure.

## DESCRIPTION AND OPERATION

**STANDARD DIFFERENTIAL**

The differential gear system divides the torque between the axle shafts. It allows the axle shafts to rotate at different speeds when turning corners.


Each differential side gear is splined to an axle shaft. The pinion gears are mounted on a pinion mate shaft and are free to rotate on the shaft. The pinion gear is fitted in a bore in the differential case and is positioned at a right angle to the axle shafts.

In operation, power flow occurs as follows:


- The pinion gear rotates the ring gear
- The ring gear (bolted to the differential case) rotates the case
- The differential pinion gears (mounted on the pinion mate shaft in the case) rotate the side gears
- The side gears (splined to the axle shafts) rotate the shafts

During straight-ahead driving, the differential pinion gears do not rotate on the pinion mate shaft. This occurs because input torque applied to the gears is divided and distributed equally between the two side gears. As a result, the pinion gears revolve with the pinion mate shaft but do not rotate around it (Fig. 2).

When turning corners, the outside wheel must travel a greater distance than the inside wheel to complete a turn. The difference must be compensated for to prevent the tires from scuffing and skidding through turns. To accomplish this, the differential allows the axle shafts to turn at unequal speeds (Fig.

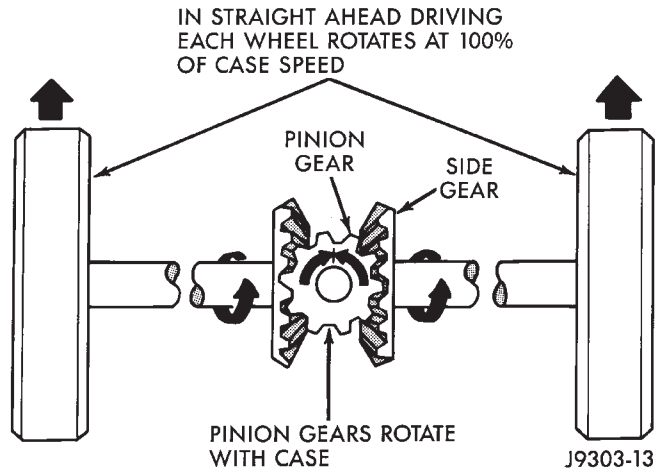**Fig. 2 Differential Operation—Straight Ahead Driving**

3). In this instance, the input torque applied to the pinion gears is not divided equally. The pinion gears now rotate around the pinion mate shaft in opposite directions. This allows the side gear and axle shaft attached to the outside wheel to rotate at a faster speed.

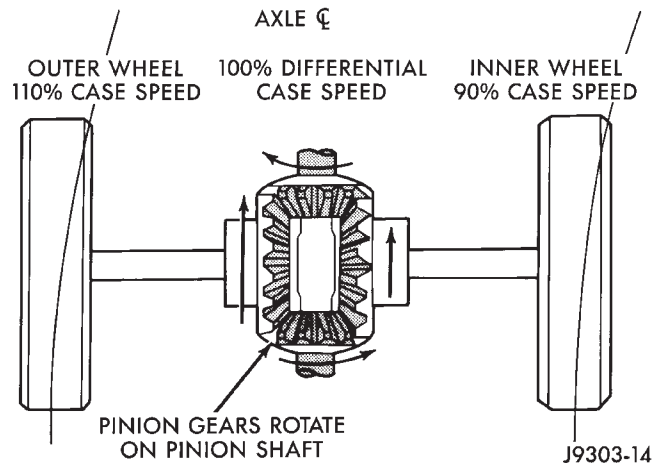
**Fig. 3 Differential Operation—On Turns****TRAC-LOK OPERATION**

In a conventional differential, if one wheel spins, the opposite wheel will generate only as much torque as the spinning wheel.

In the Trac-lok differential, part of the ring gear torque is transmitted through clutch packs which contain multiple discs. The clutches will have radial grooves on the plates, and concentric grooves on the discs or bonded fiber material that is smooth in appearance.

In operation, the Trac-lok clutches are engaged by two concurrent forces. The first being the preload force exerted through Belleville spring washers within the clutch packs. The second is the separating forces generated by the side gears as torque is applied through the ring gear (Fig. 4).

## DESCRIPTION AND OPERATION (Continued)

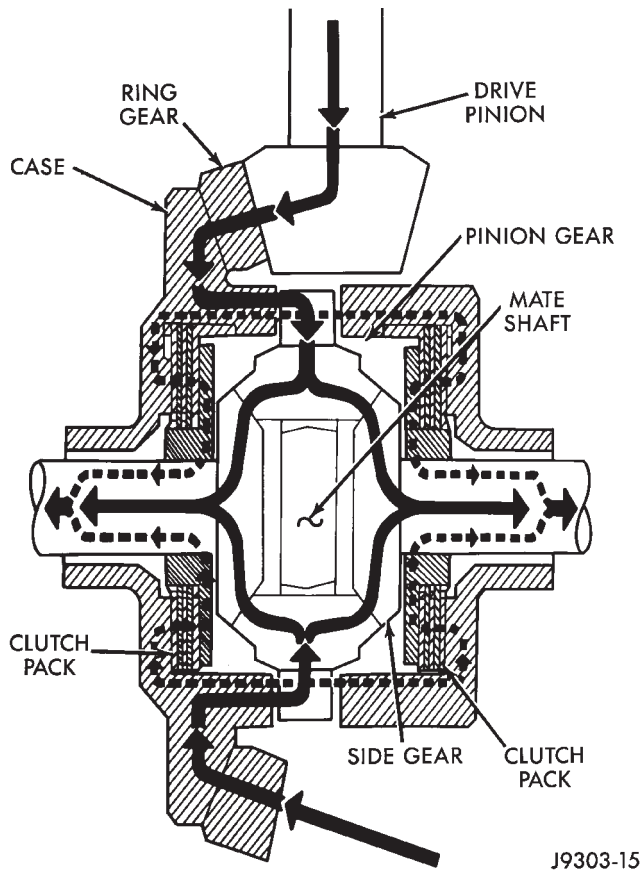

**Fig. 4 Trac-lok Limited Slip Differential Operation**

The Trac-lok design provides the differential action needed for turning corners and for driving straight ahead during periods of unequal traction. When one wheel loses traction, the clutch packs transfer additional torque to the wheel having the most traction. Trac-lok differentials resist wheel spin on bumpy roads and provide more pulling power when one wheel loses traction. Pulling power is provided continuously until both wheels have traction. If both wheels slip due to unequal traction, Trac-lok operation is normal. In extreme cases of differences of traction, the wheel with the least traction may spin.

## DIAGNOSIS AND TESTING

### GENERAL INFORMATION

Axle bearing problem conditions are usually caused by:

- Insufficient or incorrect lubricant.
- Foreign matter/water contamination.
- Incorrect bearing preload torque adjustment.
- Incorrect backlash.

Axle gear problem conditions are usually the result of:

- Insufficient lubrication.
- Incorrect or contaminated lubricant.

- Overloading (excessive engine torque) or exceeding vehicle weight capacity.

- Incorrect clearance or backlash adjustment.

Axle component breakage is most often the result of:

- Severe overloading.
- Insufficient lubricant.
- Incorrect lubricant.
- Improperly tightened components.

### GEAR NOISE

Axle gear noise can be caused by insufficient lubricant, incorrect backlash, tooth contact, or worn/damaged gears.

Gear noise usually happens at a specific speed range. The range is 30 to 40 mph, or above 50 mph. The noise can also occur during a specific type of driving condition. These conditions are acceleration, deceleration, coast, or constant load.

When road testing, accelerate the vehicle to the speed range where the noise is the greatest. Shift out-of-gear and coast through the peak-noise range. If the noise stops or changes greatly:

- Check for insufficient lubricant.
- Incorrect ring gear backlash.
- Gear damage.

Differential side and pinion gears can be checked by turning the vehicle. They usually do not cause noise during straight-ahead driving when the gears are unloaded. The side gears are loaded during vehicle turns. A worn pinion gear mate shaft can also cause a snapping or a knocking noise.

### BEARING NOISE

The axle shaft, differential and pinion gear bearings can all produce noise when worn or damaged. Bearing noise can be either a whining, or a growling sound.

Pinion gear bearings have a constant-pitch noise. This noise changes only with vehicle speed. Pinion bearing noise will be higher because it rotates at a faster rate. Drive the vehicle and load the differential. If bearing noise occurs, the rear pinion bearing is the source of the noise. If the bearing noise is heard during a coast, the front pinion bearing is the source.

Worn or damaged differential bearings usually produce a low pitch noise. Differential bearing noise is similar to pinion bearing noise. The pitch of differential bearing noise is also constant and varies only with vehicle speed.

Axle shaft bearings produce noise and vibration when worn or damaged. The noise generally changes when the bearings are loaded. Road test the vehicle. Turn the vehicle sharply to the left and to the right. This will load the bearings and change the noise.

**DIAGNOSIS AND TESTING (Continued)**

level. Where axle bearing damage is slight, the noise is usually not noticeable at speeds above 30 mph.

**LOW SPEED KNOCK**

Low speed knock is generally caused by a worn U-joint or by worn side-gear thrust washers. A worn pinion gear shaft bore will also cause low speed knock.

**VIBRATION**

Vibration at the rear of the vehicle is usually caused by a:

- Damaged drive shaft.
- Missing drive shaft balance weight(s).
- Worn or out-of-balance wheels.
- Loose wheel lug nuts.
- Worn U-joint(s).
- Loose/broken springs.
- Damaged axle shaft bearing(s).
- Loose pinion gear nut.
- Excessive pinion yoke run out.
- Bent axle shaft(s).

Check for loose or damaged front-end components or engine/transmission mounts. These components can contribute to what appears to be a rear-end vibration. Do not overlook engine accessories, brackets and drive belts.

All driveline components should be examined before starting any repair.

Refer to Group 22, Wheels and Tires, for additional vibration information.

**DRIVELINE SNAP**

A snap or clunk noise when the vehicle is shifted into gear (or the clutch engaged), can be caused by:

- High engine idle speed
- Loose engine/transmission/transfer case mounts
- Worn U-joints
- Loose spring mounts
- Loose pinion gear nut and yoke
- Excessive ring gear backlash
- Excessive side gear/case clearance

The source of a snap or a clunk noise can be determined with the assistance of a helper. Raise the vehicle on a hoist with the wheels free to rotate. Instruct the helper to shift the transmission into gear. Listen for the noise, a mechanics stethoscope is helpful in isolating the source of a noise.

**TRAC-LOK DIFFERENTIAL NOISE**

The most common problem is a chatter noise when turning corners. Before removing a Trac-lok unit for repair, drain, flush and refill the axle with the specified lubricant. Refer to Lubricant change in this Group.

A container of Mopar® Trac-lok Lubricant (friction modifier) should be added after repair service or during a lubricant change.

After changing the lubricant, drive the vehicle and make 10 to 12 slow, figure-eight turns. This maneuver will pump lubricant through the clutches. This will correct the condition in most instances. If the chatter persists, clutch damage could have occurred.

## DIAGNOSIS AND TESTING (Continued)

## DIAGNOSIS CHART

CONDITION	POSSIBLE CAUSES	CORRECTION
WHEEL NOISE	<ol style="list-style-type: none"> <li>1. Wheel loose.</li> <li>2. Faulty, brinelled wheel bearing.</li> </ol>	<ol style="list-style-type: none"> <li>1. Tighten loose nuts.</li> <li>2. Faulty or brinelled bearings must be replaced.</li> </ol>
AXLE SHAFT NOISE	<ol style="list-style-type: none"> <li>1. Misaligned axle shaft tube.</li> <li>2. Bent or sprung axle shaft.</li> <li>3. End play in drive pinion bearings.</li> <li>4. Excessive gear backlash between ring gear and pinion gear.</li> <li>5. Improper adjustment of drive pinion gear shaft bearings.</li> <li>6. Loose drive pinion gearshaft yoke nut.</li> <li>7. Improper wheel bearing adjustment.</li> <li>8. Scuffed gear tooth contact surfaces.</li> </ol>	<ol style="list-style-type: none"> <li>1. Inspect axle shaft tube alignment. Correct as necessary.</li> <li>2. Replace bent or sprung axle shaft.</li> <li>3. Refer to Drive Pinion Bearing Pre-Load Adjustment.</li> <li>4. Check adjustment of ring gear backlash and pinion gear. Correct as necessary.</li> <li>5. Adjust drive pinion shaft bearings.</li> <li>6. Tighten drive pinion gearshaft yoke nut with specified torque.</li> <li>7. Readjust as necessary.</li> <li>8. If necessary, replace scuffed gears.</li> </ol>
AXLE SHAFT BROKE	<ol style="list-style-type: none"> <li>1. Misaligned axle shaft tube.</li> <li>2. Vehicle overloaded.</li> <li>3. Erratic clutch operation.</li> <li>4. Grabbing clutch.</li> </ol>	<ol style="list-style-type: none"> <li>1. Replace broken axle shaft after correcting axle shaft tube alignment.</li> <li>2. Replace broken axle shaft. Avoid excessive weight on vehicle.</li> <li>3. Replace broken axle shaft after inspecting for other possible causes. Avoid erratic use of clutch.</li> <li>4. Replace broken axle shaft. Inspect clutch and make necessary repairs or adjustments.</li> </ol>
DIFFERENTIAL CASE CRACKED	<ol style="list-style-type: none"> <li>1. Improper adjustment of differential bearings.</li> <li>2. Excessive ring gear backlash.</li> <li>3. Vehicle overloaded.</li> <li>4. Erratic clutch operation.</li> </ol>	<ol style="list-style-type: none"> <li>1. Replace cracked case; examine gears and bearings for possible damage. At reassembly, adjust differential bearings properly.</li> <li>2. Replace cracked case; examine gears and bearings for possible damage. At reassembly, adjust ring gear backlash properly.</li> <li>3. Replace cracked case; examine gears and bearings for possible damage. Avoid excessive weight on vehicle.</li> <li>4. Replace cracked case. After inspecting for other possible causes, examine gears and bearings for possible damage. Avoid erratic use of clutch.</li> </ol>
DIFFERENTIAL GEARS SCORED	<ol style="list-style-type: none"> <li>1. Insufficient lubrication.</li> <li>2. Improper grade of lubricant.</li> <li>3. Excessive spinning of one wheel/tire.</li> </ol>	<ol style="list-style-type: none"> <li>1. Replace scored gears. Scoring marks on the drive face of gear teeth or in the bore are caused by instantaneous fusing of the mating surfaces. Scored gears should be replaced. Fill rear differential housing to required capacity with proper lubricant. Refer to Specifications.</li> <li>2. Replace scored gears. Inspect all gears and bearings for possible damage. Clean and refill differential housing to required capacity with proper lubricant.</li> <li>3. Replace scored gears. Inspect all gears, pinion bores and shaft for damage. Service as necessary.</li> </ol>
LOSS OF LUBRICANT	<ol style="list-style-type: none"> <li>1. Lubricant level too high.</li> </ol>	<ol style="list-style-type: none"> <li>1. Drain excess lubricant by removing fill plug and allow lubricant to level at lower edge of fill plug hole.</li> </ol>

## DIAGNOSIS AND TESTING (Continued)

## CONT., DIAGNOSIS CHART

CONDITION	POSSIBLE CAUSES	CORRECTION
LOSS OF LUBRICANT	<ol style="list-style-type: none"> <li>2. Worn axle shaft seals.</li> <li>3. Cracked differential housing.</li> <li>4. Worn drive pinion gear shaft seal.</li> <li>5. Scored and worn yoke.</li> <li>6. Axle cover not properly sealed.</li> </ol>	<ol style="list-style-type: none"> <li>2. Replace worn seals.</li> <li>3. Repair or replace housing as necessary.</li> <li>4. Replace worn drive pinion gear shaft seal.</li> <li>5. Replace worn or scored yoke and seal.</li> <li>6. Remove cover and clean flange and reseal.</li> </ol>
AXLE OVERHEATING	<ol style="list-style-type: none"> <li>1. Lubricant level too low.</li> <li>2. Incorrect grade of lubricant.</li> <li>3. Bearings adjusted too tight.</li> <li>4. Excessive gear wear.</li> <li>5. Insufficient ring gear backlash.</li> </ol>	<ol style="list-style-type: none"> <li>1. Refill differential housing.</li> <li>2. Drain, flush and refill with correct amount of the correct lubricant.</li> <li>3. Readjust bearings.</li> <li>4. Inspect gears for excessive wear or scoring. Replace as necessary.</li> <li>5. Readjust ring gear backlash and inspect gears for possible scoring.</li> </ol>
GEAR TEETH BROKE (RING GEAR AND PINION)	<ol style="list-style-type: none"> <li>1. Overloading.</li> <li>2. Erratic clutch operation.</li> <li>3. Ice-spotted pavements.</li> <li>4. Improper adjustments.</li> </ol>	<ol style="list-style-type: none"> <li>1. Replace gears. Examine other gears and bearings for possible damage.</li> <li>2. Replace gears and examine the remaining parts for possible damage. Avoid erratic clutch operation.</li> <li>3. Replace gears. Examine the remaining parts for possible damage. Replace parts as required.</li> <li>4. Replace gears. Examine other parts for possible damage. Ensure ring gear backlash is correct.</li> </ol>
AXLE NOISE	<ol style="list-style-type: none"> <li>1. Insufficient lubricant.</li> <li>2. Improper ring gear and drive pinion gear adjustment.</li> <li>3. Unmatched ring gear and drive pinion gear.</li> <li>4. Worn teeth on ring gear or drive pinion gear.</li> <li>5. Loose drive pinion gear shaft bearings.</li> <li>6. Loose differential bearings.</li> <li>7. Misaligned or sprung ring gear.</li> <li>8. Loose differential bearing cap bolts</li> </ol>	<ol style="list-style-type: none"> <li>1. Refill axle with correct amount of the proper lubricant. Also inspect for leaks and correct as necessary.</li> <li>2. Check ring gear and pinion gear teeth contact pattern.</li> <li>3. Remove unmatched ring gear and drive pinion gear. Replace with matched gear and drive pinion gear set.</li> <li>4. Check teeth on ring gear and drive pinion gear for correct contact. If necessary, replace with new matched set.</li> <li>5. Adjust drive pinion gearshaft bearing preload torque.</li> <li>6. Adjust differential bearing preload torque.</li> <li>7. Measure ring gear runout.</li> <li>8. Tighten with specified torque</li> </ol>




## DIAGNOSIS AND TESTING (Continued)

## TRAC-LOK TEST

**WARNING: WHEN SERVICING VEHICLES WITH A TRAC-LOK DIFFERENTIAL DO NOT USE THE ENGINE TO TURN THE AXLE AND WHEELS. BOTH REAR WHEELS MUST BE RAISED AND THE VEHICLE SUPPORTED. A TRAC-LOK AXLE CAN EXERT ENOUGH FORCE IF ONE WHEEL IS IN CONTACT WITH A SURFACE TO CAUSE THE VEHICLE TO MOVE.**

The differential can be tested without removing the differential case by measuring rotating torque. Make sure brakes are not dragging during this measurement.

- (1) Place blocks in front and rear of both front wheels.
- (2) Raise one rear wheel until it is completely off the ground.
- (3) Engine off, transmission in neutral, and parking brake off.
- (4) Remove wheel and bolt Special Tool 6790 to studs.
- (5) Use torque wrench on special tool to rotate wheel and read rotating torque (Fig. 5).

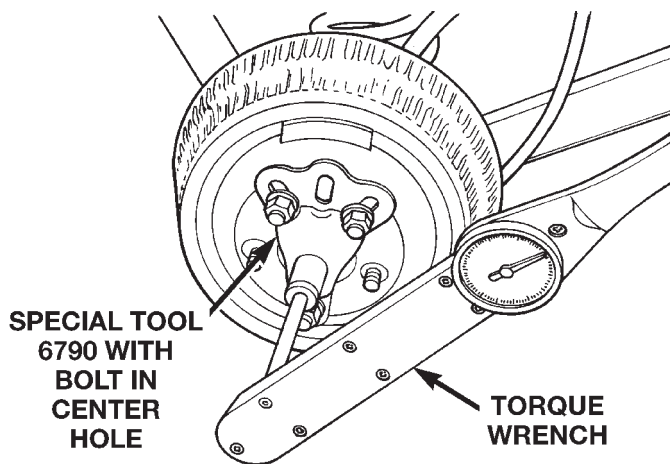

80a4d327

**Fig. 5 Trac-lok Test —Typical**

- (6) If rotating torque is less than 22 N·m (30 ft. lbs.) or more than 271 N·m (200 ft. lbs.) on either wheel the unit should be serviced.

## SERVICE PROCEDURES


## LUBRICANT CHANGE

- (1) Raise and support the vehicle.
- (2) Remove the lubricant fill hole plug from the differential housing cover.
- (3) Remove the differential housing cover and drain the lubricant from the housing.

- (4) Clean the housing cavity with a flushing oil, light engine oil, or lint free cloth. **Do not use water, steam, kerosene, or gasoline for cleaning.**

- (5) Remove the original sealant from the housing and cover surfaces.

- (6) Apply a bead of Mopar® Silicone Rubber Sealant, or equivalent, to the housing cover (Fig. 6).

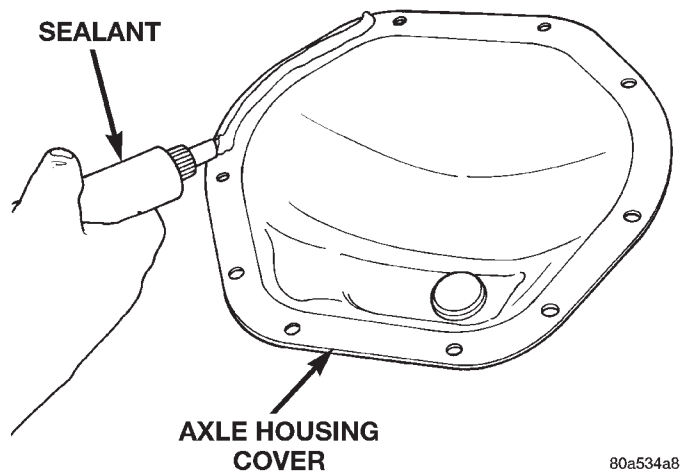

80a534a8

**Fig. 6 Apply Sealant**

**Install the housing cover within 5 minutes after applying the sealant.**

- (7) Install the cover and any identification tag. Tighten the cover bolts to 41 N·m (30 ft. lbs.) torque.

- (8) For Trac-lok differentials, a quantity of Mopar® Trac-lok lubricant (friction modifier), or equivalent, must be added after repair service or a lubricant change. Refer to the Lubricant Specifications section of this group for the quantity necessary.

- (9) Fill differential with Mopar® Hypoid Gear Lubricant, or equivalent, to bottom of the fill plug hole. Refer to the Lubricant Specifications section of this group for the quantity necessary.

**CAUTION: Overfilling the differential can result in lubricant foaming and overheating.**

- (10) Install the fill hole plug and lower the vehicle.

- (11) Trac-lok differential equipped vehicles should be road tested by making 10 to 12 slow figure-eight turns. This maneuver will pump the lubricant through the clutch discs to eliminate a possible chatter noise complaint.

## REMOVAL AND INSTALLATION

## REAR AXLE

## REMOVAL

- (1) Raise and support the vehicle.

## REMOVAL AND INSTALLATION (Continued)

- (2) Position a suitable lifting device under the axle.
- (3) Secure axle to device.
- (4) Remove the wheels and tires.
- (5) Remove the brake rotors and calipers from the axle. Refer to Group 5, Brakes, for proper procedures.
- (6) Disconnect parking brake cables from brackets and lever.
- (7) Remove wheel speed sensors, if necessary. Refer to Group 5, Brakes, for proper procedures.
- (8) Disconnect the brake hose at the axle junction block. Do not disconnect the brake hydraulic lines at the calipers. Refer to Group 5, Brakes, for proper procedures.
- (9) Disconnect the vent hose from the axle shaft tube.
- (10) Mark the propeller shaft and yokes for installation alignment reference.
- (11) Remove propeller shaft.
- (12) Disconnect stabilizer bar links.
- (13) Disconnect shock absorbers from axle.
- (14) Disconnect track bar.
- (15) Disconnect upper and lower suspension arms from the axle brackets.
- (16) Separate the axle from the vehicle.

## INSTALLATION

**NOTE:** The weight of the vehicle must be supported by the springs before suspension arms and track bar fasteners can be tightened. If the springs are not at their normal ride position, vehicle ride height and handling could be affected.

- (1) Raise the axle with lifting device and align coil springs.
- (2) Position the upper and lower suspension arms on the axle brackets. Install nuts and bolts, do not tighten bolts at this time.
- (3) Install track bar and attachment bolts, do not tighten bolts at this time.
- (4) Install shock absorbers and tighten nuts to 60 N·m (44 ft. lbs.) torque.
- (5) Install stabilizer bar links and tighten nuts to 36 N·m (27 ft. lbs.) torque.
- (6) Install the wheel speed sensors, if necessary. Refer to Group 5, Brakes, for proper procedures.
- (7) Connect parking brake cable to brackets and lever.
- (8) Install the brake rotors and calipers. Refer to Group 5, Brakes, for proper procedures.
- (9) Connect the brake hose to the axle junction block. Refer to Group 5, Brakes, for proper procedures.
- (10) Install axle vent hose.

(11) Align propeller shaft and pinion yoke reference marks. Install U-joint straps and bolts. Tighten to 19 N·m (14 ft. lbs.) torque.

(12) Install the wheels and tires.

(13) Add gear lubricant, if necessary. Refer to Lubricant Specifications in this section for lubricant requirements.

(14) Remove lifting device from axle and lower the vehicle.

(15) Tighten lower suspension arm bolts to 177 N·m (130 ft. lbs.) torque.


(16) Tighten upper suspension arm bolts to 75 N·m (55 ft. lbs.) torque.

(17) Tighten track bar bolts to 100 N·m (74 ft. lbs.) torque.

## PINION SHAFT SEAL



## REMOVAL

- (1) Raise and support the vehicle.
- (2) Remove wheel and tire assemblies.
- (3) Remove rear brake rotors and calipers. Refer to Group 5, Brakes, for proper procedures.
- (4) Mark the propeller shaft and pinion yoke for installation reference.
- (5) Remove the propeller shaft from the yoke.
- (6) Rotate the pinion gear three or four times.
- (7) Measure the amount of torque necessary to rotate the pinion gear with a (in. lbs.) dial-type torque wrench. Record the torque reading for installation reference.
- (8) Using a short piece of pipe and Holder 6958 to hold the pinion yoke, remove the pinion nut and washer (Fig. 7).
- (9) Use Remover C-452 and Wrench C-3281 to remove the pinion yoke (Fig. 8)
- (10) Use Remover 7794-A and slide hammer to remove the pinion shaft seal (Fig. 9)..

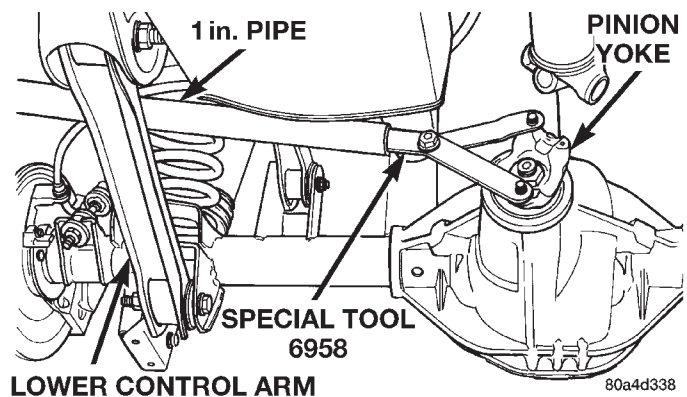


**Fig. 7 Pinion Yoke Holder**

## REMOVAL AND INSTALLATION (Continued)

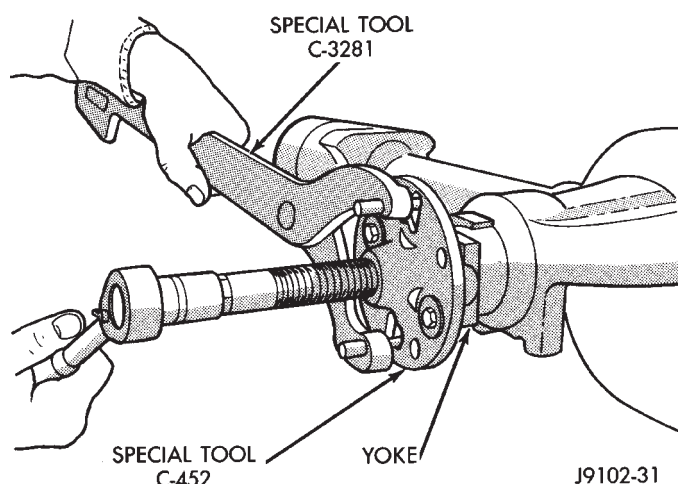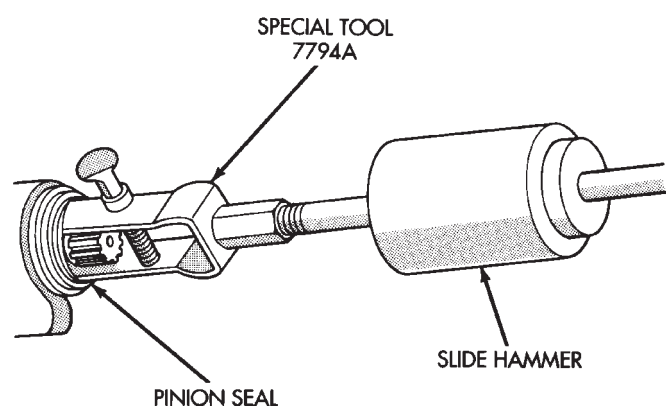**Fig. 8 Pinion Yoke Removal****Fig. 9 Seal Removal**


## INSTALLATION

(1) Apply a light coating of gear lubricant on the lip of pinion seal. Install seal with Installer C-3972-A and Handle C-4171 (Fig. 10).

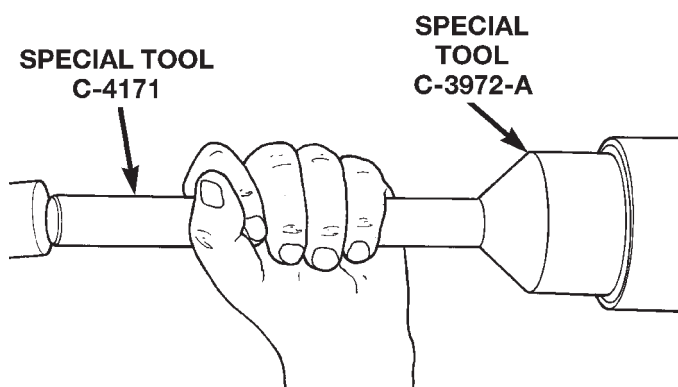**Fig. 10 Pinion Seal Installation**


(2) Install yoke on the pinion gear with Installer C-3718 and Holder 6958 (Fig. 11).

**CAUTION:** Do not exceed the minimum tightening torque when installing the pinion yoke retaining nut at this point. Damage to collapsible spacer or bearings may result.

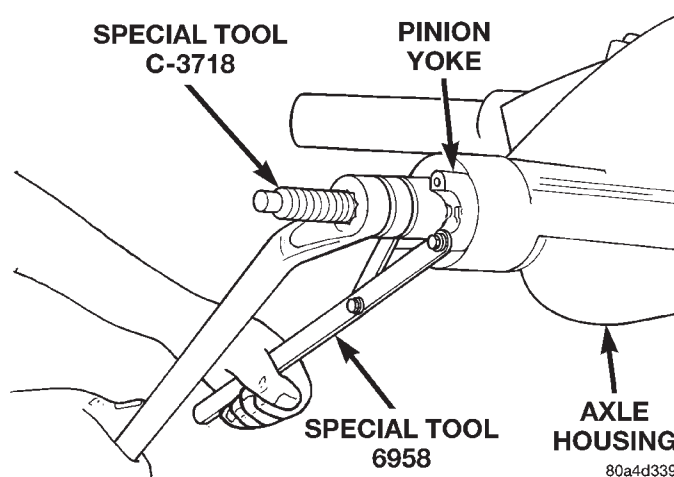**Fig. 11 Pinion Yoke Installation**

(3) Install a new nut on the pinion gear. **Tighten the nut only enough to remove the shaft end play.**


(4) Rotate the pinion shaft using a (in. lbs.) torque wrench. Rotating resistance torque should be equal to the reading recorded during removal, plus an additional 0.56 N·m (5 in. lbs.) (Fig. 12).

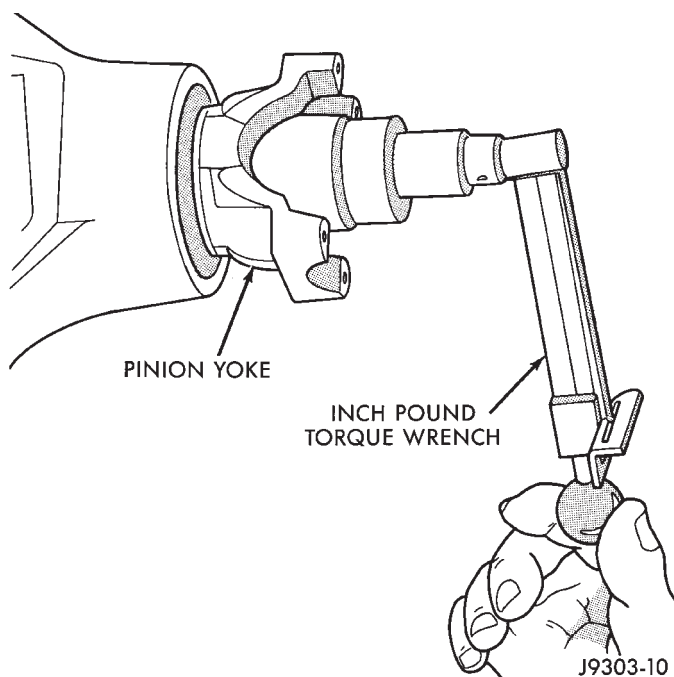**Fig. 12 Check Pinion Rotation Torque**

## REMOVAL AND INSTALLATION (Continued)

(5) If the rotating torque is low, use Holder 6958 to hold the pinion yoke (Fig. 13), and tighten the pinion shaft nut in 6.8 N·m (5 ft. lbs.) increments until proper rotating torque is achieved.

**CAUTION:** If the maximum tightening torque is reached prior to reaching the required rotating torque, the collapsible spacer may have been damaged. Replace the collapsible spacer.

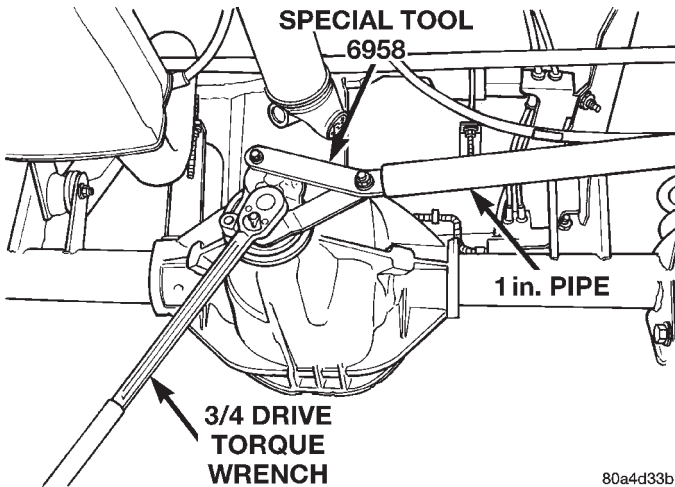

**Fig. 13 Tightening Pinion Shaft Nut**

(6) Align the installation reference marks on propeller shaft and yoke and install the propeller shaft.

(7) Add gear lubricant to the differential housing, if necessary. Refer to the Lubricant Specifications for gear lubricant requirements.

(8) Install brake rotors and calipers. Refer to Group 5, Brakes, for proper procedures.

(9) Install wheel and tire assemblies.

(10) Lower the vehicle.

## COLLAPSIBLE SPACER

## REMOVAL W/PINION INSTALLED

(1) Raise and support the vehicle.

(2) Remove wheel and tire assemblies.

(3) Remove rear brake rotors and calipers. Refer to Group 5, Brakes, for proper procedures.

(4) Mark the propeller shaft and pinion yoke for installation reference.

(5) Remove the propeller shaft from the yoke.

(6) Rotate the pinion gear three or four times.

(7) Measure the amount of torque necessary to rotate the pinion gear with a (in. lbs.) dial-type torque wrench. Record the torque reading for installation reference.


(8) Using a short piece of pipe and Holder 6958 to hold the pinion yoke, remove the pinion nut and washer (Fig. 14).

(9) Use Remover C-452 and Wrench C-3281 to remove the pinion yoke (Fig. 15).


(10) Use Remover 7794-A and slide hammer to remove the pinion shaft seal (Fig. 16).

(11) Remove the front pinion bearing using a pair of suitable pick tools to pull the bearing straight off the pinion gear shaft. It may be necessary to lightly tap the end of the pinion gear with a rawhide or rubber mallet if the bearing becomes bound on the pinion shaft.

(12) Remove the collapsible spacer.

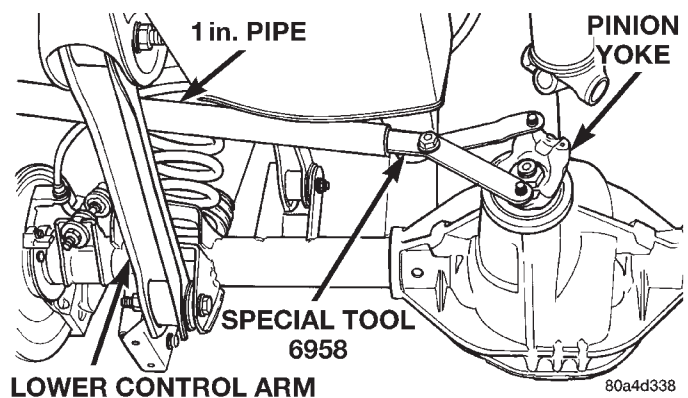

**Fig. 14 Pinion Yoke Holder**

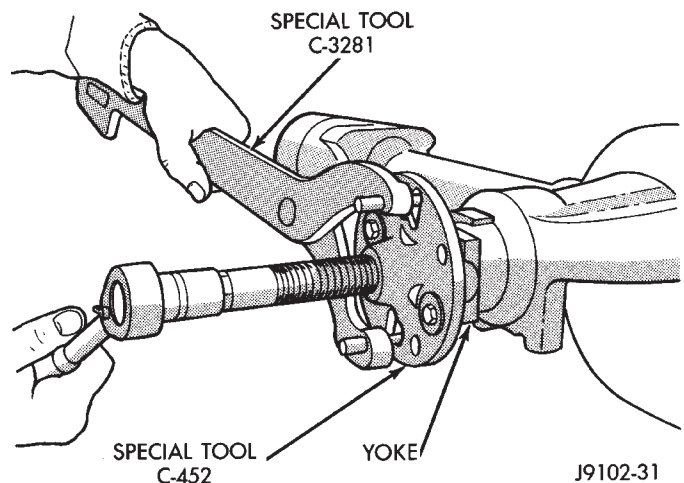

**Fig. 15 Pinion Yoke Removal**

## REMOVAL W/PINION REMOVED

(1) Raise and support the vehicle.

(2) Remove wheel and tire assemblies.

(3) Remove rear brake rotors and calipers. Refer to Group 5, Brakes, for proper procedures.

(4) Mark the propeller shaft and pinion yoke for installation reference.

(5) Remove the propeller shaft from the yoke.


(6) Rotate the pinion gear three or four times.

(7) Measure the amount of torque necessary to rotate the pinion gear with a (in. lbs.) dial-type torque wrench. Record the torque reading for installation reference.

(8) Remove differential assembly from axle housing.



## REMOVAL AND INSTALLATION (Continued)

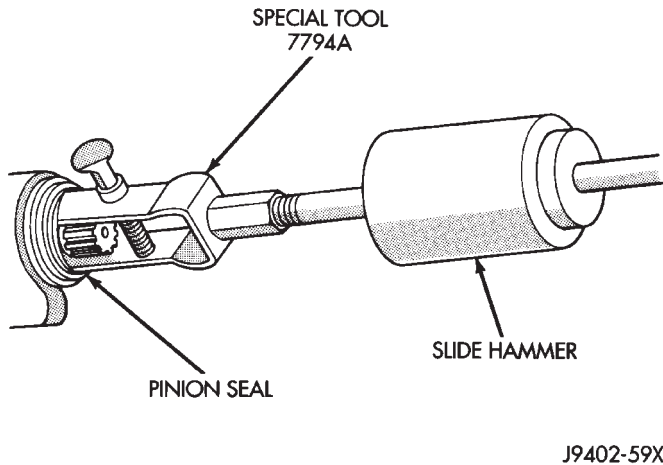
**Fig. 16 Seal Removal**

(9) Using Holder 6958 to hold yoke and a short length of 1 in. pipe, remove the pinion yoke nut and washer (Fig. 14).

(10) Using Remover C-452 and Wrench C-3281, remove the pinion yoke from pinion shaft (Fig. 15).

(11) Remove the pinion gear from housing (Fig. 17). Catch the pinion with your hand to prevent it from falling and being damaged.


(12) Remove collapsible spacer from pinion shaft.

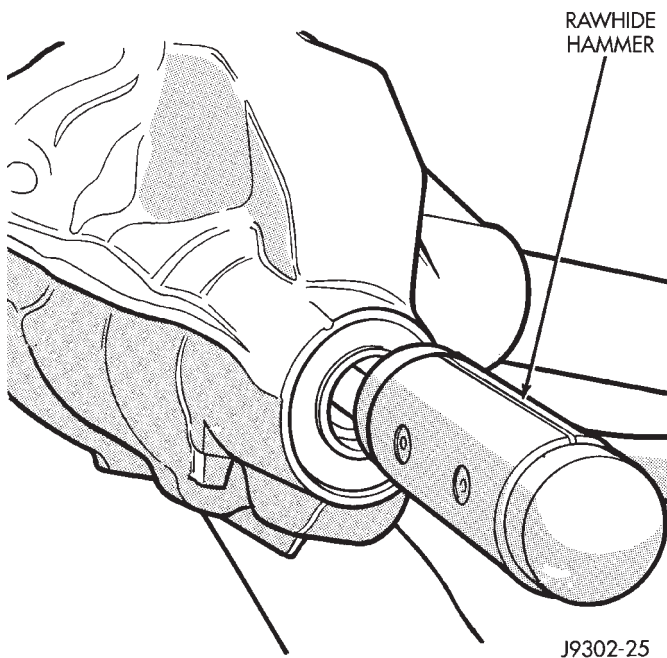**Fig. 17 Remove Pinion Gear****INSTALLATION**


(1) Install a new collapsible preload spacer on pinion shaft (Fig. 18).

(2) If pinion gear was removed, install pinion gear in housing.

(3) Install pinion front bearing, if necessary.

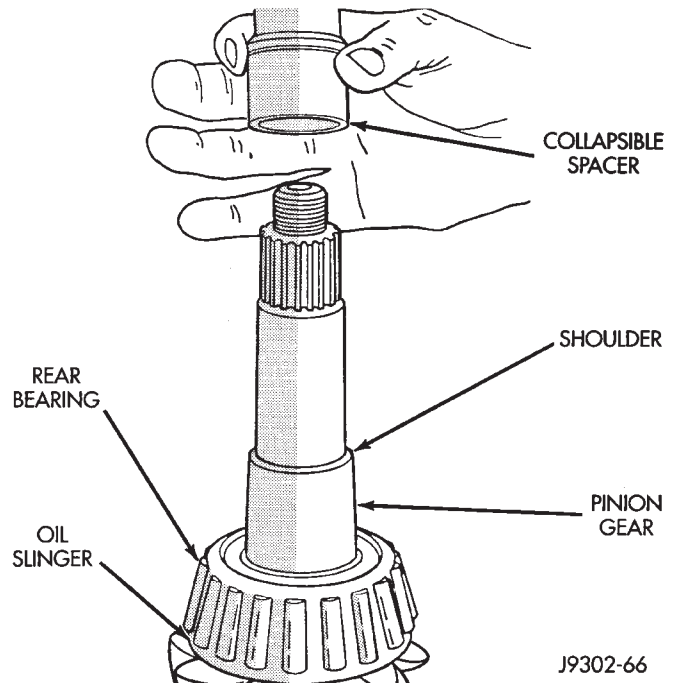**Fig. 18 Collapsible Preload Spacer**

(4) Apply a light coating of gear lubricant on the lip of pinion seal. Install seal with Installer C-3972-A and Handle C-4171 (Fig. 19).

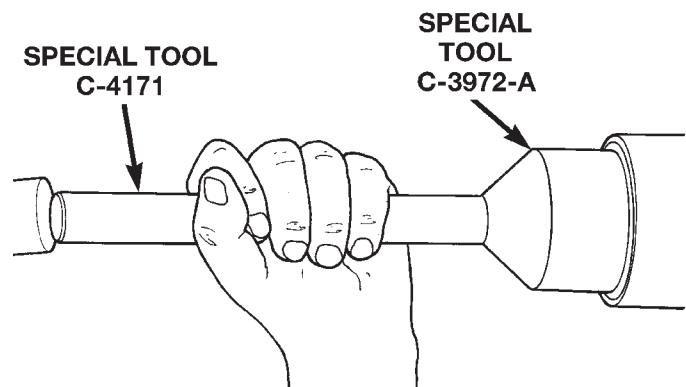**Fig. 19 Pinion Seal Installation**


(5) Install yoke with Installer C-3718 and Holder 6958 (Fig. 20).

(6) If the original pinion bearings are being used, install differential assembly and axle shafts, if necessary.

**NOTE:** If new pinion bearings were installed, do not install the differential assembly and axle shafts until after the pinion bearing preload and rotating torque are set.



## REMOVAL AND INSTALLATION (Continued)

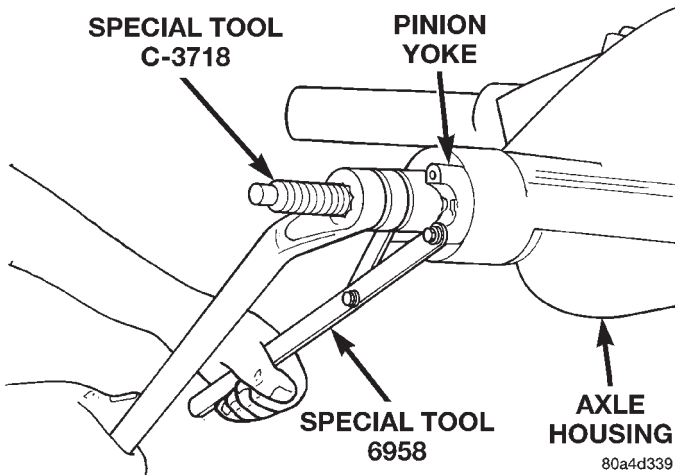**Fig. 20 Pinion Yoke Installation**

(7) Install the yoke washer and a new nut on the pinion gear. Tighten the nut to 298 N·m (220 ft. lbs.) minimum. **Do not over-tighten.** Maximum torque is 380 N·m (280 ft. lbs.).

**CAUTION:** Never loosen pinion gear nut to decrease pinion gear bearing rotating torque and never exceed specified preload torque. If preload torque is exceeded a new collapsible spacer must be installed. The torque sequence will then have to be repeated.

**NOTE:** If the spacer requires more than 280 ft. lbs. torque to crush, the collapsible spacer is defective.

(8) Using yoke holder 6958, a short length of 1 in. pipe, and a torque wrench set at 380 N·m (280 ft. lbs.), crush collapsible spacer until bearing end play is taken up (Fig. 21).

(9) Slowly tighten the nut in 6.8 N·m (5 ft. lbs.) increments until the rotating torque is achieved. Measure the rotating torque frequently to avoid over crushing the collapsible spacer (Fig. 22).

(10) Check rotating torque with an inch pound torque wrench (Fig. 22). The torque necessary to rotate the pinion gear should be:

- Original Bearings — The reading recorded during removal, plus an additional 0.56 N·m (5 in. lbs.).
- New Bearings — 2 to 5 N·m (15 to 35 in. lbs.).



(11) Install differential assembly and axle shafts, if necessary.

(12) Align marks made previously on yoke and propeller shaft and install propeller shaft.

(13) Install rear brake rotors and calipers. Refer to Group 5 Brakes, for proper procedures.

(14) Add gear lubricant, if necessary. Refer to Lubricant Specifications of this section for lubricant requirements.

(15) Install wheel and tire assemblies.

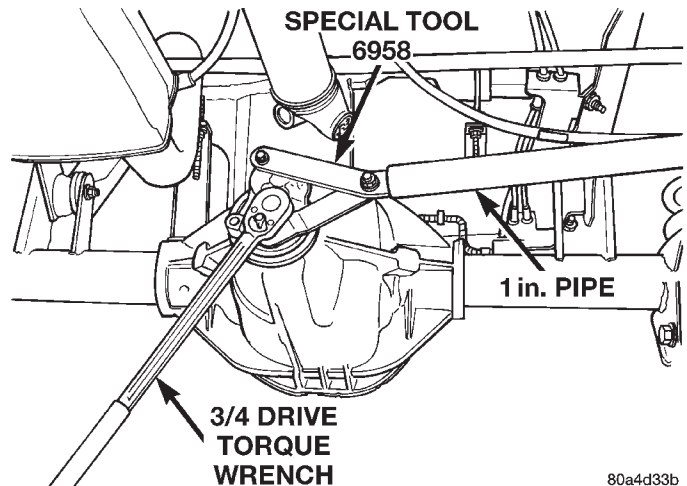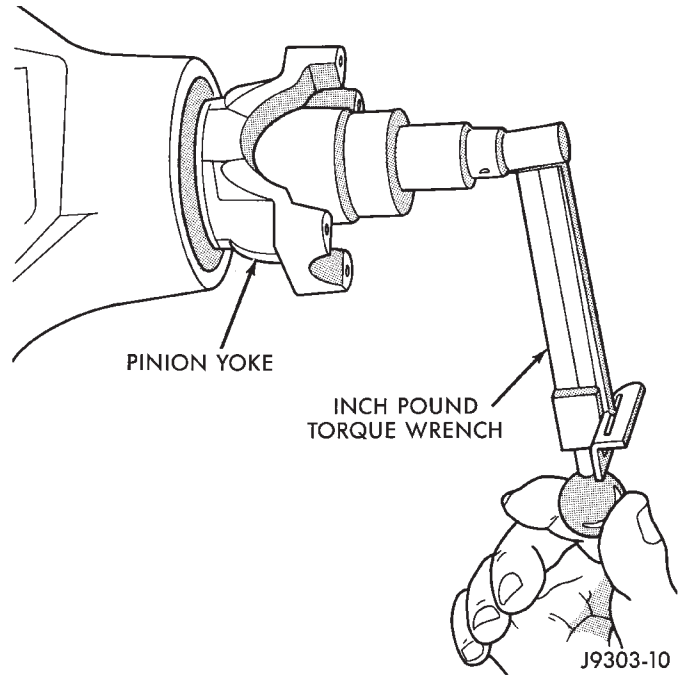**Fig. 21 Tightening Pinion Nut****Fig. 22 Check Pinion Gear Rotation Torque**

(16) Lower vehicle.

**AXLE SHAFT****REMOVAL**

(1) Raise and support vehicle. Ensure that the transmission is in neutral.

(2) Remove wheel and tire assembly.


(3) Remove brake caliper and rotor. Refer to Group 5, Brakes, for proper procedure.

(4) Clean all foreign material from housing cover area.

(5) Loosen housing cover bolts. Drain lubricant from the housing and axle shaft tubes. Remove housing cover.


## REMOVAL AND INSTALLATION (Continued)

(6) Rotate differential case so that pinion mate gear shaft lock screw is accessible. Remove lock screw and pinion mate gear shaft from differential case (Fig. 23).

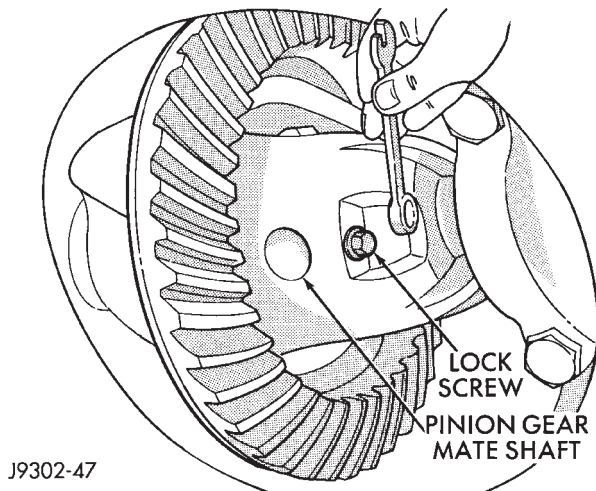

**Fig. 23 Mate Shaft Lock Screw**

(7) Push axle shaft inward and remove axle shaft C-clip lock from the axle shaft (Fig. 24).

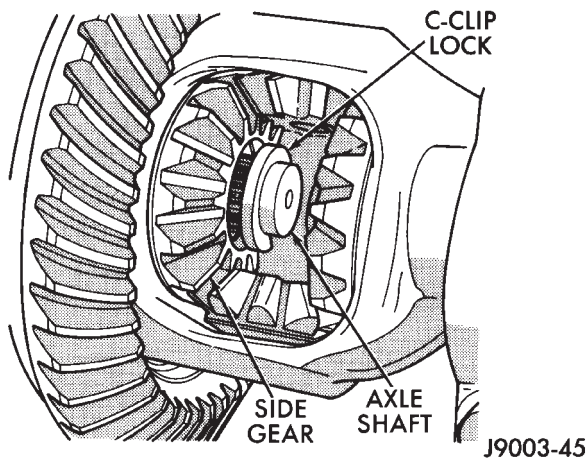

**Fig. 24 Axle Shaft C-Clip Lock**

(8) Remove axle shaft. Use care to prevent damage to axle shaft bearing and seal, which will remain in axle shaft tube. Also, exercise care not to damage the wheel speed sensor on vehicles equipped with ABS brakes.

(9) Inspect axle shaft seal for leakage or damage.

(10) Inspect roller bearing contact surface on axle shaft for signs of brinelling, galling and pitting. If any of these conditions exist, the axle shaft and/or bearing and seal must be replaced.

## INSTALLATION

(1) Lubricate bearing bore and seal lip with gear lubricant. Insert axle shaft through seal, bearing, and engage it into side gear splines.

**NOTE:** Use care to prevent shaft splines from damaging axle shaft seal lip. Also, exercise care not to damage the wheel speed sensor on vehicles equipped with ABS brakes

(2) Insert C-clip lock in end of axle shaft. Push axle shaft outward to seat C-clip lock in side gear.

(3) Insert pinion mate shaft into differential case and through thrust washers and pinion gears.

(4) Align hole in shaft with hole in the differential case and install lock screw with Loctite® on the threads. Tighten lock screw to 19 N·m (14 ft. lbs.) torque.

(5) Install cover and add fluid. Refer to Lubricant Change procedure in this section for procedure and lubricant requirements.

(6) Install brake caliper and rotor. Refer to Group 5, Brakes, for proper procedures.

(7) Install wheel and tire.

(8) Lower vehicle.

## AXLE SHAFT SEAL AND BEARING


## REMOVAL

(1) Remove the axle shaft.

(2) Remove the axle shaft seal from the end of the axle shaft tube with a small pry bar.

**NOTE:** The seal and bearing can be removed at the same time with the bearing removal tool.

(3) Remove the axle shaft bearing from the tube (Fig. 25) with Bearing Removal Tool Set 6310 using Adapter Foot 6310-5.

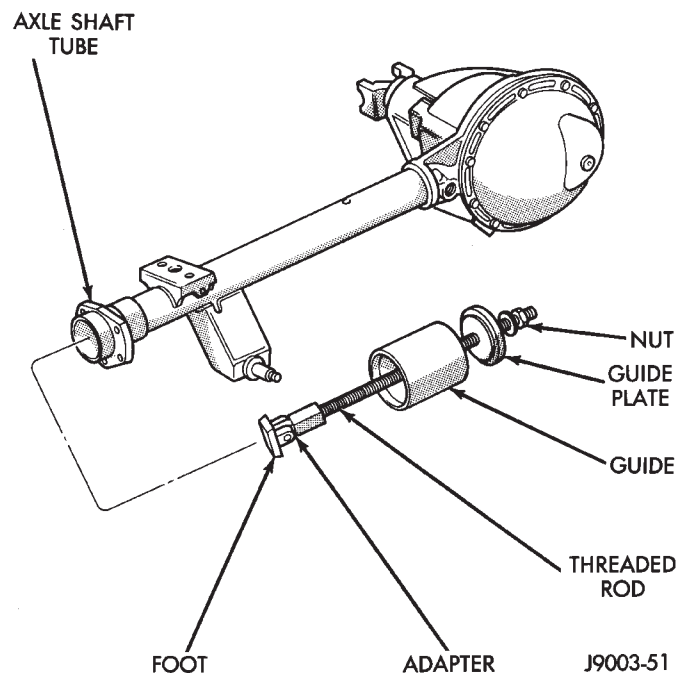

**Fig. 25 Axle Shaft Bearing Removal Tool**


## REMOVAL AND INSTALLATION (Continued)

(4) Inspect the axle shaft tube bore for roughness and burrs. Remove as necessary.

### INSTALLATION

**Do not install the original axle shaft seal. Always install a new seal.**

- (1) Wipe the bore in the axle shaft tube clean.
- (2) Install axle shaft bearing with Installer 6436 and Handle C-4171. Ensure part number on the bearing is against the installer.
- (3) Install the new axle shaft seal (Fig. 26) with Installer 6437 and Handle C-4171.
- (4) Install the axle shaft.

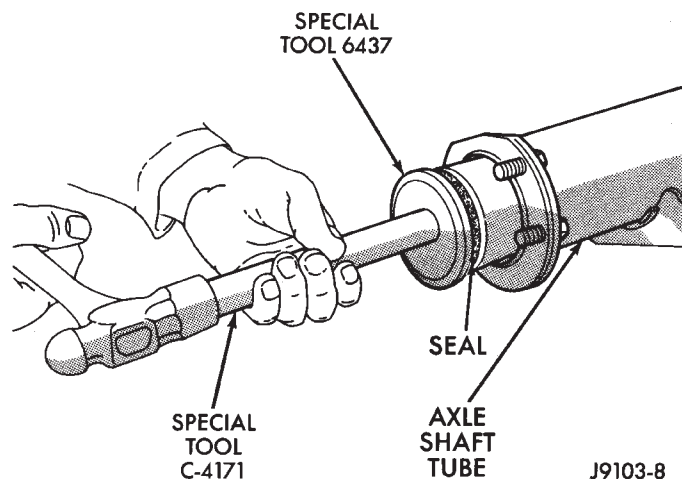


**Fig. 26 Axle Shaft Seal Installation**

## DIFFERENTIAL


### REMOVAL

- (1) Remove axle shafts.
- (2) Note the orientation of the installation reference letters stamped on the bearing caps and housing machined sealing surface (Fig. 27).

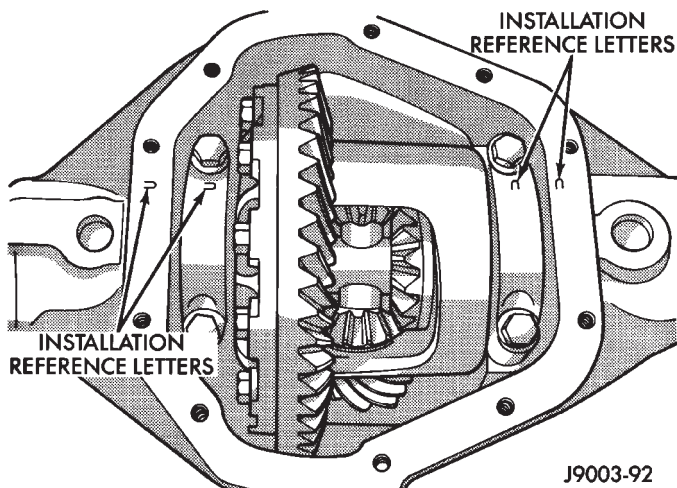

**Fig. 27 Bearing Cap Identification**

- (3) Remove the differential bearing caps.
- (4) Position Spreader W-129-B with the tool dowel pins seated in the locating holes (Fig. 28).
- (5) Install the hold down clamps and tighten the tool turnbuckle finger-tight.

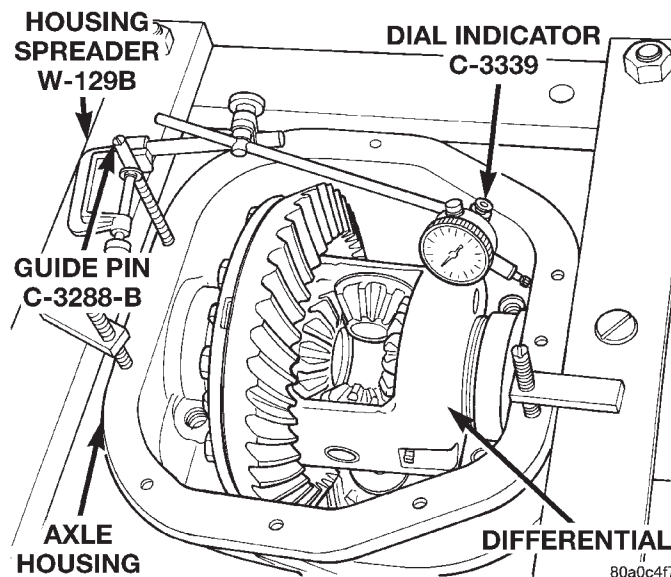

**Fig. 28 Spread Differential Housing**

- (6) Install a Guide Pin C-3288-B at the left side of the differential housing. Attach dial indicator to housing pilot stud. Load the indicator plunger against the opposite side of the housing (Fig. 28) and zero the indicator.

- (7) Spread the housing enough to remove the case from the housing. Measure the distance with the dial indicator (Fig. 28).


**CAUTION:** Do not spread over 0.50 mm (0.020 in). If the housing is over-spread, it could be distorted or damaged.



## REMOVAL AND INSTALLATION (Continued)

(8) Remove the dial indicator.

(9) Pry the differential case loose from the housing. To prevent damage, pivot on housing with the end of the pry bar against spreader (Fig. 29).

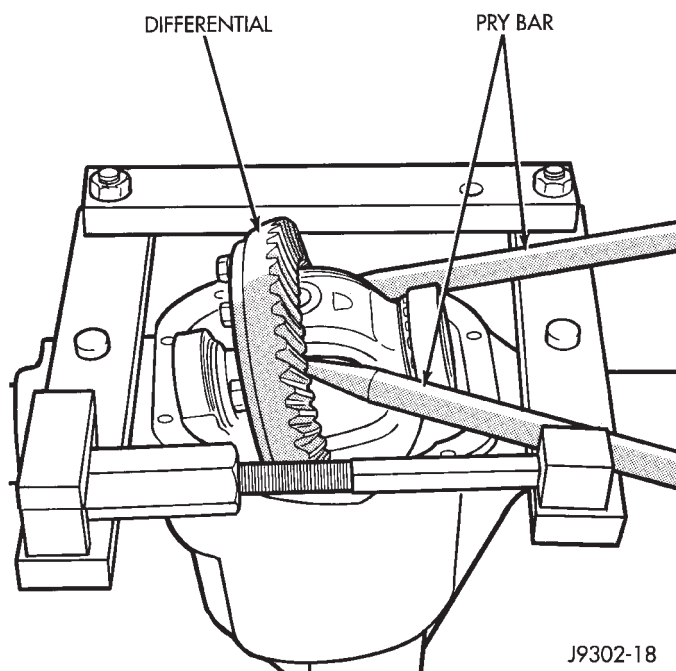

**Fig. 29 Differential Removal**

(10) Remove the case from housing. Mark or tag bearing cups and outboard shim(s)/spacer(s) (selected thickness) to indicate which side they were removed from.

## INSTALLATION

(1) Position Spreader W-129-B with the tool dowel pins seated in the locating holes (Fig. 28). Install the hold down clamps and tighten the tool turnbuckle finger-tight.

(2) Install a Guide Pin C-3288-B at the left side of the differential housing. Attach dial indicator to housing pilot stud. Load the indicator plunger against the opposite side of the housing (Fig. 28) and zero the indicator.

(3) Spread the housing enough to install the case in the housing. Measure the distance with the dial indicator (Fig. 28).


**CAUTION:** Do not spread over 0.50 mm (0.020 in). If the housing is over-spread, it could be distorted or damaged.

(4) Remove the dial indicator.

(5) Install differential and outboard shim(s)/spacer(s) (selected thickness) in housing.

(6) Install case in the housing. Tap the differential case with a rawhide or rubber mallet to ensure the bearings are fully seated in the differential housing (Fig. 30).


(7) Remove the spreader.

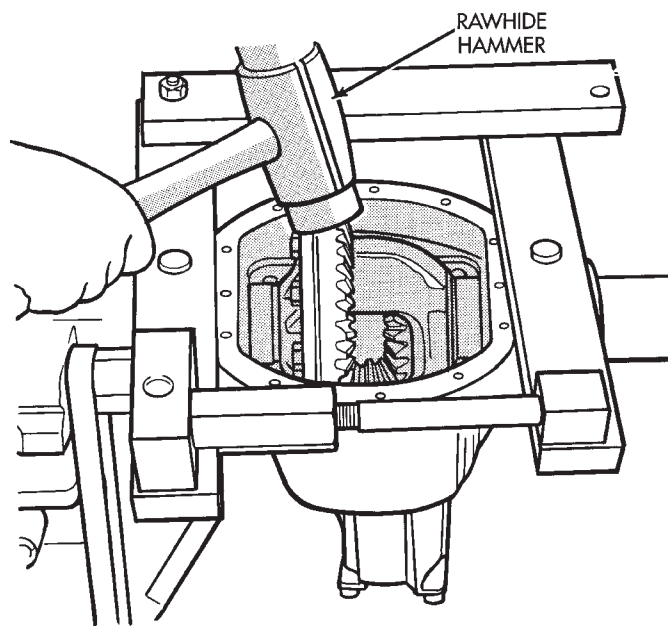

**Fig. 30 Differential Installation**

(8) Install the bearing caps at their original locations (Fig. 31). Tighten the bearing cap bolts to 77 N·m (57 ft. lbs.) torque.

(9) Install axle shafts.

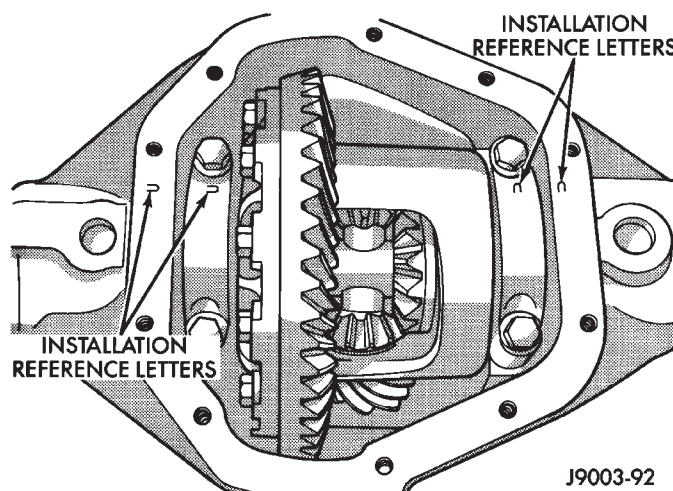


**Fig. 31 Differential Bearing Cap Reference Letters**

## REMOVAL AND INSTALLATION (Continued)

## DIFFERENTIAL SIDE BEARINGS

## REMOVAL

- (1) Remove differential case from axle housing.
- (2) Remove the bearings from the differential case with Puller/Press C-293-PA, Adapters C-293-42, and Plug C-293-3 (Fig. 32).

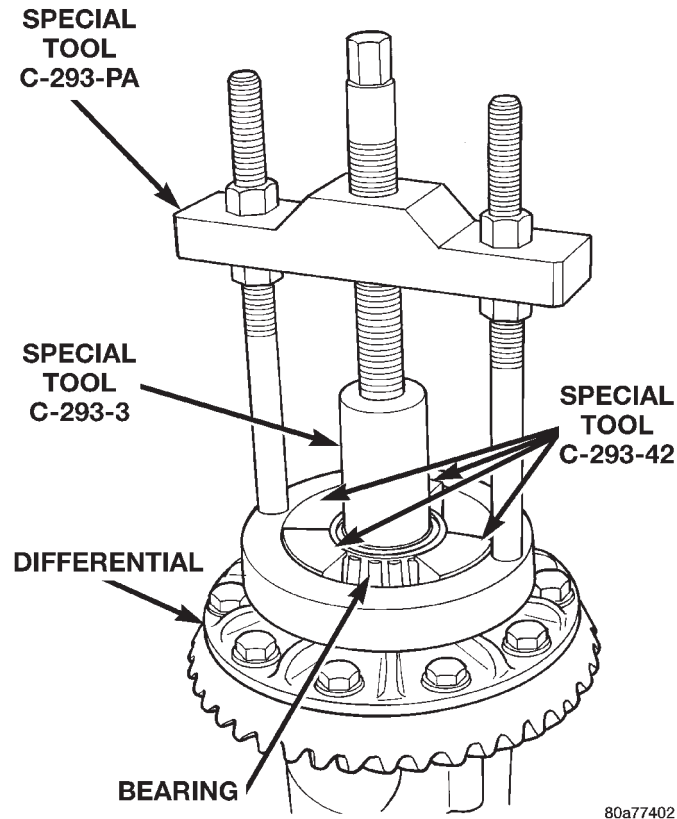
**Fig. 32 Differential Bearing Removal**

## INSTALLATION

- (1) Using tool C-4340 with handle C-4171, install differential side bearings (Fig. 33).
- (2) Install differential case in axle housing.


## RING GEAR

The ring and pinion gears are service in a matched set. Do not replace the ring gear without replacing the pinion gear.

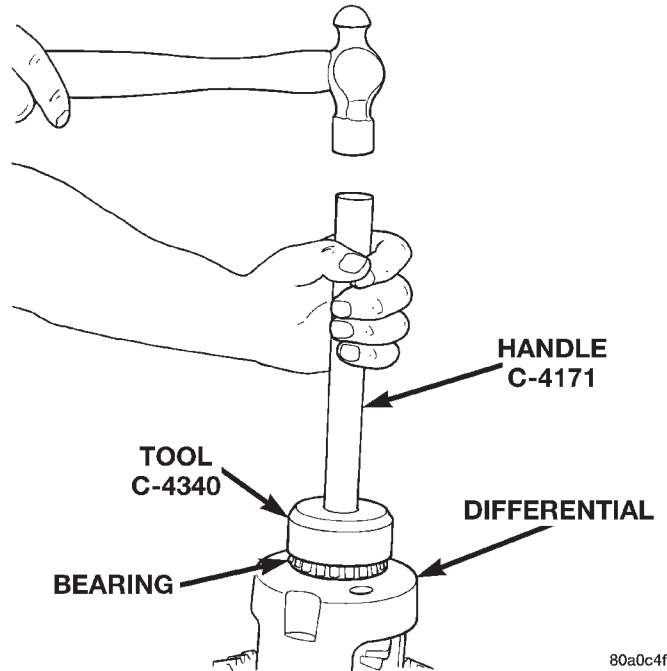**Fig. 33 Install Differential Side Bearings**

## REMOVAL

- (1) Remove differential from axle housing.
- (2) Place differential case in a suitable vise with soft metal jaw protectors. (Fig. 34)
- (3) Remove bolts holding ring gear to differential case.
- (4) Using a soft hammer, drive ring gear from differential case (Fig. 34).

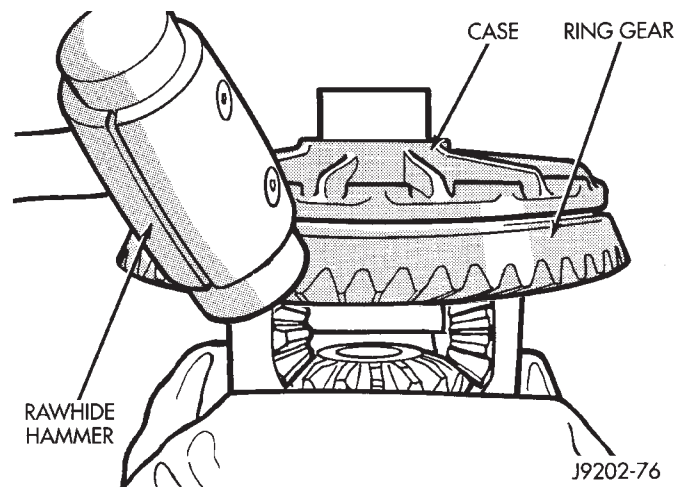**Fig. 34 Ring Gear Removal**




## REMOVAL AND INSTALLATION (Continued)

## INSTALLATION

**CAUTION:** Do not reuse the bolts that held the ring gear to the differential case. The bolts can fracture causing extensive damage.

- (1) Invert the differential case and start two ring gear bolts. This will provide case-to-ring gear bolt hole alignment.
- (2) Invert the differential case in the vise.
- (3) Install new ring gear bolts and alternately tighten to 95–122 N·m (70–90 ft. lbs.) torque (Fig. 35).
- (4) Install differential in axle housing and verify gear mesh and contact pattern.

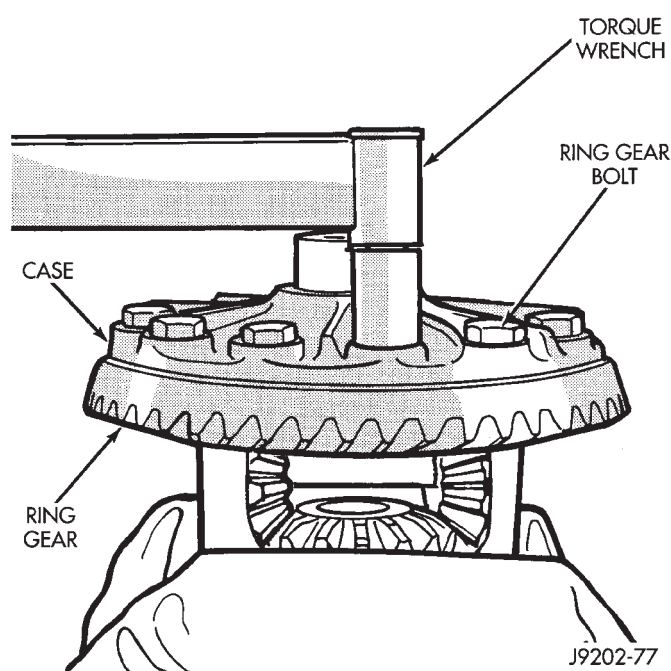


**Fig. 35 Ring Gear Bolt Installation**

## PINION GEAR


**NOTE:** The ring and pinion gears are service in a matched set. Do not replace the pinion gear without replacing the ring gear.

## REMOVAL

- (1) Remove differential assembly from axle housing.
- (2) Mark pinion yoke and propeller shaft for installation alignment.
- (3) Disconnect propeller shaft from pinion yoke. Using suitable wire, tie propeller shaft to underbody.
- (4) Using Holder 6958 to hold yoke and a short length of 1 in. pipe, remove the pinion yoke nut and washer (Fig. 36).
- (5) Using Remover C-452 and Wrench C-3281, remove the pinion yoke from pinion shaft (Fig. 37).

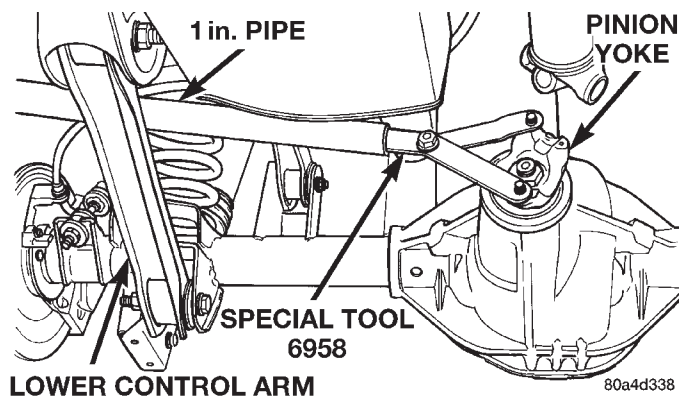


**Fig. 36 Pinion Yoke Holder**

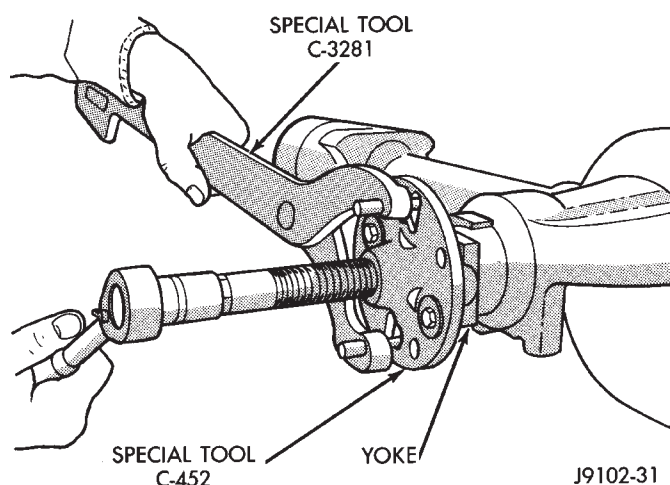

**Fig. 37 Pinion Yoke Removal**

- (6) Remove the pinion gear from housing (Fig. 38). Catch the pinion with your hand to prevent it from falling and being damaged.

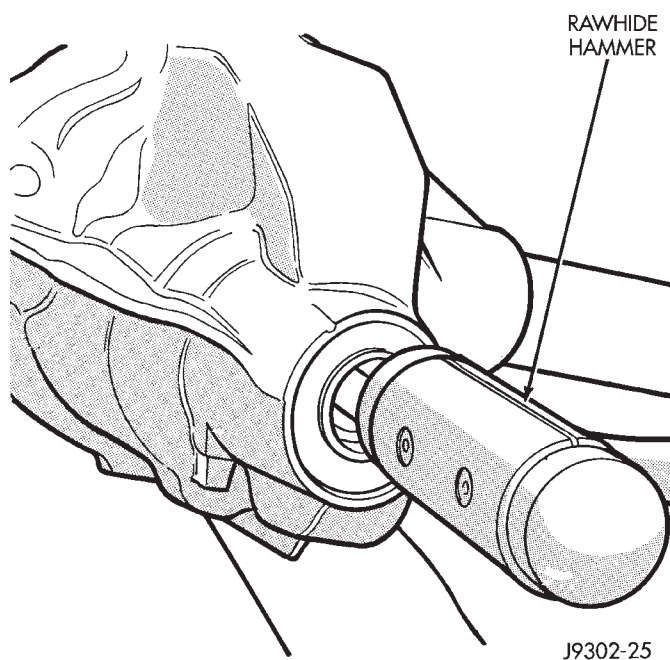


**Fig. 38 Remove Pinion Gear**

## REMOVAL AND INSTALLATION (Continued)

(7) Remove the pinion seal with a slide hammer or pry out with bar.

(8) Remove oil slinger, if equipped, and the front pinion bearing.


(9) Remove the front pinion bearing cup with Remover D-103 and Handle C-4171 (Fig. 39).

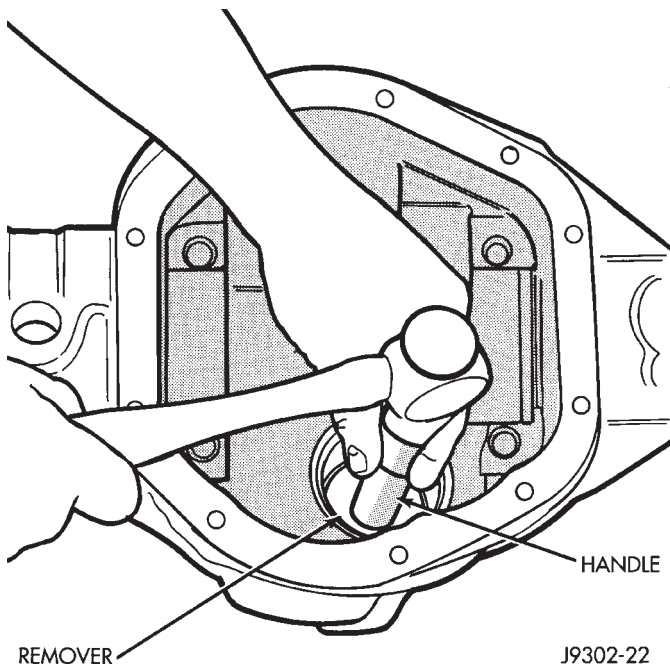


**Fig. 39 Front Bearing Cup Removal**

(10) Remove the rear bearing cup from housing (Fig. 40). Use Remover C-4307 and Handle C-4171.

(11) Remove the collapsible preload spacer (Fig. 41).

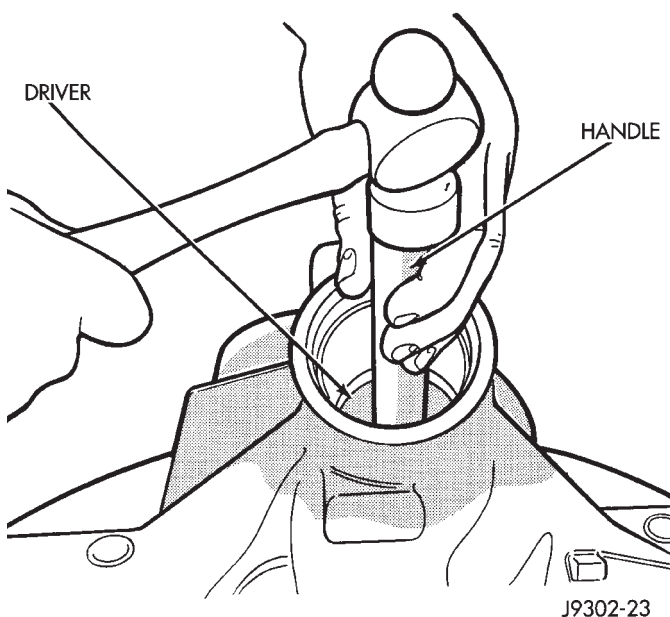


**Fig. 40 Rear Bearing Cup Removal**

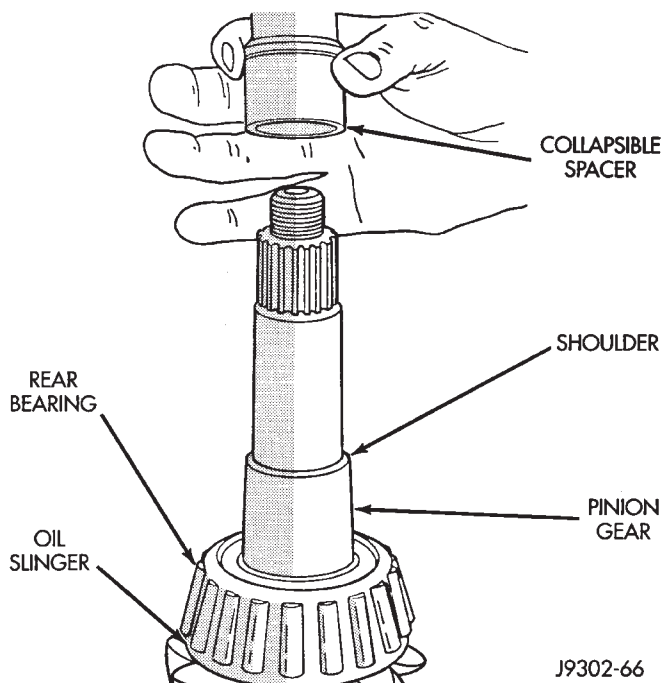

**Fig. 41 Collapsible Spacer**

(12) Remove the rear bearing from the pinion with Puller/Press C-293-PA and Adapters C-293-42 (Fig. 42).

**Place 4 adapter blocks so they do not damage the bearing cage.**

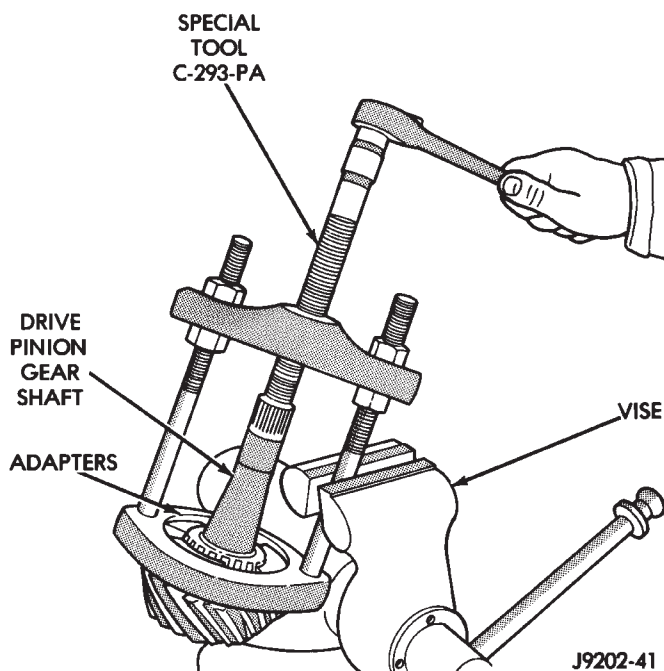


**Fig. 42 Inner Bearing Removal**

(13) Remove the pinion depth shims from the pinion gear shaft. Record the total thickness of the depth shims.

## REMOVAL AND INSTALLATION (Continued)


## INSTALLATION

(1) Apply Mopar® Door Ease stick lubricant to outside surface of bearing cup. Install the pinion rear bearing cup with Installer C-4308 and Driver Handle C-4171 (Fig. 43). Ensure cup is correctly seated.

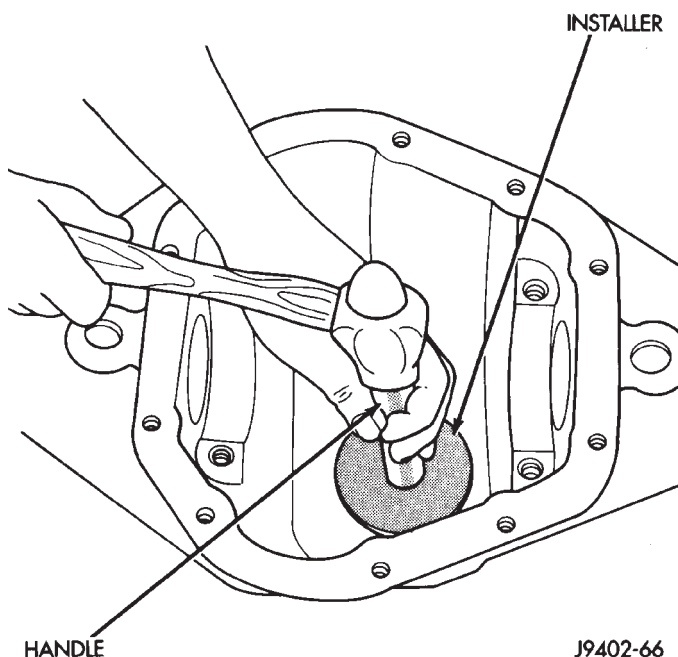


**Fig. 43 Pinion Rear Bearing Cup Installation**

(2) Apply Mopar® Door Ease stick lubricant to outside surface of bearing cup. Install the pinion front bearing cup with Installer D-129 and Handle C-4171 (Fig. 44).

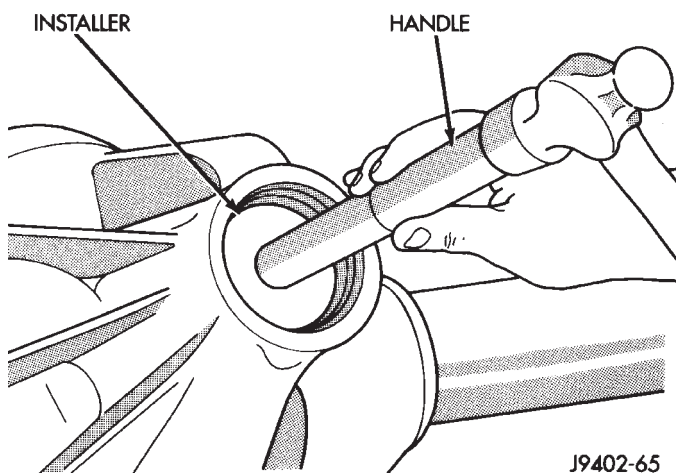

**Fig. 44 Pinion Front Bearing Cup Installation**

(3) Install pinion front bearing and oil slinger, if equipped. Apply a light coating of gear lubricant on the lip of pinion seal. Install seal with Installer C-3972-A and Handle C-4171 (Fig. 45).

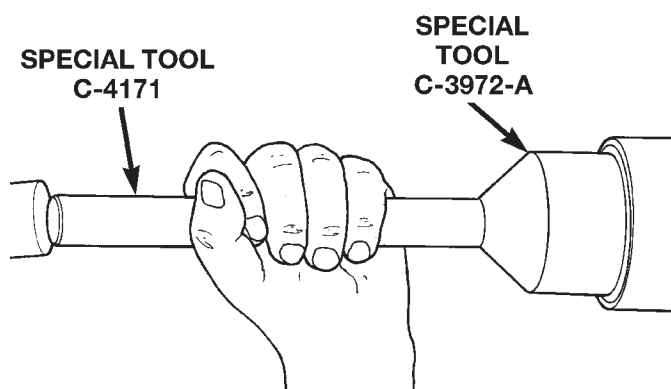


**Fig. 45 Pinion Seal Installation**

**NOTE:** Pinion depth shims are placed between the rear pinion bearing cone and pinion gear to achieve proper ring and pinion gear mesh. If the factory installed ring and pinion gears are reused, the pinion depth shim should not require replacement or adjustment. Refer to Pinion Gear Depth paragraph in this section to select the proper thickness shim before installing rear pinion bearing cone.

(4) Place the proper thickness pinion depth shim on the pinion gear.

(5) Install the rear bearing (and slinger if used) on the pinion gear with Installer 6448 (Fig. 46).

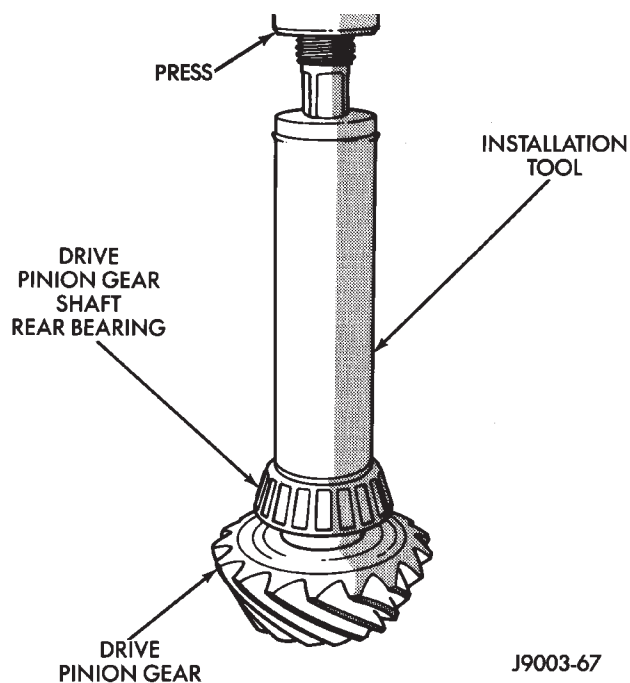


**Fig. 46 Shaft Rear Bearing Installation**

(6) Install a new collapsible preload spacer on pinion shaft (Fig. 47).

(7) Install pinion gear in housing.




## REMOVAL AND INSTALLATION (Continued)

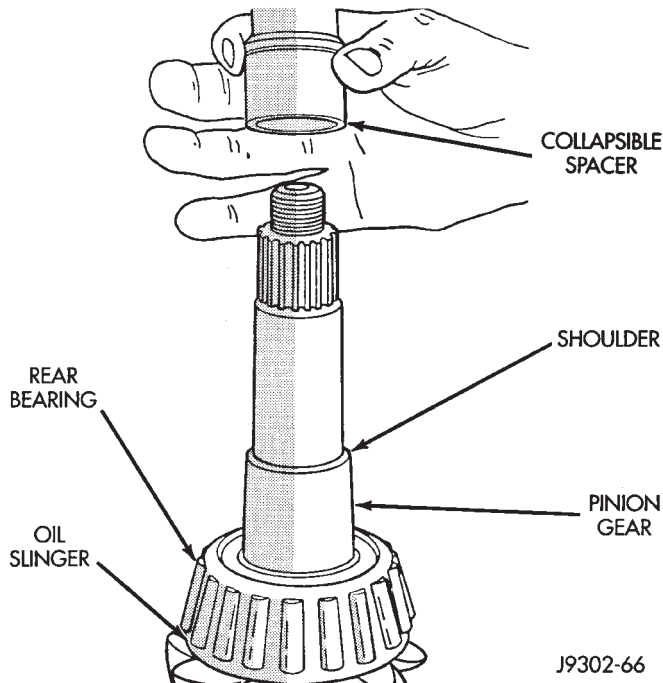**Fig. 47 Collapsible Preload Spacer**

(8) Install yoke with Installer C-3718 and holder 6958 (Fig. 48).

(9) Install the yoke washer and a new nut on the pinion gear. Tighten the nut to 298 N·m (220 ft. lbs.) minimum. **Do not over-tighten.** Maximum torque is 380 N·m (280 ft. lbs.). pinion gear nut to decrease

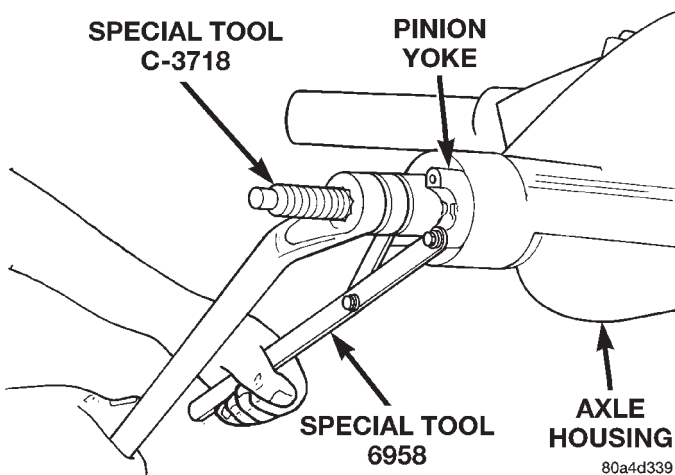
**Fig. 48 Pinion Yoke Installation**

**CAUTION:** Never loosen pinion gear nut to decrease pinion gear bearing preload torque and never exceed specified preload torque. If preload torque is exceeded a new collapsible spacer must be installed. The torque sequence will have to be repeated.

**NOTE:** If the spacer requires more than 280 ft. lbs. torque to crush, the collapsible spacer is defective.


(10) Using yoke holder 6958, a short length of 1 in. pipe, and a torque wrench set at 380 N·m (280 ft. lbs.), crush collapsible spacer until bearing end play is taken up (Fig. 49).

(11) Slowly tighten the nut in 6.8 N·m (5 ft. lbs.) increments until the rotating torque is achieved. Measure the rotating torque frequently to avoid over crushing the collapsible spacer (Fig. 50).

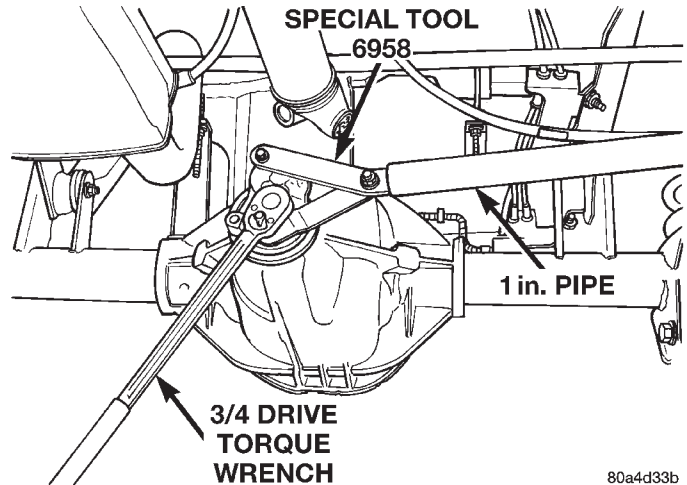**Fig. 49 Tightening Pinion Nut**

(12) Check bearing rotating torque with an inch pound torque wrench (Fig. 50). The torque necessary to rotate the pinion gear should be:

- Original Bearings — 1 to 3 N·m (10 to 20 in. lbs.).
- New Bearings — 2 to 5 N·m (15 to 35 in. lbs.).

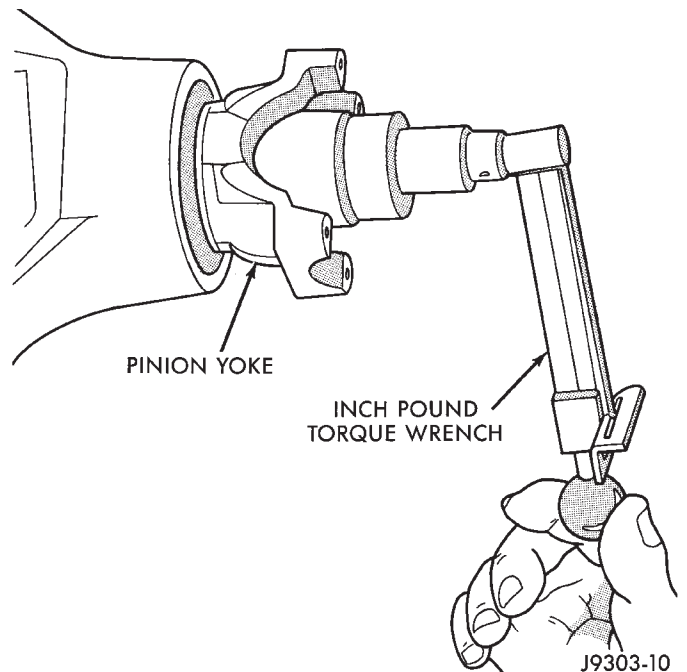**Fig. 50 Check Pinion Gear Rotation Torque**


(13) Align previously made marks on yoke and propeller shaft and install propeller shaft.

(14) Install differential housing into the axle housing.

## REMOVAL AND INSTALLATION (Continued)

## FINAL ASSEMBLY

(1) Scrape the residual sealant from the housing and cover mating surfaces. Clean the mating surfaces with mineral spirits. Apply a bead of Mopar® Silicone Rubber Sealant, or equivalent, on the housing cover (Fig. 51).

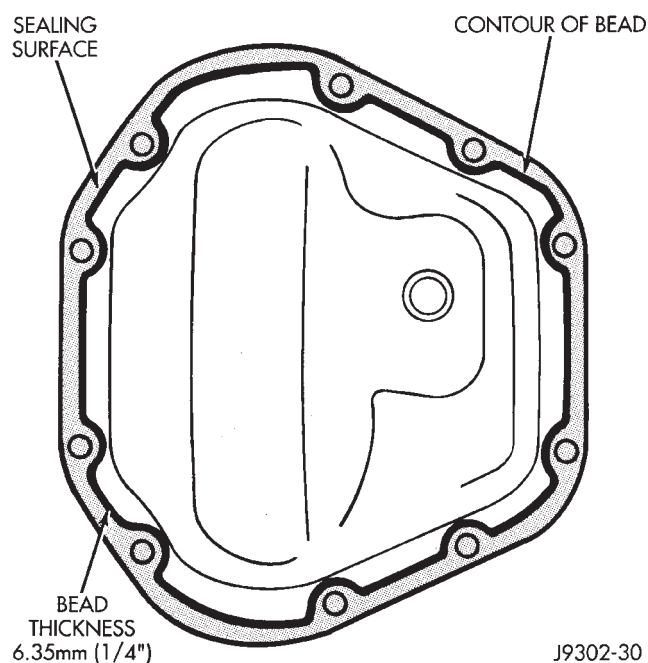

**Fig. 51 Typical Housing Cover With Sealant**

**Install the housing cover within 5 minutes after applying the sealant.**

(2) Install the cover on the differential with the attaching bolts. Install the identification tag. Tighten the cover bolts to 41 N·m (30 ft. lbs.) torque.

**CAUTION:** Overfilling the differential can result in lubricant foaming and overheating.

(3) Refill the differential housing with gear lubricant. Refer to the Lubricant Specifications section of this group for the gear lubricant requirements.

(4) Install the fill hole plug.

## DISASSEMBLY AND ASSEMBLY

## STANDARD DIFFERENTIAL


## DISASSEMBLY

(1) Remove pinion gear mate shaft lock screw (Fig. 52).


(2) Remove pinion gear mate shaft.

(3) Rotate the differential side gears and remove the pinion mate gears and thrust washers (Fig. 53).

(4) Remove the differential side gears and thrust washers.

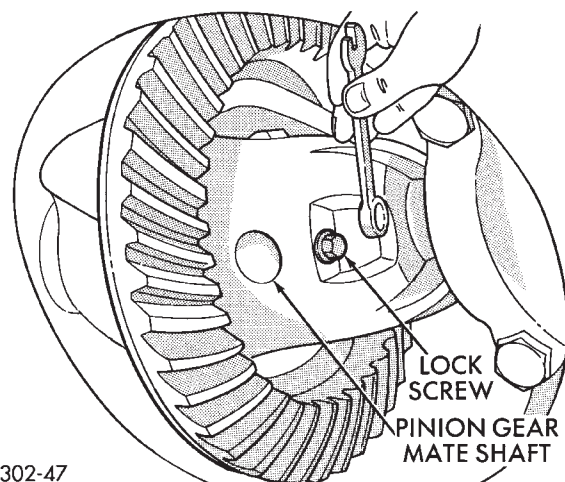

**Fig. 52 Pinion Gear Mate Shaft Lock Screw**

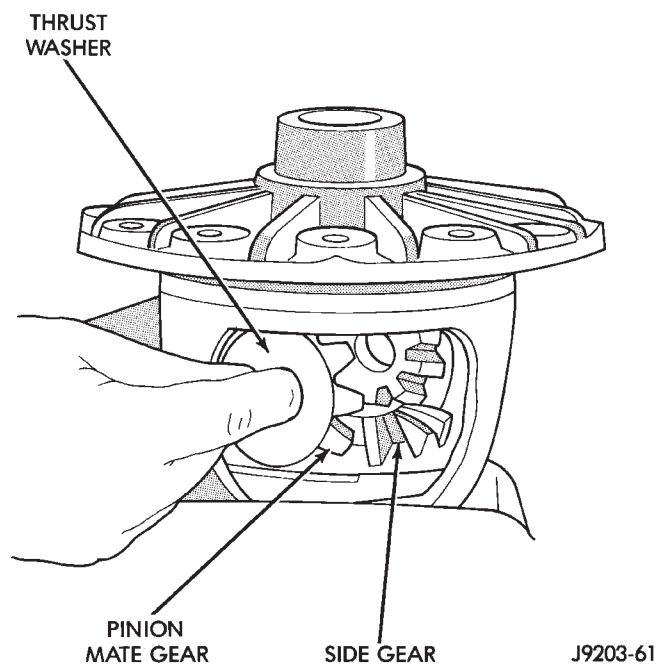

**Fig. 53 Pinion Mate Gear Removal**

## ASSEMBLY

(1) Install the differential side gears and thrust washers.

(2) Install the pinion mate gears and thrust washers.

(3) Install the pinion gear mate shaft.

(4) Align the hole in the pinion gear mate shaft with the hole in the differential case and install the pinion gear mate shaft lock screw.


(5) Lubricate all differential components with hypoid gear lubricant.

## TRAC-LOK DIFFERENTIAL

The Trac-Lok differential components are illustrated in (Fig. 54). Refer to this illustration during repair service.



# DISASSEMBLY AND ASSEMBLY (Continued)

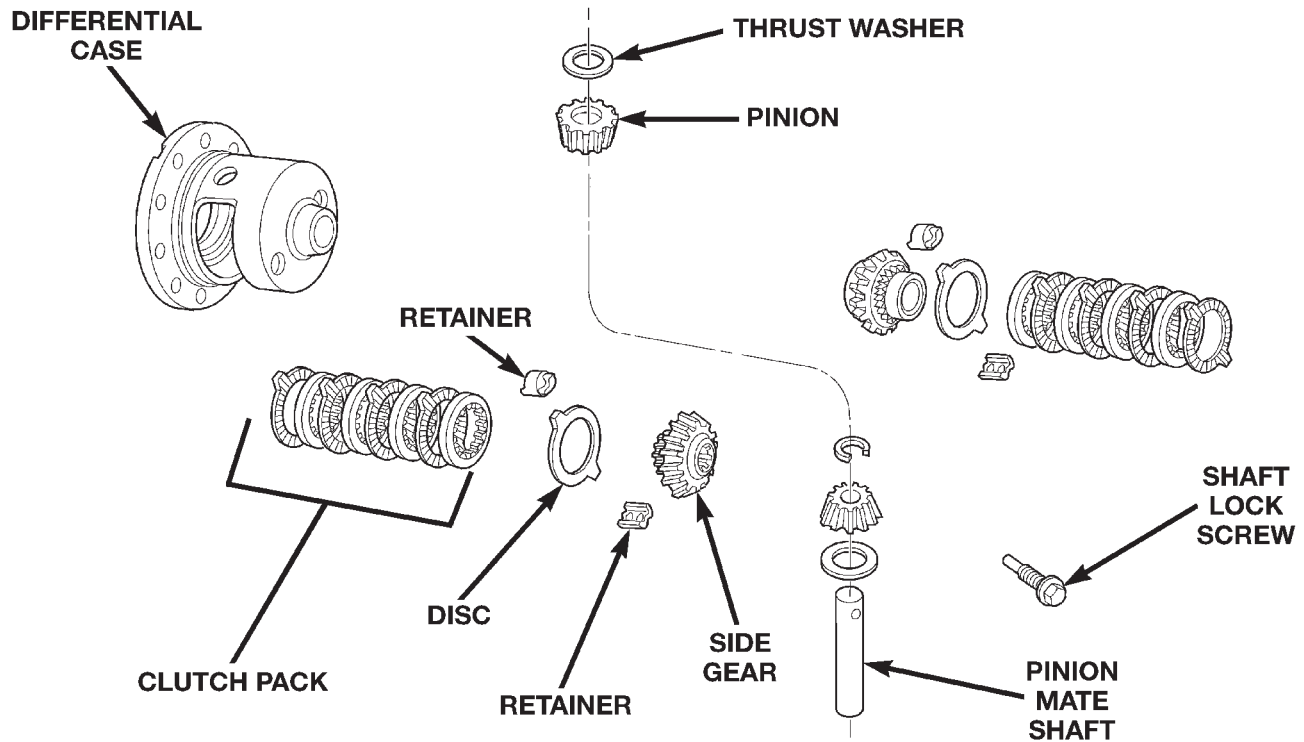

80a77404


**Fig. 54 Trac-Lok Differential Components**

## DISASSEMBLY

- (1) Clamp Side Gear Holding Tool 6963-A in a vise.
- (2) Position the differential case on Side Gear Holding Tool 6963-A (Fig. 55).


- (3) Remove ring gear, if necessary. Ring gear removal is necessary only if the ring gear is to be replaced. The Trac-Lok differential can be serviced with the ring gear installed.

- (4) Remove the pinion gear mate shaft lock screw (Fig. 56).

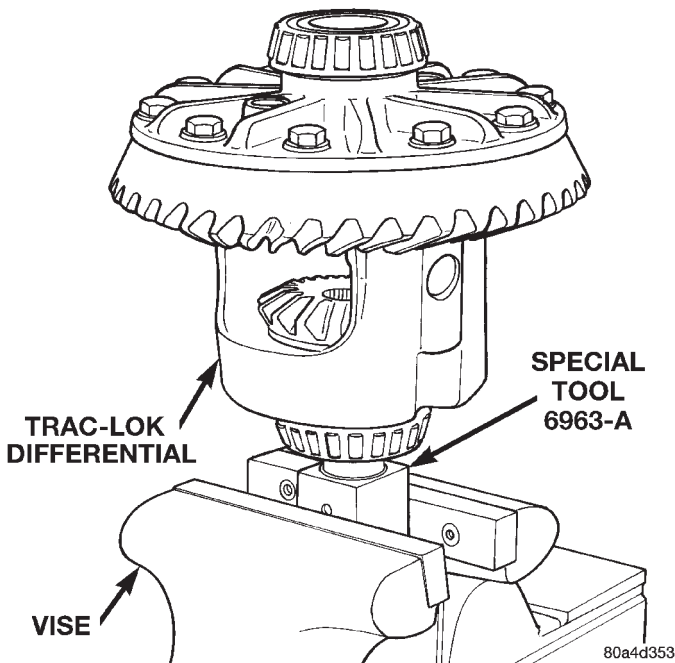

80a4d353

**Fig. 55 Differential Case Holding Tool**

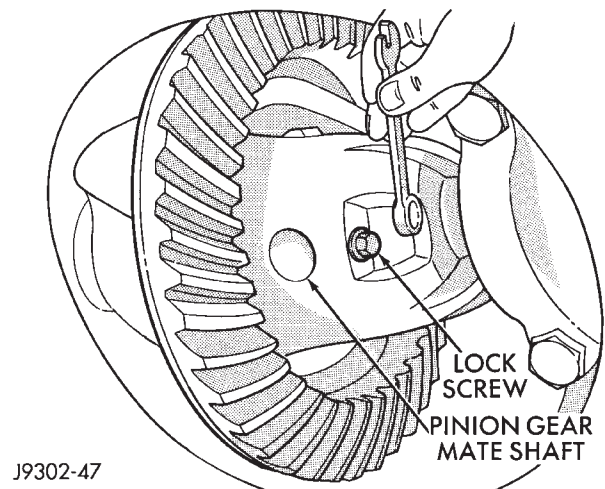


**Fig. 56 Mate Shaft Lock Screw**

## DISASSEMBLY AND ASSEMBLY (Continued)


(5) Remove the pinion gear mate shaft. If necessary, use a drift and hammer (Fig. 57).

(6) Install and lubricate Step Plate C-4487-1 (Fig. 58).

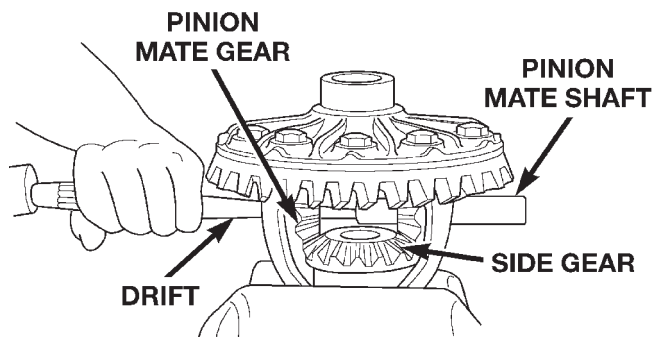

80a773e1

**Fig. 57 Mate Shaft Removal**

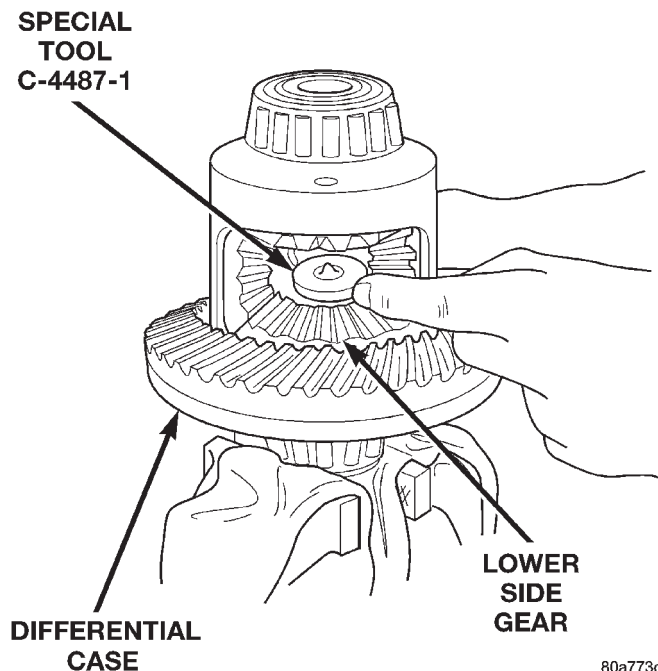


80a773df

**Fig. 58 Step Plate Tool Installation**

(7) Assemble Threaded Adapter C-4487-3 into top side gear. Thread Forcing Screw C-4487-2 into adapter until it becomes centered in adapter plate.


(8) Position a small screw driver in slot of Threaded Adapter C-4487-3 (Fig. 59) to prevent adapter from turning.

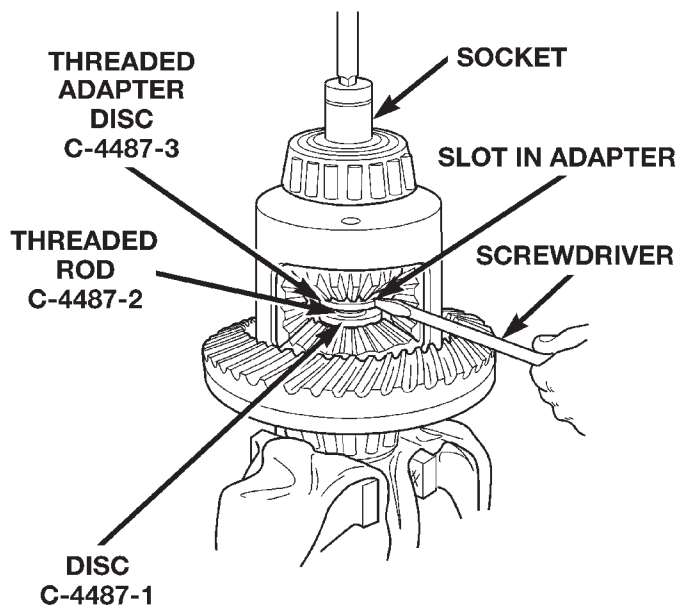

80a773de

**Fig. 59 Threaded Adapter Installation**

(9) Tighten forcing screw tool 122 N·m (90 ft. lbs.) (maximum) to compress Belleville springs in clutch packs (Fig. 60).

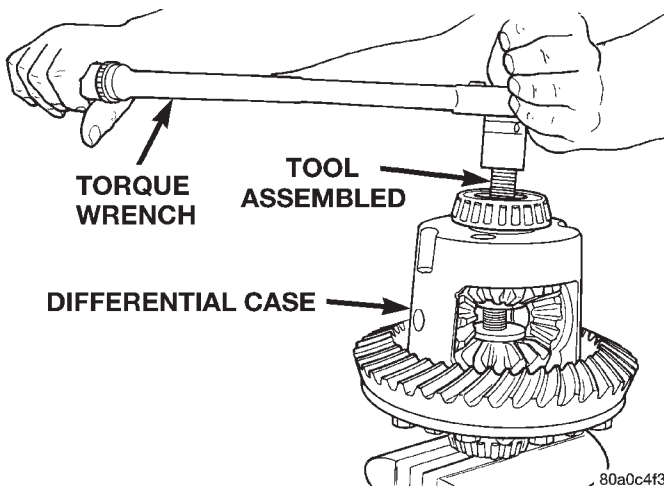


80a0c4f3

**Fig. 60 Tighten Belleville Spring Compressor Tool**

## DISASSEMBLY AND ASSEMBLY (Continued)

(10) Using an appropriate size feeler gauge, remove thrust washers from behind the pinion gears (Fig. 61).

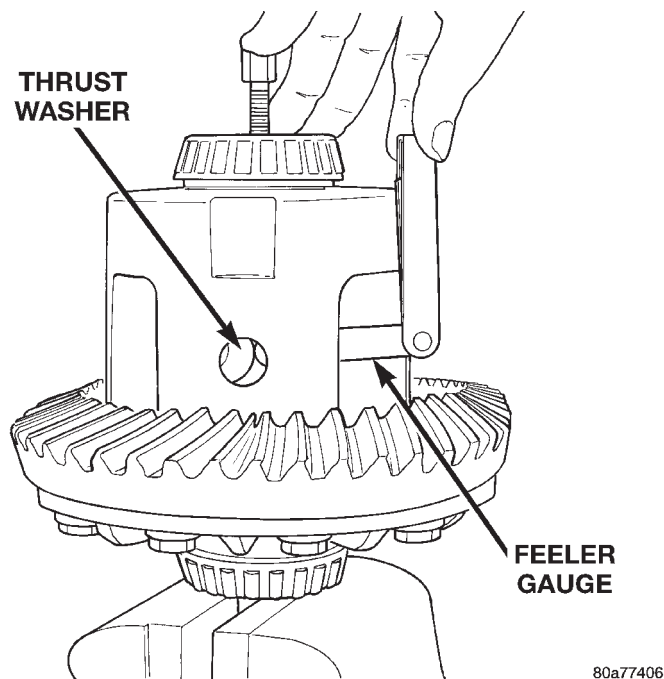


**Fig. 61 Remove Pinion Gear Thrust Washer**

(11) Insert Turning Bar C-4487-4 in case (Fig. 62).

(12) Loosen the Forcing Screw C-4487-2 in small increments until the clutch pack tension is relieved and the differential case can be turned using Turning Bar C-4487-4.

(13) Rotate differential case until the pinion gears can be removed.


(14) Remove pinion gears from differential case.

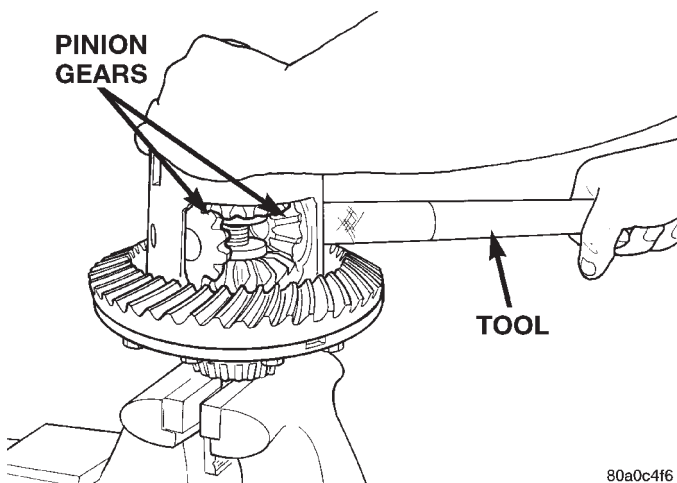

**Fig. 62 Pinion Gear Removal**

(15) Remove Forcing Screw C-4487-2, Step Plate C-4487-1, and Threaded Adapter C-4487-3.

(16) Remove top side gear, clutch pack retainer, and clutch pack. Keep plates in correct order during removal (Fig. 63).

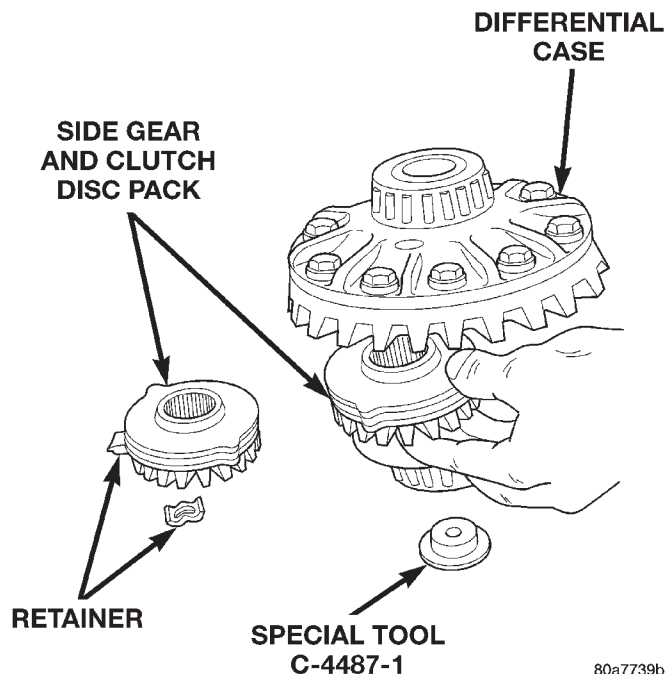

**Fig. 63 Side Gear & Clutch Disc Removal**

(17) Remove differential case from Side Gear Holding Tool 6963-A. Remove side gear, clutch pack retainer, and clutch pack. Keep plates in correct order during removal.

## ASSEMBLY

**NOTE:** The clutch discs are replaceable as complete sets only. If one clutch disc pack is damaged, both packs must be replaced.

Lubricate each component with gear lubricant before assembly.

(1) Assemble the clutch discs into packs and secure disc packs with retaining clips (Fig. 64).

(2) Position assembled clutch disc packs on the side gear hubs.

(3) Install clutch pack and side gear in the ring gear side of the differential case (Fig. 65). **Be sure clutch pack retaining clips remain in position and are seated in the case pockets.**

(4) Position the differential case on Side Gear Holding Tool 6963-A.



(5) Install lubricated Step Plate C-4487-1 on side gear (Fig. 66).

(6) Install the upper side gear and clutch disc pack (Fig. 66).

(7) Hold assembly in position. Insert Threaded Adapter C-4487-3 into top side gear.

(8) Insert Forcing Screw C-4487-2.


## DISASSEMBLY AND ASSEMBLY (Continued)

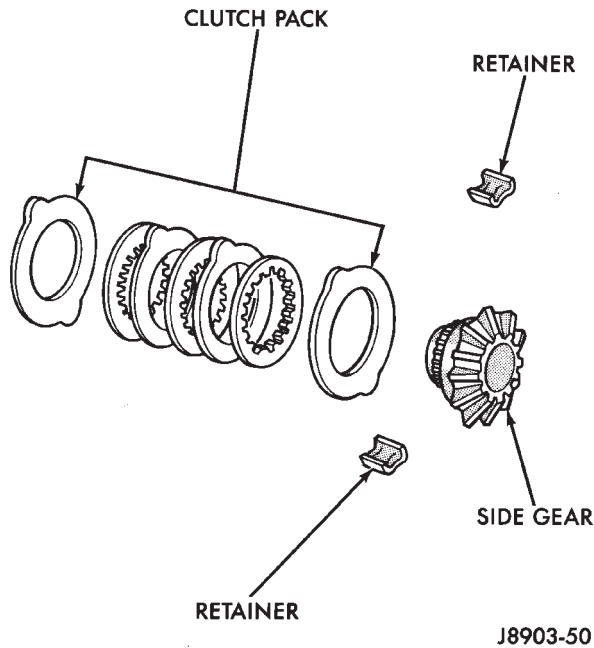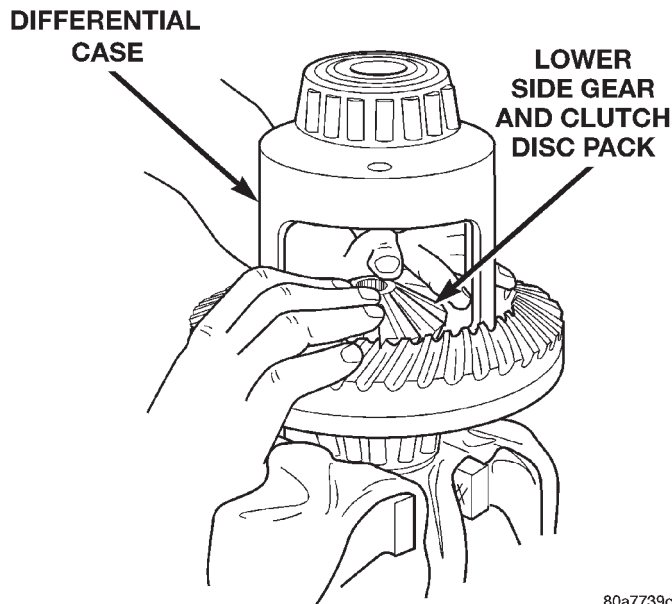**Fig. 64 Clutch Disc Pack****Fig. 65 Clutch Discs & Lower Side Gear Installation**

(9) Tighten forcing screw tool to slightly compress clutch discs.

(10) Place pinion gears in position in side gears and verify that the pinion mate shaft hole is aligned.

(11) Rotate case with Turning Bar C-4487-4 until the pinion mate shaft holes in pinion gears align with holes in case. It may be necessary to slightly tighten the forcing screw in order to install the pinion gears.

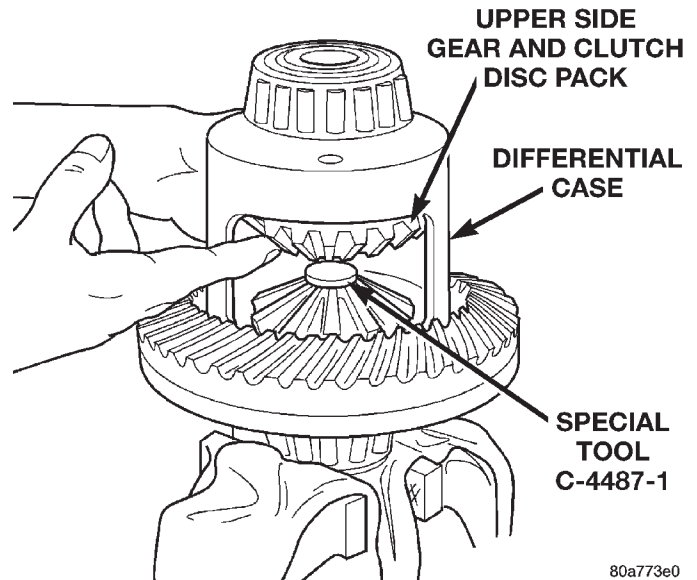**Fig. 66 Upper Side Gear & Clutch Disc Pack Installation**

(12) Tighten forcing screw to 122 N·m (90 ft. lbs.) to compress the Belleville springs.

(13) Lubricate and install thrust washers behind pinion gears and align washers with a small screw driver. Insert mate shaft into each pinion gear to verify alignment.

(14) Remove forcing screw, threaded adapter, and step plate.

(15) Install pinion gear mate shaft and align holes in shaft and case.

(16) Install the pinion mate shaft lock screw finger tight to hold shaft during differential installation.

**If replacement side and/or pinion gears and thrust washers were installed, it is not necessary to measure the side gear backlash. Correct fit is due to close machining tolerances during manufacture.**

(17) Lubricate all differential components with hypoid gear lubricant.

## CLEANING AND INSPECTION

### AXLE COMPONENTS

Wash differential components with cleaning solvent and dry with compressed air. **Do not steam clean the differential components.**

Wash bearings with solvent and towel dry, or dry with compressed air. **DO NOT** spin bearings with compressed air. **Cup and bearing must be replaced as matched sets only.**

Clean axle shaft tubes and oil channels in housing. Inspect for;



## CLEANING AND INSPECTION (Continued)

- Smooth appearance with no broken/dented surfaces on the bearing rollers or the roller contact surfaces.
- Bearing cups must not be distorted or cracked.
- Machined surfaces should be smooth and without any raised edges.
- Raised metal on shoulders of cup bores should be removed with a hand stone.
- Wear and damage to pinion gear mate shaft, pinion gears, side gears and thrust washers. Replace as a matched set only.
- Ring and pinion gear for worn and chipped teeth.
- Ring gear for damaged bolt threads. Replaced as a matched set only.
- Pinion yoke for cracks, worn splines, pitted areas, and a rough/corroded seal contact surface. Repair or replace as necessary.
- Preload shims for damage and distortion. Install new shims, if necessary.

## TRAC-LOK

Clean all components in cleaning solvent. Dry components with compressed air. Inspect clutch pack plates for wear, scoring or damage. Replace both clutch packs if any one component in either pack is damaged. Inspect side and pinion gears. Replace any gear that is worn, cracked, chipped or damaged. Inspect differential case and pinion shaft. Replace if worn or damaged.

## PRESOAK PLATES AND DISC

Plates and discs with fiber coating (no grooves or lines) must be presoaked in Friction Modifier before assembly. Soak plates and discs for a minimum of 20 minutes.

## ADJUSTMENTS

## PINION GEAR DEPTH

## GENERAL INFORMATION

Ring and pinion gears are supplied as matched sets only. The identifying numbers for the ring and pinion gear are etched into the face of each gear (Fig. 67). A plus (+) number, minus (-) number or zero (0) is etched into the face of the pinion gear. This number is the amount (in thousandths of an inch) the depth varies from the standard depth setting of a pinion etched with a (0). The standard setting from the center line of the ring gear to the back face of the pinion is 109.52 mm (4.312 in.). The standard depth provides the best teeth contact pattern. Refer to Backlash and Contact Pattern Analysis Paragraph in this section for additional information.

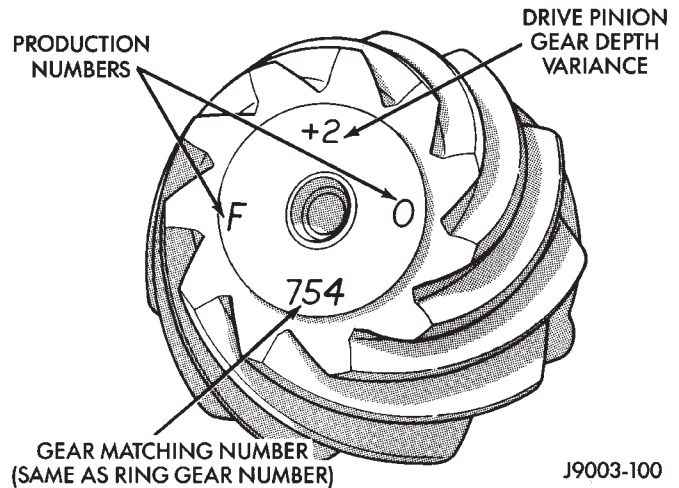


Fig. 67 Pinion Gear ID Numbers

Compensation for pinion depth variance is achieved with select shims. The shims are placed under the inner pinion bearing cone (Fig. 68).

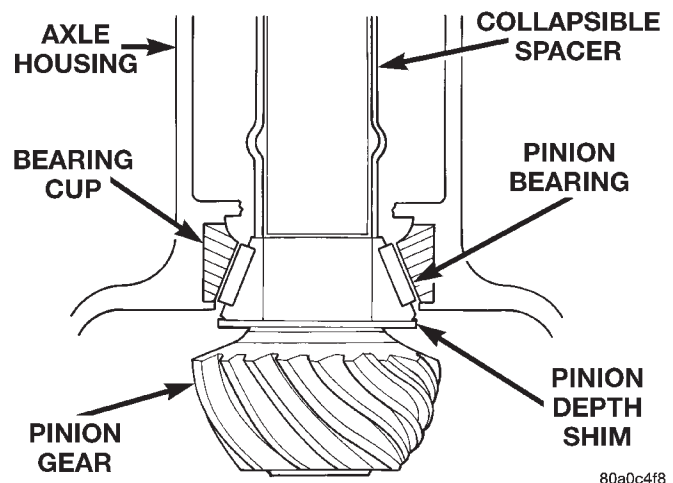


Fig. 68 Shim Locations

If a new gear set is being installed, note the depth variance etched into both the original and replacement pinion gear. Add or subtract the thickness of the original depth shims to compensate for the difference in the depth variances. Refer to the Depth Variance charts.

Note where Old and New Pinion Marking columns intersect. Intersecting figure represents plus or minus amount needed.

Note the etched number on the face of the drive pinion gear (-1, -2, 0, +1, +2, etc.). The numbers represent thousands of an inch deviation from the standard. If the number is negative, add that value to the required thickness of the depth shim(s). If the number is positive, subtract that value from the thickness of the depth shim(s). If the number is 0, no change is necessary. Refer to the Pinion Gear Depth Variance Chart.

## ADJUSTMENTS (Continued)

## PINION GEAR DEPTH VARIANCE


Original Pinion Gear Depth Variance	Replacement Pinion Gear Depth Variance								
	-4	-3	-2	-1	0	+1	+2	+3	+4
+4	+0.008	+0.007	+0.006	+0.005	+0.004	+0.003	+0.002	+0.001	0
+3	+0.007	+0.006	+0.005	+0.004	+0.003	+0.002	+0.001	0	-0.001
+2	+0.006	+0.005	+0.004	+0.003	+0.002	+0.001	0	-0.001	-0.002
+1	+0.005	+0.004	+0.003	+0.002	+0.001	0	-0.001	-0.002	-0.003
0	+0.004	+0.003	+0.002	+0.001	0	-0.001	-0.002	-0.003	-0.004
-1	+0.003	+0.002	+0.001	0	-0.001	-0.002	-0.003	-0.004	-0.005
-2	+0.002	+0.001	0	-0.001	-0.002	-0.003	-0.004	-0.005	-0.006
-3	+0.001	0	-0.001	-0.002	-0.003	-0.004	-0.005	-0.006	-0.007
-4	0	-0.001	-0.002	-0.003	-0.004	-0.005	-0.006	-0.007	-0.008

J8902-46

## PINION DEPTH MEASUREMENT AND ADJUSTMENT

Measurements are taken with pinion cups and pinion bearings installed in housing. Take measurements with Pinion Gauge Set 6955, Dummy Bearing/Arbor Disc Set 6956, and Dial Indicator C-3339 (Fig. 69).

## DIAL INDICATOR

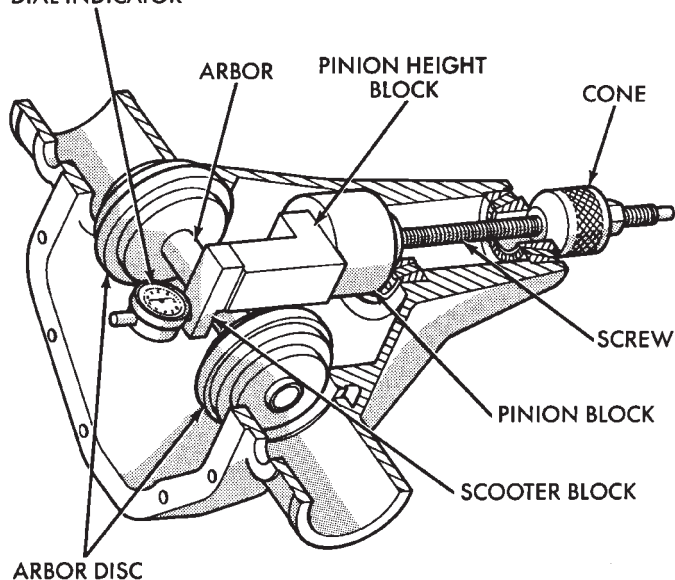


J9403-45

Fig. 69 Pinion Gear Depth Gauge Tools—Typical

(1) Assemble Pinion Height Block 6739, Pinion Block 8144, and rear pinion bearing onto Screw 6741 (Fig. 69).

(2) Insert assembled height gauge components, rear bearing and screw into axle housing through pinion bearing cups (Fig. 70).

(3) Install front pinion bearing and Cone 6740 hand tight (Fig. 69).

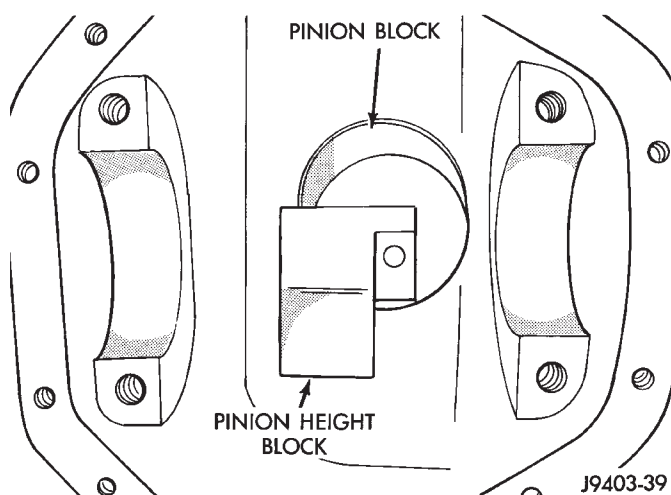


J9403-39

Fig. 70 Pinion Height Block—Typical

(4) Place Arbor Disc 6927 on Arbor D-115-3 in position in axle housing side bearing cradles (Fig. 71). Install differential bearing caps on Arbor Discs and tighten cap bolts. Refer to the Torque Specifications in this section.

## ADJUSTMENTS (Continued)

**NOTE:** Arbor Discs 6927 have different step diameters to fit other axle sizes. Pick correct size step for axle being serviced.

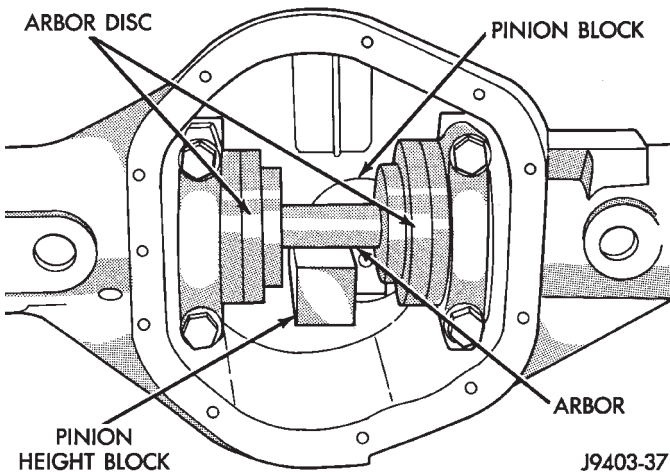

**Fig. 71 Gauge Tools In Housing—Typical**

(5) Assemble Dial Indicator C-3339 into Scooter Block D-115-2 and secure set screw.


(6) Place Scooter Block/Dial Indicator in position in axle housing so dial probe and scooter block are flush against the surface of the pinion height block. Hold scooter block in place and zero the dial indicator face to the pointer. Tighten dial indicator face lock screw.

(7) With scooter block still in position against the pinion height block, slowly slide the dial indicator probe over the edge of the pinion height block. Observe how many revolutions counterclockwise the dial pointer travels (approximately 0.125 in.) to the out-stop of the dial indicator.

(8) Slide the dial indicator probe across the gap between the pinion height block and the arbor bar with the scooter block against the pinion height block (Fig. 72). When the dial probe contacts the arbor bar, the dial pointer will turn clockwise. Bring dial pointer back to zero against the arbor bar, do not turn dial face. Continue moving the dial probe to the crest of the arbor bar and record the highest reading. If the dial indicator can not achieve the zero reading, the rear bearing cup or the pinion depth gauge set is not installed correctly.

(9) Select a shim equal to the dial indicator reading plus the drive pinion gear depth variance number etched in the face of the pinion gear (Fig. 67) using the opposite sign on the variance number. For example, if the depth variance is  $-2$ , add  $+0.002$  in. to the dial indicator reading.

(10) Remove the pinion depth gauge components from the axle housing

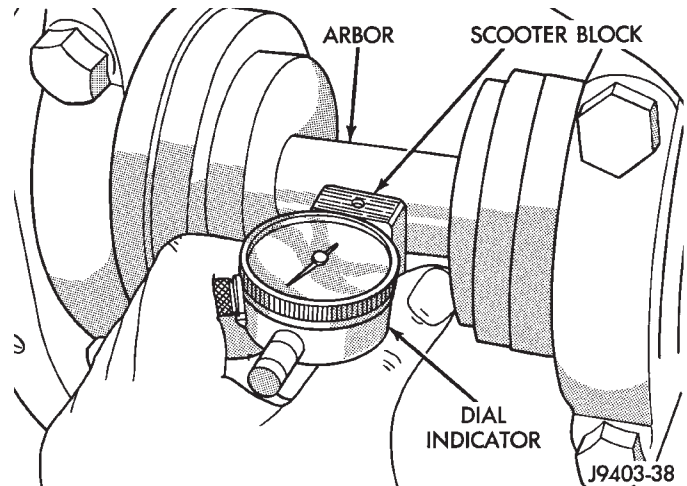

**Fig. 72 Pinion Gear Depth Measurement—Typical**

### DIFFERENTIAL BEARING PRELOAD AND GEAR BACKLASH


Differential side bearing preload and gear backlash is achieved by selective shims inserted between the bearing cup and the axle housing. The proper shim thickness can be determined using slip-fit dummy bearings 6929-A in place of the differential side bearings and a dial indicator C-3339. Before proceeding with the differential bearing preload and gear backlash measurements, measure the pinion gear depth and prepare the pinion gear for installation. Establishing proper pinion gear depth is essential to establishing gear backlash and tooth contact patterns. After the overall shim thickness to take up differential side play is measured, the pinion gear is installed, and the gear backlash shim thickness is measured. The overall shim thickness is the total of the dial indicator reading, starting point shim thickness, and the preload specification added together. The gear backlash measurement determines the thickness of the shim used on the ring gear side of the differential case. Subtract the gear backlash shim thickness from the total overall shim thickness and select that amount for the pinion gear side of the differential (Fig. 73).

### DIFFERENTIAL PRELOAD AND GEAR BACKLASH SHIM SELECTION

**NOTE:** It is difficult to salvage the differential side bearings during the removal procedure. Install replacement bearings if necessary.

- (1) Remove side bearings from differential case.
- (2) Install ring gear on differential case and tighten bolts to specification.
- (3) Install dummy side bearings 6929-A on differential case.
- (4) Install differential case in axle housing.


## ADJUSTMENTS (Continued)

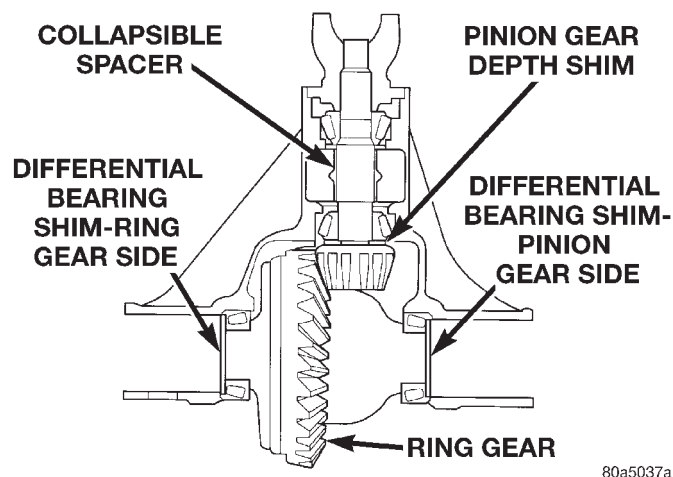

80a5037a

**Fig. 73 Axle Adjustment Shim Locations**

(5) Insert Dummy Shim 8107 (0.118 in. (3.0 mm)) starting point shims between the dummy bearing and the axle housing on side of differential (Fig. 74).

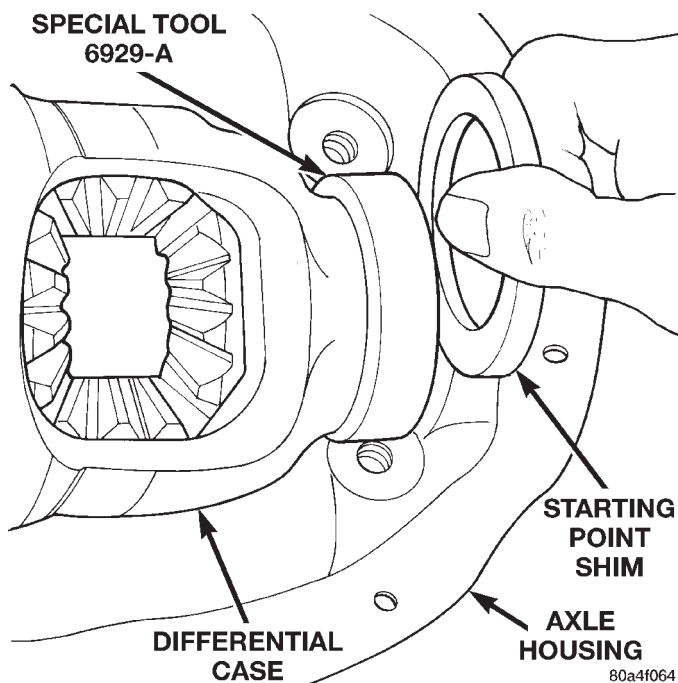

80a4f064

**Fig. 74 Preload Measurement Starting Point Shim**


(6) Install the marked bearing caps in their correct positions. Install and snug the bolts.

(7) Thread guide stud C-3288-B into rear cover bolt hole below ring gear (Fig. 75).

(8) Attach dial indicator C-3339 to Guide Stud C-3288-B. Position the dial indicator plunger on a flat surface between the ring gear bolt heads (Fig. 75).

(9) Push and hold differential case to pinion gear side of axle housing.

(10) Zero dial indicator face to pointer.

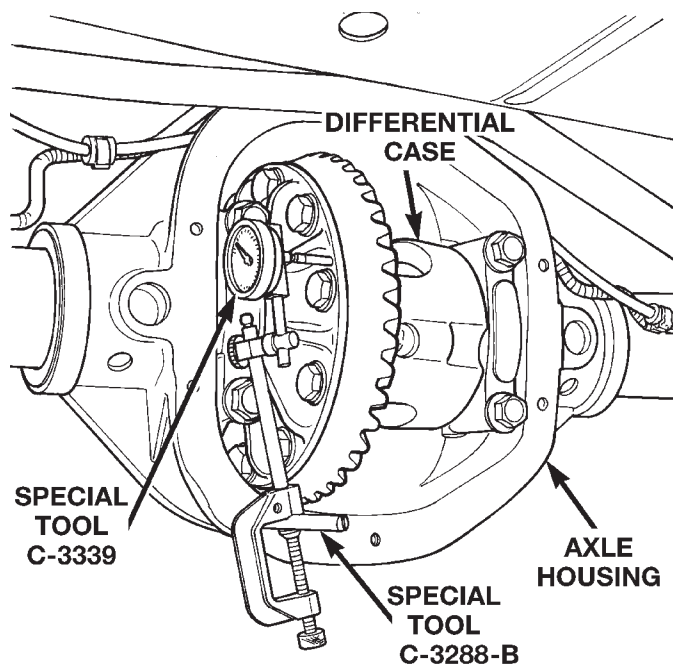

80a7e2cf

**Fig. 75 Differential Side play Measurement**

(11) Push and hold differential case to ring gear side of the axle housing.

(12) Record dial indicator reading.

(13) Add the dial indicator reading to the starting point shim thickness to determine total shim thickness to achieve zero differential end play.

(14) Add 0.012 in. (0.3 mm) to the zero end play total. This new total represents the thickness of shims to compress, or preload the new bearings when the differential is installed.

(15) Rotate dial indicator out of the way on guide stud.

(16) Remove differential case, dummy bearings, and starting point shims from axle housing.

(17) Install pinion gear in axle housing. Install the yoke and establish the correct pinion rotating torque.

(18) Install differential case and dummy bearings in axle housing (without shims) and tighten retaining cap bolts snug.

(19) Position the dial indicator plunger on a flat surface between the ring gear bolt heads (Fig. 75).

(20) Push and hold differential case toward pinion gear.

(21) Zero dial indicator face to pointer.

(22) Push and hold differential case to ring gear side of the axle housing.

(23) Record dial indicator reading.

(24) Subtract 0.002 in. (0.05 mm) from the dial indicator reading to compensate for backlash between ring and pinion gears. This total is the thickness of shim required to achieve proper backlash.

(25) Subtract the backlash shim thickness from the total preload shim thickness. The remainder is



## ADJUSTMENTS (Continued)

the shim thickness required on the pinion side of the axle housing.

(26) Rotate dial indicator out of the way on guide stud.

(27) Remove differential case and dummy bearings from axle housing.

(28) Install new side bearing cones and cups on differential case.

(29) Install spreader W-129-B on axle housing and spread axle opening enough to receive differential case and side bearing shims.

(30) Place side bearing shims in axle housing against axle tube ends.

(31) Install differential case in axle housing.

(32) Remove spreader from axle housing.

(33) Rotate the differential case several times to seat the side bearings.

(34) Position the indicator plunger against a ring gear tooth (Fig. 76).


(35) Push and hold ring gear upward while not allowing the pinion gear to rotate.

(36) Zero dial indicator face to pointer.


(37) Push and hold ring gear downward while not allowing the pinion gear to rotate. Dial indicator reading should be between 0.12 mm (0.005 in.) and 0.20 mm (0.008 in.). If backlash is not within specifications transfer the necessary amount of shim thickness from one side of the axle housing to the other (Fig. 77).

(38) Verify differential case and ring gear runout by measuring ring to pinion gear backlash at several locations around the ring gear. Readings should not vary more than 0.05 mm (0.002 in.). If readings vary more than specified, the ring gear or the differential case is defective.

After the proper backlash is achieved, perform the Gear Contact Pattern Analysis procedure.

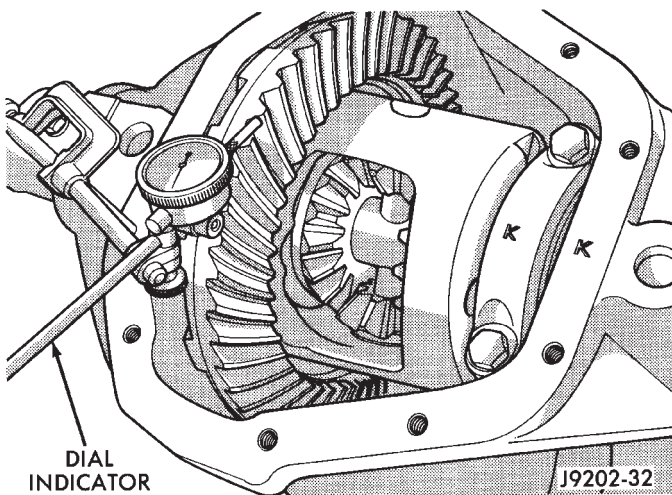

**Fig. 76 Ring Gear Backlash Measurement**

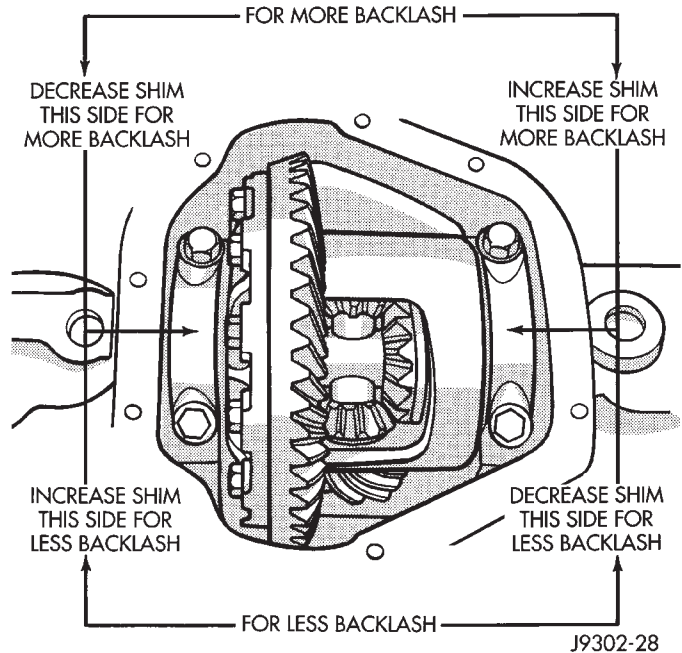

**Fig. 77 Backlash Shim Adjustment**

## GEAR CONTACT PATTERN ANALYSIS

The ring and pinion gear teeth contact patterns will show if the pinion gear depth is correct in the axle housing. It will also show if the ring gear backlash has been adjusted correctly. The backlash can be adjusted within specifications to achieve desired tooth contact patterns.

(1) Apply a thin coat of hydrated ferric oxide, or equivalent, to the drive and coast side of the ring gear teeth.




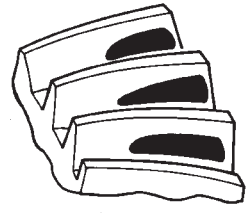

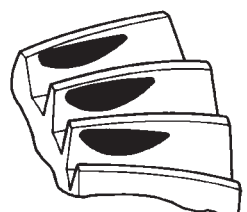
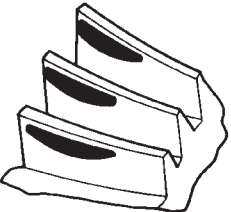
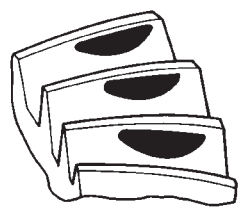
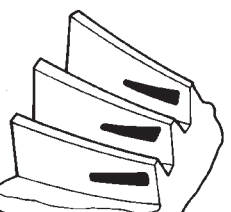
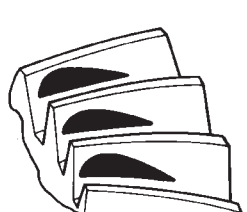
(2) Wrap, twist, and hold a shop towel around the pinion yoke to increase the turning resistance of the pinion gear. This will provide a more distinct contact pattern.

(3) Using a boxed end wrench on a ring gear bolt, Rotate the differential case one complete revolution in both directions while a load is being applied from shop towel.

The areas on the ring gear teeth with the greatest degree of contact against the pinion gear teeth will squeegee the compound to the areas with the least amount of contact. Note and compare patterns on the ring gear teeth to Gear Tooth Contact Patterns chart (Fig. 78) and adjust pinion depth and gear backlash as necessary.



## ADJUSTMENTS (Continued)
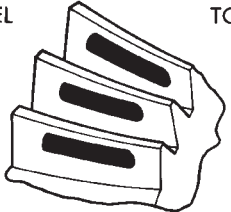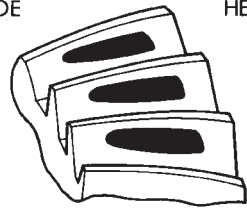
<p>DRIVE SIDE OF RING GEAR TEETH</p> <p>HEEL                      TOE</p> 	<p>COAST SIDE OF RING GEAR TEETH</p> <p>TOE                      HEEL</p> 	<p>DESIRABLE CONTACT PATTERN. PATTERN SHOULD BE CENTERED ON THE DRIVE SIDE OF TOOTH. PATTERN SHOULD BE CENTERED ON THE COAST SIDE OF TOOTH, BUT MAY BE SLIGHTLY TOWARD THE TOE. THERE SHOULD ALWAYS BE SOME CLEARANCE BETWEEN CONTACT PATTERN AND TOP OF THE TOOTH.</p>
		<p>RING GEAR BACKLASH CORRECT. <b>THINNER</b> PINION GEAR DEPTH SHIM REQUIRED.</p>
		<p>RING GEAR BACKLASH CORRECT. <b>THICKER</b> PINION GEAR DEPTH SHIM REQUIRED.</p>
		<p>PINION GEAR DEPTH SHIM CORRECT. <b>DECREASE</b> RING GEAR BACKLASH.</p>
		<p>PINION GEAR DEPTH SHIM CORRECT. <b>INCREASE</b> RING GEAR BACKLASH.</p>

J9003-24

Fig. 78 Gear Tooth Contact Patterns

## SPECIFICATIONS

### 216 RBA AXLE

DESCRIPTION	SPECIFICATION
Axle Type . . . . .	Semi-Floating Hypoid
Lubricant. . . . .	SAE Thermally Stable 80W-90
Lubricant Trailer Tow . . . . .	Synthetic 75W-140
Lube Capacity . . . . .	2.25 L (4.75 pts.)
Axle Ratios. . . . .	3.55/3.73
Differential Bearing Preload . . . . .	0.1 mm (0.004 in.)
Differential Side Gear Clearance . . . . .	0-0.15 mm (0-0.006 in.)
Ring Gear Diameter . . . . .	216 mm (8.5 in.)
Ring Gear Backlash . . . . .	0.13-0.20 mm (0.005-0.008 in.)
Pinion Std. Depth. . . . .	109.52 mm (4.312 in.)
Pinion Bearing Preload- New Bearings . . . . .	2.26-4.52 N·m (20-40 in. lbs.)
Pinion Bearing Preload- Original Bearings . . . . .	1-3 N·m (10-20 in. lbs.)
Maximum Carrier Spread . . . . .	0.51 mm (0.020 in.)


## TORQUE

DESCRIPTION	TORQUE
<b>Bolts, Diff. Cover</b> . . . . .	41 N·m (30 ft. lbs.)
<b>Bolts, Diff. Bearing Cap</b> . . . . .	85 N·m (63 ft. lbs.)
<b>Bolts, Ring Gear.</b> . . . . .	108 N·m (80 ft. lbs.)
<b>Screw, ABS Sensor</b> . . . . .	8 N·m (70 in. lbs.)
<b>Screw, Pinion Gear Mate</b>	
<b>Shaft Lock</b> . . . . .	17.6 N·m (13 ft. lbs.)
<b>Nuts, Brake Backing Plate.</b> . . . .	61 N·m (45 ft. lbs.)
<b>Nut, Pinion Gear—</b>	
<b>Minimum *</b> . . . . .	298 N·m (220 ft. lbs.)
<b>Nut, Pinion Gear—Maximum *</b> . . . . .	380 N·m (280 ft. lbs.)


**NOTE:** \*Refer to Pinion Gear Removal and Installation procedures for proper pinion nut tightening instructions. Do not exceed 380 N·m (280 ft. lbs.) during collapsible spacer crushing procedure.

## SPECIAL TOOLS


### 216 RBA AXLE

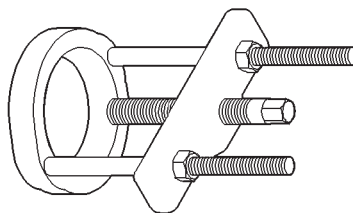


**Puller Set—C-293-PA**

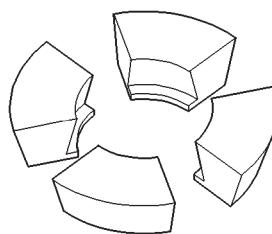


**Adapter—C-293-42**

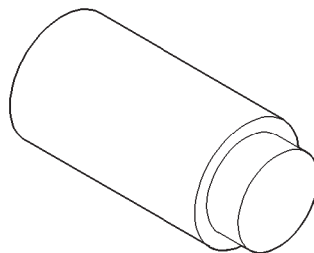

**Extension—C-293-3**

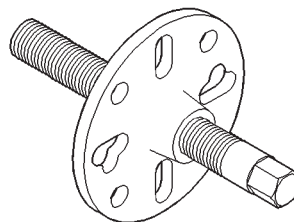


**Remover—C-452**

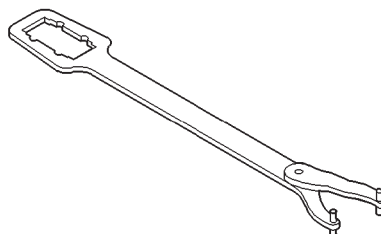


**Holder—C-3281**


SPECIAL TOOLS (Continued)

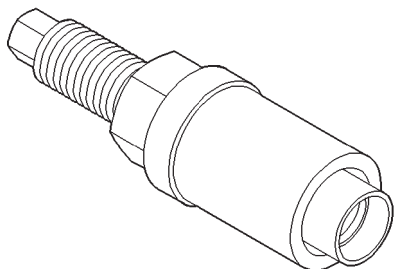


**Installer—C-3718**

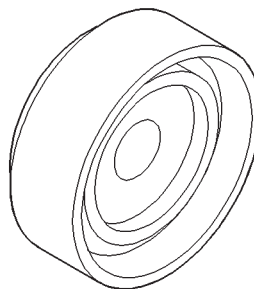


**Installer—C-4340**

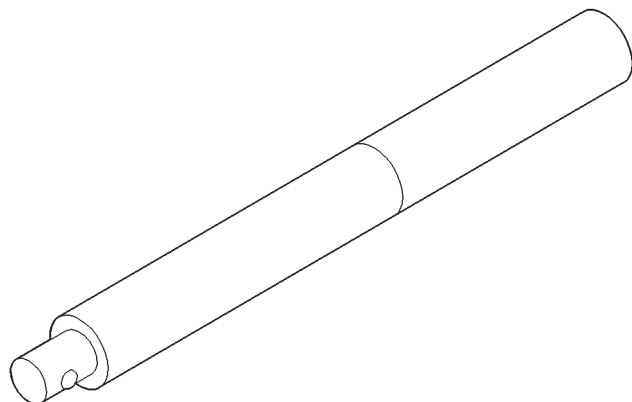


**Handle—C-4171**

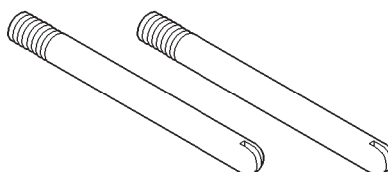


**Guide Pin—C-3288-B**

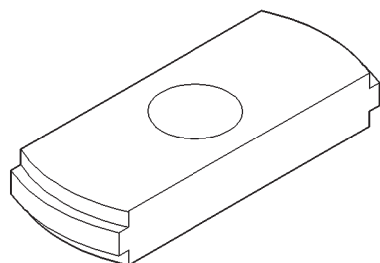


**Remover—C-4307**

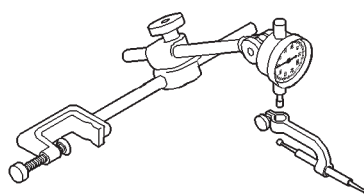

**Dial Indicator—C-3339**

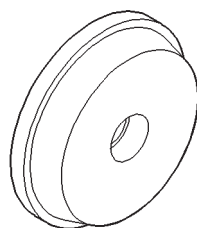


**Installer—C-4308**

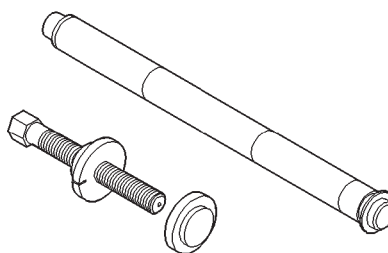


**Trac-lok Tool Set—C-4487**


SPECIAL TOOLS (Continued)

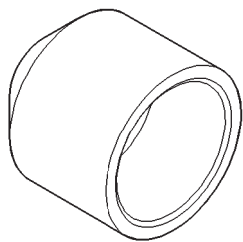


**Installer—C-3972-A**

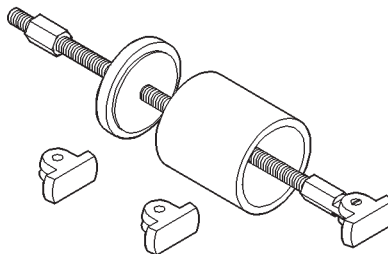


**Remover—6310**

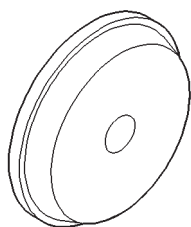


**Installer—D-129**

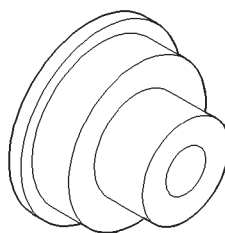


**Installer—6436**

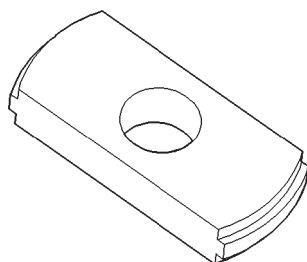


**Remover—D-103**

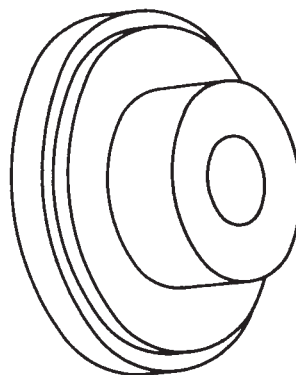

**Installer—6437**

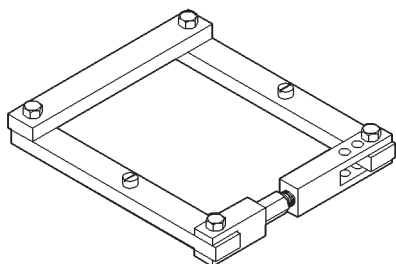









**Spreader—W-129-B**

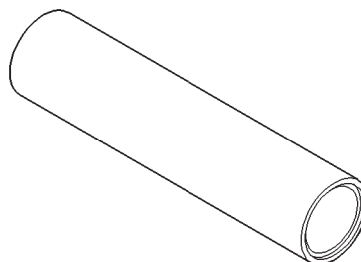

**Installer—6448**



## SPECIAL TOOLS (Continued)

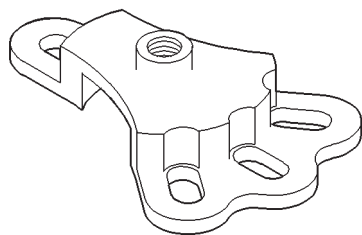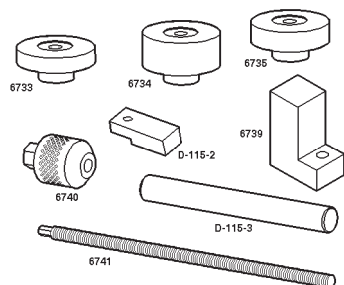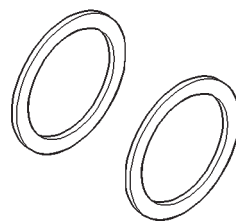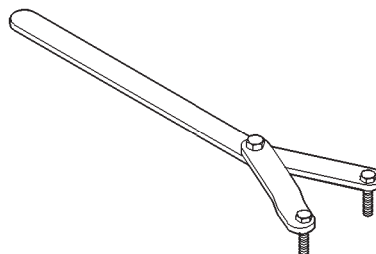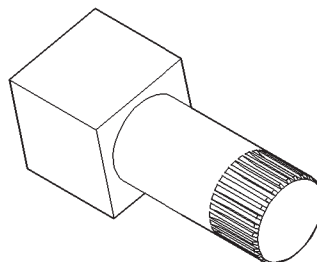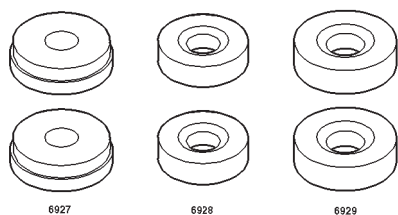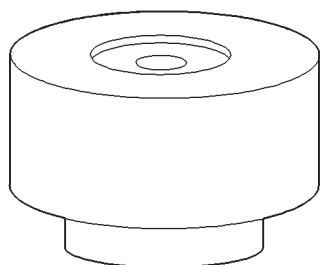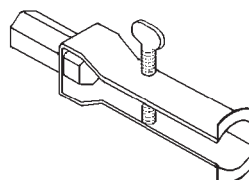**Adapter—6790****Pinion Depth Set—6955****Starting Point Shim—8107****Holder—6958****Holder—6963-A****Adapter Set—6956****Gauge Block—8144****Remover—7794-A**