

STEERING

TABLE OF CONTENTS

	page		page
POWER STEERING	1	STEERING LINKAGE	22
POWER STEERING PUMP	6	STEERING COLUMN	26
POWER STEERING GEAR	11		

POWER STEERING

TABLE OF CONTENTS

	page		page
DESCRIPTION AND OPERATION		STEERING FLOW AND PRESSURE.....	4
POWER STEERING SYSTEM	1		
DIAGNOSIS AND TESTING			
POWER STEERING SYSTEM DIAGNOSIS			
CHARTS	2		

DESCRIPTION AND OPERATION

POWER STEERING SYSTEM

DESCRIPTION


The power steering pump (Fig. 1) is a constant flow rate and displacement vane type pump. The pump reservoir is attached to the pump body. The pump is connected to the steering by the pressure and return hoses. The steering gear (Fig. 1) used is a recirculating ball type gear. A tilt and non-tilt column provide steering input.

The power steering system consists of:

- Hydraulic pump
- Recirculating ball steering gear
- Steering column
- Steering linkage
- Cooler (optional)

OPERATION

The rack piston balls act as a rolling thread between the worm shaft and rack piston. The worm shaft is supported by a thrust bearing at the lower end and a bearing assembly at the upper end. When the worm shaft is turned from input from the steering column the rack piston moves. The rack piston teeth mesh with the pitman shaft. Turning the worm shaft turns the pitman shaft, which moves the steering linkage.

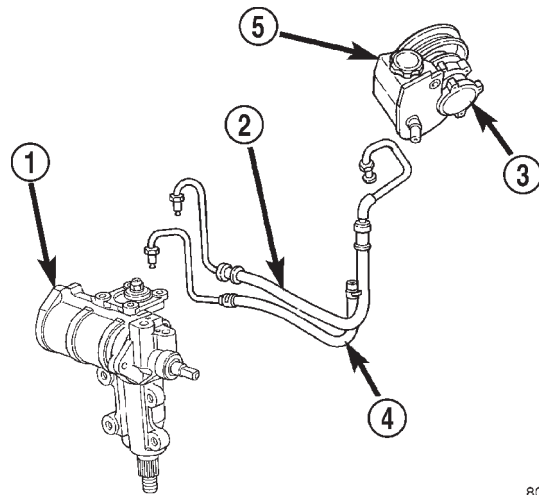

80c07226

Fig. 1 Power Steering Gear & Pump

- 1 - STEERING GEAR
- 2 - PRESSURE HOSE
- 3 - PUMP
- 4 - RETURN HOSE
- 5 - RESERVOIR

DIAGNOSIS AND TESTING

POWER STEERING SYSTEM DIAGNOSIS CHARTS

STEERING NOISE

There is some noise in all power steering systems. One of the most common is a hissing sound evident at a standstill parking. Or when the steering wheel is at the end of it's travel. Hiss is a high frequency noise similar to that of a water tap being closed slowly. The noise is present in all valves that have a high velocity fluid passing through an orifice. There is no relationship between this noise and steering performance.

CONDITION	POSSIBLE CAUSES	CORRECTION
OBJECTIONAL HISS OR WHISTLE	<ol style="list-style-type: none"> 1. Steering intermediate shaft to dash panel seal. 2. Noisy valve in power steering gear. 	<ol style="list-style-type: none"> 1. Check and repair seal at dash panel. 2. Replace steering gear.
RATTLE OR CLUNK	<ol style="list-style-type: none"> 1. Gear mounting bolts loose. 2. Loose or damaged suspension components/track bar. 3. Loose or damaged steering linkage. 4. Internal gear noise. 5. Pressure hose in contact with other components. 	<ol style="list-style-type: none"> 1. Tighten bolts to specification. 2. Inspect and repair suspension. 3. Inspect and repair steering linkage. 4. Replace gear. 5. Reposition hose.
CHIRP OR SQUEAL	<ol style="list-style-type: none"> 1. Loose belt. 2. Belt routing. 	<ol style="list-style-type: none"> 1. Adjust or replace. 2. Verify belt routing is correct.
WHINE OR GROWL	<ol style="list-style-type: none"> 1. Low fluid level. 2. Pressure hose in contact with other components. 3. Internal pump noise. 4. Air in the system. 	<ol style="list-style-type: none"> 1. Fill to proper level. 2. Reposition hose. 3. Replace pump. 4. Perform pump initial operation.
SUCKING AIR SOUND	<ol style="list-style-type: none"> 1. Loose return line clamp. 2. O-ring missing or damaged on hose fitting. 3. Low fluid level. 4. Air leak between pump and reservoir. 	<ol style="list-style-type: none"> 1. Replace clamp. 2. Replace o-ring. 3. Fill to proper level. 4. Repair as necessary.
SCRUBBING OR KNOCKING	<ol style="list-style-type: none"> 1. Wrong tire size. 2. Wrong gear. 	<ol style="list-style-type: none"> 1. Verify tire size. 2. Verify gear.

DIAGNOSIS AND TESTING (Continued)

BINDING AND STICKING

CONDITION	POSSIBLE CAUSE	CORRECTION
DIFFICULT TO TURN WHEEL STICKS OR BINDS	<ol style="list-style-type: none"> 1. Low fluid level. 2. Tire pressure. 3. Steering component. 4. Loose belt. 5. Low pump pressure. 6. Column shaft coupler binding. 7. Steering gear worn or out of adjustment. 8. Ball joints binding. 9. Belt routing. 	<ol style="list-style-type: none"> 1. Fill to proper level. 2. Adjust tire pressure. 3. Inspect and lube. 4. Adjust or replace. 5. Pressure test and replace if necessary. 6. Replace coupler. 7. Repair or replace gear. 8. Inspect and repair as necessary. 9. Verify belt routing is correct.

INSUFFICIENT ASST. OR POOR RETURN TO CENTER

CONDITION	POSSIBLE CAUSE	CORRECTION
HARD TURNING OR MOMENTARY INCREASE IN TURNING EFFORT	<ol style="list-style-type: none"> 1. Tire pressure. 2. Low fluid level. 3. Loose belt. 4. Lack of lubrication. 5. Low pump pressure. 6. Internal gear leak. 7. Belt routing. 	<ol style="list-style-type: none"> 1. Adjust tire pressure. 2. Fill to proper level. 3. Adjust or replace. 4. Inspect and lubricate steering and suspension compnents. 5. Pressure test and repair as necessary. 6. Pressure and flow test, and repair as necessary. 7. Verify belt routing is correct.
STEERING WHEEL DOES NOT WANT TO RETURN TO CENTER POSITION	<ol style="list-style-type: none"> 1. Tire pressure. 2. Wheel alignment. 3. Lack of lubrication. 4. High friction in steering gear. 5. Ball joints binding. 	<ol style="list-style-type: none"> 1. Adjust tire pressure. 2. Align front end. 3. Inspect and lubricate steering and suspension compnents. 4. Test and adjust as necessary. 5. Inspect and repair as necessary.

Some roads will cause a vehicle to drift, due to the crown in the road.

DIAGNOSIS AND TESTING (Continued)

LOOSE STEERING AND VEHICLE LEADS/DRIFTS


CONDITION	POSSIBLE CAUSE	CORRECTION
EXCESSIVE PLAY IN STEERING WHEEL	<ol style="list-style-type: none"> 1. Worn or loose suspension or steering components. 2. Worn or loose wheel bearings. 3. Steering gear mounting. 4. Gear out of adjustment. 5. Worn or loose steering coupler. 	<ol style="list-style-type: none"> 1. Repair as necessary. 2. Repair as necessary. 3. Tighten gear mounting bolts to specification. 4. Adjust gear to specification. 5. Repair as necessary.
VEHICLE PULLS TO ONE SIDE DURING BRAKING	<ol style="list-style-type: none"> 1. Tire Pressure. 2. Air in brake hydraulics system. 3. Worn brake components. 	<ol style="list-style-type: none"> 1. Adjust tire pressure. 2. Bleed brake system. 3. Repair as necessary.
VEHICLE LEADS OR DRIFTS FROM STRAIGHT AHEAD DIRECTION ON UNCROWNED ROAD.	<ol style="list-style-type: none"> 1. Tire pressure. 2. Radial tire lead. 3. Brakes dragging. 4. Wheel alignment. 5. Weak or broken spring. 6. Loose or worn steering/suspension components. 7. Cross caster out of spec. 	<ol style="list-style-type: none"> 1. Adjust tire pressure. 2. Cross front tires. 3. Repair as necessary. 4. Align vehicle. 5. Replace spring. 6. Repair as necessary. 7. Adjust or replace axle as necessary.

STEERING FLOW AND PRESSURE

The following procedure is used to test the operation of the power steering system on the vehicle. This test will provide the gallons per minute (GPM) or flow rate of the power steering pump along with the maximum relief pressure. Perform test any time a power steering system problem is present. This test will determine if the power steering pump or power steering gear is not functioning properly. The following pressure and flow test is performed using Power Steering Analyzer Tool kit 6815 (Fig. 2) and Adapter Kit 6893.

FLOW AND PRESSURE TEST

- (1) Check the power steering belt to ensure it is in good condition and adjusted properly.
- (2) Connect pressure gauge hose from the Power Steering Analyzer to Tube 6865.
- (3) Connect Adapter 6826 to Power Steering Analyzer test valve end.
- (4) Disconnect the high pressure hose from the power steering pump.
- (5) Connect Tube 6865 to the pump hose fitting.
- (6) Connect the power steering hose from the steering gear to Adapter 6826.
- (7) Open the test valve completely.

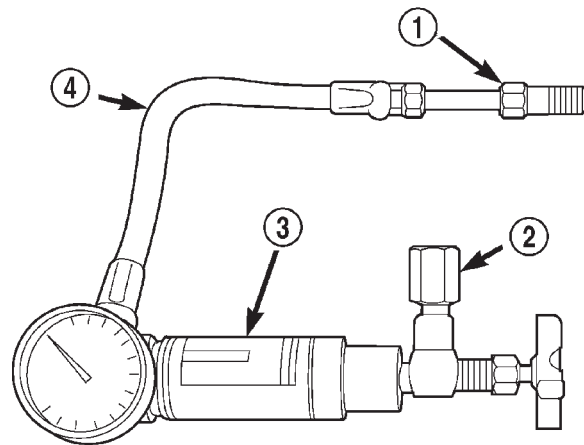

80ae82e2

Fig. 2 Power Steering Analyzer

- 1 - TUBE
- 2 - ADAPTER FITTINGS
- 3 - ANALYZER
- 4 - GAUGE HOSE

- (8) Start engine and let idle long enough to circulate power steering fluid through flow/pressure test gauge.

DIAGNOSIS AND TESTING (Continued)

(9) Shut off the engine and check the fluid level, add fluid as necessary. Start engine again and let idle.

(10) The initial pressure reading should be 345-552 kPa (50-80 psi). If pressure is higher inspect the hoses for restrictions and repair as necessary.

(11) Increase the engine speed to 1500 RPM and read the flow meter. The reading should be 2.4 - 2.8 GPM, if the reading is below this specification the pump should be replaced.

CAUTION: This next step involves testing maximum pump pressure output and flow control valve operation. Do not leave valve closed for more than three seconds as the pump could be damaged.

(12) Close valve fully three times for three seconds and record highest pressure indicated each time. **All three readings must be at pump relief pressure specifications and within 345 kPa (50 psi) of each other.**

- Pressures above specifications but not within 345 kPa (50 psi) of each other, replace pump.

- Pressures within 345 kPa (50 psi) of each other but below specifications, replace pump.

(13) Open the test valve and turn the steering wheel to the extreme left and right positions against the stops. Record the highest pressure reading at each position. Compare readings to the pump specifications chart. If pressures readings are not within 50 psi. of each other, the gear is leaking internally and must be repaired.

CAUTION: Do not force the pump to operate against the stops for more than 2 to 4 seconds at a time because, pump damage will result.

PUMP SPECIFICATIONS

ENGINE	RELIEF PRESSURE ± 50	FLOW RATE (GPM)
4.0L	9653 kPa (1400 psi)	1500 RPM 2.4 - 2.8 GPM
4.7L	9653 kPa (1400 psi)	

POWER STEERING PUMP

TABLE OF CONTENTS

	page		page
DESCRIPTION AND OPERATION		POWER STEERING PUMP - 4.7L.....	7
POWER STEERING PUMP	6	DISASSEMBLY AND ASSEMBLY	
POWER STEERING PRESSURE LINE.....	6	PUMP PULLEY	8
POWER STEERING RETURN LINE	6	PUMP RESERVOIR	9
DIAGNOSIS AND TESTING		SPECIFICATIONS	
PUMP LEAKAGE DIAGNOSIS	7	TORQUE CHART.....	10
SERVICE PROCEDURES		SPECIAL TOOLS	
POWER STEERING PUMP - INITIAL OPERATION.....	7	POWER STEERING PUMP	10
REMOVAL AND INSTALLATION			
POWER STEERING PUMP - 4.0L	7		

DESCRIPTION AND OPERATION

POWER STEERING PUMP

DESCRIPTION

Hydraulic pressure for the power steering system is provided by a belt driven power steering pump (Fig. 1). The pump shaft has a pressed-on drive pulley that is belt driven by the crankshaft pulley.

OPERATION

The power steering pump is a constant flow rate and displacement, vane-type pump. The pump internal parts operate submerged in fluid. The flow control orifice is part of the high pressure line fitting. The pressure relief valve inside the flow control valve limits the pump pressure. The reservoir is attached to the pump body with spring clips. The power steering pump is connected to the steering gear by the pressure and return hoses.

NOTE: Power steering pumps have different pressure rates and are not interchangeable with other pumps.


POWER STEERING PRESSURE LINE

DESCRIPTION

The hose consists of two metal ends and rubber center section that contains a tuning cable. The pump end uses a quick connect fitting.

OPERATION

Power steering pressure line, is used to transfer high pressure power steering fluid, from the power steering pump to the power steering gear.

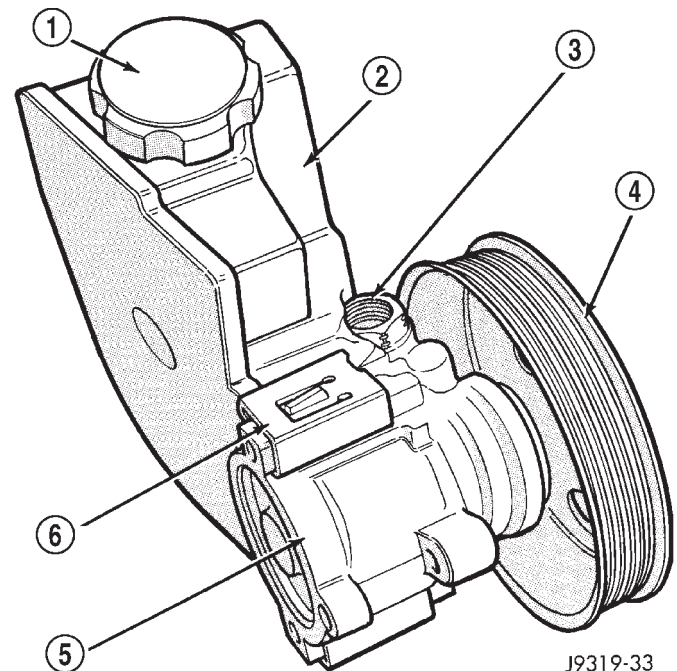

J9319-33

Fig. 1 Pump With Integral Reservoir

- 1 - CAP
- 2 - FLUID RESERVOIR (TYPICAL)
- 3 - HIGH-PRESSURE FITTING
- 4 - DRIVE PULLEY
- 5 - PUMP BODY
- 6 - RESERVOIR CLIP

POWER STEERING RETURN LINE

DESCRIPTION

Power steering return line is a hose which is clamped at the pump and the gear.


DESCRIPTION AND OPERATION (Continued)

OPERATION

Power steering return line, is used to transfer low pressure power steering fluid, from the power steering gear to the power steering pump.

DIAGNOSIS AND TESTING

PUMP LEAKAGE DIAGNOSIS

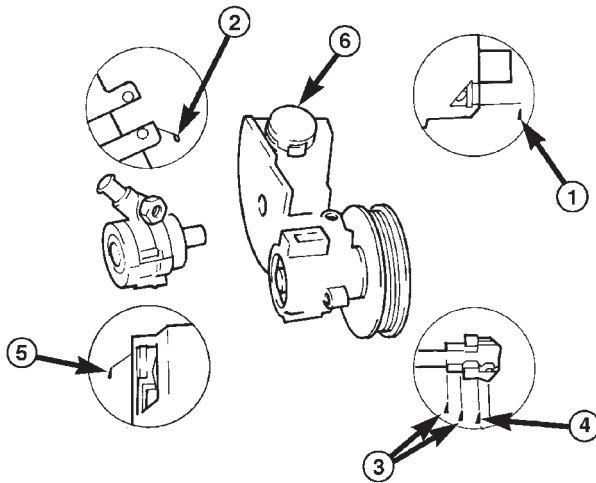

1. BUSHING (BEARING) WORN, SEAL WORN. REPLACE PUMP.
2. REPLACE RESERVOIR O-RING SEAL.
3. TORQUE HOSE FITTING NUT TO SPECIFICATIONS. IF LEAKAGE PERSISTS, REPLACE O-RING SEAL.
4. TORQUE FITTING TO SPECIFICATIONS. IF LEAKAGE PERSISTS, REPLACE O-RING SEAL.
5. REPLACE PUMP.
6. CHECK OIL LEVEL: IF LEAKAGE PERSISTS WITH THE LEVEL CORRECT AND CAP TIGHT, REPLACE THE CAP.

80a1c3c3

SERVICE PROCEDURES

POWER STEERING PUMP - INITIAL OPERATION

WARNING: THE FLUID LEVEL SHOULD BE CHECKED WITH ENGINE OFF TO PREVENT INJURY FROM MOVING COMPONENTS.

CAUTION: Use MOPAR Power Steering Fluid or equivalent. Do not use automatic transmission fluid and do not overfill.

Wipe filler cap clean, then check the fluid level. The dipstick should indicate **COLD** when the fluid is at normal ambient temperature.

- (1) Fill the pump fluid reservoir to the proper level and let the fluid settle for at least two minutes.
- (2) Start the engine and let run for a few seconds then turn engine off.

(3) Add fluid if necessary. Repeat the above procedure until the fluid level remains constant after running the engine.

(4) Raise the front wheels off the ground.
 (5) Slowly turn the steering wheel right and left, lightly contacting the wheel stops at least 20 times.

(6) Check the fluid level add if necessary.
 (7) Lower the vehicle, start the engine and turn the steering wheel slowly from lock to lock.

(8) Stop the engine and check the fluid level and refill as required.

(9) If the fluid is extremely foamy or milky looking, allow the vehicle to stand a few minutes and repeat the procedure.

CAUTION: Do not run a vehicle with foamy fluid for an extended period. This may cause pump damage.

REMOVAL AND INSTALLATION

POWER STEERING PUMP - 4.0L

REMOVAL

- (1) Remove serpentine drive belt, refer to Group 7 Cooling.
- (2) Remove pressure and return hoses from pump and drain the pump.
- (3) Loosen the pump bracket bolt at the engine block.
- (4) Remove 3 pump mounting bolts (Fig. 2) through pulley access holes.
- (5) Tilt pump downward and remove from engine.
- (6) Remove pulley from pump.

INSTALLATION


- (1) Install pulley on pump.
- (2) Install pump on the engine mounting bracket.
- (3) Install 3 pump mounting bolts and tighten to 27 N·m (20 ft. lbs.).
- (4) Tighten pump bracket bolt to 57 N·m (42 ft. lbs.).
- (5) Install the pressure line on the pump and tighten to 28 N·m (21 ft. lbs.).
- (6) Install return hoses on pump.
- (7) Install drive belt, refer to Group 7 Cooling.
- (8) Add power steering fluid, refer to Power Steering Pump Initial Operation.

POWER STEERING PUMP - 4.7L

REMOVAL

- (1) Remove the serpentine drive belt. Refer to Group 7 Cooling.
- (2) Remove the pressure and return hoses from pump and drain pump.

REMOVAL AND INSTALLATION (Continued)

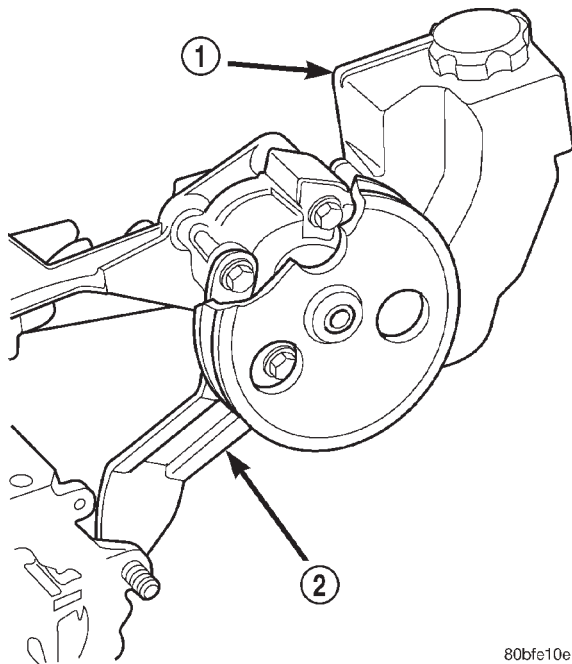


80bfe10e

Fig. 2 PUMP MOUNTING – 4.0L

- 1 – PUMP ASSEMBLY
2 – PUMP BRACKET

- (3) Remove 3 pump mounting bolts through pulley access holes (Fig. 3).
(4) Remove the pump from the vehicle.

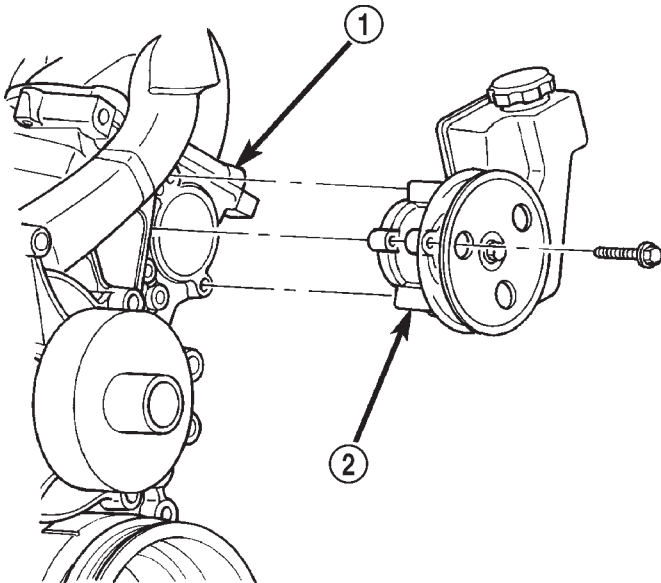

80b89871

Fig. 3 Pump Mounting


- 1 – LEFT CYLINDER HEAD
2 – PUMP

INSTALLATION

- (1) Position the pump on the left cylinder head and install bolts through pulley access holes. Tighten bolts to 40 N·m (30 ft. lbs.).
(2) Install the pressure and return hoses to pump.
(3) Install serpentine drive belt, refer to Group 7 Cooling.
(4) Add power steering fluid. Refer to Power Steering Pump Initial Operation in this section.

DISASSEMBLY AND ASSEMBLY**PUMP PULLEY****DISASSEMBLY**

- (1) Remove pump assembly.
(2) Remove pulley from pump with Puller C-4333 or equivalent puller (Fig. 4).

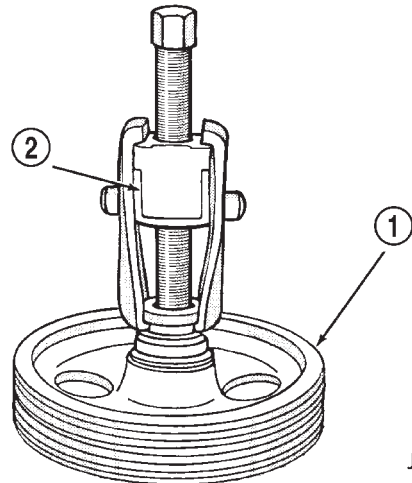

J9319-45

Fig. 4 Pulley Removal

- 1 – POWER STEERING PUMP DRIVE PULLEY
2 – SPECIAL TOOL C-4333

ASSEMBLY

NOTE: The pulley is marked front for installation.

- (1) Replace pulley if bent, cracked, or loose.
(2) Install pulley on pump with Installer C-4063-B or equivalent installer (Fig. 5). The front edge of the pulley hub must be flush with the end of the shaft. Ensure the tool and pulley are aligned with the pump shaft.
(3) Install pump assembly.
(4) With Serpentine Belt, run engine until warm (5 min.) and note any belt chirp. If chirp exists, move pulley outward approximately 0.5 mm (0.020 in.). If noise increases, press on 1.0 mm (0.040 in.). **Be careful that pulley does not contact mounting bolts.**

DISASSEMBLY AND ASSEMBLY (Continued)

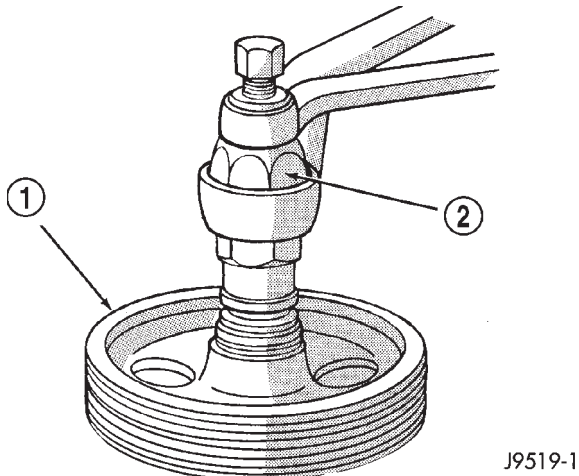


Fig. 5 Pulley Installation

- 1 - POWER STEERING PUMP DRIVE PULLEY
- 2 - SPECIAL TOOL C-4063-B

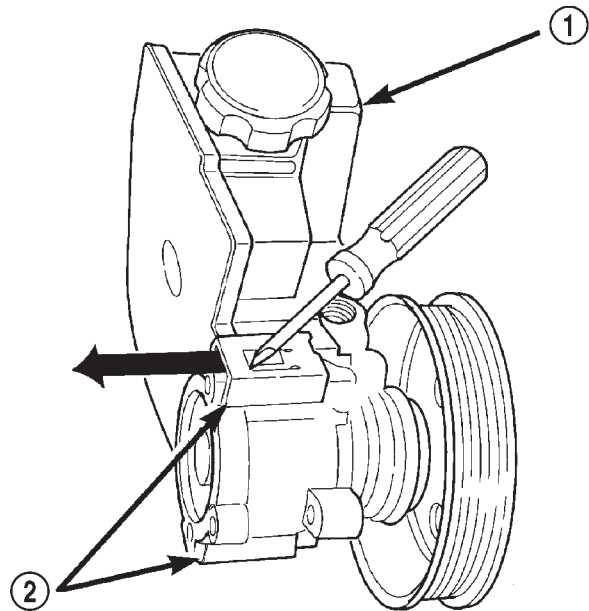


Fig. 6 Pump Reservoir Clips

- 1 - RESERVOIR
- 2 - RETAINING CLIPS

PUMP RESERVOIR

DISASSEMBLY

- (1) Remove power steering pump.
- (2) Clean exterior of pump.
- (3) Clamp the pump body in a soft jaw vice.
- (4) Pry up tab and slide the retaining clips off (Fig. 6).

NOTE: Use new retaining clips for installation.

- (5) Remove fluid reservoir from pump body. Remove and discard O-ring seal.

ASSEMBLY


- (1) Lubricate new O-ring Seal with Mopar Power Steering Fluid or equivalent.

- (2) Install O-ring seal in housing.
- (3) Install reservoir onto housing.
- (4) Slide and tap in **new** reservoir retainer clips until tab locks to housing.
- (5) Install power steering pump.
- (6) Add power steering fluid, refer to Pump Initial Operation.

SPECIFICATIONS

TORQUE CHART


DESCRIPTION	TORQUE
Power Steering Pump	
Bracket Bolt-4.0L	57 N·m (42 ft. lbs.)
Pump Bolts-4.0L	27 N·m (20 ft. lbs.)
Pump Bolts-4.7L	40 N·m (30 ft. lbs.)
Flow Control Valve	75 N·m (55 ft. lbs.)
Pressure Line	20-38 N·m (14-28 ft. lbs.)
Return Line	20-38 N·m (14-28 ft. lbs.)

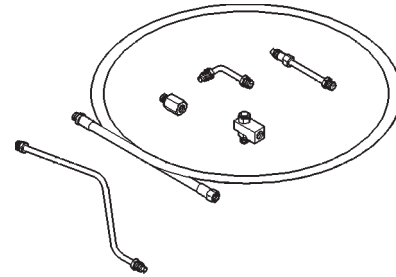


Adapters, Power Steering Flow/Pressure Tester 6893

SPECIAL TOOLS

POWER STEERING PUMP

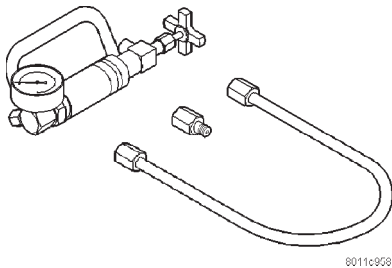


Analyzer Set, Power Steering Flow/Pressure 6815

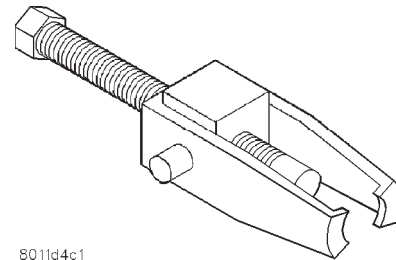

8011d4c1

Puller C-4333

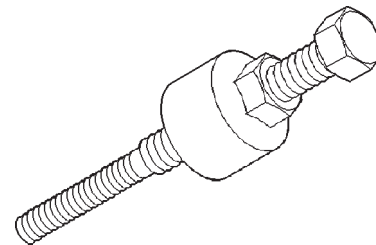

Installer, Power Steering Pulley C-4063B

POWER STEERING GEAR

TABLE OF CONTENTS

	page		page
DESCRIPTION AND OPERATION		RACK PISTON/VALVE ASSEMBLY	16
POWER STEERING GEAR	11	ADJUSTMENTS	
DIAGNOSIS AND TESTING		STEERING GEAR	20
POWER STEERING GEAR LEAKAGE	12	SPECIFICATIONS	
REMOVAL AND INSTALLATION		POWER STEERING GEAR	20
STEERING GEAR	12	TORQUE CHART	20
DISASSEMBLY AND ASSEMBLY		SPECIAL TOOLS	
STUB SHAFT HOUSING	13	POWER STEERING GEAR	21
PITMAN SHAFT/SEALS/BEARINGS	14		

DESCRIPTION AND OPERATION

POWER STEERING GEAR

DESCRIPTION

The power steering gear is a recirculating ball type gear (Fig. 1).

The following gear components can be serviced:

- Pitman Shaft and Cover
- Pitman Shaft Bearings
- Pitman Shaft Oil Seal/Dust Seal
- Stud Shaft Housing with Seal
- O-Rings and Teflon Rings

NOTE: If rack piston assembly is damaged the gear must be replaced.

OPERATION

The gear acts as a rolling thread between the worm shaft and rack piston. The worm shaft is supported by a thrust bearing at the lower end and a bearing assembly at the upper end. When the worm shaft is turned the rack piston moves. The rack piston teeth mesh with the pitman shaft. Turning the worm shaft turns the pitman shaft, which turns the steering linkage.

DESCRIPTION AND OPERATION (Continued)

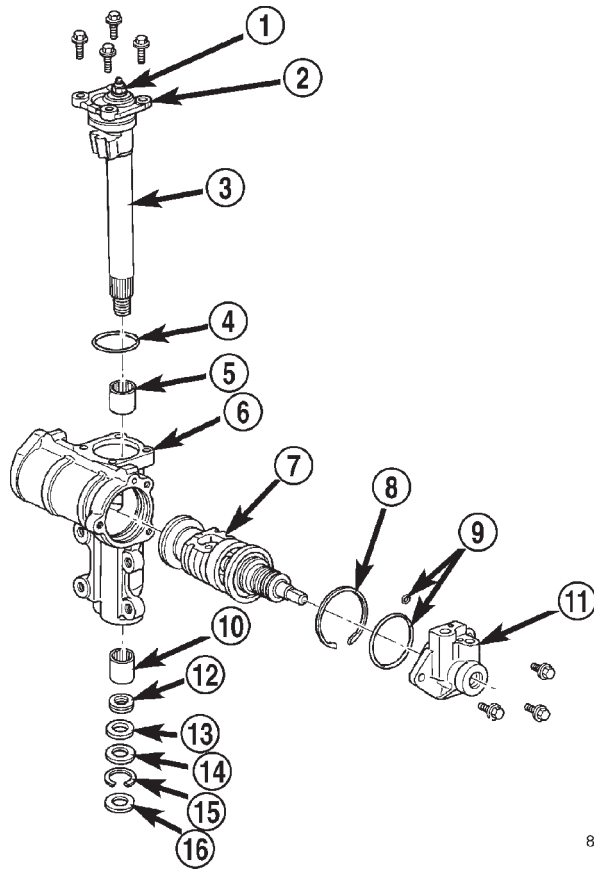



Fig. 1 Recirculating Ball Type Gear

- 1 - ADJUSTER NUT
- 2 - COVER
- 3 - PITMAN SHAFT
- 4 - O-RING
- 5 - BEARING
- 6 - GEAR HOUSING
- 7 - RACK PISTON
- 8 - RETAINING RING
- 9 - O-RING
- 10 - BEARING
- 11 - STUB SHAFT HOUSING
- 12 - PITMAN SHAFT SEAL
- 13 - PLASTIC BACKUP WASHER
- 14 - METAL BACKUP WASHER
- 15 - RETAINING RING
- 16 - DUST SEAL

80b5cb09

DIAGNOSIS AND TESTING

POWER STEERING GEAR LEAKAGE

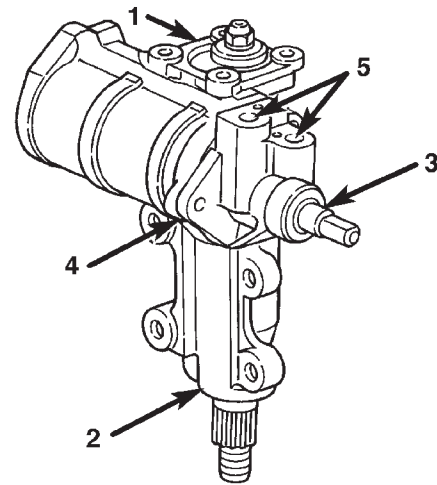

- 1. PITMAN SHAFT COVER O-RING - REPLACE O-RING
- 2. PITMAN SHAFT SEAL - REPLACE SEAL
- 3. STUB SHAFT SEAL - REPLACE STUB SHAFT HOUSING
- 4. STUB SHAFT HOUSING O-RING - REPLACE O-RING
- 5. PRESSURE AND RETURN LINE FITTINGS - TIGHTEN TO SPECIFICATION

80c07227

REMOVAL AND INSTALLATION

STEERING GEAR

REMOVAL

- (1) Place the front wheels in the straight ahead position with the steering wheel centered.
- (2) Remove the air cleaner housing, refer to Group 14 Fuel System.
- (3) Remove and cap the pressure and return lines (Fig. 2) from the steering gear.
- (4) Remove the column coupler shaft bolt (Fig. 2) and remove the shaft from the gear.
- (5) Remove left front wheel and tire assembly.
- (6) Remove pitman arm from gear with Puller C-4150A.
- (7) Remove windshield washer reservoir refer to Group 8 Electrical.
- (8) Remove the steering gear mounting bolts. Remove the steering gear out of the engine compartment (Fig. 3).

INSTALLATION

- (1) Position the steering gear on the frame rail and install the bolts. Tighten the bolts to 108 N·m (80 ft. lbs.) torque.
- (2) Install the pitman arm and tighten nut to 251 N·m (185 ft. lbs.).
- (3) Install windshield washer reservoir refer to Group 8 Electrical.

REMOVAL AND INSTALLATION (Continued)

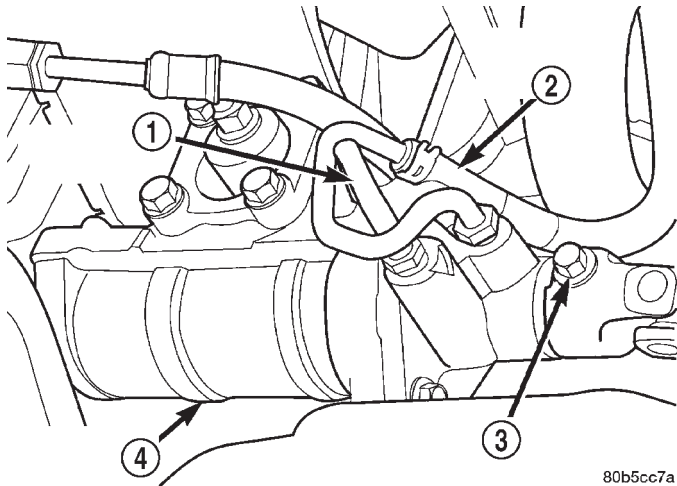


Fig. 2 Pressure And Return Lines

- 1 - PRESSURE LINE
- 2 - RETURN LINE
- 3 - COUPLER BOLT
- 4 - STEERING GEAR

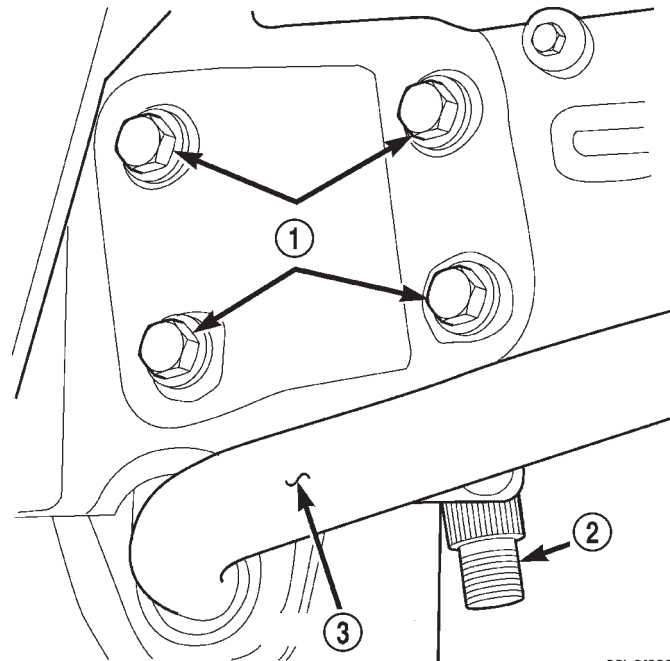


Fig. 3 Steering Gear Mounting

- 1 - MOUNTING BOLTS
- 2 - PITMAN SHAFT
- 3 - STABILIZER BAR

- (4) Install the wheel and tire assembly.
- (5) Install the pressure and return hoses to the steering gear and tighten to 20-38 N·m (14-28 ft. lbs.).
- (6) Install the column coupler shaft.
- (7) Install the air cleaner housing refer to Group 14 Fuel System.

- (8) Fill the power steering pump.

DISASSEMBLY AND ASSEMBLY

STUB SHAFT HOUSING

NOTE: If stub shaft housing, seal or bearing is damaged the housing must be replaced.

DISASSEMBLY

- (1) Remove stub shaft housing bolts (Fig. 4).
- (2) Remove housing from the steering gear (Fig. 5).
- (3) Remove stub shaft housing o-rings (Fig. 6).

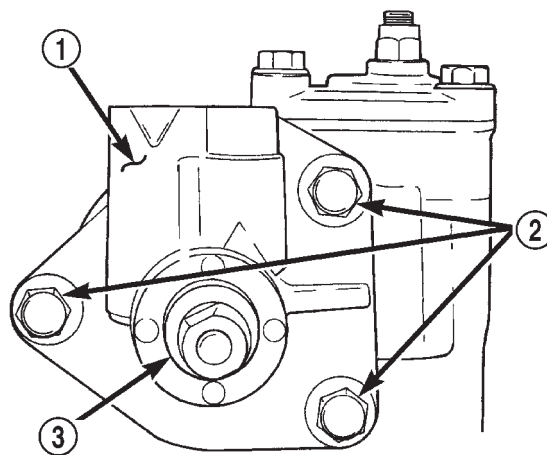


Fig. 4 Stub Shaft Housing

- 1 - STUB SHAFT HOUSING
- 2 - MOUNTING BOLTS
- 3 - STUB SHAFT SEAL


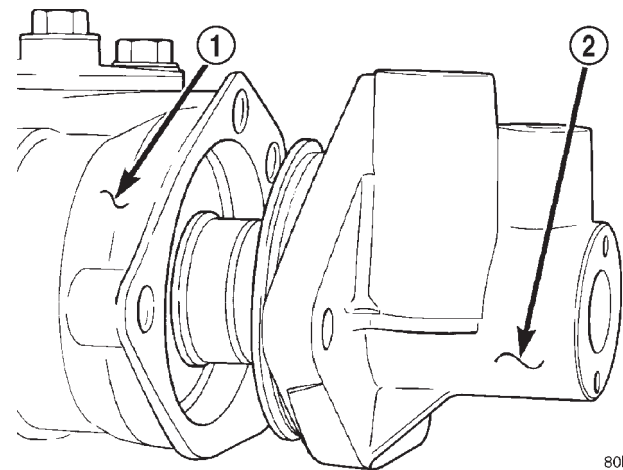


Fig. 5 Housing Removal

- 1 - STEERING GEAR
- 2 - STUB SHAFT HOUSING


DISASSEMBLY AND ASSEMBLY (Continued)

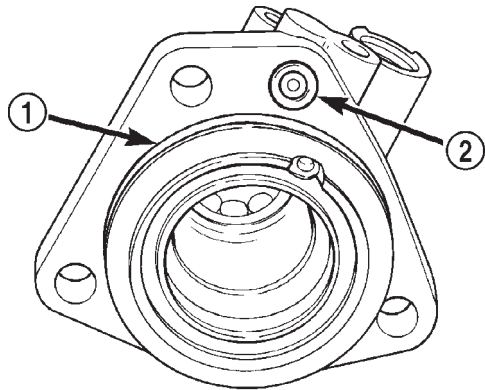

80b4b858

Fig. 6 O-Rings

- 1 - O-RING
2 - O-RING

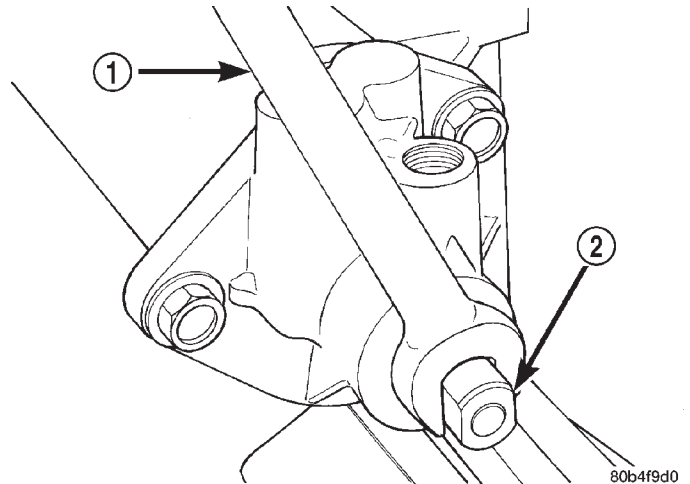

80b4f9d0

Fig. 7 Center Stub Shaft

- 1 - WRENCH
2 - STUB SHAFT

ASSEMBLY


- (1) Grease stub shaft seal with **special grease** supplied with new stub shaft housing.
- (2) Install new stub shaft housing o-rings.
- (3) Install housing on the steering gear.
- (4) Install the housing bolts and tighten to 62 N·m (46 ft. lbs.).

PITMAN SHAFT/SEALS/BEARINGS**DISASSEMBLY**

- (1) Clean exposed end of pitman shaft and housing with a wire brush.
- (2) Rotate the stub shaft with a wrench (Fig. 7) from stop to stop and count the number of turns.
- (3) Center the stub shaft by rotating it from the stop 1/2 of the total amount of turns.

NOTE: The pitman shaft will not clear the housing if it is not centered.

- (4) Remove pitman shaft cover bolts and remove the shaft assembly (Fig. 8).
- (5) Remove pitman shaft cover o-ring.
- (6) Remove pitman shaft dust seal from the housing with a Puller 7794-A and Slide Hammer C-637 (Fig. 9).
- (7) Remove the pitman shaft oil seal retaining ring with snap ring pliers (Fig. 10).
- (8) Remove oil seal metal backup washer then plastic backup washer from the housing (Fig. 11).
- (9) Remove pitman shaft oil seal from the housing with a Puller 7794-A and Slide Hammer C-637 (Fig. 12).

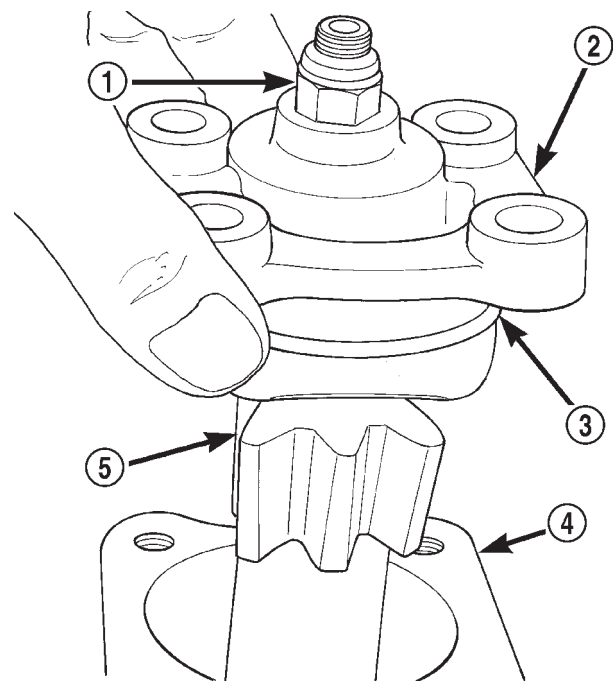

80b4f9d1

Fig. 8 Cover and Pitman Shaft

- 1 - ADJUSTER NUT
2 - PITMAN SHAFT COVER
3 - O-RING
4 - GEAR HOUSING
5 - PITMAN SHAFT

DISASSEMBLY AND ASSEMBLY (Continued)

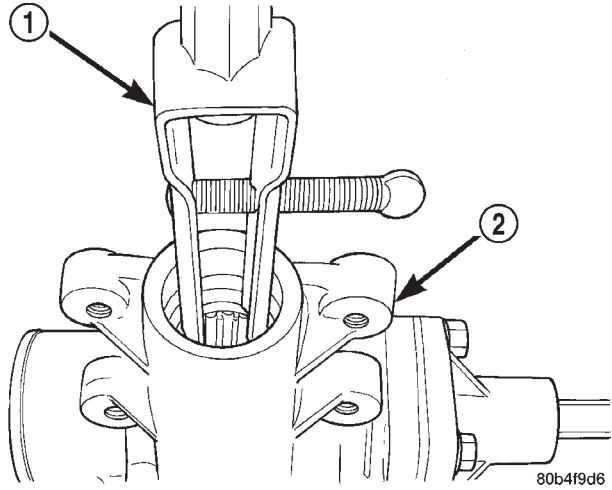


Fig. 9 Dust Seal Removal

- 1 - PULLER
- 2 - STEERING GEAR

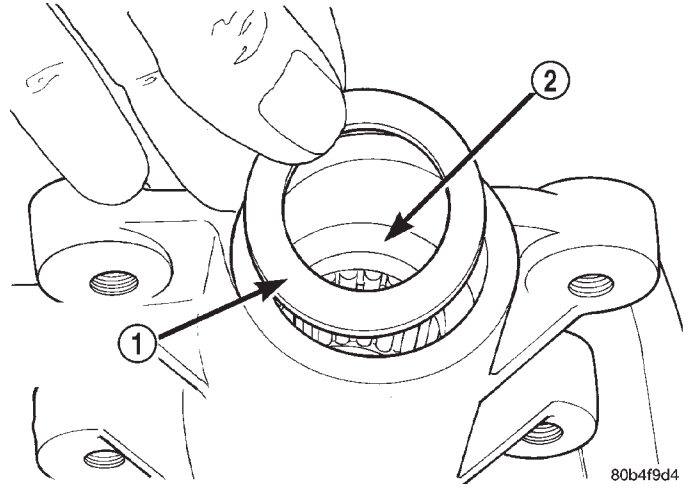


Fig. 11 Backup Washers

- 1 - METAL BACK UP WASHER
- 2 - PLASTIC BACK UP WASHER

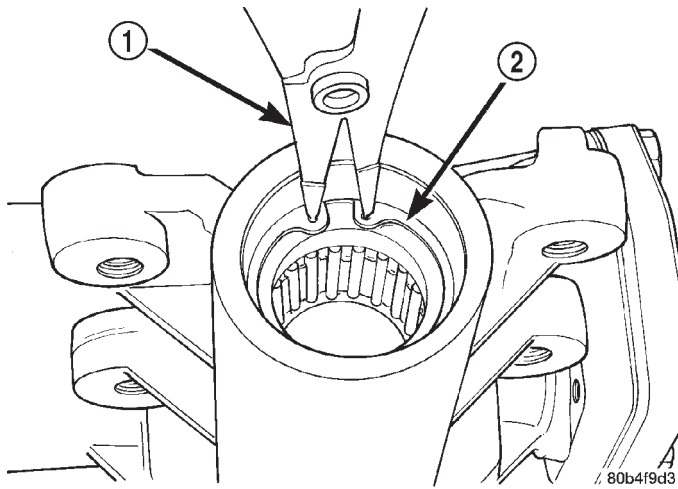


Fig. 10 Oil Seal Retaining Ring

- 1 - SNAP RING PLIERS
- 2 - RETAINING RING


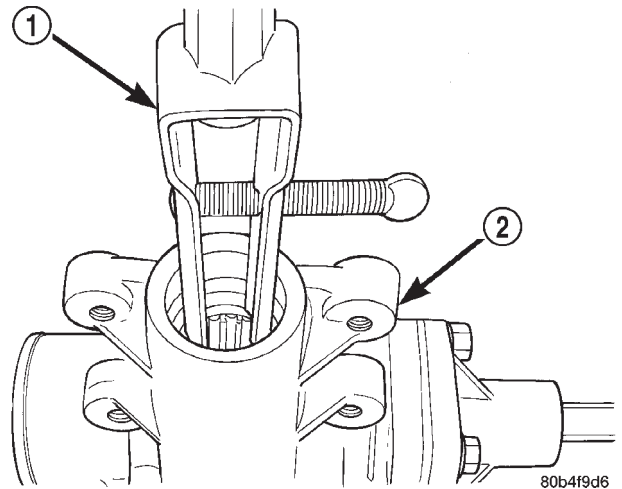


Fig. 12 Oil Seal Removal

- 1 - PULLER
- 2 - STEERING GEAR

DISASSEMBLY AND ASSEMBLY (Continued)

(10) Drop Driver 8277 through the top bearing and align the driver up with the lower bearing. (Fig. 13). Install Handle C-4171 into the driver and remove the lower bearing.

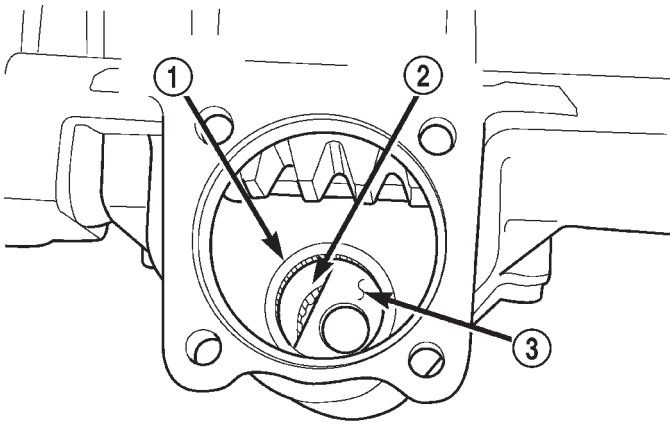

80b5cb4f

Fig. 13 Bearing Driver


- 1 - UPPER BEARING
- 2 - LOWER BEARING
- 3 - DRIVER

(11) Turn the gear over and remove the upper bearing with Driver 8277 and Handle C-4171.

ASSEMBLY

(1) Install upper pitman shaft bearing, with Driver 8294 and Handle C-4171 (Fig. 14). Drive bearing into housing until the driver bottoms out.

NOTE: Install upper pitman shaft bearing with the part number/letters facing the driver.

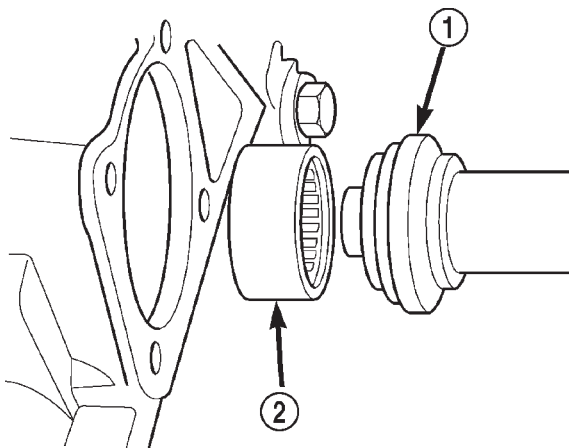


80b6b1a5

Fig. 14 Upper Pitman Shaft Bearing

- 1 - DRIVER
- 2 - UPPER BEARING

(2) Install lower pitman shaft bearing with the other side Driver 8294 and Handle C-4171 (Fig. 15). Drive bearing into housing until the bearing shoulder is seated against the housing.

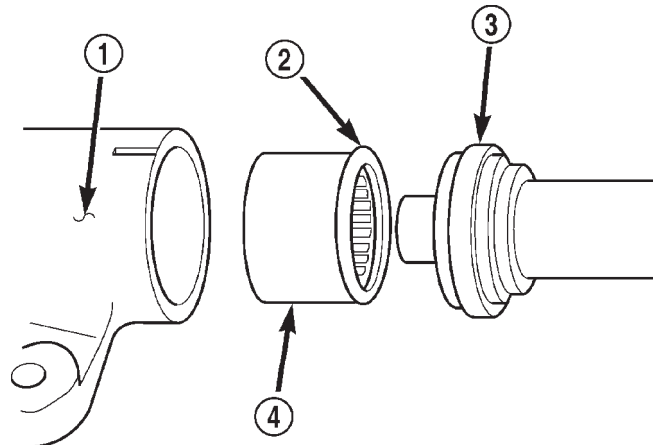

80b6b1a6

Fig. 15 Lower Pitman Shaft Bearing

- 1 - STEERING GEAR
- 2 - BEARING SHOULDER
- 3 - DRIVER
- 4 - LOWER BEARING

(3) Coat the oil seal and backup washers with **special grease** supplied with the new seal.

(4) Install the oil seal with Driver 8294 and Handle C-4171.

(5) Install plastic backup washer.

NOTE: The plastic backup washer has a lip on the inside diameter that faces down towards the oil seal.

(6) Install metal backup washer.

(7) Install the retainer ring with snap ring pliers.

(8) Coat the dust seal with **special grease** supplied with the new seal.

(9) Install dust seal with Driver 8294 and Handle C-4171.

(10) Install new pitman shaft cover o-ring.

(11) Install pitman shaft assembly into the housing.

(12) Install cover bolts and tighten to 62 N·m (46 ft. lbs.).

(13) Perform over-center rotation torque adjustment.

RACK PISTON/VALVE ASSEMBLY

DISASSEMBLY

(1) Clean exposed end of pitman shaft and housing with a wire brush.

(2) Rotate the stub shaft with a wrench (Fig. 16) from stop to stop and count the number of turns.

DISASSEMBLY AND ASSEMBLY (Continued)

(3) Center the stub shaft by rotating it from the stop 1/2 of the total amount of turns.

NOTE: The pitman shaft will not clear the housing if it is not centered.

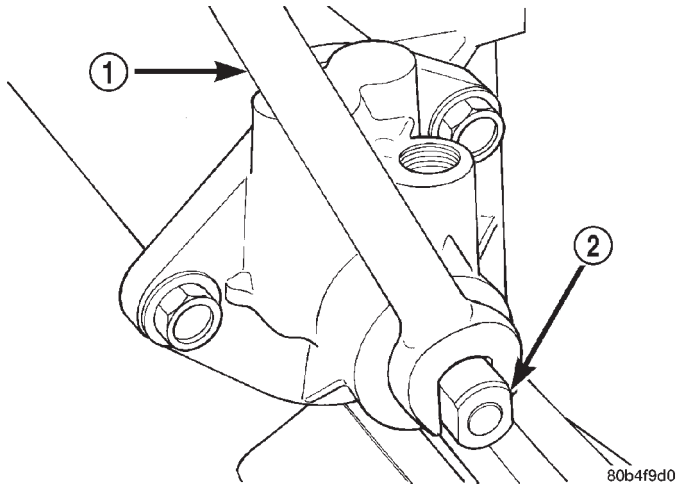


Fig. 16 Center Stub Shaft

- 1 - WRENCH
- 2 - STUB SHAFT

(4) Remove pitman shaft cover bolts and remove the shaft assembly (Fig. 17).

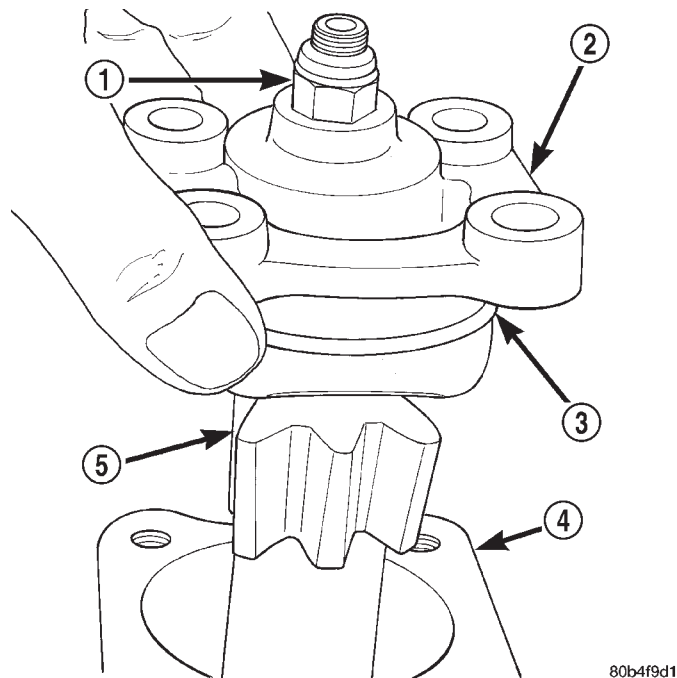


Fig. 17 Cover and Pitman Shaft

- 1 - ADJUSTER NUT
- 2 - PITMAN SHAFT COVER
- 3 - O-RING
- 4 - GEAR HOUSING
- 5 - PITMAN SHAFT

(5) Remove the pitman shaft cover o-ring.
 (6) Remove stub shaft housing bolts (Fig. 18).

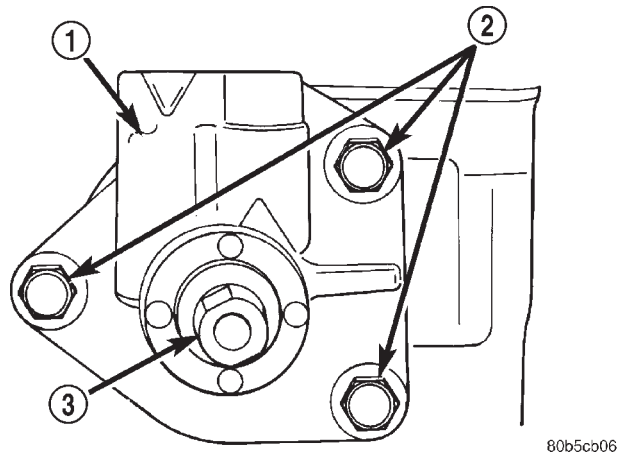


Fig. 18 Stub Shaft Housing

- 1 - STUB SHAFT HOUSING
- 2 - MOUNTING BOLTS
- 3 - STUB SHAFT

(7) Remove the housing from the stub shaft (Fig. 19).


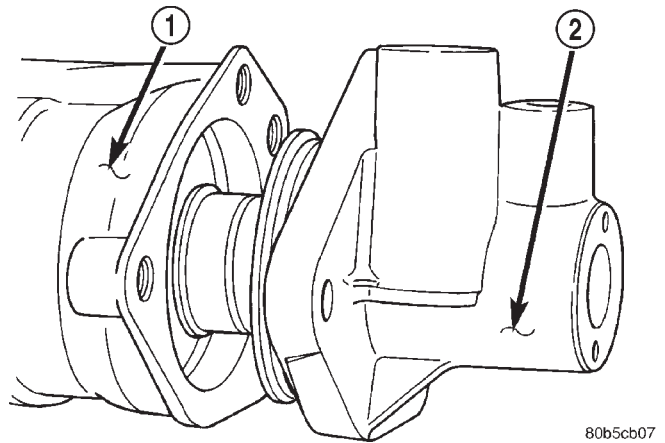


Fig. 19 Housing Removal

- 1 - STEERING GEAR
- 2 - STUB SHAFT HOUSING

DISASSEMBLY AND ASSEMBLY (Continued)


(8) Remove stub shaft housing o-rings (Fig. 20).

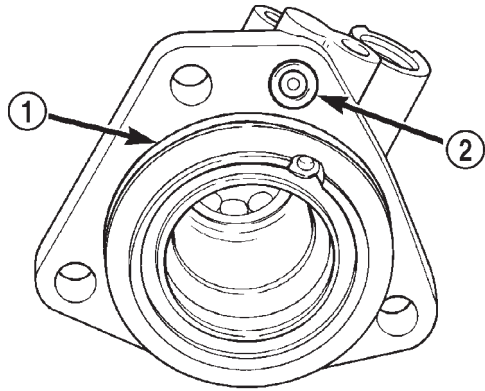

80b4b858

Fig. 20 O-Rings

- 1 - O-RING
- 2 - O-RING

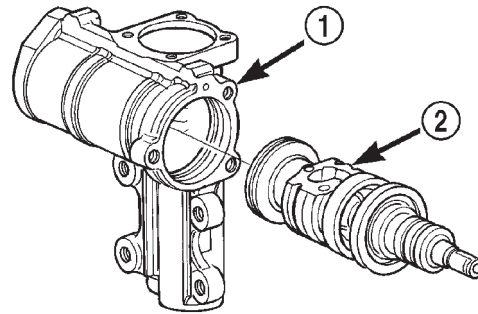


80b4f9d7

Fig. 22 Rack Piston/Valve Assembly

- 1 - GEAR HOUSING
- 2 - RACK PISTON VALVE ASSEMBLY

(9) Remove the rack piston/valve assembly retaining ring with snap ring pliers (Fig. 21).

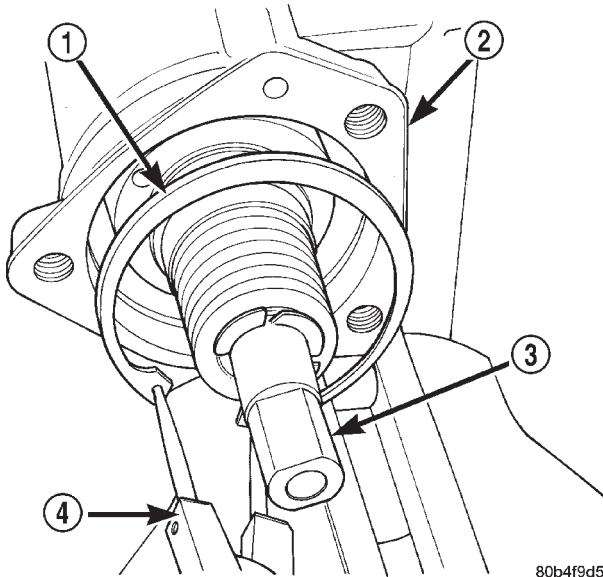

80b4f9d5

Fig. 21 Retaining Ring


- 1 - RETAINING RING
- 2 - GEAR HOUSING
- 3 - STUB SHAFT
- 4 - SNAP RING PLIERS

(10) Pull the rack piston/valve assembly out of the gear housing (Fig. 22).

NOTE: If the rack piston is damage the gear assembly must be replaced.

(11) Remove teflon rings and o-ring (Fig. 23) from the rack piston/valve assembly.

CAUTION: The rack piston teflon ring and o-ring must be replaced whenever the assembly is removed from the housing.

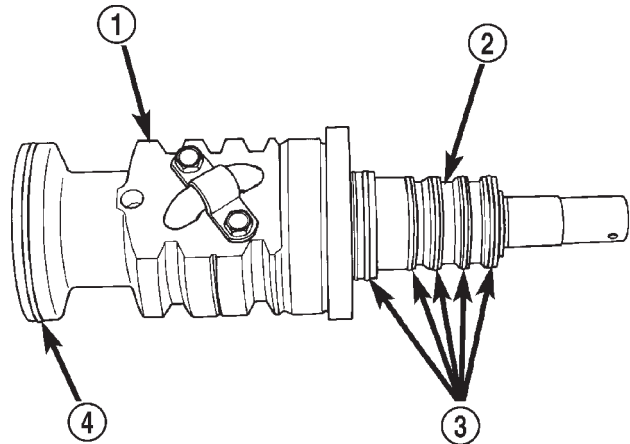

80b6b1a3

Fig. 23 Teflon Rings And O-Ring

- 1 - RACK PISTON
- 2 - VALVE
- 3 - TEFLON RINGS
- 4 - TEFLON AND O-RING

(12) Remove pitman shaft dust seal from the housing with Puller 7794-A and Slide Hammer C-637 (Fig. 24).

(13) Remove pitman shaft oil seal retaining ring from the housing with snap ring pliers (Fig. 25).

(14) Remove metal backup washer then plastic backup washer from the housing (Fig. 26).

(15) Remove oil seal from the housing with a Puller 7794-A and Slide Hammer C-637 (Fig. 27).

DISASSEMBLY AND ASSEMBLY (Continued)

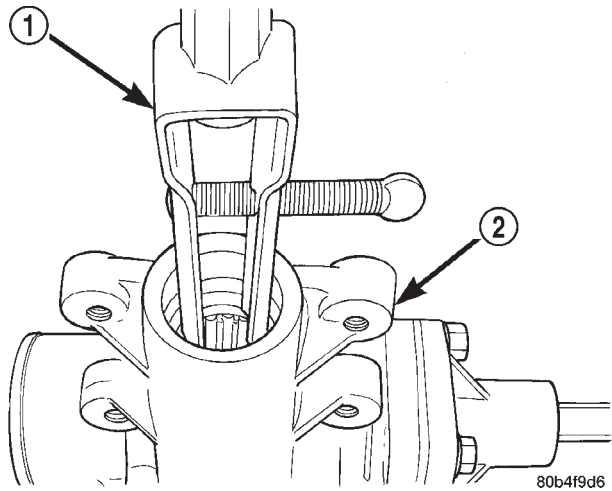


Fig. 24 Dust Seal

- 1 - PULLER
- 2 - STEERING GEAR

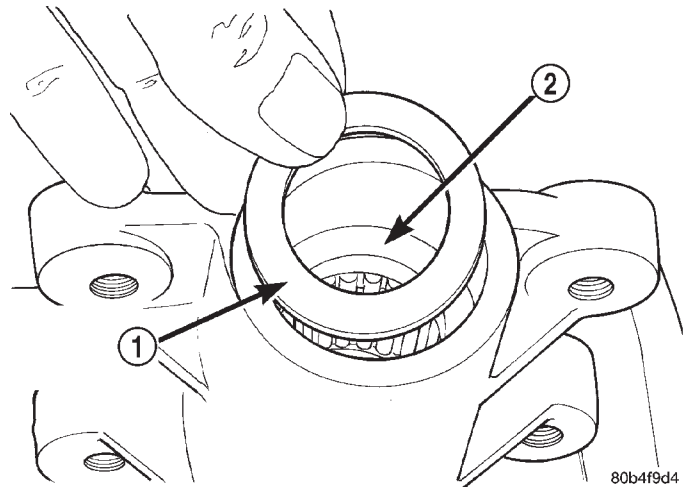


Fig. 26 Oil Seal Backup Washers

- 1 - METAL BACK UP WASHER
- 2 - PLASTIC BACK UP WASHER

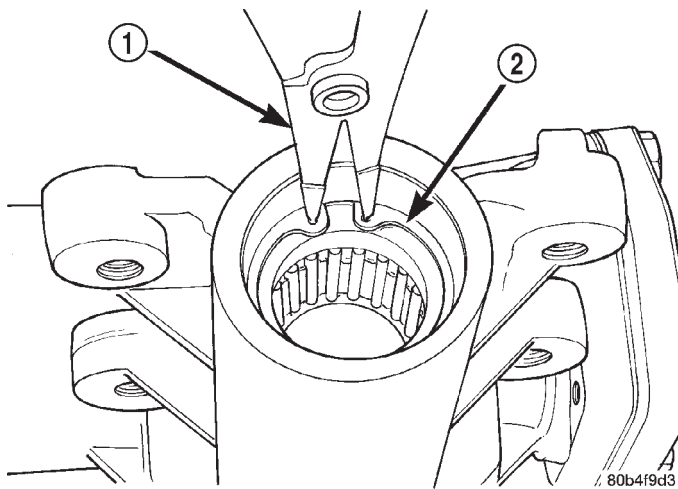


Fig. 25 Oil Seal Retaining Ring

- 1 - SNAP RING PLIERS
- 2 - RETAINING RING

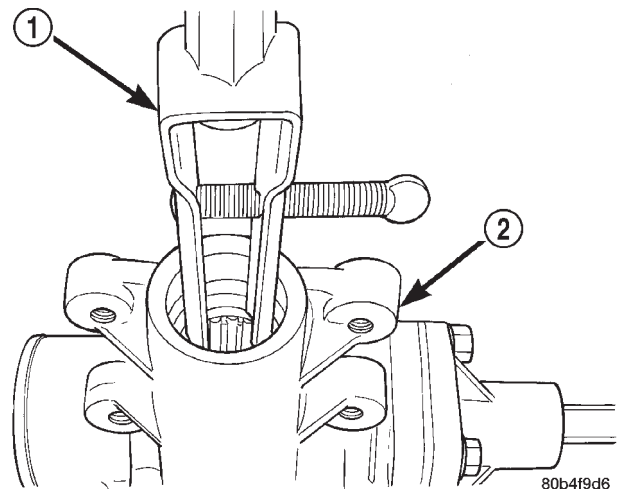


Fig. 27 Oil Seal Removal

- 1 - PULLER
- 2 - STEERING GEAR

ASSEMBLY

(1) Coat the oil seal and backup washers with **special grease** supplied with the new seal.

(2) Install the oil seal with Driver 8294 and Handle C-4171.

(3) Install plastic backup washer.

NOTE: The plastic backup washer has a lip on the inside diameter that faces down towards the oil seal.

(4) Install metal backup washer.

(5) Install the retainer ring with snap ring pliers.

(6) Coat the dust seal with **special grease** supplied with the new seal.

(7) Install dust seal with Driver 8294 and Handle C-4171.

(8) Lubricate new o-ring and teflon rings with power steering fluid and install on the rack piston/valve assembly.

(9) Lubricate the rack piston/valve assembly with power steering fluid.

(10) Slide the assembly into the gear housing.

(11) Install new stub shaft housing o-rings and install the housing. Tighten the housing bolts to 62 N·m (46 ft. lbs.).

(12) Install new o-ring on the pitman shaft cover.

(13) Install the pitman shaft into the gear housing.

(14) Install the pitman shaft cover bolts and tighten to 62 N·m (46 ft. lbs.).

(15) Perform over-center rotation torque adjustment.

ADJUSTMENTS

STEERING GEAR

NOTE: Adjusting the steering gear in the vehicle is not recommended. Remove gear from the vehicle and drain the fluid. Then mount gear in a vise to perform adjustments.

OVER-CENTER

- (1) Rotate the stub shaft with Socket 8343 from stop to stop and count the number of turns.
- (2) Center the stub shaft by rotating it from the stop 1/2 of the total amount of turns.
- (3) Place torque wrench and Socket 8343 in a vertical position on the stub shaft. Rotate the wrench 45 degrees each side of the center and record the highest rotational torque in this range (Fig. 28). This is the Over-Center Rotating Torque.

NOTE: The stub shaft must rotate smoothly without sticking or binding.

- (4) Rotate the stub shaft between 90° and 180° to the left of center and record the left off-center preload. Repeat this to the right of center and record the right off-center preload. The average of these two recorded readings is the Preload Rotating Torque.
- (5) The Over-Center Rotating Torque should be 0.45-0.80 N·m (4-7 in. lbs.) **higher** than the Preload Rotating Torque.
- (6) If an adjustment to the Over-Center Rotating Torque is necessary, first loosen the adjuster lock nut. Then turn the pitman shaft adjuster screw back (COUNTERCLOCKWISE) until fully extended, then turn back in (CLOCKWISE) one full turn.
- (7) Remeasure Over-Center Rotating Torque. If necessary turn the adjuster screw and repeat measurement until correct Over-Center Rotating Torque is reached.

NOTE: To increase the Over-Center Rotating Torque turn the screw **CLOCKWISE**.

- (8) Prevent the adjuster screw from turning while tightening adjuster lock nut. Tighten the adjuster lock nut to 37-52 N·m (27-38 ft. lbs.).

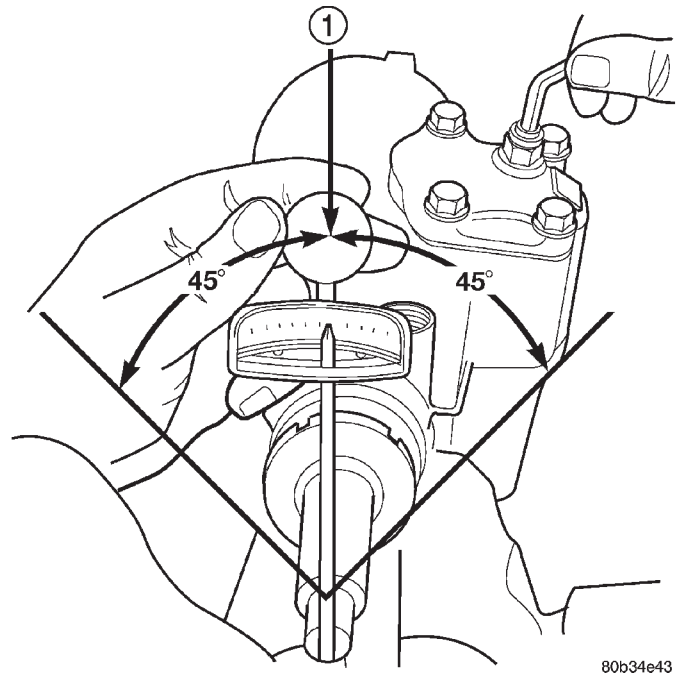


Fig. 28 Checking Over-center Rotation Torque

1 - CENTER

SPECIFICATIONS

POWER STEERING GEAR

Steering Gear

Type Recirculating Ball
 Overall Ratio 12.7:1

Pitman Shaft Overcenter Drag

New Gear (under 400 miles) 0.45-0.80 N·m
 (4-7 in. lbs.) + Worm Shaft Preload
 Used Gear (over 400 miles) 0.5-0.6 N·m
 (4-5 in. lbs.) + Worm Shaft Preload

TORQUE CHART

DESCRIPTION


TORQUE

Power Steering Gear


Adjustment Screw Locknut 37-52 N·m
 (27-38 ft. lbs.)
 Gear to Frame Bolts 108 N·m (80 ft. lbs.)
 Pitman Shaft Nut 251 N·m (185 ft. lbs.)
 Pitman Shaft Cover Bolts ... 62 N·m (46 ft. lbs.)
 Stub Shaft Housing Bolts ... 62 N·m (46 ft. lbs.)
 Pressure Line 20-38 N·m (14-28 ft. lbs.)
 Return Line 20-38 N·m (14-28 ft. lbs.)

SPECIAL TOOLS


POWER STEERING GEAR

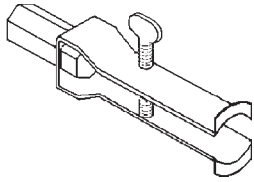


Puller Seal 7794-A

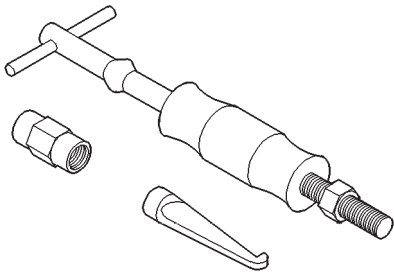


Slide Hammer C-637

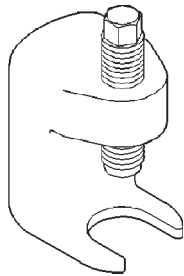


Remover, Pitman Arm C-4150A

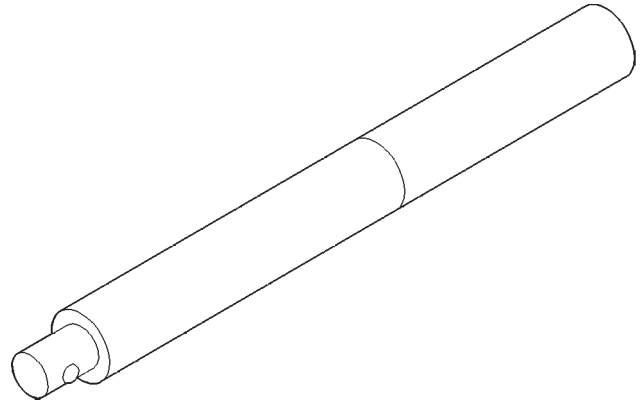


Handle C-4171

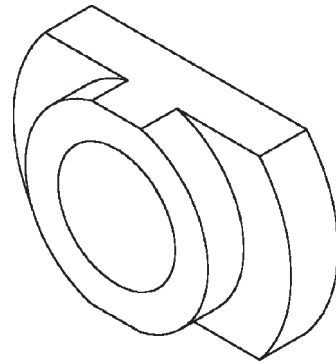

Driver 8277

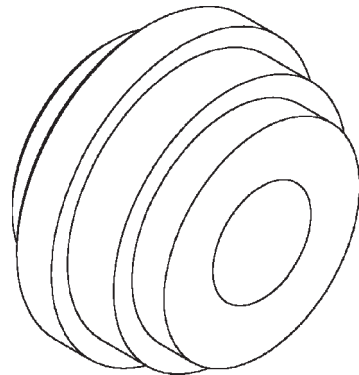

Driver 8294

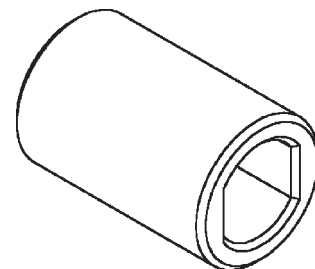

Socket 8343

STEERING LINKAGE

TABLE OF CONTENTS

	page		page
DESCRIPTION AND OPERATION		PITMAN ARM.....	23
STEERING LINKAGE.....	22	DRAG LINK.....	24
TIE ROD ENDS.....	22	STEERING DAMPER.....	24
PITMAN ARM.....	22	SPECIFICATIONS	
DRAG LINK AND ENDS.....	22	TORQUE CHART.....	24
STEERING DAMPER.....	23	SPECIAL TOOLS	
REMOVAL AND INSTALLATION		STEERING LINKAGE.....	25
TIE ROD.....	23		

DESCRIPTION AND OPERATION

STEERING LINKAGE

DESCRIPTION

The steering linkage consists of a pitman arm, drag link, tie rod, and steering dampener (Fig. 1). An adjustment sleeve on the tie rod is used to set wheel toe position. The sleeve on the drag link is used for steering wheel centering.

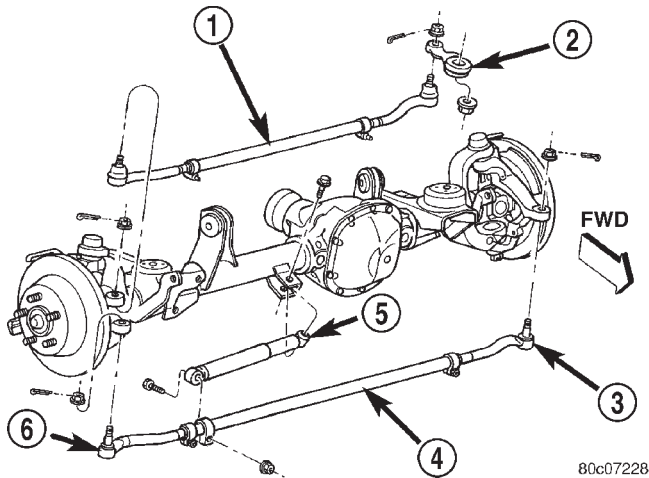


Fig. 1 Steering Linkage

- 1 - DRAG LINK
- 2 - PITMAN ARM
- 3 - TIE ROD END
- 4 - TIE ROD
- 5 - DAMPER
- 6 - TIE ROD END

CAUTION: If any steering components are replaced or serviced an alignment must be performed, to ensure the vehicle meets all alignment specifications.

CAUTION: Components attached with a nut and cotter pin must be torqued to specification. Then if the slot in the nut does not line up with the cotter pin hole, tighten nut until it is aligned. Never loosen the nut to align the cotter pin hole.

TIE ROD ENDS

DESCRIPTION

The ends are forged, with a lubed for life ball socket.

OPERATION

The tie rod ends connect the drag link to the wheel assembly. The tie rod provides toe alignment and transfers steering input from the drag link to the wheels.

PITMAN ARM

DESCRIPTION

The pitman arm is attached at one end of the steering gear's sector shaft. The other end is connected to the drag link.

OPERATION

The pitman arm transfers rotary motion into side to side motion.

DRAG LINK AND ENDS

DESCRIPTION

The drag link and ends are comprised of two forged ends connected by a steel adjusting tube. The drag link connects the steering gear pitman arm to the steering knuckle. The larger offset end is attached to the pitman arm.

DESCRIPTION AND OPERATION (Continued)

OPERATION

The sleeve is used for steering wheel centering.

STEERING DAMPER

DESCRIPTION

The damper is mounted to the axle housing and the tie rod end. The damper consists of steel tube shock absorber with a permanent bushed end.

OPERATION

The steering damper provides steering system damping.

REMOVAL AND INSTALLATION

TIE ROD

REMOVAL

- (1) Raise and support the vehicle.
- (2) Remove wheel and tire assemblies.
- (3) Remove the damper nut from the tie rod clamp (Fig. 2).
- (4) Remove the damper from the tie rod.
- (5) Remove the cotter pins and nuts from the tie rod ends at the steering knuckles (Fig. 2).
- (6) Remove the tie rod ends from the steering knuckles with Puller C-3894-A..
- (7) Loosen the adjustment sleeve clamp bolts and unscrew the tie rod ends from the sleeve.

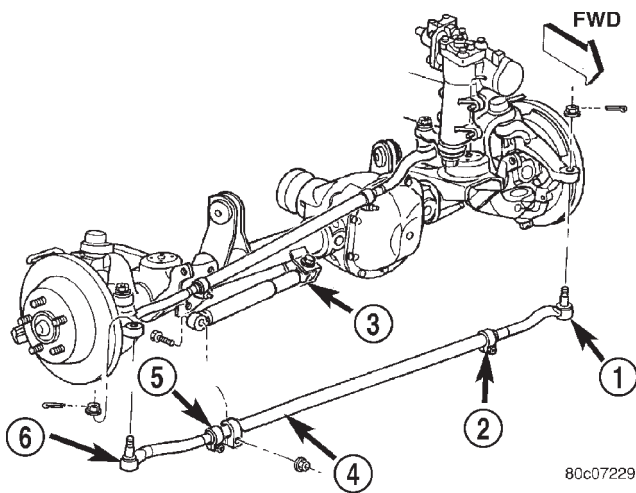


Fig. 2 Tie Rod Assembly

- 1 - TIE ROD END
- 2 - CLAMP
- 3 - DAMPER
- 4 - TIE ROD
- 5 - CLAMP
- 6 - TIE ROD END


INSTALLATION

- (1) Screw the tie rod ends into the adjustment sleeve.
- (2) Install the tie rod on the steering knuckles and install the nuts.
- (3) Tighten the nuts to 47 N·m (35 ft. lbs.). Install new cotter pins and bend end 60°.
- (4) Position the adjustment sleeve clamp bolts to their original location and tighten to 41 N·m (30 ft. lbs.).
- (5) Install the damper on the tie rod and install the nut.
- (6) Tighten the nut to 41 N·m (30 ft. lbs.). Install new cotter pins and bend end 60°.
- (7) Install wheel and tire assemblies.
- (8) Remove support and lower the vehicle.
- (9) Perform toe position adjustment.

PITMAN ARM

REMOVAL

- (1) Remove the cotter pin and nut from the drag link at the pitman arm (Fig. 3).
- (2) Remove the drag link ball stud from the pitman arm with a puller.
- (3) Remove the nut and washer from the steering gear shaft. Mark the pitman shaft and pitman arm for installation reference. Remove the pitman arm from steering gear with Puller C-4150A.

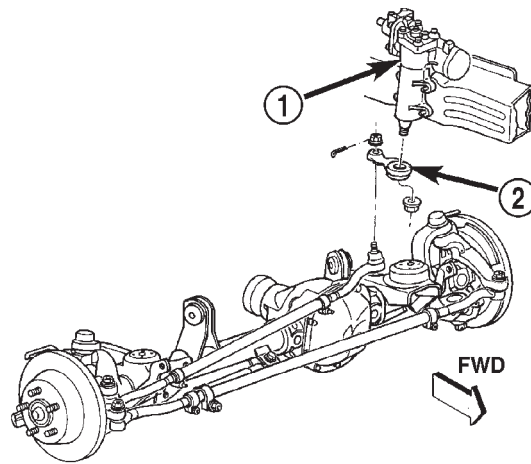

80c0722a

Fig. 3 Pitman Arm

- 1 - STEERING GEAR
- 2 - PITMAN ARM

INSTALLATION

- (1) Align and install the pitman arm on steering gear shaft.
- (2) Install the washer and nut on the shaft and tighten the nut to 251 N·m (185 ft. lbs.).

REMOVAL AND INSTALLATION (Continued)

(3) Install drag link ball stud to pitman arm. Install nut and tighten to 88 N·m (65 ft. lbs.). Install a new cotter pin.

DRAG LINK

REMOVAL

- (1) Raise and support the vehicle.
- (2) Remove right wheel and tire assembly.
- (3) Remove the cotter pins and nuts at the right steering knuckle and pitman arm (Fig. 4).
- (4) Remove the drag link from the steering knuckle and pitman arm Puller C-3894-A.
- (5) Loosen adjustment sleeve clamp bolts and unscrew the tie rod ends from the adjustment sleeve.

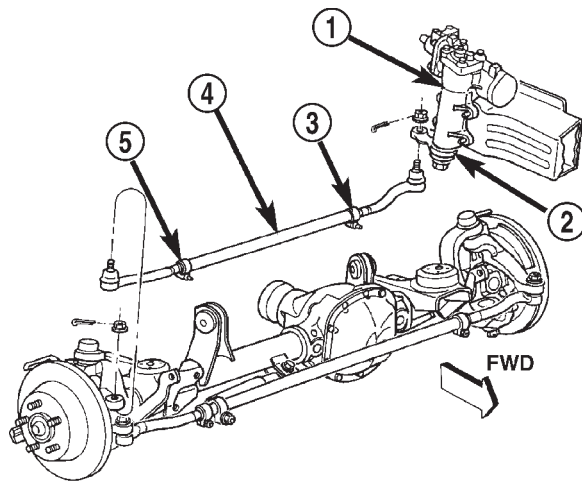


Fig. 4 Drag Link Assembly

- 1 - STEERING GEAR
- 2 - PITMAN ARM
- 3 - CLAMP
- 4 - DRAG LINK
- 5 - CLAMP

80c0722c


INSTALLATION

- (1) Screw the tie rod ends into the adjustment sleeve.
- (2) Install the drag link onto the right steering knuckle and pitman arm.
- (3) Tighten the nut at the steering knuckle to 47 N·m (35 ft. lbs.). Tighten the pitman nut to 88 N·m (65 ft. lbs.). Install new cotter pins.
- (4) Position clamp bolts to their original position and tighten to 41 N·m (30 ft. lbs.).
- (5) Install right wheel and tire assembly.
- (6) Remove support and lower the vehicle.
- (7) Center the steering wheel.

STEERING DAMPER

REMOVAL

- (1) Remove the nut from the ball stud at the tie rod.
- (2) Remove the steering damper from the tie rod.
- (3) Remove the steering damper nut and bolt from the axle bracket (Fig. 5).

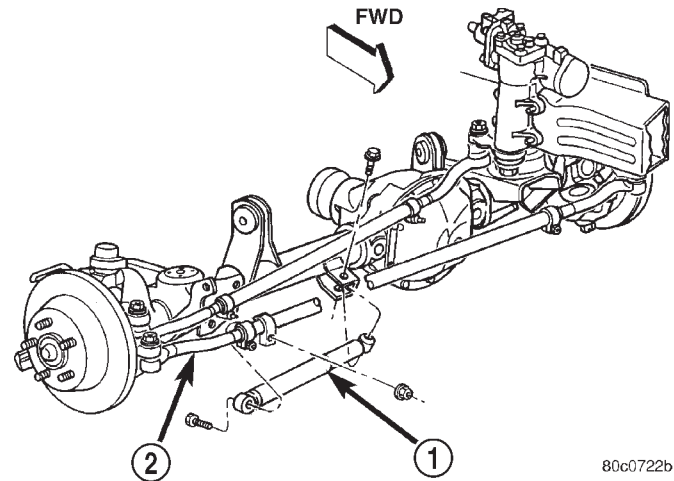

80c0722b

Fig. 5 Steering Damper

- 1 - DAMPER
- 2 - TIE ROD

INSTALLATION

- (1) Install the steering damper to the axle bracket and tie rod.
- (2) Install the steering damper bolt in the axle bracket and tighten bolt to 88 N·m (65 ft. lbs.).
- (3) Install the nut at the tie rod and tighten to 41 N·m (30 ft. lbs.).


SPECIFICATIONS

TORQUE CHART


DESCRIPTION	TORQUE
Pitman Arm	
Shaft Nut	251 N·m (185 ft. lbs.)
Drag Link	
Pitman Arm Nut	88 N·m (65 ft. lbs.)
Knuckle Nut	47 N·m (35 ft. lbs.)
Clamp Nuts	41 N·m (30 ft. lbs.)
Tie Rod	
Knuckle Nut	47 N·m (35 ft. lbs.)
Clamp Nuts	41 N·m (30 ft. lbs.)
Steering Damper	
Axle Bolt	88 N·m (65 ft. lbs.)
Tie Rod Nut	41 N·m (30 ft. lbs.)

SPECIAL TOOLS

STEERING LINKAGE

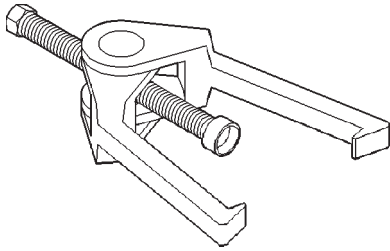

Puller C-3894-A

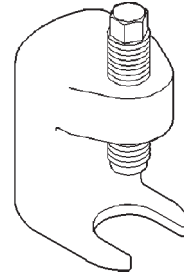

Remover Pitman C-4150A

STEERING COLUMN

TABLE OF CONTENTS


	page		page
DESCRIPTION AND OPERATION		SPECIFICATIONS	
STEERING COLUMN	26	TORQUE CHART	30
REMOVAL AND INSTALLATION		SPECIAL TOOLS	
STEERING COLUMN	26	STEERING COLUMN	30

DESCRIPTION AND OPERATION

STEERING COLUMN

DESCRIPTION

The tilt column (Fig. 1) has been designed to be serviced as an assembly, less the wiring, switches, shrouds, steering wheel, etc. Most steering column components can be serviced without removing the steering column from the vehicle.

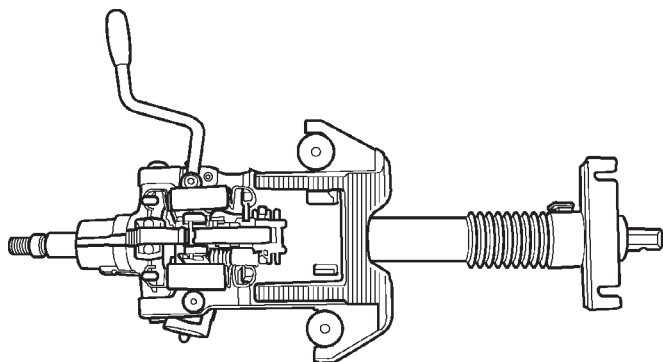

80b6f0a2

Fig. 1 Steering Column

SERVICE WARNINGS AND CAUTIONS

To service the steering wheel, switches or airbag, refer to Group 8M and follow all WARNINGS and CAUTIONS.

WARNING: THE AIRBAG SYSTEM IS A SENSITIVE, COMPLEX ELECTRO-MECHANICAL UNIT. BEFORE ATTEMPTING TO DIAGNOSE, REMOVE OR INSTALL THE AIRBAG SYSTEM COMPONENTS YOU MUST FIRST DISCONNECT AND ISOLATE THE BATTERY NEGATIVE (GROUND) CABLE. THEN WAIT TWO MINUTES FOR THE SYSTEM CAPACITOR TO DISCHARGE. FAILURE TO DO SO COULD RESULT IN ACCIDENTAL DEPLOYMENT OF THE AIRBAG AND POSSIBLE PERSONAL INJURY. THE FASTENERS, SCREWS, AND BOLTS, ORIGINALLY USED FOR

THE AIRBAG COMPONENTS, HAVE SPECIAL COATINGS AND ARE SPECIFICALLY DESIGNED FOR THE AIRBAG SYSTEM. THEY MUST NEVER BE REPLACED WITH ANY SUBSTITUTES. ANYTIME A NEW FASTENER IS NEEDED, REPLACE WITH THE CORRECT FASTENERS PROVIDED IN THE SERVICE PACKAGE OR FASTENERS LISTED IN THE PARTS BOOKS.

CAUTION: Safety goggles should be worn at all times when working on steering columns.

REMOVAL AND INSTALLATION

STEERING COLUMN

WARNING: BEFORE SERVICING THE STEERING COLUMN THE AIRBAG SYSTEM MUST BE DISARMED. FAILURE TO DO SO MAY RESULT IN ACCIDENTAL DEPLOYMENT OF THE AIRBAG AND POSSIBLE PERSONAL INJURY. REFER TO GROUP 8M RESTRAINT SYSTEMS FOR SERVICE PROCEDURES.

REMOVAL

- (1) Position front wheels straight ahead.
- (2) Disconnect and isolate the negative (ground) cable from the battery.
- (3) Remove the airbag, refer to Group 8M Restraint Systems for service procedures.
- (4) Remove the steering wheel nut and remove wheel with Puller C-3894-A (Fig. 2).

NOTE: Ensure the puller jaws are seated in the pockets (Fig. 3) of the steering wheel armature.

- (5) Remove the cluster bezel by pulling it from the instrument panel (Fig. 4).
- (6) Remove the knee blocker cover (Fig. 5), refer to Group 8E Instrument Panel Systems.
- (7) Remove the lower steering column shroud mounting screw (Fig. 6).

REMOVAL AND INSTALLATION (Continued)

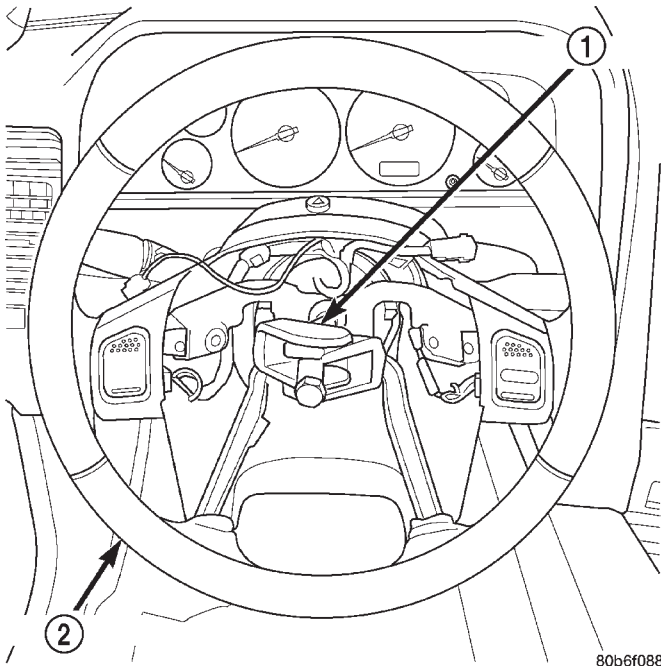


Fig. 2 Steering Wheel Puller

- 1 - PULLER
- 2 - STEERING WHEEL

80b6f088


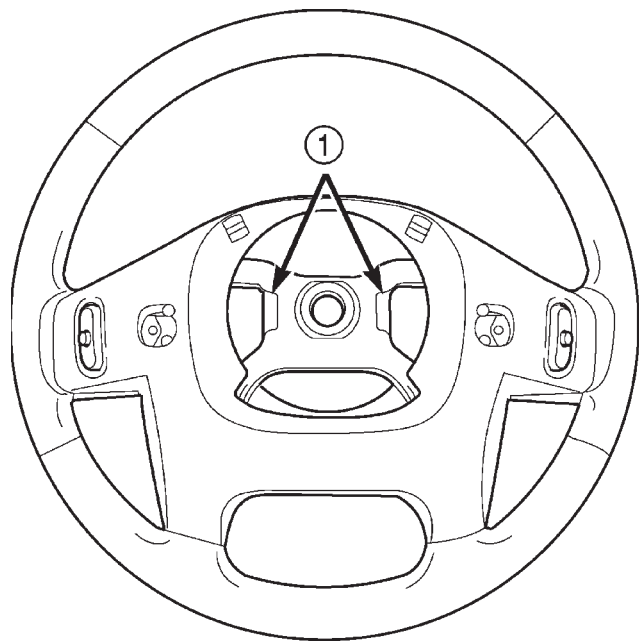


Fig. 3 Steering Wheel Pockets

- 1 - STEERING WHEEL POCKETS


80b6f089

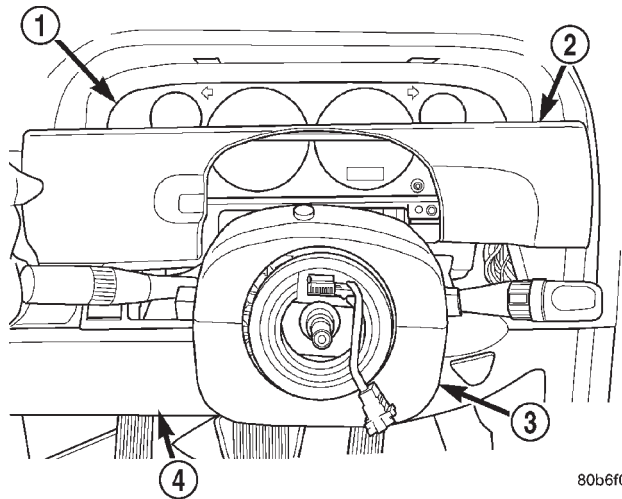

80b6f08a

Fig. 4 Cluster Bezel

- 1 - CLUSTER
- 2 - CLUSTER BEZEL
- 3 - STEERING COLUMN
- 4 - KNEE BLOCKER COVER

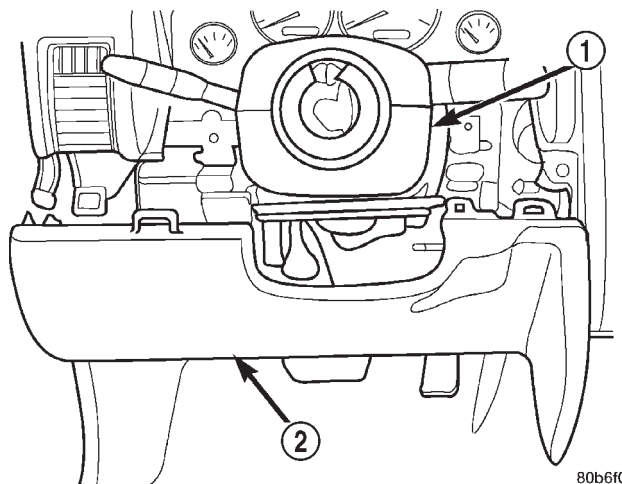


80b6f08b


Fig. 5 Knee Blocker Cover

- 1 - STEERING COLUMN
- 2 - KNEE BLOCKER COVER

REMOVAL AND INSTALLATION (Continued)

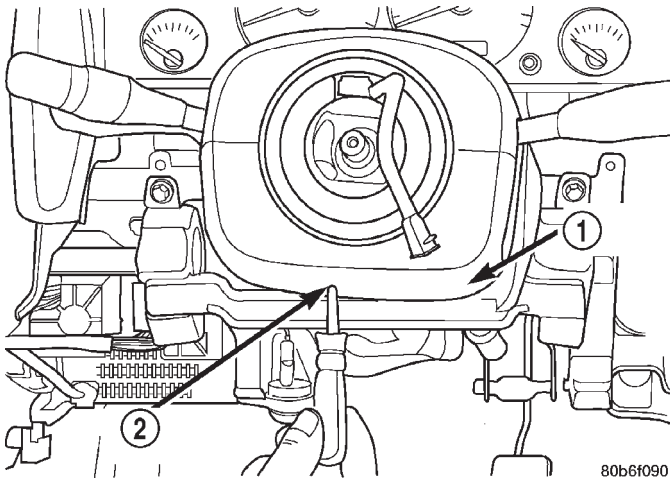
**Fig. 6 Column Shroud Mounting Screw**

- 1 - LOWER SHROUD
- 2 - ACCESS HOLE

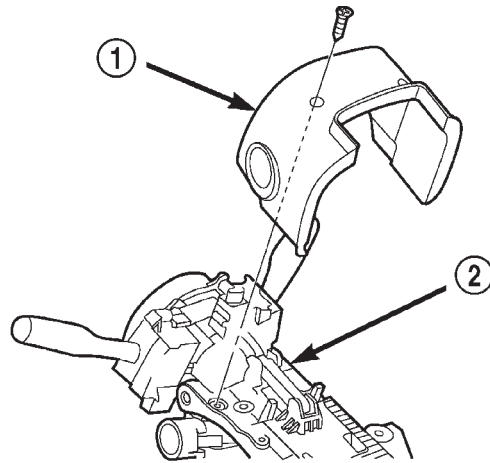**Fig. 8 Upper Fixed Shroud**

- 1 - UPPER FIXED SHROUD
- 2 - COLUMN

(8) Unsnap the two halves of the column shrouds by pressing on the sides of the upper shroud and tilting the rear of the upper shroud up. Remove the shrouds from the steering column (Fig. 7).

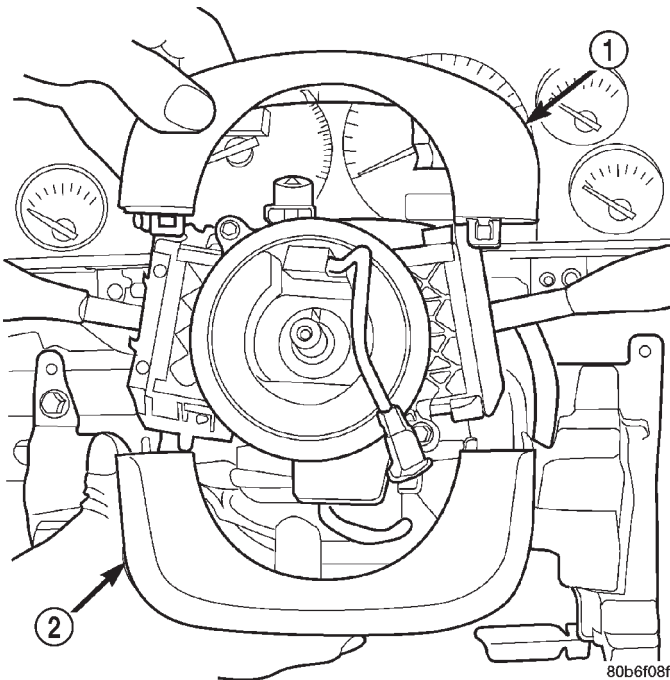
**Fig. 7 Column Shrouds**

- 1 - UPPER SHROUD
- 2 - LOWER SHROUD

(9) Remove the upper fixed shroud mounting screws and remove the shroud (Fig. 8).

(10) Disconnect the multifunction switch (Fig. 9) and ignition switch harness.

(11) Remove the multifunction switch screw from underneath the switch (Fig. 10). Slide the multifuc-

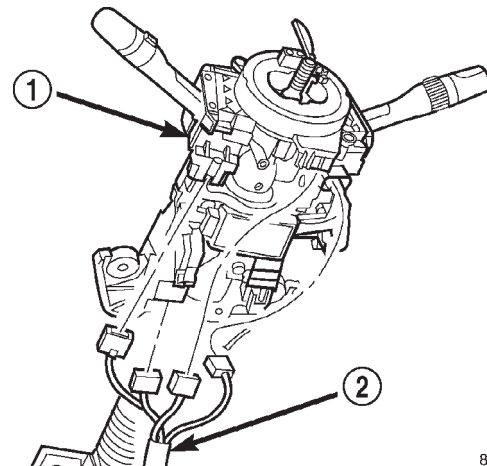**Fig. 9 Multifunction Switch Harness**

- 1 - MULTIFUNCTION SWITCH
- 2 - MULTIFUNCTION SWITCH HARNESS

tion switch and clock spring off the column as an assembly (Fig. 11).


(12) Turn the ignition key to the on position then release and remove the shifter interlock cable (Fig. 12) from the ignition lock cylinder housing.

(13) Remove the column coupler bolt (Fig. 13) and slide the coupler off the column shaft.

(14) Remove the column mounting nuts (Fig. 13) and lower column off mounting studs. Remove the column from the vehicle.

(15) Remove the ignition switch, cylinder and SKIM (Fig. 14), refer to Group 8D Ignition System.


REMOVAL AND INSTALLATION (Continued)

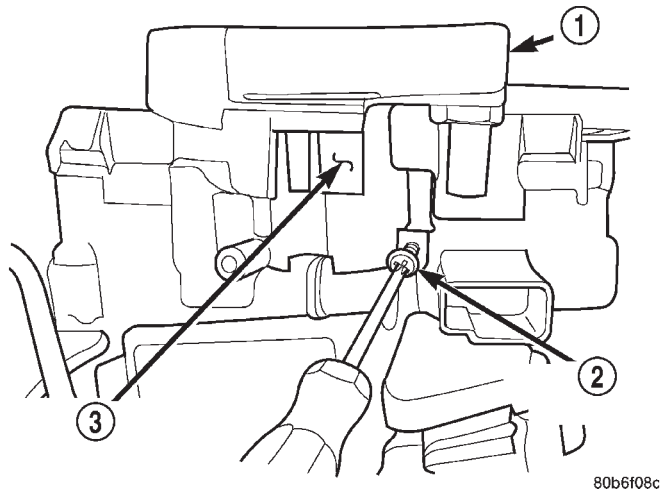

80b6f08c

Fig. 10 Multifunction Switch Screw


- 1 - CLOCK SPRING
- 2 - MOUNTING SCREW
- 3 - MULTIFUNCTION SWITCH ASSEMBLY

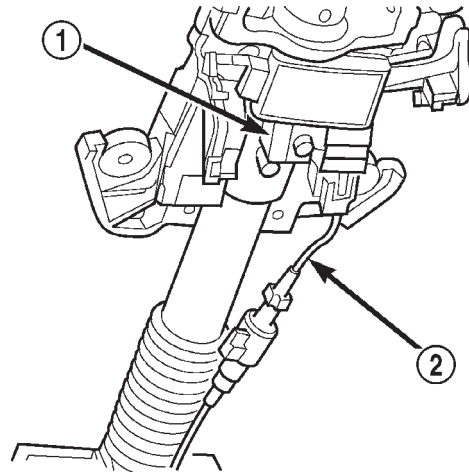

80b6f09b

Fig. 12 Shifter Interlock Cable


- 1 - LOCK CYLINDER HOUSING
- 2 - INTERLOCK CABLE

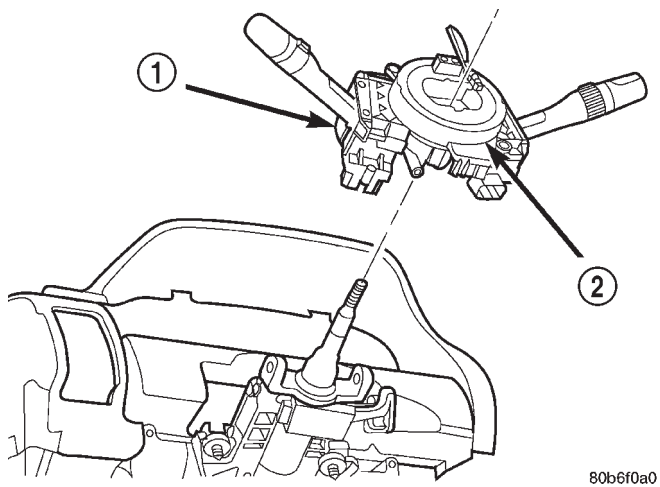

80b6f0a0

Fig. 11 Multifunction Switch And Clock Spring

- 1 - MULTIFUNCTION SWITCH
- 2 - CLOCK SPRING

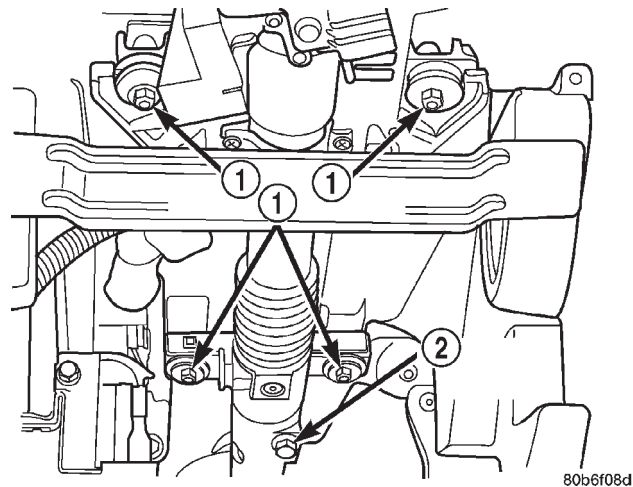

80b6f08d

Fig. 13 Column Coupler Bolt And Mounting Nuts


- 1 - COLUMN MOUNTING NUTS
- 2 - COUPLER BOLT

INSTALLATION

- (1) Install the ignition switch, cylinder and SKIM, refer to Group 8D Ignition System.
- (2) Install the column into the vehicle and lift the column up onto the mounting studs. Install the mounting nuts and tighten to 12 N·m (105 in. lbs.).
- (3) Slid the coupler onto the column shaft and install the coupler bolt. Tighten the coupler bolt to 49 N·m (36 ft. lbs.).
- (4) Turn the ignition key to the on position then release and install the shifter interlock cable (Fig. 12) into ignition lock cylinder housing.
- (5) Verify ignition switch and shifter interlock operation. Refer to Group 21 Transmission for interlock cable adjustment if necessary.

- (6) Slide the multifunction switch and clock spring onto the column as an assembly (Fig. 11).
- (7) Install the multifunction switch mounting screw (Fig. 10).
- (8) Connect the multifunction switch (Fig. 9) and ignition switch harness.
- (9) Install the upper fixed shroud and mounting screws (Fig. 8).
- (10) Install the lower steering column shroud to the steering column. Install and tighten the mounting screw.
- (11) Install the upper column shroud. Align the upper shroud to the lower shroud and snap the two shroud halves together.
- (12) Install the knee blocker cover (Fig. 5), refer to Group 8E Instrument Panel Systems.

REMOVAL AND INSTALLATION (Continued)

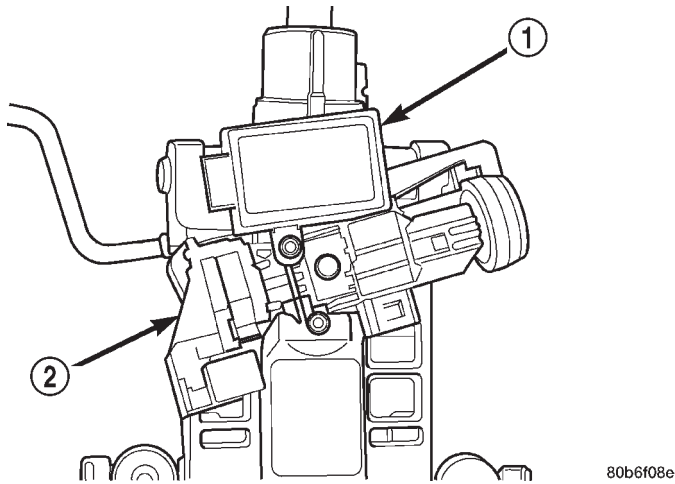

80b6f08e

Fig. 14 Ignition Switch And SKIM

- 1 - SKIM
2 - IGNITION SWITCH

(13) Install the cluster bezel by pulling it from the instrument panel (Fig. 4).

(14) Align the steering wheel with the column index spline and install the wheel on the column shaft. Pull the clockspring wire harness through the steering wheel armature spokes.

(15) Install and tighten the steering wheel mounting nut to 61 N·m (45 ft. lbs.).

(16) Connect the steering wheel wire harness connector to the clock spring connector.

(17) Install the airbag, refer to Group 8M Restraint Systems for service procedures.

(18) Connect the negative (ground) cable to the battery.

SPECIFICATIONS

TORQUE CHART

DESCRIPTION**TORQUE****Steering Column**


Steering Wheel Nut 61 N·m (45 ft. lbs.)

Column Bracket Nuts 12 N·m (105 in. lbs.)

Shaft Coupler Bolts 49 N·m (36 ft. lbs.)

SPECIAL TOOLS

STEERING COLUMN

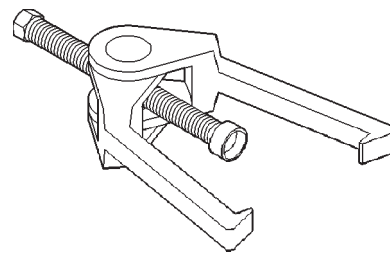**Puller C-3894-A**